



EQE

Operator's Manual +

Mercedes-Benz





Did you know?

To meet all needs, your Operator's Manual is available in various formats. In addition to this PDF, the following options are open to you:



Digital - in the vehicle

Explore the Operator's Manual in the multimedia system under Preferences. Begin with Quick Start and discover useful tips.



Vehicle document wallet

This contains a physical copy of comprehensive information about operating your vehicle and about services and your vehicle's warranty



Front passenger air bag warning



Air bag warning sticker for USA and Canada

- ⚠ WARNING**
Risk of injury or fatal injuries if the front passenger air bag is enabled
- If the front passenger air bag is enabled, a child on the front passenger seat may be struck by the front passenger air bag in the event of an accident.
- ▶ NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIR BAG. This can result in the DEATH of or SERIOUS INJURY to the CHILD.

Observe the chapter "Children in the vehicle".



Welcome to the world of Mercedes-Benz

Before your first drive, please read this Operator's Manual carefully and familiarize yourself with your vehicle. For your own safety and a longer vehicle service life, follow the instructions and warnings in this Operator's Manual. Failure to do so may lead to personal injury or damage to the vehicle.

Vehicle damage caused by failure to observe the instructions is not covered by the Mercedes-Benz Limited Warranty.

THE EQUIPMENT FEATURES OR PRODUCT DESIGNATIONS OF YOUR VEHICLE MAY DIFFER FROM THE CONTENT DESCRIBED IN THE OPERATOR'S MANUAL. THE OPERATOR'S MANUAL DESCRIBES THE FOLLOWING CONTENT:

- The models as well as the standard and special equipment available at the time of this Operator's Manual going to press.
- The models as well as the standard and special equipment available only in certain countries.
- The models as well as the standard and special equipment that will become available only at a later date.

Please note that your vehicle may not be equipped with all features described. This is also the case for safety-relevant systems and functions. In individual cases, your vehicle may therefore differ from that shown in the descriptions and illustrations.

MERCEDES-BENZ KEEPS ADVANCING ITS VEHICLES CONSTANTLY AND RESERVES THE RIGHT TO INTRODUCE CHANGES IN THE FOLLOWING AREAS:

- Design
- Equipment
- Technical features

The latest and complete information about your vehicle and the description of any subsequently uploaded functions are contained in the Digital Operator's Manual in the multimedia system.

The original purchase agreement for your vehicle includes a list of the equipment features in your vehicle at the time of delivery.

THE FOLLOWING DOCUMENTS ARE COMPONENTS OF THE VEHICLE:

- Digital Operator's Manual in the multimedia system
- Printed Operator's Manual
- Maintenance Booklet (USA only)
- Supplementary manuals relating to specific equipment
- Supplementary documents

Keep these documents in the vehicle at all times. Ensure that all documents are in the vehicle or passed on in the event of sale or rental.

For questions concerning equipment and operation, please contact a Mercedes-Benz Service Center.

The latest information on service and warranty, along with a digital copy of this Operator's Manual, can be found on the following website.

USA only:

<https://www.mbusa.com/en/vehicle-information>

Canada only:

<https://www.mercedes-benz.ca/en/owners/manuals> (English)

<https://www.mercedes-benz.ca/fr/owners/manuals> (French)



Mercedes-Benz USA, LLC

A Mercedes-Benz Group AG Company

Mercedes-Benz Canada, Inc.

Disclaimer

The following online version of the Operator's Manual describes all models as well as all the standard and optional equipment of your vehicle. Country-specific differences in the language variants are possible. Note that your vehicle may not be fitted with all features described. This is also the case for safety-relevant systems and functions.

Please contact your authorized Mercedes-Benz dealer if you would like to have a printed Operator's Manual for other vehicle models and vehicle model years. The online version is the currently valid Operator's Manual. Possible variations to your vehicle may not be taken into account because Mercedes-Benz is constantly updating its vehicles and equipment in line with the current state of the art and introducing changes to the design and equipment.

Please also read the printed Operator's Manual, any supplementary documents and the digital Operator's Manual in the vehicle.

COPYRIGHT

All Rights Reserved. All texts, images, graphics, are subject to Copyright and other laws for the protection of intellectual property. They may not be copied for commercial purposes or for transmission, nor changed and used on other websites.



Contents

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Symbols >	Opening and closing >	MBUX multimedia system >
Quick start and tips >	Seats and stowing >	Maintenance and care >
At a glance >	Light and visibility >	Breakdown assistance >
Digital Operator's Manual >	Climate control >	Wheels and tires >
General notes >	Driving and parking >	Technical data >
Occupant safety >	Driver display >	Display messages and warning/indicator lamps >
Children in the vehicle >	MBUX Voice Assistant >	Index >



◀ Symbols

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.



In this Operator's Manual, you will find the following symbols:

WARNING

Danger due to failure to observe the warning notices

Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

Observe the warning notices.

ENVIRONMENTAL NOTE

Environmental damage due to failure to observe environmental notes

Environmental notes include information on environmentally responsible behavior or environmentally responsible disposal.

Observe environmental notes.

NOTE

Damage to property due to failure to observe notes on material damage

Notes on material damage inform you of risks which may lead to your vehicle being damaged.

Observe notes on material damage.

These symbols indicate useful instructions or further information that could be helpful to you.

- Instruction
- (→ page)

Further information on a topic
- Display in the central display
- Highest menu level, which is to be selected in the multimedia system
- Relevant submenus, which are to be selected in the multimedia system
- Indicates a cause





< Quick start and tips


This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Seats	>	MBUX Voice Assistant	>	New multimedia system features	>
Children in the vehicle	>	ENERGIZING Packages	>	At the gas station	>
DIGITAL LIGHT	>	Driving Assistance package	>	Preparing for a holiday	>
Touch-sensitive controls	>	Parking Package	>	Luggage and loading	>
Radio	>	AC charging of the high-voltage battery (mode 2 oder 3)	>	Ice and snow	>
Wi-Fi hotspot	>	DC charging of the high-voltage battery (mode 4)	>	Help in the event of a breakdown	>
Connecting a mobile phone	>	Destination entry navigation	>	Expert knowledge	>




< Seats

Adjusting the seats

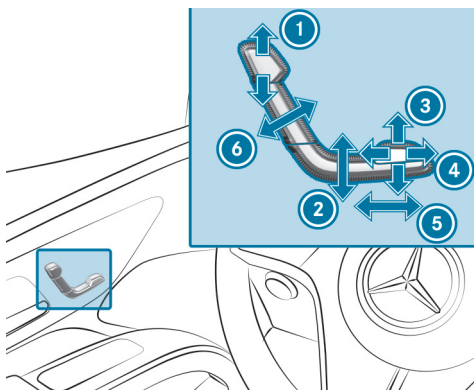

- ① Head restraint height
- ② Seat height
- ③ Seat cushion inclination
- ④ Seat cushion length
- ⑤ Seat fore-and-aft position
- ⑥ Seat backrest inclination

► Save the settings with the memory function (→ page 228).





< Children in the vehicle

Safely transporting children in the vehicle

- ▶ Always observe when children are traveling in the vehicle (→ page 143)
- ▶ Important warning stickers (→ page 144)
- ▶ Suitable seats in the vehicle for installing a child restraint system (→ page 141)
- ▶ Activate/deactivate the special seat belt retractor of the seat belt (→ page 152).
- ▶ Installing the ISOFIX child restraint system on the rear seat (→ page 153)
- ▶ Fastening a Top Tether belt (→ page 155)
- ▶ Securing the child restraint system with the seat belt (→ page 156)
 - Notes on rearward-facing and forward-facing child restraint systems on the front passenger seat (→ page 147)
- ▶ Automatic front passenger air bag shutoff (→ page 147)
- ▶ Child safety locks for the rear side windows (→ page 159)
- ▶ Child safety locks for the rear doors (→ page 157)





< DIGITAL LIGHT

Adaptive functions of DIGITAL LIGHT

The availability of the assistance functions is country-dependent.

With this system, the headlamps adapt to the driving and weather situation. It also provides extended functions for improved illumination of the road.

THE SYSTEM COMPRISES THE FOLLOWING ADAPTIVE FUNCTIONS:

- Active headlamps (→ page 259)
- Cornering light (→ page 259)
- Highway mode (→ page 260)
- Enhanced fog light function (→ page 260)
- Bad weather light (→ page 260)
- City lighting (→ page 260)
- Topographical compensation (→ page 261)

► To activate or deactivate Digital Light:

- Briefly press  on the multimedia system display.
- Select [Settings](#).
- Select [Light](#).
- Select [DIGITAL LIGHT](#).
- Activate or deactivate [Dynamic Low Beam](#).

► To activate or deactivate enhanced assistance functions:


- Select [Supporting Projections](#).
- Activate or deactivate the desired projection.





< Touch-sensitive controls

Overview of touch-sensitive controls

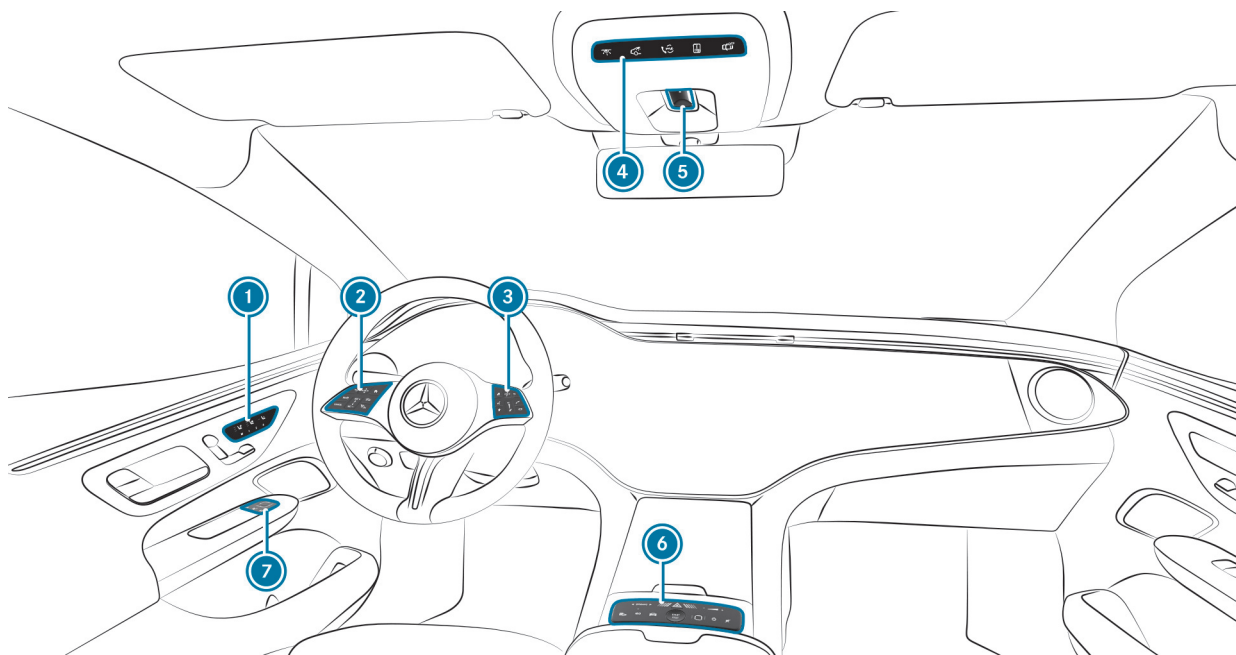

① Control panel:

- Switches the seat heating on/off
- Switches the seat ventilation on/off
- Operates the memory function


② Control panel:

- Driver's display
- Active Distance Assist DISTRONIC

③ Control panel for the MBUX multimedia system

④ Control panel:

- Switches the front interior lighting on/off
- Switches the rear interior lighting on/off
- me button
- Switches automatic interior lighting control on/off





- ⑤ Opens/closes the panoramic sliding sunroof
- Opens/closes the roller sunblind
- ⑥ Control panel:
 - DYNAMIC SELECT
 - Active Parking Assist
 - Calls up the EQ menu
 - Quick vehicle access
 - Fingerprint sensor
 - Switches the MBUX multimedia system on/off
 - Switches sound on/off
 - Adjusts the volume
- ⑦ Operates the outside mirrors
 - Observe the notes on the touch-sensitive controls (→ page 95).





< Radio

Operating radio

▶ To switch to radio:

- Briefly press  in the multimedia system display.
- Tap on .

▶ To set the frequency band:

- Briefly press  in the multimedia system display.
- Tap on .
- Select a frequency band or a favorite.

▶ To set a radio station:

- Briefly press  in the multimedia system display.
- Tap on .
- Swipe to the left or right on the control element or select a radio station.

▶ To call up the radio station list:

- Briefly press  in the multimedia system display.
- Tap on .
- Select .

▶ To search for radio stations using station names or frequency entry:

- Briefly press  in the multimedia system display.
- Tap on .

- Select .
- Enter a station name or frequency.
- Select a station.

▶ To store radio stations:

- Briefly press  in the multimedia system display.
- Tap on .
- Select .

▶ To set the traffic information service volume increase:

- Briefly press  in the multimedia system display.
- Tap on .
- Select [System](#).
- Select [Audio](#).
- Select [Navigation and Traffic Announcements](#).
- Set a value for [Increase Volume for Traffic Announcement](#).





< Wi-Fi hotspot

Setting up a Wi-Fi hotspot

GENERALLY, TWO TYPES OF WI-FI CONNECTION ARE AVAILABLE:

- Using the multimedia system as a Wi-Fi hotspot
The multimedia system serves as a Wi-Fi hotspot for mobile communication devices such as a smartphone or tablet PC.
The data volume of the vehicle or an already connected tethering device is used for the data connection.
Data volumes must be purchased via the Mercedes me Portal.
The use of the vehicle data tariff by external devices is not available in all countries.
- Using a mobile communication device as a Wi-Fi hotspot (tethering)
An external Wi-Fi hotspot is accessed for the Internet connection of the multimedia system.
The data tariff of the mobile communication device via [Data Plan](#) is used for the data connection.

OPTIONS FOR SETTING UP A CONNECTION:

- QR code
The connection is set up by scanning the QR code shown on the multimedia system.
- Security key
The connection is established by entering the security key displayed on the multimedia system.





< Connecting a mobile phone

Connecting a mobile phone

▶ **Activating Bluetooth®:**

- Make sure that the mobile phone Bluetooth® is switched on.
- Tap on  the central display or media display.
- Select [Settings](#).
- Select [System](#).
- Select [Internet and Bluetooth](#).
- Activate Bluetooth®.

▶ **Searching for a mobile phone:**


- Tap on  the central display or media display.
- Select [Phone](#).
- Select .
- Select [Devices](#).
- Select [Devices](#).
- Select [Connect New Device](#).

▶ **Authorizing a mobile phone:**

- Select a mobile phone.

A code is displayed in the multimedia system and on the mobile phone.

- ▶ If the codes match, confirm the code on the mobile phone.





< MBUX Voice Assistant

Operating the MBUX Voice Assistant

YOU CAN USE THE MBUX VOICE ASSISTANT TO OPERATE THE FOLLOWING FUNCTIONS DEPENDING ON THE VEHICLE EQUIPMENT:

- Telephone
- Text message and e-mail
- Navigation
- Radio and media
- Vehicle functions
- Online functions

EXAMPLES OF POSSIBLE VOICE COMMANDS:

- To operate the phone: Call my father.
- To manage e-mails: Show me my new e-mails.
- To operate the navigation: Search for an Asian restaurant, but not Japanese, in South London.
- To operate the radio: Which station am I currently listening to?
- To operate media: Play a similar track.
- To operate climate control: My feet are cold.
- To operate vehicle functions: Open the window.
- To call up the weather: Will it be sunny tomorrow?
- To ask a general knowledge question: Who painted the picture "The Scream"?





< ENERGIZING Packages

Operating ENERGIZING COMFORT

► To start an **ENERGIZING** program:

- Briefly press  in the multimedia system display.
- Select [Comfort](#).
- Select [ENERGIZING COMFORT](#).
- Select a program and start with .

► To configure an **ENERGIZING** program:

- Select a program.
- Select [Settings](#).
- Switch the functions included in the program on or off.

► To start **Power Nap**:

- Select [Power Nap](#).
- Select  for the desired seat.

► To start a training program:

- Select [Training](#).
- Select a program and start with .
- To activate fragrancing for training, select [Fragrance](#).

► To start **Tips**:

- Select [Tips](#).
- Select an area of the body and start with .





< Driving Assistance package

Functions of the Driving Assistance Package

Depending on availability for the respective country of use, the vehicle may be equipped with various functions that are provided to assist the driver. Cameras and sensors are thus used by the vehicle to monitor the vehicle surroundings.

- ▶ Blind Spot Assist with exit warning (→ page 406)
- ▶ Active Blind Spot Assist with exit warning (→ page 408)
- ▶ Active Lane Keeping Assist (→ page 410)

- ▶ Active Distance Assist DISTRONIC (→ page 379)

You can watch an animation on this topic via the following link:

- ▶ Active Speed Limit Assist (→ page 385)
- ▶ Route-based speed adaptation (→ page 386)
- ▶ Active Brake Assist (→ page 397)
- ▶ Active Steering Assist (→ page 388)

You can watch an animation on this topic via the following link:

- ▶ Active Emergency Stop Assist (→ page 390)
- ▶ Active Lane Change Assist (→ page 392)
- ▶ Active Stop-and-Go Assist
(→ page 388)





< Parking Package

Functions of the Parking Package

Depending on availability for the respective country of use, the vehicle may be equipped with various functions that are provided to assist the driver with parking and maneuvering. Cameras and sensors are thus used by the vehicle to monitor the vehicle surroundings.

Depending on the equipment version, the following systems and functions are part of your Parking Package:

- ▶ **Rear-view camera:** monitors the area behind the vehicle and relays an image of this area on the driver display (→ page 418).
- ▶ **360° camera:** a system comprising four cameras that record the immediate vehicle surroundings and relay an image on the driver display (→ page 420).
- ▶ **Parking Assist PARKTRONIC:** an electronic parking assistance system that monitors the area surrounding your vehicle and the distance to obstacles in the vicinity using ultrasound (→ page 425).
- ▶ **Active Parking Assist:** an electronic parking assistance system that assists you when parking or exiting a parking space by changing gear, accelerating, braking and steering the vehicle (→ page 429).
- ▶ **Remote Parking Assist:** can park your vehicle and exit a parking space while you are outside of your vehicle (→ page 435).

- ▶ **Memory Parking Assist:** can park your vehicle in, or exit a previously recorded and stored parking space (→ page 443).

You can watch an animation on this topic via the following link:

You can watch an animation on this topic via the following link:





< AC charging of the high-voltage battery (mode 2 oder 3)

AC charging (mode 2 or 3)

Starting and ending the charging process

- ▶ More notes on charging the high-voltage battery
(→ page 329)
- ▶ Overview of the charging cable control panel (→ page 336)





< DC charging of the high-voltage battery (mode 4)

DC charging (mode 4)

Starting and ending the charging process

- ▶ More notes on charging the high-voltage battery
(→ page 329)
- ▶ Overview of the charging cable control panel (→ page 336)





< Destination entry navigation

Entering a navigation destination

- ▶ Briefly press  in the multimedia system display.

The zero layer is shown.

The zero layer is your own personalized user interface with the digital map in the foreground and the applications that you use the most. You can switch between the zero layer and the home screen with a classic menu.

- ▶ Select  [Where to?](#).

SELECT THE FOLLOWING OPTIONS FOR DESTINATION ENTRY:

- Enter a POI, an address or a three-word address in the input line.
Online search results for POIs (if available) may contain additional information, for example opening times and prices. The information is provided by an online map service.
You can find further information about three-word addresses at: <https://+what3words.com>
- Select a destination suggestion directly on the zero layer.
Requirements:
The [Navigation](#) option is switched on in the user settings for [Suggestions](#).
The multimedia system has gathered sufficient data in order to show destination suggestions.
- Select [Previous Destinations](#).
Select a previous destination.
You can save the destination as a favorite .

- Select [POIs](#).
Select a POI category, e.g.  or enter a POI name or POI category in the input line.
If search results are displayed, limit them with [Filter](#), for example by search position or the desired travel time.
- Select [Contacts](#).
Requirements:
A mobile phone is connected to the multimedia system and contacts have been downloaded.
The contact contains a navigable address.
- Enter the geocoordinates as latitude and longitude in the input line.
Example 1: 47°58'11"N 7°57'25"E (degrees, minutes, seconds and compass direction)
Example 2: 47.969722 7.956944 (decimal degrees)
- Select a destination on the map.
- Select [Favorites](#).
Requirements:
The destinations have been saved as favorites.
- Select [Received Destinations](#).
Requirements:
There is an Internet connection for receiving external destinations.
The destinations have been sent to the vehicle.





< New multimedia system features

Information about the telephone menu



- ① Bluetooth® device name of the currently connected mobile phone/of the mobile phone
- ② Bluetooth® device name of the currently connected mobile phone/of the mobile phone (two phone mode)
- ③ Signal strength of the mobile phone network
- ④ Battery status of the connected mobile phone
- ⑤ Options
- ⑥ Messages
- ⑦ Calls up my devices
- ⑧ Numerical pad
- ⑨ Starts contact search

TELEPHONE MENU OVERVIEW

Via the telephone menu you can use the functions in connection with your mobile phone.

THE FOLLOWING FUNCTIONS CAN BE USED:

- Call lists
- Contacts
- Messages
- Device manager

USING CALL LISTS

If your mobile phone supports the PBAP Bluetooth® profile, the call lists from the mobile phone are displayed in the multimedia system.

THE FOLLOWING FUNCTIONS ARE AVAILABLE:

- Making calls from the call list
- Opening contacts on the call list

MESSAGES

In the message menu you can receive text messages and create and send them with the help of the MBUX voice assistant. In addition, you can conveniently use the read-aloud function during the journey.

DEVICE MANAGER

In the device manager, you can connect your mobile phone with the multimedia system.



You have the option of using your mobile phone alone in single telephone mode or together with another mobile phone in two phone mode.

USING CONTACTS

If you permit the multimedia system to access the contacts in your mobile phone, you can use these in the vehicle. You can store up to 8,000 contacts.

THE FOLLOWING OPTIONS ARE AVAILABLE TO YOU VIA THE CONTACTS MENU:

- Making telephone calls (calling a contact)
- Navigation
- Composing messages with the help of the MBUX voice assistant
- Additional options

The contacts from your mobile phone can be downloaded automatically or manually.

CONDUCTING A CALL

When conducting a call, additional functions are available apart from making, accepting or rejecting a call. For example, you can switch between calls, conduct a call with several participants or conference calls.

It is also possible to accept or reject waiting calls. If you receive a call while already in a call, a message is displayed.

DURING A CALL YOU CAN ACTIVATE THE FOLLOWING FUNCTIONS:

- Microphone off
- Fade in the numerical pad to send DTMF tones
- Add a call
- Hands-free mode to transfer the call to the front or rear passenger compartment

- Privacy mode to transfer the call to the telephone or headphones

Information about navigation

DIGITAL MAP AND USER-SPECIFIC APPLICATIONS



- ① Navigation module (reduced view) or EQ module (reduced view)

Route guidance active:

Reduced view of the navigation module shows information relevant to the route, e.g. the next charging stop, the destination and a traffic delay

☐ Ends the current route guidance

Tapping opens the navigation module in the expanded view with the [Route](#)

Route guidance not active:

EQ module is shown in the reduced view

Tapping opens the EQ module in the expanded view with the charging functions

- ② Enters a destination
- ③ Calls up the Control Center in the status line
- ④ Current vehicle position (vehicle symbol or arrow)
- ⑤ Display area with entertainment sources, phone, active applications and suggestions
- ⑥ Searches for POIs, e.g. charging stations ☐ and parking facilities ☐, as well as setting map orientation and map type




- ⑦ Navigation window shows the next maneuver (zoomed out view) or the route monitor (zoomed in view)

For example, with active route guidance, route sections of the route list, representations of upcoming driving maneuver, lane recommendations

 Switches off navigation announcements

 Switches on navigation announcements

NAVIGATION MODULE (EXPANDED VIEW)

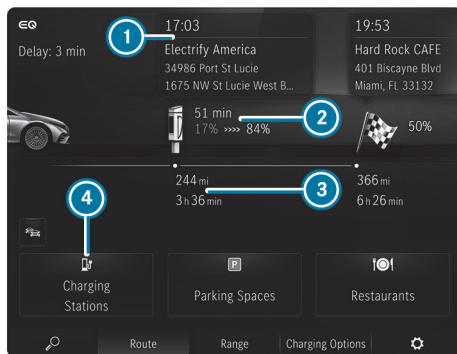

- ① Arrival time at charging stop, type of charging station
- ② Charging stop shows the charging time recommended by the Navigation with Electric Intelligence as well as states of charge on arrival and onward journey for an optimal travel time
- ③ Distance from current vehicle position and remaining driving time
- ④ Searches for an additional charging station

After calling up  the digital map appears on the Zero Layer.

 The zero layer is your own personalized user interface with the digital map in the foreground and the applications that you use

the most. You can switch between the zero layer and the home screen with a classic menu.

The navigation system offers many options for destination entry, route planning and route guidance. The traffic situation is taken into account during route guidance. When using route guidance with augmented reality, additional information can be shown in a camera image before a turning maneuver. Services and apps help you reach the destination quickly, safely and in comfort.

You start the destination entry with  **Where to?** or in the home screen using the quick-access  beneath the application. You can enter the POI, address or contact as the destination on-board or search online using a map service. Or you select a previous destination. The destination can be stored here as a favorite or be saved as an address for home and work. If the **Allow Destination Suggestions** option is active, destination suggestions are available. These are determined based on your driving habits and offer a convenient selection of destinations. If external destinations and routes are received from apps or services, these are also available.

A destination can be shared by scanning it using the displayed QR code.

THE FOLLOWING OPTIONS ARE AVAILABLE FOR ROUTE PLANNING, FOR EXAMPLE:

- Route options:
e.g. avoid or use toll roads, tunnels, unpaved roads or areas
- Intermediate destinations
- Alternative routes
- Commuter route
- Automatic service station search

You can record and save routes then select or share them with a USB device.



Lane recommendations are shown during route guidance on multi-lane roads. When driving on a freeway, service facilities on the route ahead can be shown and used for route guidance.

The Live Traffic Information service takes the current traffic situation into account. The map can show the current traffic flow, traffic incidents or warning messages, e.g. the end of a traffic jam in a dangerous position.

Hazardous situations on public roads are detected automatically by the vehicle via Car-to-X-Communication or these can be reported by the driver. The early warning makes it possible to adapt your driving characteristics in good time. Broken-down vehicles, accidents, weather hazards or a deployed hazard warning light are shown on the map.

The map shows map data from the database or content from an online map service. In small map scales, buildings are shown as realistic images.

Weather information and data from other services can be integrated in the map. Parking garages with the corresponding equipment, deliver data about the current occupancy and about parking charges, for example. The online map update service makes possible the updating of the map data.

The options offered vary depending on the country, vehicle equipment and available services.

Information on radio




- ① Station logo
- ② Active frequency band
- ③ Station name or set frequency
- ④ Settings
- ⑤ Mutes volume
- ⑥ Switches HD Radio® on/off
- ⑦ Station list
- ⑧ Search

Using the radio menu you can play a multitude of radio stations and use the Internet Radio TuneIn. Search for your preferred stations and save these as favorites or in station lists.


The function of TuneIn Internet radio is country-dependent.

Radio text: this function shows you the station name, the track and the artist for the song currently playing, for example.





Information on media

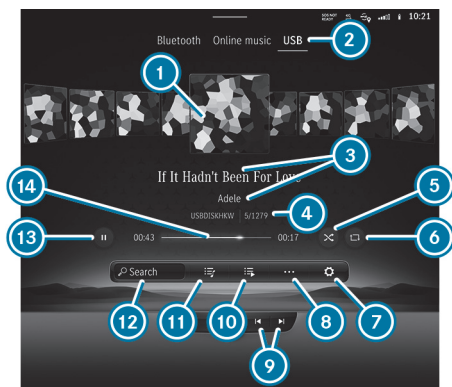

- ① Album cover
- ② Active media source
- ③ Track and artist
- ④ Active data storage medium and current track number/track in playback list
- ⑤ Random playback
- ⑥ Repeat
- ⑦ Settings
- ⑧ Additional options
- ⑨ Previous or next track and fast rewind or fast forward
- ⑩ Additional categories
- ⑪ Playlists and categories
- ⑫ Media search
- ⑬ Controls playback
- ⑭ Timeline

Using the [Media](#) application, you can set and use the audio and video functions of your multimedia system. You can listen to music or look at videos, for example.

USB: Using the [USB](#) menu, you can play back your own audio or video data from a data storage medium connected by USB.

Bluetooth®: using the [Bluetooth](#) menu, you can connect a Bluetooth® audio device with the multimedia system and play back the available tracks on the audio device. Connecting the device can be conveniently handled in the device manager, so you can complete all settings with just a few clicks.

Online music: The [Online Music](#) menu allows you to access music streaming services.

Notes on comfort

The [Comfort](#) menu makes all the functions available that contribute to your comfort when driving or taking a break.

SEAT COMFORT

The [Seat](#) menu allows you to flexibly adjust the contours of the seats to your needs by adjusting the side bolsters and lumbar support independently. You can save these settings in your Mercedes me profile, so they can be called up each time you drive. With the [Seat Kinetics](#) function, you can start a program that causes slight modifications of the seat position when you are driving. These modifications promote a healthy back.

MASSAGE

In the [Massage](#) menu you will find the massage programs that are available for your vehicle. By selecting the desired program you start it directly and it runs for a period of approximately ten minutes, depending on the program selected. With the [Intensive](#) function you can increase the effect of the massage program.





AMBIENT LIGHT

In the [Ambient Light](#) menu you can set the color and brightness for your ambient lighting. Using the [Link Zones](#) function, the ambience, accent and impression zones can be regulated separately so that you can set the lighting of your vehicle individually.

Information about smartphone integration

Using the [Smartphone Integration](#) menu, various applications are available that can bring the functions of your mobile phone to the multimedia system display. Operation can be carried out via the touchscreen or voice control, for example.

Only one mobile phone at a time can be connected via Smartphone Integration to the multimedia system. Also for use with two phone mode with Smartphone Integration, only one additional mobile phone can be connected using Bluetooth® with the multimedia system.

Use Android Auto for mobile phones with the Android operating system and use Apple CarPlay® with your iPhone®. The full functionality of Android Auto and Apple CarPlay® is only possible with an Internet connection.

Information on AMG Performance

Using the [AMG Performance](#) menu, you can call up information about the performance of your vehicle.

DEPENDING ON THE VEHICLE THE FOLLOWING MENUS ARE AVAILABLE:

- [Energy Flow](#)
Visualization of the energy flow in the vehicle
- [Consumption](#)

Display of the current and average consumption values of the vehicle

- [Vehicle](#)
Display of vehicle data
- [Engine](#)
Display of engine data such as current power and torque
- [Drive](#)
Display of current data of various drive elements such as current, voltage and temperature

Information about vehicle info

You can have important vehicle information displayed in the [Info](#) menu. At a glance you will have an overview of vehicle and engine data or current consumption values, for example. In addition, you can call up the Digital Operator's Manual via the [Operator's Manual](#) menu item.

VEHICLE DATA

THE FOLLOWING DATA WILL BE SHOWN, FOR EXAMPLE:

- Activity of the acceleration and brake pedal
- Activity of the suspension strut
- wheel angle
- G-force display for the linear and lateral acceleration

ENGINE DATA

THE FOLLOWING DATA IS SHOWN:

- Transmission oil temperature
- Engine/coolant temperature
- Performance
- Torque





- Boost pressure

CONSUMPTION DATA

Depending on your driving style, this display shows the current and average fuel consumption. Together with the displays of vehicle and engine data, you can adapt your driving style to be as efficient and economical as possible.

Information on MB Apps (Digital Extras)

VARIOUS SERVICES AND ONLINE FUNCTIONS ARE AVAILABLE VIA THE MB APPS MENU:

- Managing Digital Extras
- Using the dashcam
- Using the web browser to surf the Internet

You require a Mercedes me ID user account, and have to connect your vehicle with the user account, in order to be able to use services.

 If the Mercedes-Benz App is available on a mobile phone, the vehicle link can be made via the displayed QR code.

Please note that the available features are country-dependent.

Information on settings

In the [Settings](#) you can set the basic configuration for your multimedia system and the vehicle. You have access to all functions in this menu, from switching the driver assistance systems on and off to display and language settings.

THE SETTINGS ARE STRUCTURED IN THE FOLLOWING MENUS:

- [Assistance](#)
- [Vehicle](#)
- [Light](#)
- [System](#)

ASSISTANCE MENU

With the [Assistance](#) menu you have direct access to the driver assistance systems which are installed in your vehicle and can either switch these on or off, or configure according to your wishes.

VEHICLE MENU

HERE YOU CAN ACTIVATE THE FOLLOWING FUNCTIONS, FOR EXAMPLE:

- Automatic folding in of the outside mirrors when parking the vehicle
- Automatic adjustment of the seat and steering wheel, for comfortable entry and exit from the vehicle
- Automatic activation of the 360° camera when selecting reverse gear

LIGHT MENU

All the light settings can be carried out in the [Light](#) menu. You can activate or deactivate the Intelligent Light System here, set for how long your vehicle should remain lit after parking or unlocking or switch the function off.

SYSTEM MENU

All important settings for the multimedia system can be carried out in the [System](#) menu.

YOU CAN CARRY OUT THE FOLLOWING SETTINGS, FOR EXAMPLE:

- Setting the system language
- The configuration of Wi-Fi and Bluetooth®
- Setting of time and date





< At the gas station

Checking the tire pressure manually

- ▶ Read the tire pressure recommended for the current operating conditions from the tire and loading information placard or the tire pressure table. Observe the notes on tire pressure.
- ▶ Remove the valve cap of the tire to be checked.
- ▶ Press the tire pressure gauge securely onto the valve.
- ▶ Read the tire pressure.
- ▶ If the tire pressure is lower than the recommended value, increase the tire pressure to the recommended value.
- ▶ If the tire pressure is higher than the recommended value, release air. To do so, press down the metal pin in the valve, e.g. using the tip of a pen. Then check the tire pressure again using the tire pressure gauge.
- ▶ Screw the valve cap onto the valve.

Refilling the windshield washer system

**WARNING**


Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable.

- ▶ Avoid fire, open flames, smoking and the creation of sparks when using windshield washer concentrate.

Requirements:

- The vehicle is unlocked.

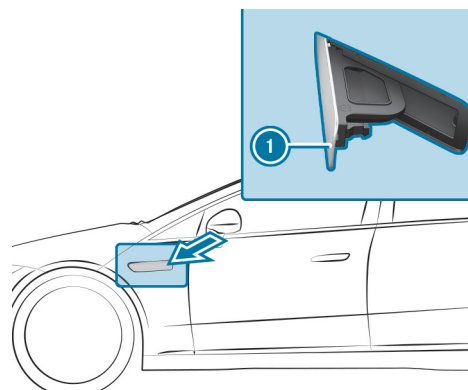



- ▶ Press on the rear area of washer fluid filler flap ❶. Washer fluid filler flap ❶ will open.
- ▶ Add washer fluid.
- ▶ Close washer fluid filler flap ❶.

You can watch an animation on this topic via the following link:

Changing the windshield wiper blades

⚠ WARNING

Risk of becoming trapped if the windshield wipers are switched on while wiper blades are being replaced

If the windshield wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.

- ▶ Always switch off the windshield wipers and vehicle before changing the wiper blades.


MOVING THE WIPER ARMS INTO THE REPLACEMENT POSITION

- ▶ Switch the vehicle on and then off again immediately.
- ▶ Within around 15 seconds, press the  button on the combination switch for approximately three seconds (→ page 271). The wiper arms will move into the replacement position.

❶ Depending on the production period of the vehicle, different variants of the wiper blades will have been installed.

REMOVING THE WIPER BLADES (VARIANT 1)

- ▶ Fold the wiper arms away from the windshield.

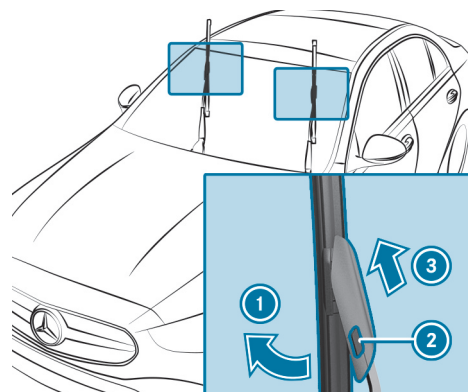


- ▶ Hold the wiper arm with one hand. With the other hand, turn the wiper blade away from the wiper arm in the direction of arrow ❶ as far as it will go.
- ▶ Press release knob ❷.
- ▶ Remove the wiper blade in the direction of arrow ❸ away from the wiper arm.

REMOVING THE WIPER BLADES (VARIANT 2)


- ▶ Fold the wiper arms away from the windshield.



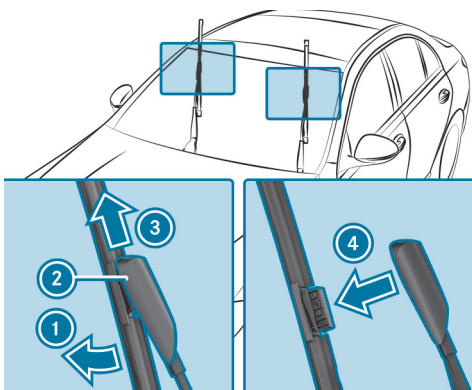


- ▶ Hold the wiper arm with one hand. With the other hand, turn the wiper blade away from the wiper arm in the direction of arrow ① as far as it will go.
- ▶ Slide catch ② in the direction of arrow ③ until it engages in the removal position.
- ▶ Remove the wiper blade from the wiper arm in the direction of arrow ④.

INSTALLING THE WIPER BLADES (VARIANT 1)

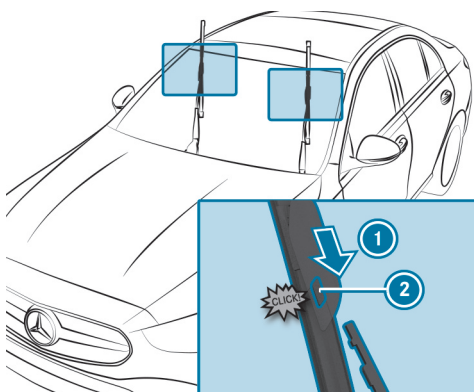


- ▶ Insert the new wiper blade in to the wiper arm in the direction of arrow ① until release knob ② engages.
- ▶ Make sure that the wiper blade is seated correctly.
- ▶ Fold the wiper arms back onto the windshield.
- ▶ Switch on the vehicle.
- ▶ Press the button on the combination switch. The wiper arms will return to their original positions.
- ▶ Switch off the vehicle.

INSTALLING THE WIPER BLADES (VARIANT 2)

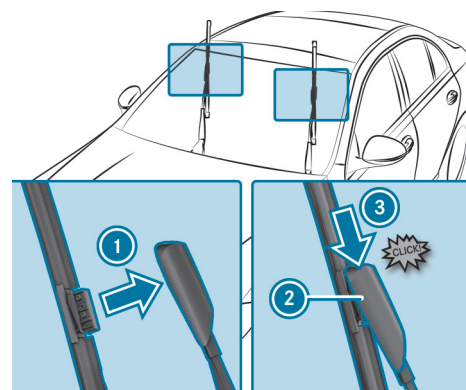

- ▶ Insert the new wiper blade into the wiper arm in the direction of arrow ①.
- ▶ Slide catch ② in the direction of arrow ③ until it engages in the locking position.
- ▶ Make sure that the wiper blade is seated correctly.






- ▶ Fold the wiper arms back onto the windshield.
- ▶ Switch on the vehicle.
- ▶ Press the  button on the combination switch.
The wiper arms will return to their original positions.
- ▶ Switch off the vehicle.

MAINTENANCE DISPLAY

A maintenance display can be found at the tip of the blade on the newly installed wiper blades.

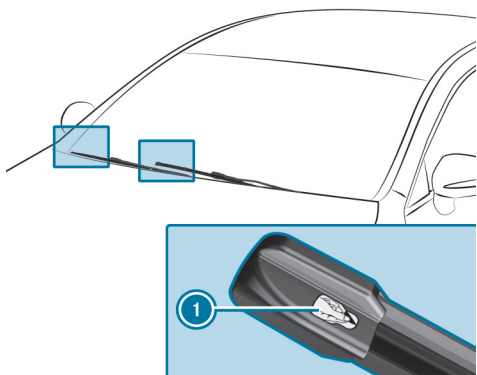

- ▶ Remove protective film ① from the maintenance display.

When the color of the maintenance display changes from black to yellow, you should replace the wiper blades.

Information on washing the vehicle in a car wash



WARNING

Risk of accident due to reduced braking effect after washing the vehicle

The braking effect is reduced after washing the vehicle.

- ▶ After the vehicle has been washed, brake carefully while paying attention to the traffic conditions until the braking effect has been fully restored.



NOTE

Damage from automatic braking

IF ONE OF THE FOLLOWING FUNCTIONS IS ACTIVATED, THE VEHICLE WILL BRAKE AUTOMATICALLY IN CERTAIN SITUATIONS:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, switch off these systems, e.g. when towing or using a car wash.



**! NOTE**

Damage due to unsuitable car wash

- ▶ Before driving into a car wash make sure that the car wash is suitable for the vehicle dimensions.
- ▶ Ensure there is sufficient ground clearance between the underbody and the guide rails of the car wash.
- ▶ Ensure that the clearance width of the car wash, in particular the width of the guide rails, is sufficient.

-  Removing the wax from the windshield and the wiper blades after washing the vehicle will help avoid smearing and reduce wiper noise.

TO AVOID DAMAGE TO YOUR VEHICLE WHEN USING A CAR WASH, ENSURE THE FOLLOWING BEFOREHAND:

- Active Distance Assist DISTRONIC is deactivated.
- The HOLD function is switched off.
- The 360° camera or the reversing camera is switched off.
- The vehicle is locked and the door handles retracted.
- The side windows and sliding sunroof are completely closed.
- The exterior mirrors are folded in.
- The blower for the ventilation and heating is switched off.
- The windshield wiper switch is in position .
- The key is at a minimum distance of 20 ft (6 m) away from the vehicle. Otherwise, the trunk lid or a door could open unintentionally. This also applies to the Digital Vehicle Key.
- For car washes with conveyor systems:
 - Neutral  is engaged.
 - The vehicle is locked from the inside.





< Preparing for a holiday

Notes on regularly inspecting wheels and tires

WARNING

Risk of injury through damaged tires

Damaged tires can cause tire pressure loss.

- ▶ Check the tires regularly for signs of damage and replace any damaged tires immediately.

WARNING

Risk of hydroplaning due to insufficient tire tread

Insufficient tire tread will result in reduced tire grip. There is a risk of an accident.

On a wet road surface the risk of hydroplaning is increased, in particular where speed is not adapted to suit the conditions.

- ▶ Check the tread depth and the condition of the tire contact surface across the entire width of all tires on a regular basis.

MINIMUM TREAD DEPTH FOR

- summer tires: 1/8in (3 mm)
- M+S tires: 1/6in (4 mm)
- ▶ For safety reasons, replace the tires before the legally-prescribed limit for the minimum tread depth is reached.
- ▶ Replace the tires immediately if the legally-prescribed limit for the minimum tread depth is reached.


CARRY OUT THE FOLLOWING CHECKS ON ALL WHEELS REGULARLY, AT LEAST ONCE A MONTH OR AS REQUIRED, FOR EXAMPLE, PRIOR TO A LONG JOURNEY OR DRIVING OFF-ROAD:

- Check the tire pressure (→ page 702).






- Visually inspect wheels and tires for damage.
 - Check the valve caps.
 - Visual check of the tire tread depth and the tire contact surface across the entire width.
- The minimum tread depth for summer tires is $\frac{1}{8}$ in (3 mm) and for winter tires $\frac{1}{4}$ in (4 mm).

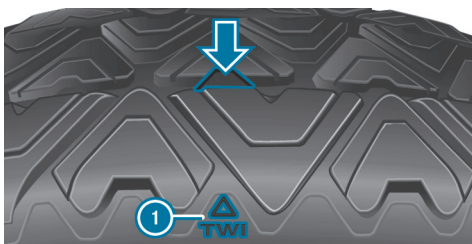


Six marks ① show where the bar indicators (arrow) are integrated into the tire tread. They are visible once a tire tread depth of approximately $\frac{1}{16}$ in (1.6 mm) has been reached.

Removing the safety vest

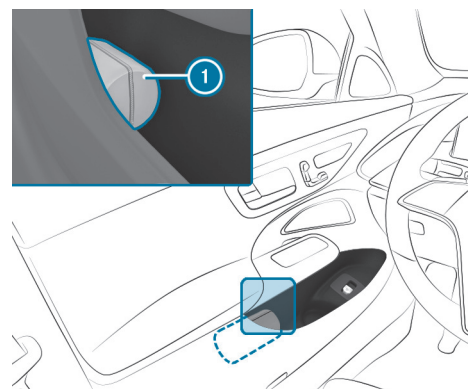

Safety vests can be stored in the door stowage compartments of all doors.

- ▶ To remove: open the safety vest bag ① and take out the safety vest.
- ▶ To replace: fold the safety vest, roll it up and insert it into the safety vest bag ①.
- ▶ Then place the safety vest bag ① back into the door stowage compartment.

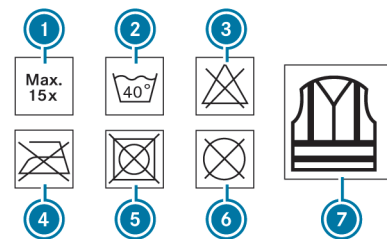

- ① Maximum number of washes
- ② Maximum wash temperature
- ③ Do not bleach
- ④ Do not iron
- ⑤ Do not tumble dry



- ⑥ Do not dry clean
- ⑦ Class 2 safety vest

The requirements defined by the legal standard are only fulfilled if the safety vest is the correct size and is fully closed.


EXCHANGE THE SAFETY VEST IN THE FOLLOWING CASES:

- The reflective strips are damaged or dirty.
- The maximum permissible number of washes is exceeded.
- The fluorescence has faded, e.g. due to continuous exposure to sunlight.

DISPOSE OF THE SAFETY VEST IN AN ENVIRONMENTALLY FRIENDLY WAY:


- Please contact your local waste disposal company.

Removing the warning triangle

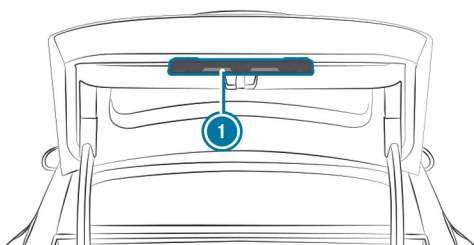

- ▶ Remove warning triangle ①.

First-aid kit (soft sided)

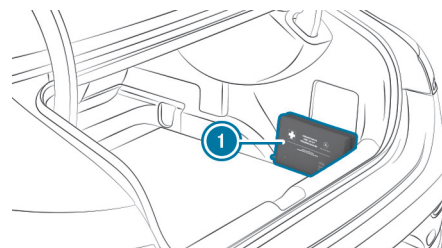

First-aid kit (soft sided) ① is located on the right-hand side of the trunk when the vehicle is delivered.

Map data update overview

As the content of a digital road map has a short life, outdated data may have a negative effect on all navigation functions. For the best MBUX navigation experience, you should install all of the map updates offered by Mercedes-Benz.


THE FOLLOWING OPTIONS ARE AVAILABLE FOR THE UPDATE OF MAP DATA:

- Online map update
 - Updates from the Mercedes me Portal
 - Update at an authorized Mercedes-Benz Center
- Additional costs can be incurred in this process.

ONLINE MAP UPDATE

REQUIREMENTS:

- Mercedes me connect is available.
- You have a Mercedes me user account.





- The Online Map Update service is available for your region.
- The service has been activated.

Installation takes place in the background as an automatic map update.

The MBUX multimedia system installs all of the available map updates for the North American regions in which the vehicle is located or is moved.

The online map update is activated at the latest after the next time the vehicle is switched on.

UPDATES FROM THE MERCEDES ME PORTAL

The map data for several regions can also be updated manually. Log in with your Mercedes me user account at: <https://www.mercedes-benz.de/>

Follow the menu path [My Mercedes Me account](#) > [My vehicles](#) > [Selection of car](#) > [Online Map Update](#). Select the regions to be downloaded to a storage medium.

After the map data has been copied, connect the storage medium with your vehicle. Select the notification with information about a new version of the map data and start the installation. After the MBUX multimedia system has been restarted, the updated map data is used.

Entering a POI or address

Requirements:

Observe the notes on destination entry (→ page 541).

- **For the online search:**
 - There is an Internet connection.
 - Mercedes me connect is available.

- The vehicle is connected with the user account and you have accepted the Mercedes me connect terms of use.
- Further information can be found at: <https://www.mercedes.me>
- The service is available.
- The service has been activated at an authorized Mercedes-Benz Center.

 If Online Search is not available, the search is performed using the data of the digital map.

Multimedia system:

    Where to?



Example: entering a POI or address

- ① Input line
- ② POI search
- ③ Selects destination search, displays further destination searches with double arrow
- ④ Deletes the last character entered



- ⑤ Hides the keypad
 - ⑥ Switches to handwriting recognition (→ page 514)
 - ⑦ Starts the MBUX Voice Assistant (→ page 475)
 - ⑧ Sets the written language
 - ⑨ Switches to digits and special characters
 - ⑩ Switches to upper-case or lower-case letters
- ▶ Enter a destination. The entries can be made in any order.
The search results are displayed in a list.

 Online search results for POIs may contain additional information, for example opening times and ratings. The information is provided by an online map service.
This online function is not available in all countries.

THE FOLLOWING ENTRIES CAN BE MADE, FOR EXAMPLE IN ①:

- city, street, house number or street, city
 - ZIP code
 - POI name or POI category, e.g. [Restaurants](#)
 - city, POI name
 - Contact name
 - Geo-coordinates (→ page 545)
- ▶ Hide the keyboard with .
- ▶ Select the destination in the list.
The following menu shows the selected destination with the address information and a corresponding map section.
The menu enables the route to be calculated.

Searching for radio stations using station names or frequency entry

Multimedia system:



- ▶ Select .
- ▶ Enter a station name or frequency.
- ▶ Select a station.





< Luggage and loading

Attaching a roof luggage rack

WARNING

Risk of accident due to exceeding the maximum roof load

The vehicle center of gravity and the usual driving characteristics as well as the steering and braking characteristics alter.

If you exceed the maximum roof load, the driving characteristics, as well as steering and braking, will be greatly impaired.

- ▶ Never exceed the maximum roof load and adjust your driving style.

NOTE

Vehicle damage due to failure to observe the maximum permissible clearance height

If the vehicle height exceeds the maximum permissible clearance height, the roof and other vehicle parts may be damaged.

- ▶ Please observe the maximum clearance height indicated.
- ▶ If the vehicle exceeds the permissible clearance height, do not drive in.
- ▶ Take the modified vehicle height into account in the case of roof superstructures or other carrier systems.

Vehicle-specific weight information can be found on the vehicle identification plate.



**! NOTE**

Vehicle damage from non-approved roof luggage racks

The vehicle could be damaged by roof luggage racks that have not been tested and approved by Mercedes-Benz.


- ▶ Only use roof luggage racks tested and approved for Mercedes-Benz.
- ▶ Depending on the vehicle equipment, ensure that when the roof luggage rack is installed, the tailgate can be fully opened.
- ▶ Position the load on the roof luggage rack in such a way that the vehicle will not sustain damage even when it is in motion.

! NOTE

Damage to panorama roof with power tilt/sliding panel caused by roof luggage rack

If the panorama roof with power tilt/sliding panel is opened when a roof luggage rack is installed, the panorama roof with power tilt/sliding panel may be damaged by the roof luggage rack.

- ▶ Do not open the panorama roof with power tilt/sliding panel if a roof luggage rack is installed.

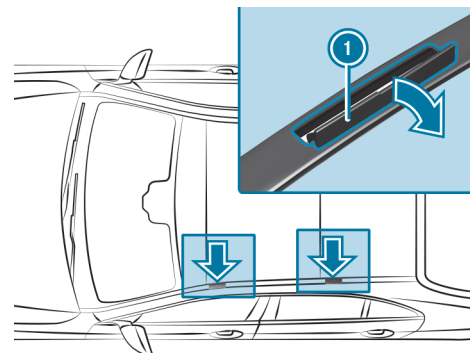**! NOTE**

Damage to the covers

The covers may be damaged and scratched when being opened.

- ▶ Do not use metallic or hard objects.

- ▶ Fold covers ① carefully upwards in the direction of the arrow.
- ▶ Secure the roof luggage rack to the fastening points beneath covers ①.
- ▶ Comply with the installation instructions of the roof luggage rack manufacturer.
- ▶ Secure the load on the roof luggage rack.





Folding the rear seat backrests forward

⚠ WARNING

Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

- ▶ When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

⚠ WARNING

Risk of an accident because the seat backrest is not engaged

The seat backrest may fold forwards.

THERE IS A RISK OF THE FOLLOWING, IN PARTICULAR:

- The vehicle occupant may be pressed against the seat belt. The seat belt cannot protect as intended and could cause additional injury.
- A child restraint system is no longer properly supported or properly positioned and may no longer fulfill its function as intended.
- The seat backrest cannot restrain objects or goods in the trunk or cargo compartment.

ALWAYS ENSURE THAT THE SEAT BACKREST IS ENGAGED, ESPECIALLY:

- After the seat has been adjusted.
- After the cargo compartment enlargement has been folded forwards

Make sure that the red marking of the lock verification indicator is no longer visible. Otherwise, the seat backrest will not be locked.

Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly. Particular attention must be paid to children.

Requirements:

- The rear seat backrest head restraints are fully inserted.
- Vehicles with a folding rear armrest: the rear armrest has been folded up.


FOLDING THE REAR OUTER SEAT BACKRESTS FORWARD

You can fold the center and right seat backrests forwards separately.

The left seat backrest can be folded forwards only together with the center seat backrest.


If you no longer require the folded-down rear seat backrest as a load area, fold the backrest back into place.

- ▶ Ensure that the center seat backrest is in an upright position and locked to the left seat backrest (→ page 239).

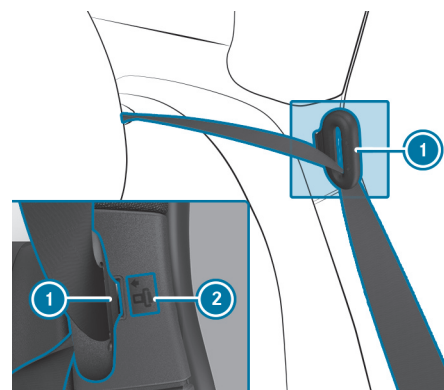



- ▶ Press the seat belt tongue of seat belt ① into marked position ②.
- ▶ Move the driver's or front passenger seat forwards, if necessary.

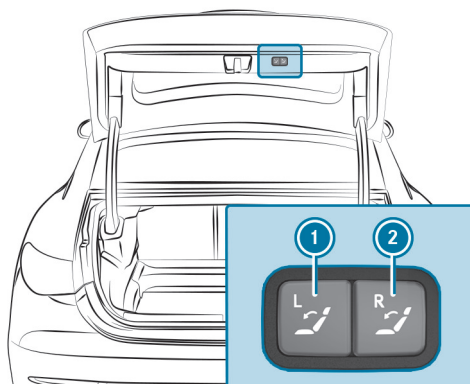

- ▶ **To fold the left or right seat backrest forwards:** briefly press button ① or ②.


The rear seat will fold forwards. The center seat backrest will fold forwards together with the left seat backrest.

OBSERVE THE FOLLOWING RECOMMENDATIONS:

- If you wish to fold only one of the outer seat backrests forwards, it is recommended that you fold the right seat backrest forwards.
- If you wish to fold one of the outer seat backrests forwards together with the center seat backrest, it is recommended that you fold the left and center seat backrests forwards.

FOLDING THE CENTER REAR SEAT BACKREST FORWARDS SEPARATELY

If you no longer require the folded-down seat backrest as a loading area, fold the backrest back into place.

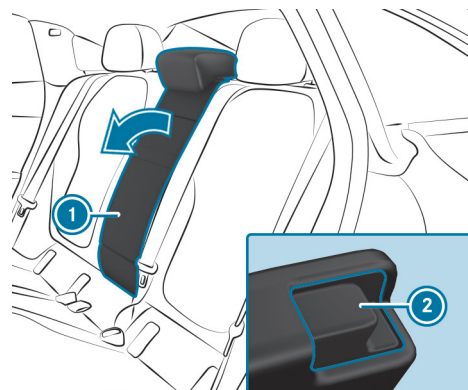

- ▶ Press release catch ②.
- ▶ Fold seat backrest ① forwards.

Folding back the rear seat backrest




WARNING

Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

- ▶ When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.





⚠ WARNING

Risk of an accident because the seat backrest is not engaged
The seat backrest may fold forwards.

THERE IS A RISK OF THE FOLLOWING, IN PARTICULAR:

- The vehicle occupant may be pressed against the seat belt. The seat belt cannot protect as intended and could cause additional injury.
- A child restraint system is no longer properly supported or properly positioned and may no longer fulfill its function as intended.
- The seat backrest cannot restrain objects or goods in the trunk or cargo compartment.

ALWAYS ENSURE THAT THE SEAT BACKREST IS ENGAGED, ESPECIALLY:

- After the seat has been adjusted.
- After the cargo compartment enlargement has been folded forwards

Make sure that the red marking of the lock verification indicator is no longer visible. Otherwise, the seat backrest will not be locked.


Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly. Particular attention must be paid to children.

! NOTE


Damage caused by trapping the seat belt when folding back the seat backrest

The seat belt could become trapped and thus damaged when the seat backrest is folded back.

- Make sure that the seat belt is not trapped when folding back the seat backrest.

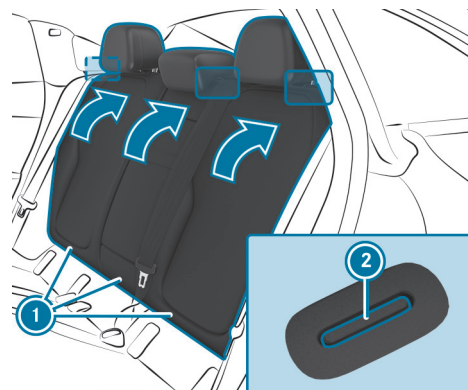


- Move the driver's or front passenger seat forwards, if necessary.
- Swivel seat backrest ① back until it engages.
If the seat backrest is not engaged and locked in place, red lock verification indicator ② will be visible.






Opening the stowage space under the trunk floor

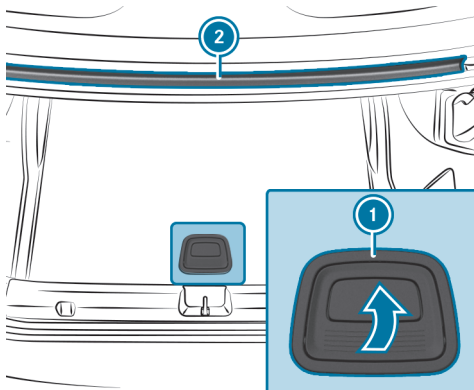

- ▶ Pull handle ① up and hook it into drip rail ②.

Overview of the tie-down eyes

Observe the notes on loading the vehicle (→ page 230).

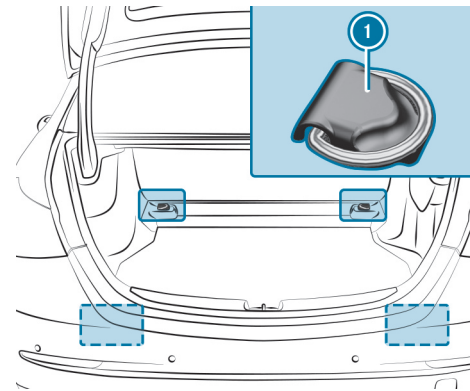

① Tie-down eyes

- ① Four tie-down eyes are available only in vehicles equipped with the through-loading feature in the rear bench seat (EASY-PACK Quickfold).





Overview of the front storage compartments

⚠ WARNING

Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- ▶ Close the lockable storage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Observe the notes on loading the vehicle.


⚠ WARNING

Risk of accident due to objects in the driver's and front-passenger footwell

Objects in the driver's and front-passenger footwell may impede pedal travel or block a depressed pedal.

This jeopardizes the operating- and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's or front-passenger footwell.
- ▶ Always ensure that the pedals have sufficient free space.
- ▶ Always install the floor mats securely and as prescribed.
- ▶ Do not use loose floor mats and do not place floor mats on top of one another.

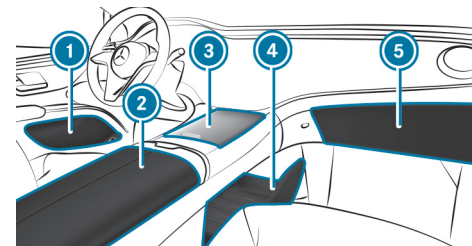

- ① Storage spaces in the doors
- ② Stowage and telephone compartment beneath the armrest with multimedia and USB ports as well as stowage space, e.g. for an MP3 player
- ③ Storage compartment in the front center console, with cup holders, USB ports and charging module for wireless charging of mobile phones depending on the vehicle version



- ④ Stowage tray below the central display of the multimedia system with USB ports
- ⑤ Glove box

 The rubber mat in the storage compartment in front center console ③ can be removed for cleaning with clean, lukewarm water. Observe the notes on caring for the interior (→ page 668).

 Use the rubber strap to securely store objects in the stowage tray under the central display.

Opening and closing the glove box



WARNING

Risk of injury due to objects being stowed incorrectly


If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.


- ▶ Always stow objects in such a way that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- ▶ Close the lockable storage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Observe the notes on loading the vehicle.



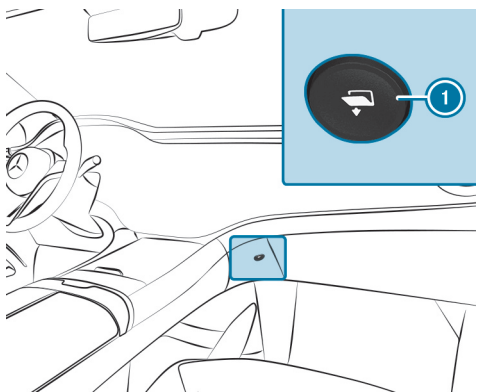

- ▶ **To open:** press button ①.
The glove box will open.
- ▶ **To close:** fold the glove box upwards.
The glove box will close.





< Ice and snow

Notes on regularly inspecting wheels and tires

WARNING

Risk of injury through damaged tires

Damaged tires can cause tire pressure loss.

- ▶ Check the tires regularly for signs of damage and replace any damaged tires immediately.

WARNING

Risk of hydroplaning due to insufficient tire tread

Insufficient tire tread will result in reduced tire grip. There is a risk of an accident.

On a wet road surface the risk of hydroplaning is increased, in particular where speed is not adapted to suit the conditions.

- ▶ Check the tread depth and the condition of the tire contact surface across the entire width of all tires on a regular basis.

MINIMUM TREAD DEPTH FOR

- summer tires: 1/8in (3 mm)
- M+S tires: 1/6in (4 mm)
- ▶ For safety reasons, replace the tires before the legally-prescribed limit for the minimum tread depth is reached.
- ▶ Replace the tires immediately if the legally-prescribed limit for the minimum tread depth is reached.


CARRY OUT THE FOLLOWING CHECKS ON ALL WHEELS REGULARLY, AT LEAST ONCE A MONTH OR AS REQUIRED, FOR EXAMPLE, PRIOR TO A LONG JOURNEY OR DRIVING OFF-ROAD:

- Check the tire pressure (→ page 702).





- Visually inspect wheels and tires for damage.
- Check the valve caps.
- Visual check of the tire tread depth and the tire contact surface across the entire width.
The minimum tread depth for summer tires is $\frac{1}{8}$ in (3 mm) and for winter tires $\frac{1}{4}$ in (4 mm).

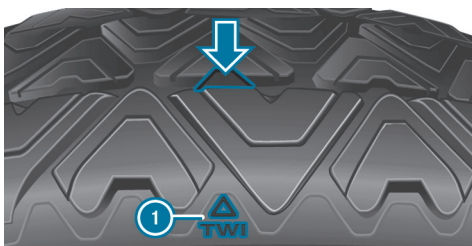

Six marks ① show where the bar indicators (arrow) are integrated into the tire tread. They are visible once a tire tread depth of approximately $\frac{1}{16}$ in (1.6 mm) has been reached.

Notes on snow chains

WARNING

Risk of accident due to incorrectly installed snow chains

If you have installed snow chains on the front wheels, they may drag against the vehicle body or chassis components.

- ▶ Never install snow chains on the front wheels.
- ▶ Only install snow chains on the rear wheels in pairs.

NOTE

Damage to body or suspension parts caused by installed snow chains

Installing snow chains on the front wheels of 4MATIC models can damage body or suspension parts.

- ▶ Only install snow chains on the rear wheels of 4MATIC models.

NOTE

Damage to wheel trims caused by installed snow chains

Installing snow chains on aluminum wheels can damage the wheel trims.

- ▶ Remove the wheel trims from the aluminum wheels before installing snow chains.

OBSERVE THE FOLLOWING NOTES WHEN USING SNOW CHAINS:

- Snow chains are only permissible for certain wheel/tire combinations. You can obtain information about this from an authorized Mercedes-Benz Center.
- For safety reasons, only use snow chains that have been specifically approved for your vehicle by Mercedes-Benz, or snow chains of the same quality standard.
- Comply with the installation instructions of the snow chain manufacturer.
- If snow chains are installed, the maximum permissible speed is 30 mph (50 km/h).
- **Vehicles with Active Parking Assist:** Do not use Active Parking Assist when snow chains are installed.



- **Vehicles with AIRMATIC:** If snow chains are installed, only drive at raised vehicle level .
- **Vehicles with rear axle steering:** If snow chains are installed, only drive with Snow Chain mode active (→ page 700).

 You can deactivate ESP® to start off (→ page 369). This allows the wheels to spin, achieving increased tractive power.

Notes on windshield washer fluid

Observe the notes on operating fluids (→ page 802).

WARNING

Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable. If it comes into contact with hot components, it may ignite.

- Make sure that windshield washer concentrate is not spilled near to the filler opening.

NOTE

Damage to the exterior lighting due to unsuitable windshield washer fluid

Unsuitable windshield washer fluid may damage the plastic surface of the exterior lighting.

- Only use windshield washer fluid which is also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.

NOTE

Blocked spray nozzles caused by mixing windshield washer fluids

- Do not mix MB SummerFit and MB WinterFit with other windshield washer fluids.

Do not use distilled or de-ionized water. Otherwise, the fill level sensor may be triggered erroneously.

RECOMMENDED WINDSHIELD WASHER FLUID:

- above freezing point: e.g. MB SummerFit
- below freezing point: e.g. MB WinterFit

For the correct mixing ratio, refer to the information on the antifreeze container.

Mix washer fluid with windshield washer fluid all year round.





WINDSHIELD WASHER SYSTEM

WASHER FLUID RESERVOIR CAPACITY

Model	Filling volume
All models	Maximum 3.9 US qt (3.7 l)

Refilling the windshield washer system

WARNING


Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable.

- ▶ Avoid fire, open flames, smoking and the creation of sparks when using windshield washer concentrate.

Requirements:

- The vehicle is unlocked.

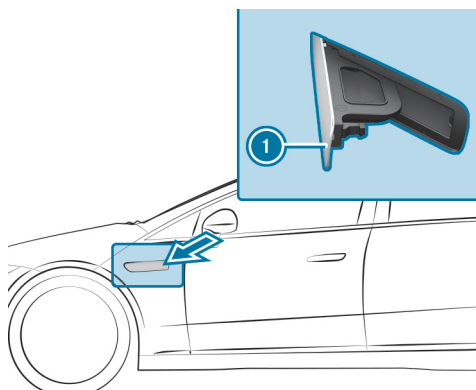

- ▶ Press on the rear area of washer fluid filler flap .
- ▶ Washer fluid filler flap  will open.
- ▶ Add washer fluid.
- ▶ Close washer fluid filler flap .

You can watch an animation on this topic via the following link:

Changing the windshield wiper blades

WARNING

Risk of becoming trapped if the windshield wipers are switched on while wiper blades are being replaced


If the windshield wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.

- ▶ Always switch off the windshield wipers and vehicle before changing the wiper blades.

MOVING THE WIPER ARMS INTO THE REPLACEMENT POSITION

- ▶ Switch the vehicle on and then off again immediately.
 - ▶ Within around 15 seconds, press the  button on the combination switch for approximately three seconds (→ page 271).
- The wiper arms will move into the replacement position.


 Depending on the production period of the vehicle, different variants of the wiper blades will have been installed.





REMOVING THE WIPER BLADES (VARIANT 1)


- ▶ Fold the wiper arms away from the windshield.

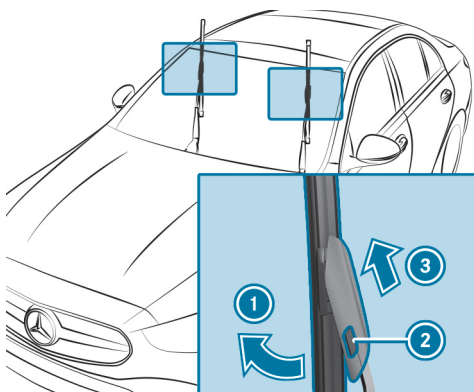

- ▶ Hold the wiper arm with one hand. With the other hand, turn the wiper blade away from the wiper arm in the direction of arrow ① as far as it will go.
- ▶ Press release knob ②.
- ▶ Remove the wiper blade in the direction of arrow ③ away from the wiper arm.


REMOVING THE WIPER BLADES (VARIANT 2)

- ▶ Fold the wiper arms away from the windshield.

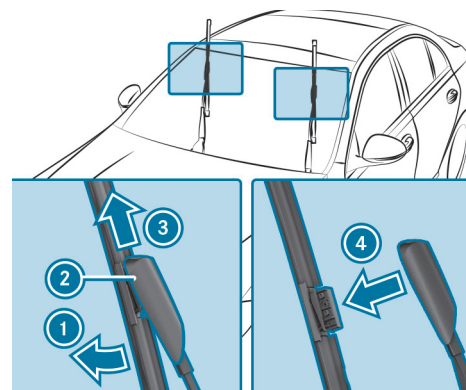

- ▶ Hold the wiper arm with one hand. With the other hand, turn the wiper blade away from the wiper arm in the direction of arrow ① as far as it will go.
- ▶ Slide catch ② in the direction of arrow ③ until it engages in the removal position.
- ▶ Remove the wiper blade from the wiper arm in the direction of arrow ④.


INSTALLING THE WIPER BLADES (VARIANT 1)

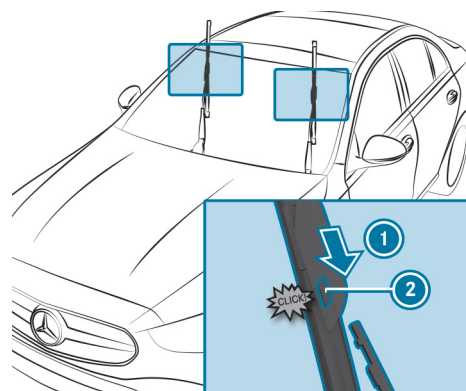



- ▶ Insert the new wiper blade in to the wiper arm in the direction of arrow ① until release knob ② engages.
- ▶ Make sure that the wiper blade is seated correctly.
- ▶ Fold the wiper arms back onto the windshield.
- ▶ Switch on the vehicle.
- ▶ Press the  button on the combination switch. The wiper arms will return to their original positions.
- ▶ Switch off the vehicle.

INSTALLING THE WIPER BLADES (VARIANT 2)

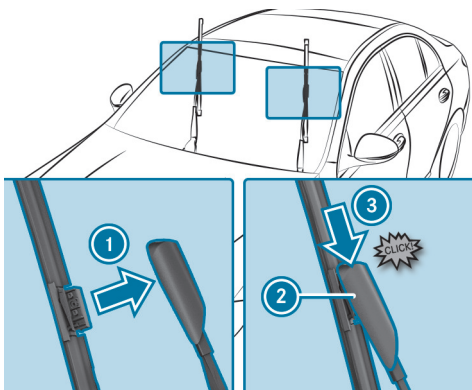


- ▶ Insert the new wiper blade into the wiper arm in the direction of arrow ①.
- ▶ Slide catch ② in the direction of arrow ③ until it engages in the locking position.
- ▶ Make sure that the wiper blade is seated correctly.

- ▶ Fold the wiper arms back onto the windshield.
- ▶ Switch on the vehicle.
- ▶ Press the  button on the combination switch. The wiper arms will return to their original positions.
- ▶ Switch off the vehicle.

MAINTENANCE DISPLAY

A maintenance display can be found at the tip of the blade on the newly installed wiper blades.

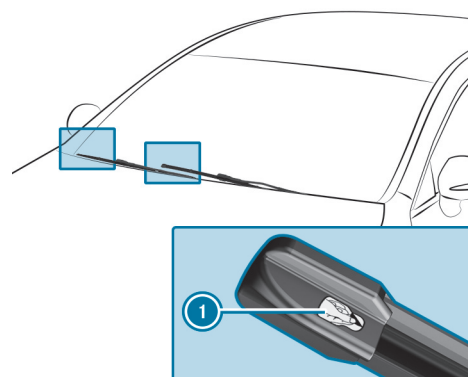


- ▶ Remove protective film ① from the maintenance display.

When the color of the maintenance displays changes from black to yellow, you should replace the wiper blades.




< Help in the event of a breakdown

Activating/deactivating the hazard warning lights

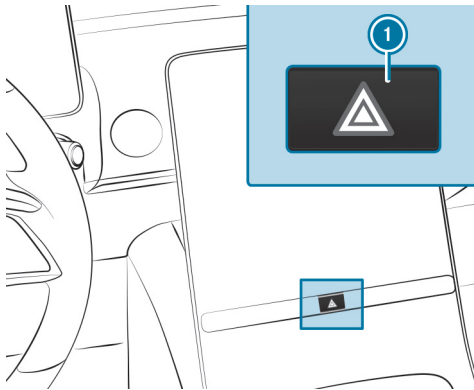

Vehicles without MBUX Hyperscreen

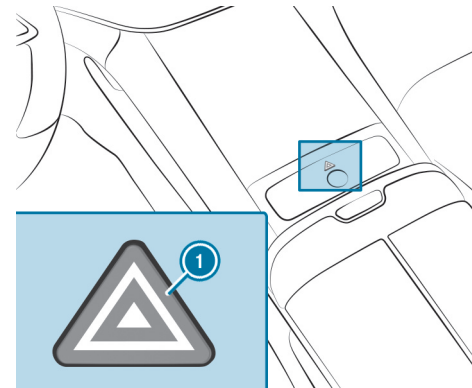

Vehicles with MBUX Hyperscreen


▶ Press button ①.

IN THE FOLLOWING SITUATIONS, THE HAZARD WARNING LAMPS WILL SWITCH ON AUTOMATICALLY:

- The air bag has been deployed
- An emergency stop has been initiated (→ page 390)


Removing the safety vest



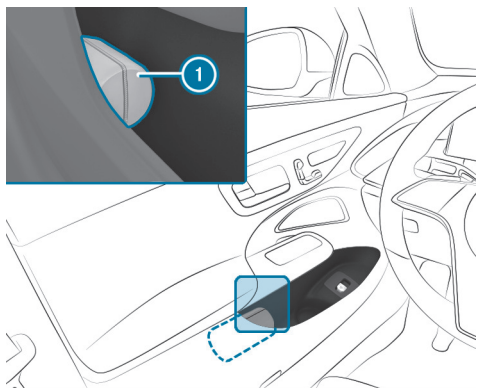

Safety vests can be stored in the door stowage compartments of all doors.

- ▶ To remove: open the safety vest bag ① and take out the safety vest.
- ▶ To replace: fold the safety vest, roll it up and insert it into the safety vest bag ①.
- ▶ Then place the safety vest bag ① back into the door stowage compartment.

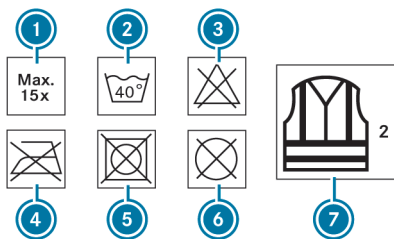

- ① Maximum number of washes
- ② Maximum wash temperature
- ③ Do not bleach
- ④ Do not iron
- ⑤ Do not tumble dry
- ⑥ Do not dry clean
- ⑦ Class 2 safety vest

- ⑥ Do not dry clean
- ⑦ Class 2 safety vest

The requirements defined by the legal standard are only fulfilled if the safety vest is the correct size and is fully closed.


EXCHANGE THE SAFETY VEST IN THE FOLLOWING CASES:

- The reflective strips are damaged or dirty.
- The maximum permissible number of washes is exceeded.
- The fluorescence has faded, e.g. due to continuous exposure to sunlight.

DISPOSE OF THE SAFETY VEST IN AN ENVIRONMENTALLY FRIENDLY WAY:

- Please contact your local waste disposal company.


Removing the warning triangle

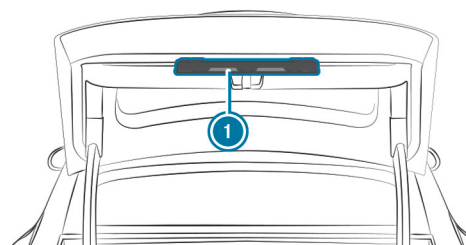

- ▶ Remove warning triangle ①.



First-aid kit (soft sided)

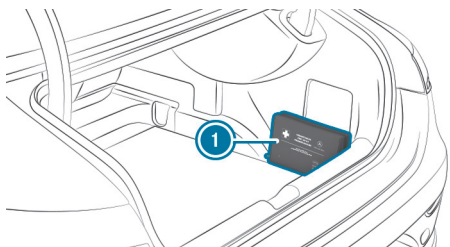

First-aid kit (soft sided) ① is located on the right-hand side of the trunk when the vehicle is delivered.

QR code for rescue card

QR codes are attached to the inside of the socket flap and on the opposite side on the B-pillar. In the event of an accident, rescue services can use the QR code to quickly find the appropriate rescue card for your vehicle. The current rescue card contains the most important information about your vehicle (e.g. the routing of the electric lines) in compact form.

You can find further information at: <https://rk.mb-qr.com/de/>

Starting assistance and charging the 12-V-battery

- ▶ Only have starting assistance provided by a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.
- ▶ Only have the battery charged at a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.

Notes on electrical fuses

WARNING

Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher amperage, the electric line could be overloaded.

This could result in a fire.

- ▶ Always replace faulty fuses with specified new fuses containing the correct amperage.

NOTE


Damage due to incorrect fuses

Using incorrect fuses can result in damage to electrical components or systems or their functions being considerably restricted.

- ▶ Use only fuses approved for Mercedes-Benz with the respective specified fuse rating.

Replace blown fuses with equivalent fuses, identifiable by their color and label. The fuse ratings and further information to be observed can be found in the fuse assignment diagram.

Fuse assignment diagram: on the fuse box in the rear (→ page 693).





NOTE

Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- ▶ When the fuse box is open, make sure that no moisture can enter the fuse box.
- ▶ When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

If the newly inserted fuse also blows, have the cause determined and rectified at a qualified specialist workshop.

ENSURE THE FOLLOWING BEFORE REPLACING A FUSE:

- The vehicle is secured against rolling away.
- All electrical consumers are switched off.
- The vehicle is switched off.

THE ELECTRICAL FUSES ARE LOCATED IN VARIOUS FUSE BOXES:

- Fuse box on the driver's side of the cockpit (→ page 693)
- Fuse box in the front passenger footwell (→ page 693)
- Fuse box in the rear (→ page 693)

Notes on flat tires

WARNING

Risk of accident due to a flat tire

A flat tire severely affects the driving characteristics as well as steering and braking.

Tires without run-flat characteristics:

- ▶ Do not drive on with a flat tire.
- ▶ Change the flat tire immediately with an emergency spare wheel or spare wheel. Alternatively, consult a qualified specialist workshop.

Tires with run-flat characteristics:

- ▶ Observe the information and warning notes on MOExtended tires (run-flat tires).

IN THE EVENT OF A FLAT TIRE, THE FOLLOWING OPTIONS ARE AVAILABLE DEPENDING ON YOUR VEHICLE'S EQUIPMENT:

- **Vehicles with MOExtended tires:** it is possible to continue the journey for a short period of time. Make sure you observe the notes on MOExtended tires (run-flat tires) (→ page 676).
- **Vehicles with a TIREFIT kit:** you can seal the tire so that it is possible to continue the journey for a short period of time. To do this, use the TIREFIT kit (→ page 677).
- **Vehicles with Mercedes-Benz connect:** you can make a call for breakdown assistance via the overhead control panel in the event of a flat tire (→ page 608).





- **All vehicles:** change the wheel (→ page 725).

i The emergency spare wheel is available only in certain countries (→ page 732).
Vehicles with MOExtended tires are not equipped with a TIREFIT kit at the factory. When retrofitting your vehicle with tires that do not have run-flat capabilities, e.g. winter tires, you should also equip it with a TIREFIT kit. A TIREFIT kit may be obtained from a qualified specialist workshop.
Vehicles with a Mercedes-Benz emergency call system that are not equipped with a TIREFIT kit: in the event of a flat tire, consult the Mercedes-Benz emergency call system Customer Assistance Center.

Overview of the tire-change tool kit


With the exception of some country-specific variants, vehicles are not equipped with a tire-change tool kit. Consult a qualified specialist workshop to find out which tire-change tool kit is necessary and approved for a wheel change on your vehicle.

YOU REQUIRE THE FOLLOWING TOOLS, FOR EXAMPLE, TO CHANGE A WHEEL:

- Jack
- Chock
- Lug wrench
- Alignment bolt

The tire-change tool kit is located in the tool bag **1** in the trunk.

i When stowing the tool bag, ensure that it is adequately secured.

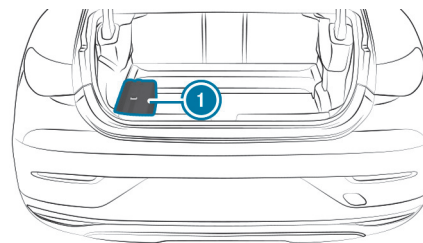



THE TOOL BAG CONTAINS:

- Jack
- Gloves
- Lug wrench
- Alignment bolt
- Folding chock
- Ratchet wrench for jack

TIREFIT kit storage location

The TIREFIT kit is located under the trunk floor.



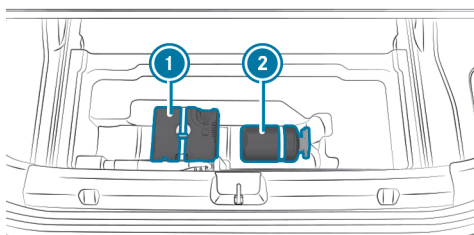

- ① Tire inflation compressor
- ② Tire sealant bottle

Depending on the model, the TIREFIT kit may also be located in other places under the trunk floor.

Towing the vehicle with both axles on the ground

- Observe the notes on the permitted towing methods (→ page 685).
- Make sure that the 12 V battery is connected and charged.

OBSERVE THE FOLLOWING POINTS WHEN THE 12 V BATTERY IS DISCONNECTED OR DISCHARGED:

- The drive system cannot be started.
- The electric parking brake cannot be released or applied.
- The selector lever cannot be put into position **N** or **P**.

ONLY TRANSPORT IS PERMITTED WHEN AT LEAST ONE OF THE FOLLOWING CONDITIONS OCCUR:

- If the selector lever cannot be put into position **N**.
- If the 12 V battery is disconnected or discharged.

- If the display in the instrument cluster is not working.
- If the **Towing Not Permitted See Operator's Manual** display message is displayed.
- If the **Check Coolant Level See Operator's Manual** display message is displayed.
- If the **Stop Switch Off Vehicle** display message is displayed.

- In such cases, transport the vehicle (→ page 688).



NOTE

Damage due to towing away at excessively high speeds or over long distances

The drivetrain could be damaged when towing at excessively high speeds or over long distances.

- A towing speed of 30 mph (50 km/h) must not be exceeded.
- A towing distance of 30 miles (50 km) must not be exceeded.





WARNING

Risk of accident when towing a vehicle with too much weight

IF THE VEHICLE TO BE TOWED IS HEAVIER THAN THE PERMISSIBLE GROSS MASS OF YOUR VEHICLE, THE FOLLOWING SITUATIONS CAN ARISE:

- The towing eye breaks off.
- The combination oscillates and can capsize.
- ▶ Before towing, check whether the vehicle to be towed exceeds the permissible gross mass.

If a vehicle is to be towed away, its permissible gross mass must not exceed the permissible gross mass of the towing vehicle.

- ▶ Information on the permissible gross mass of the vehicle can be found on the vehicle identification plate (→ page 800).

TOWING THE VEHICLE

- ▶ Installing the towing eye (→ page 691).
- ▶ Fastening the towing device.

NOTE

Damage due to incorrect connection of the tow bar

- ▶ Only connect the tow rope or tow bar to the towing eyes.

- ▶ Deactivating the automatic locking mechanism (→ page 179).
- ▶ Do not activate the HOLD function.

- ▶ Deactivating the tow-away alarm (→ page 204).
- ▶ Deactivating Active Brake Assist (→ page 402).
- ▶ Put the selector lever into position **N**.
- ▶ Release the electric parking brake.
- ▶ Remain in the cockpit during towing and observe the display messages.
- ▶ Do not switch off the vehicle while it is being towed. Do not operate the start/stop button after moving the selector lever to the **N** position.
- ▶ Do not open the driver's door or front passenger door, because otherwise the selector lever automatically switches to position **P**.

WARNING

Risk of accident due to restricted safety-relevant functions during towing

SAFETY-RELEVANT FUNCTIONS ARE RESTRICTED OR NO LONGER AVAILABLE IN THE FOLLOWING SITUATIONS:

- The vehicle is switched off.
- You pressed the start/stop button after moving the selector lever into position **N**.
- The brake system or power steering is malfunctioning.
- The energy supply or on-board electrical system is malfunctioning.
- ▶ Do not tow the vehicle in these situations.

- ▶ Transporting the vehicle (→ page 688).

**! NOTE**

Damage to the drive system owing to incorrect towing

DO NOT TOW THE VEHICLE IN THE FOLLOWING SITUATIONS:

- The vehicle is switched off.
 - The start/stop button has been operated after the selector lever was moved to position **N**.
 - The brake system or the power steering is malfunctioning.
 - The energy supply or the on-board electrical system is defective.
- Do not tow the vehicle in these situations.

! NOTE

Damage due to excessive tractive power

If you pull away sharply, the tractive power may be too high and the vehicles could be damaged.

- Pull away slowly and smoothly.





< Expert knowledge

Additional functions of buttons

RESETTING THE CLIMATE CONTROL SETTINGS


- ▶ Press and hold the [Climate Menu](#) entry on the climate bar of the multimedia system for four seconds.
The climate control settings will be reset to the basic settings.

Useful vehicle functions

STORING THE PARKING POSITION OF THE FRONT-PASSENGER OUTSIDE MIRROR USING THE MEMORY BUTTON

Requirements:

- Reverse gear has not been engaged.

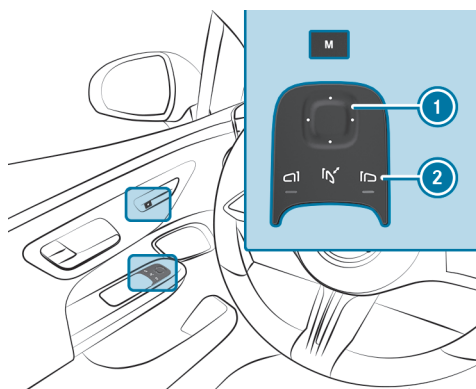

- ▶ Use button **2** to select the front-passenger outside mirror.
- ▶ Move the front-passenger outside mirror into the desired parking position using button **1**.
- ▶ Press the **M** button.
- ▶ Confirm immediately using button **1** to store the setting.


i No more than three seconds may pass between the **M** button and button **1** being pressed. The mirror adjustment will be canceled after three seconds.

Deactivating the function of the key

Vehicles with KEYLESS-GO: if you deactivate the function of the SmartKey, the KEYLESS-GO functions will also be deactivated. Access or drive authorization by KEYLESS-GO will then no longer be possible with that particular SmartKey. Activate the function of the SmartKey so that all its functions will again be available.

You can also deactivate the function of the SmartKey to reduce the energy consumption of the SmartKey if you do not use the vehicle or a SmartKey for an extended period of time.

- ▶ Press and hold the  button on the SmartKey.





- With the key button  pressed, immediately press key button  twice in quick succession.

The indicator light of the key lights up once briefly and once for a long time.

THE FOLLOWING OPTIONS FOR RE-ACTIVATING THE SMART-KEY ARE AVAILABLE:

- Press any button on the SmartKey.
- Start the vehicle with the SmartKey in the marked space in the center console (→ page 304).

Overview of the Mercedes-Benz emergency call system

eCall can help to reduce the time between an accident and the arrival of emergency services at the site of the accident. It helps locate an accident site in places that are difficult to access. However, even if a vehicle is equipped with eCall, this does not mean the system is ON. As such, eCall does not replace dialing 911 in the event of an accident.

An emergency call can be made automatically or manually.

Only make emergency calls if you or others are in need of rescue. Do not make an emergency call in the event of a breakdown or a similar situation.

INFORMATION ON THE DISPLAY:

SOS NOT READY: the vehicle is not on or eCall not available.

During an active emergency call, <schar> appears in the display.

You can find more information on the regional availability of eCall at: <https://www.mercedes-benz-mobile.com/extra/ecall/>

- i** If there is a malfunction of the emergency call system, the loudspeakers, microphone, air bag or the SOS button, for example, are faulty.

YOU CAN RECOGNIZE A MALFUNCTION IN THE EMERGENCY CALL SYSTEM BY THE FOLLOWING DISPLAYS:

- A corresponding message appears on the driver and media display .
- The SOS button lights up red continuously.

Emergency guide

In the event of an accident or breakdown, the emergency guide shows safety notes on the central display.

THESE INCLUDE, FOR EXAMPLE:

- Recommended actions when leaving the vehicle
- Procedure for safely removing seat belts in the event of an accident whereby the vehicle comes to rest on its roof

THE EMERGENCY GUIDE IS ACTIVATED IN THE FOLLOWING SITUATIONS:

- Occupant protection system has been triggered
- An emergency call is made
- Certain breakdown situations





 The availability as well as the scope of the emergency guide can vary depending in the country and vehicle equipment.



[Back to contents](#)



< At a glance

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Cockpit (central display) >

Cockpit (MBUX Hyperscreen) >

Indicator and warning lamps (standard) >

Indicator and warning lamps (with driver camera) >


Overhead control panel >

Door operating unit and seat adjustment >

Emergencies and breakdowns >



< Cockpit (central display)

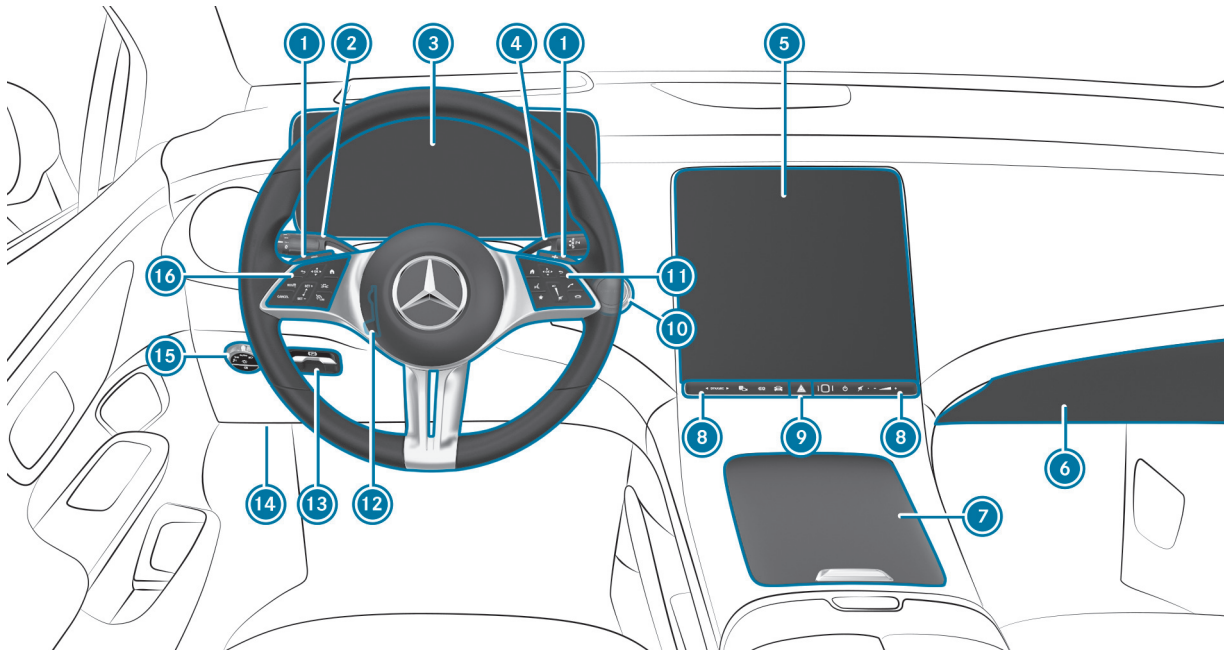


Left-hand-drive vehicles (with central display)








① Increases recuperation >	Active Parking Assist >	⑪ Control panel for the MBUX multi-media system >
Reduces recuperation >	Calls up the EQ menu >	⑫ Adjusts the steering wheel >
② Combination switch >	Quick vehicle access >	⑬ Electric parking brake >
③ Driver's display >	Fingerprint sensor >	⑭ Diagnostics connection >
④ DIRECT SELECT lever >	Switches the MBUX multimedia system on/off >	⑮ Light switch >
⑤ Central display >	Switches sound on/off >	⑯ Control panel:
⑥ Glove box >	Adjusts the volume >	Driver's display >
⑦ Stowage space >	⑨ Hazard warning light system >	Active Distance Assist DISTRONIC >
⑧ Switch panel for:	⑩ Start/stop button >	
DYNAMIC SELECT button >		





< Cockpit (MBUX Hyperscreen)

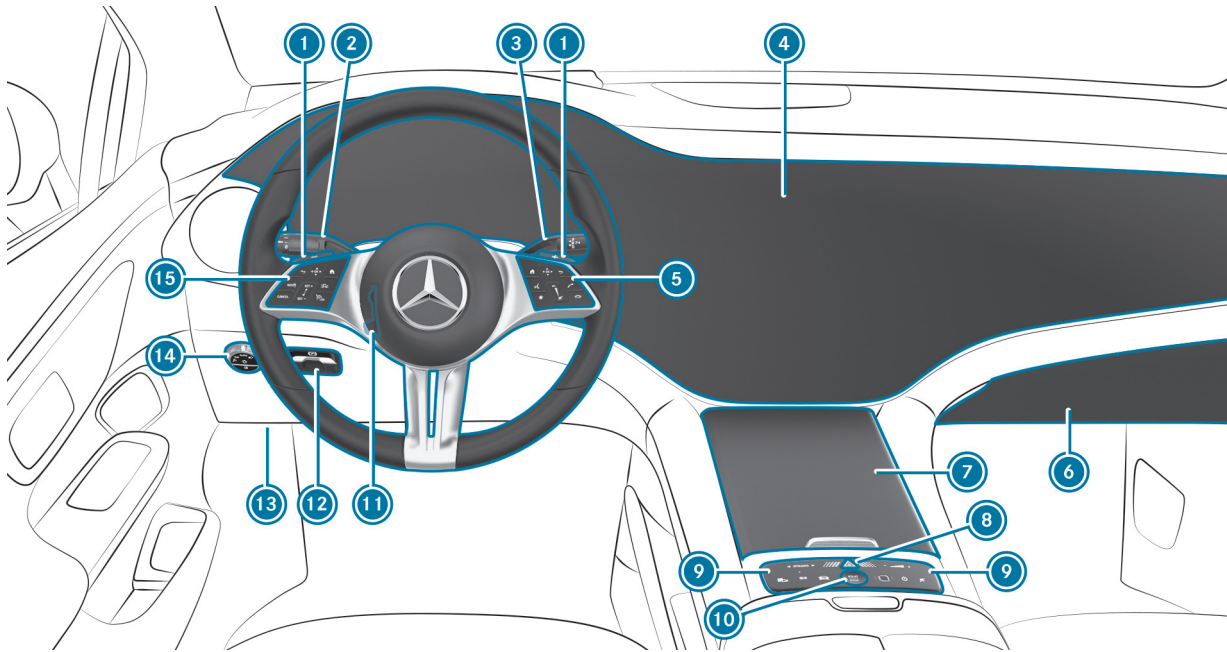


Left-hand-drive vehicles (with MBUX hyperscreen)








①  Increases recuperation >	⑦ Stowage space >	 Adjusts the volume >
 Reduces recuperation >	⑧  Hazard warning light system >	⑩ Start/stop button >
② Combination switch >	⑨ Switch panel for:	⑪ Adjusts the steering wheel >
③ DIRECT SELECT lever >	 DYNAMIC SELECT button >	⑫  Electric parking brake >
④ MBUX hyperscreen with:	 Active Parking Assist >	⑬ Diagnostics connection >
Driver's display >	 Calls up the EQ menu >	⑭ Light switch >
Central display >	 Quick vehicle access >	⑮ Control panel:
Front passenger display >	 Fingerprint sensor >	Driver's display >
⑤ Control panel for the MBUX multi-media system >	 Switches the MBUX multimedia system on/off >	 Active Distance Assist DISTRONIC >
⑥ Glove box >	 Switches sound on/off >	





< Indicator and warning lamps (standard)

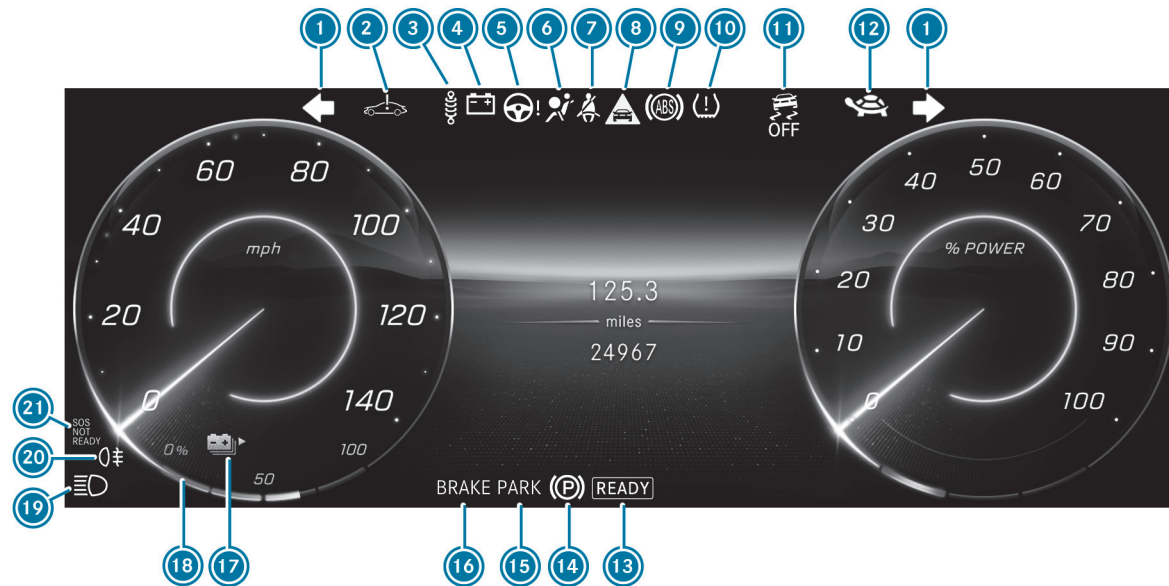


Standard driver display






1 Turn signal lights >	9 ABS >	USA only
2 System error >	10 Tire pressure monitor >	Canada only
3 Suspension (red) >	11 ESP® OFF >	Recuperative Brake System, USA only >
Suspension (yellow) >	ESP® >	Brakes (yellow), Canada only >
4 Electrical malfunction >	12 Reduced power >	17 Range >
5 Power steering (red) >	13 Operational readiness of drive system >	18 State of charge indicator >
Power steering (yellow) >	14 Electric parking brake (yellow) >	19 High beam >
Rear axle steering (red) >	Electric parking brake (red) >	Low beam >
Rear axle steering (yellow) >	USA only	Side lights >
6 Restraint system >	Canada only	20 Rear fog light >
7 Seat belt >	16 Brakes (red) >	21 Mercedes-Benz emergency call system >
8 Distance warning >		





< Indicator and warning lamps (with driver camera)

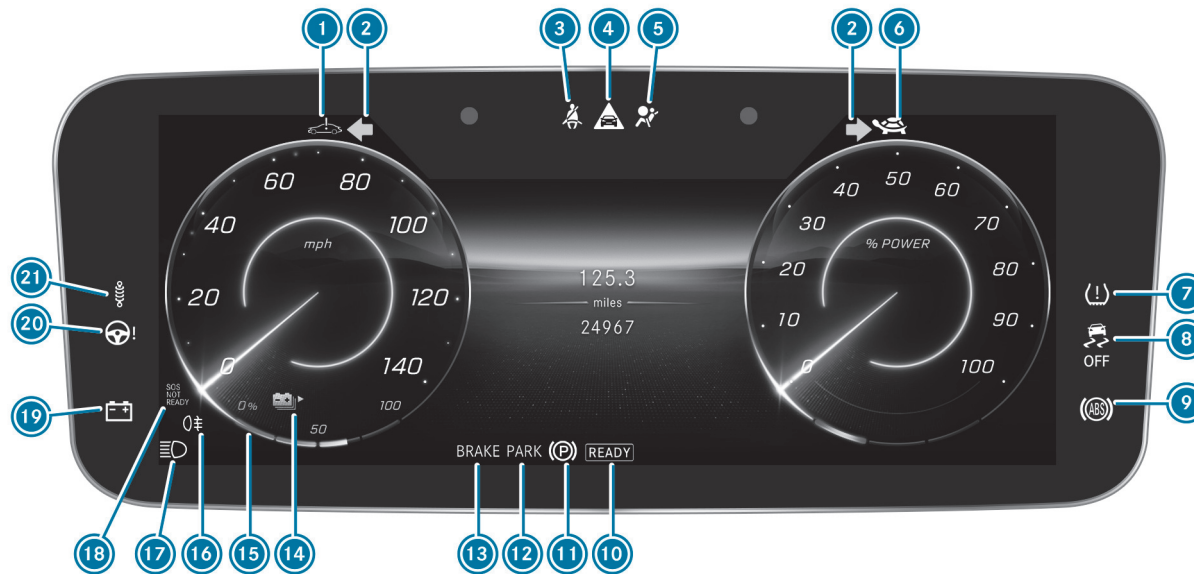

Driver display with driver camera








1 System error >	12 Electric parking brake (red) >	Low beam >
2 Turn signal lights >	USA only	Side lights >
3 Seat belt >	Canada only	18 Mercedes-Benz emergency call system >
4 Distance warning >	13 Brakes (red) >	19 Electrical malfunction
5 Restraint system >	USA only	20 Power steering (red) >
6 Reduced power >	Canada only	Power steering (yellow) >
7 Tire pressure monitor >	Recuperative Brake System, USA only >	Rear axle steering (red) >
8 ESP® OFF >	Brakes (yellow), Canada only >	Rear axle steering (yellow) >
ESP® >	14 Range >	21 Suspension (red) >
9 ABS >	15 State of charge indicator >	Suspension (yellow) >
10 Operational readiness of drive system >	16 Rear fog light >	
11 Electric parking brake (yellow) >	17 High beam >	





< Overhead control panel

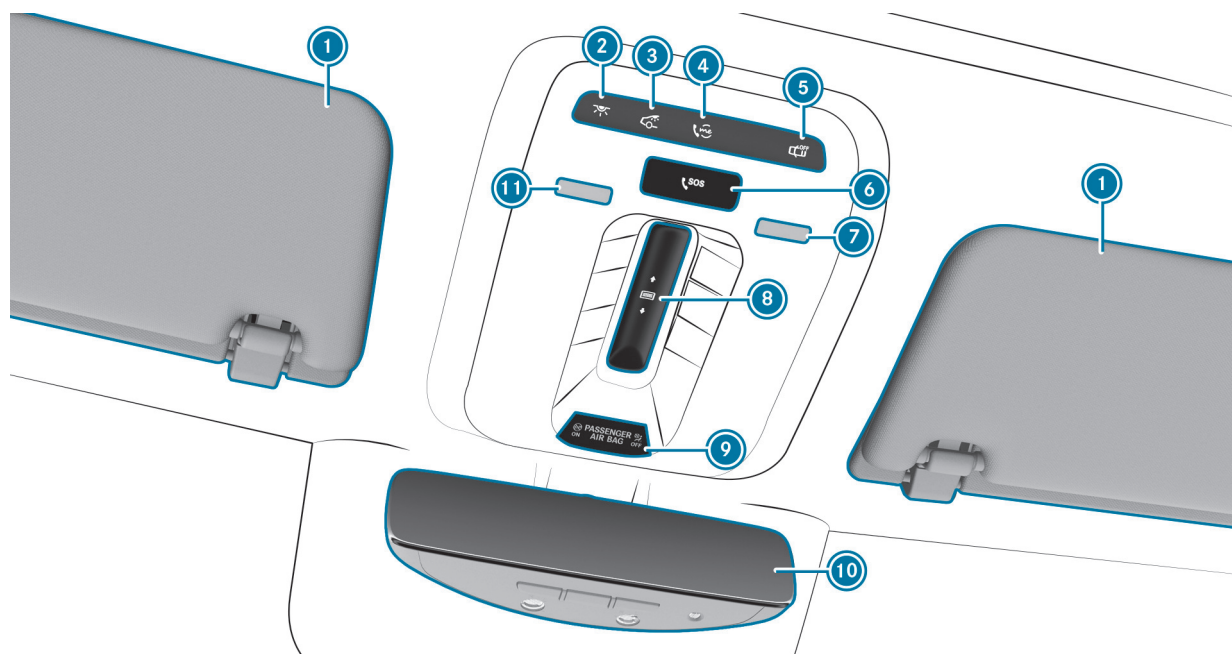



1	Sun visors	
2	 Switches the front interior lighting on/off	>
3	 Switches the rear interior lighting on/off	>
4	 me button	>
5	 Switches automatic interior lighting control on/off	>


6	 SOS button	>
7	Switches the right-hand reading lamp on/off	>
8	 Opens/closes the panorama roof with power tilt/sliding panel	>
	 Opens/closes the panorama roof with power tilt/sliding panel roller sunblind	>

9	PASSENGER AIR BAG indicator lamp	>
10	Inside rear-view mirror	>
11	Switches the left-hand reading lamp on/off	>





< Door operating unit and seat adjustment

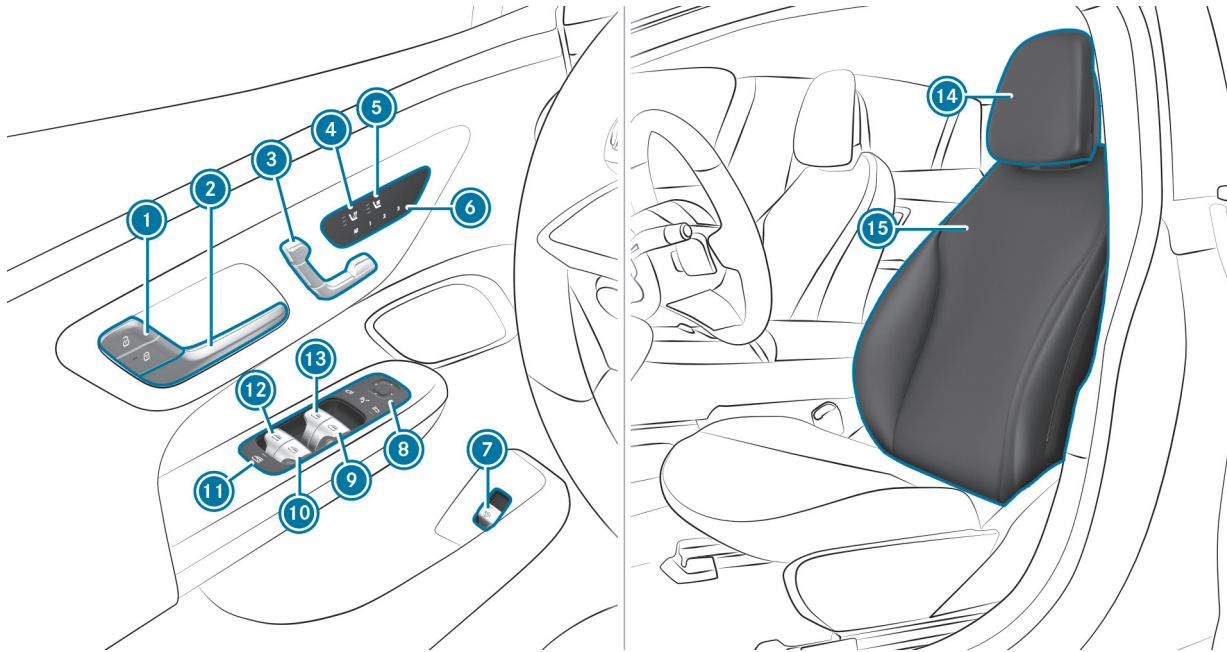







1  Locks/unlocks the vehicle >	7  Opens/closes the trunk lid >	13  Opens/closes the left side window >
2 Opens the door >	8  Operates the outside mirrors >	14 Adjusts the head restraints >
3 Adjusts the seats electrically >	9  Opens/closes the right side window >	15 Seat adjustment using the multi-media system >
4  Switches the seat heating on/off >	10  Opens/closes the rear right side window >	
5  Switches the seat ventilation on/off >	11  Child safety lock for the rear side windows >	
6  Operates the memory function >	12  Opens/closes the rear left side window >	





< Emergencies and breakdowns

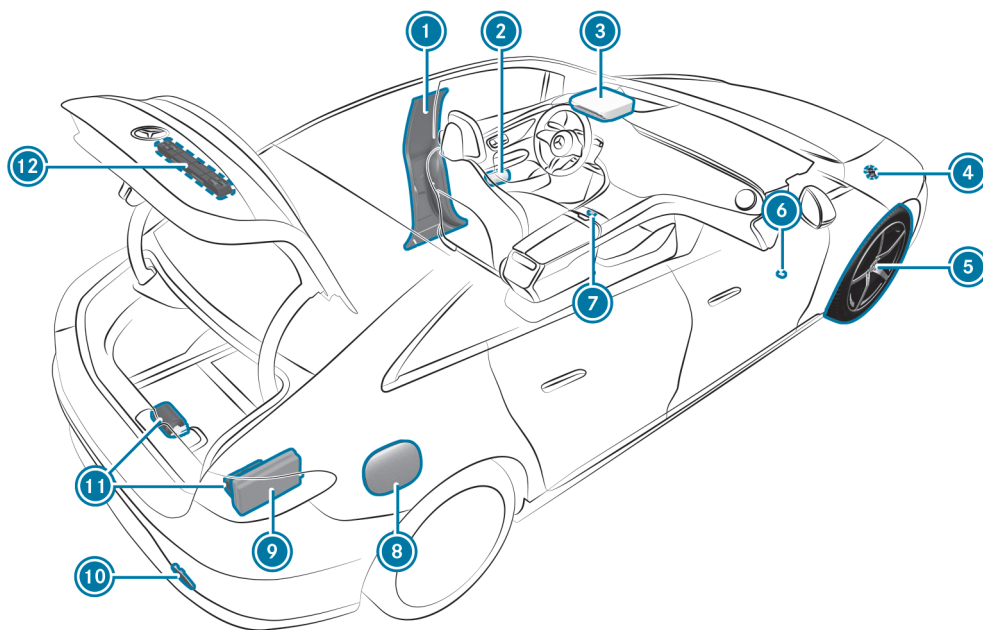



① B-pillar with:	
QR code for accessing the rescue card	>
information label on tire pressure	>
② Safety vests	>
③  me button	>
 SOS button	>

④ Towing away	>
⑤ Flat tire	>
⑥ Operating the high-voltage disconnect device	>
⑦  Hazard warning light system	>
⑧ Socket flap with:	

QR code for accessing the rescue card	>
⑨ First-aid kit (soft sided)	>
⑩ Towing away	>
⑪ TIREFIT kit	>
⑫ Warning triangle	>





◀ Digital Operator's Manual

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Calling up the Digital Operator's Manual 



< Calling up the Digital Operator's Manual

Multimedia system:

The Digital Operator's Manual describes the functions and operation of the vehicle and the multimedia system.

- ▶ Select one of the following menu items in the Digital Operator's Manual:
 - **Quick start:** find the first steps towards adjusting your seat (driver's side).
 - **Tips:** find information that prepares you for certain everyday situations with your vehicle.
 - **Animations:** watch animations of the vehicle functions.
 - **Messages:** receive additional information about the messages on the driver display.
 - **Language:** select the language for the Digital Operator's Manual.

You can search for keywords using the search field **Search** in order to find quick answers to questions regarding operation of the vehicle.



- ① Menu
- ② Search
- ③ Back
- ④ Contents section

Some sections in the Digital Operator's Manual, such as warning notes, can be expanded and collapsed.

Additional options for calling up the Digital Operator's Manual:

Driver display: call up brief information regarding display messages on the driver display. Pressing **i** will show brief information on the central display.

MBUX Voice Assistant: call-up via the voice control system

Global search: call up search results for contents of the Digital Operator's Manual in the home screen





 For safety reasons, the Digital Operator's Manual is deactivated while driving.



[Back to contents](#)



< General notes

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Protection of the environment	>	Country-specific information for regulatory radio components	>	Limited Warranty	>
Mercedes-Benz GenuineParts	>	Diagnostics connection	>	QR code for rescue card	>
Touch-sensitive controls	>	Qualified specialist workshop	>	Data storage	>
Mercedes-Benz App	>	Correct use of the vehicle	>	Copyright	>
Service and vehicle operation	>	Notes for persons with electronic medical aids	>		
Operating safety	>	Problems with your vehicle	>		
Mounting the license plate onto the front license plate bracket	>	Reporting safety defects	>		



< Protection of the environment

ENVIRONMENTAL NOTE

Environmental damage due to operating conditions and personal driving style

Operate your vehicle in an environmentally responsible manner to help protect the environment. Please observe the following recommendations on operating conditions and personal driving style.

Operating conditions:

- ▶ Make sure that the tire pressures are correct.
- ▶ Do not carry any unnecessary weight (e.g. roof luggage racks once you no longer need them).
- ▶ Monitor energy consumption.
- ▶ Adhere to the service intervals.
A regularly serviced vehicle will contribute to environmental protection.
- ▶ Always have maintenance work carried out at a qualified specialist workshop.

Personal driving style:

- ▶ Drive carefully and maintain a suitable distance from the vehicle in front.
- ▶ Avoid frequent, sudden acceleration and braking.
- ▶ Drive in a way that conserves energy. Pay attention to the ECO display for an economical driving style.

ENVIRONMENTAL NOTE

Environmental pollution caused by irresponsible disposal of the high-voltage battery

A high-voltage battery contains materials which are harmful to the environment.

- ▶ Dispose of defective high-voltage batteries at a qualified specialist workshop.

ENVIRONMENTAL ISSUES AND RECOMMENDATIONS:

It is recommended that you re-use or recycle materials instead of just disposing of them.

The relevant environmental guidelines and regulations serve to protect the environment and must be strictly observed.





< Mercedes-Benz GenuineParts



ENVIRONMENTAL NOTE

Environmental damage due to not using recycled reconditioned components

Mercedes-Benz AG offers recycled reconditioned components and parts with the same quality as new parts. The same entitlement from the Limited Warranty is valid as for new parts.

- Use recycled reconditioned components and parts from Mercedes-Benz AG.



NOTE

Impairment of the operating efficiency of the restraint systems from installing accessory parts or from repairs or welding

AIR BAGS AND EMERGENCY TENSIONING DEVICES, AS WELL AS CONTROL UNITS AND SENSORS FOR THE RESTRAINT SYSTEMS, MAY BE INSTALLED IN THE FOLLOWING AREAS OF YOUR VEHICLE:

- doors
- door pillars
- sill
- seats
- cockpit
- driver's display
- center console
- lateral roof frame
- Do not install accessory parts such as audio systems in these areas.
- Do not carry out repairs or welding.
- Have accessories retrofitted at a qualified specialist workshop.

You could jeopardize the operating safety of your vehicle if you use parts, tires and wheels, as well as accessories relevant to safety that have not been approved by Mercedes-Benz. Safety-critical systems (e.g. the brake system)





may malfunction. Use only Mercedes-Benz GenuineParts or parts of equal quality. Use only tires, wheels and accessory parts that have been specifically approved for your vehicle model.

Mercedes-Benz GenuineParts are subject to strict quality inspections. Each part has been specially developed, manufactured or selected for Mercedes-Benz vehicles and adapted to them. Therefore, only Mercedes-Benz GenuineParts should be used.

More than 300,000 different Mercedes-Benz GenuineParts are available for Mercedes-Benz models.

All Mercedes-Benz Service Centers maintain a supply of Mercedes-Benz GenuineParts for necessary service and repair work. In addition, strategically located parts delivery centers ensure quick and reliable parts service.

Always specify the vehicle identification number (VIN) (→ page 800) when ordering Mercedes-Benz GenuineParts.





< Touch-sensitive controls

In addition to conventional switches and buttons, your vehicle is equipped with touch-sensitive controls.

THESE ARE LOCATED IN THE FOLLOWING AREAS OF YOUR VEHICLE:

- Roof and door control panel
- Climate control
- Steering wheel
- MBUX multimedia system

The controls have touch-sensitive user interface surfaces. You can control these surfaces by pressing or swiping to adjust settings or to trigger functions, for example.

The touch-sensitive interface on the touchscreen also provides haptic feedback in the form of pulses, vibrations or changes in the surface structure, for example.

YOU WILL RECEIVE HAPTIC FEEDBACK IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- When pressing a button on the user interface
- When scrolling in a list or table
- When you reach a new area on the user interface, e.g. a pop-up window

WHEN USING TOUCH-SENSITIVE USER INTERFACES, NOTE THE FOLLOWING POINTS TO AVOID PROBLEMS:

- Do not affix stickers or similar objects to the surfaces.
- Do not attach smartphone holders or other mountings to the surface of the central display.
- Keep the surfaces protected from moisture and wet conditions.
- Keep the surfaces free of dust and dirt (→ page 668).

Some touch-sensitive controls have both a symbol and integrated indicator lamps. Be sure to press on the symbol of the control element when using it.





< Mercedes-Benz App

Notes on Digital Extras

You can also activate various functions (Digital Extras) retroactively via Mercedes me after purchasing your vehicle.

Information is available at any authorized Mercedes-Benz Center.

If the activation was not successful, repeat the process.

Activating Digital Extras via Mercedes me

Requirements:

- The vehicle has a wireless connection.
- The vehicle is linked to the Mercedes me user account.

ORDERING AND ACTIVATING DIGITAL EXTRAS

- ▶ Place the Digital Extra that you would like to purchase for your vehicle in your shopping basket in the Mercedes-Benz Store.
- ▶ Complete the order.
The Digital Extra will be activated while you are using the vehicle.

SPEEDING UP ACTIVATION

- ▶ Switch the vehicle off and lock it.
- ▶ Unlock the vehicle after about two minutes and switch on the vehicle.
The Digital Extra will be activated. For some features, a notification will also appear in the vehicle's multimedia system.





< Service and vehicle operation

Vehicle operation outside the USA or Canada

If you drive your vehicle abroad, service facilities or replacement parts may not be immediately available.

Some Mercedes-Benz models are available in Europe through our European Delivery Program. For more information, please consult a Mercedes-Benz Service Center, or write to one of the following addresses:

in the USA:

Mercedes-Benz USA, LLC

One Mercedes-Benz Drive

Sandy Springs, GA 30328

in Canada:

Mercedes-Benz Canada, Inc.

2680 Matheson Blvd E, Suite 500

Mississauga, ON L4W 0A5

Maintenance

USA only:

Your customer advisor confirms the service in the service report.

Roadside Assistance

The Mercedes-Benz Roadside Assistance Program offers technical help in the case of a breakdown. Your calls to the toll-free Roadside Assistance Hotline are answered by our agents 24 hours a day, 365 days a year.

1-800-FOR-MERcedes (1-800-367-6372) (USA)

1-800-387-0100 (Canada)

USA only: You can find further information in the Mercedes-Benz Roadside Assistance Program brochure.

Canada only: You can find further information in the "Roadside Assistance" section in the Warranty Information Guide. Please refer to Mercedes-Benz Canada's website:

<https://www.mercedes-benz.ca/en/owners/manuals> (English)

<https://www.mercedes-benz.ca/fr/owners/manuals> (French)

Change of address or change of ownership

In the event of a change of address, please send us the "Notification of address change" in the Service and Guarantee booklet or simply call the Mercedes-Benz Customer Assistance Center (USA) on the hotline number 1-800-FOR-MERcedes (1-800-367-6372) or Customer Service (Canada) on 1-800-387-0100. We can then reach you in a timely fashion, if necessary.





If you sell your Mercedes, please leave all literature in the vehicle so that it is available to the next owner. If you have purchased a used vehicle, please send us the "Notice of Purchase of Used Car" in the Service and Guarantee booklet or simply call the Mercedes-Benz Customer Assistance Center (USA) at the hotline number 1-800-FOR-MERcedes (1-800-367-6372) or Customer Service (Canada) at 1-800-387-0100.

Possible danger due to substances hazardous to health

In compliance with Proposition 65 ("Prop65"), the following detachable label has been added to each vehicle sold in California:

**WARNING**

Operating, servicing and maintaining a passenger vehicle, pickup truck, van or off-road motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle

A 000 817 82 02





< Operating safety

WARNING

Risk of accident due to malfunctions or system failures

If you do not have the prescribed service/maintenance work or any required repairs carried out, this could result in malfunctions or system failures.

- ▶ Always have the prescribed service and maintenance work or any required repairs carried out in a qualified specialist workshop.

WARNING

Risk of accident or injury due to incorrect modifications on electronic component parts

Modification of electronic components, their software or wiring could impair their function and/or the function of other networked component parts or safety-relevant systems.

This can endanger the operating safety of the vehicle.

- ▶ Never tamper with the wiring and electronic component parts or their software.
- ▶ You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

Observe the "On-board electronics" section in "Technical data".

NOTE

Impairment of the operating efficiency of the vehicle or individual components due to tampering with the on-board electronics

The vehicle is equipped by the manufacturer with various safety mechanisms that interact with each other.

IF THE SYSTEM DETECTS TAMPERING WITH THE ON-BOARD ELECTRONICS DUE TO AN UNAUTHORIZED MODIFICATION OF CONTROL UNITS AND/OR THEIR SOFTWARE/DATA, THIS MAY HAVE THE FOLLOWING EFFECTS:

- Individual vehicle functions are (temporarily) no longer operational.
- The overall vehicle is (temporarily) no longer operational.
- ▶ Have the vehicle checked immediately at a qualified specialist workshop and, if necessary, reset to factory settings.



**! NOTE**

Damage to the vehicle caused by driving too fast and by blows to the underbody and chassis parts

THE VEHICLE CAN BE DAMAGED IN THE FOLLOWING CASES IN PARTICULAR:

- The underside of the vehicle makes contact with the ground, e.g. on a high curb or an unpaved road.
- The vehicle drives too quickly over an obstacle, e.g. a curb, a speed bump or a pothole.
- A heavy object hits the underbody or chassis components.

In these or similar situations, the vehicle body, the underbody, chassis components, wheels or tires and parts of the high-voltage battery could be damaged even if this is not visible. Components that have been damaged in this way can fail unexpectedly or, in the event of an accident, may not absorb the loads that arise as intended.

- ▶ Have the vehicle checked and repaired immediately at a qualified specialist workshop.

or

- ▶ If driving safety is impaired during the rest of the journey, stop immediately paying attention to the traffic situation and notify a qualified specialist workshop.

Electric vehicles have an electric motor. The energy supply for the electric motor comes from the high-voltage onboard electrical system.

⚠ DANGER

Risk of death and fire due to modified and/or damaged components of the high-voltage on-board electrical system

The vehicle's high-voltage on-board electrical system is under high voltage. If you modify component parts in the vehicle's high-voltage on-board electrical system or touch damaged component parts, you may be electrocuted. In addition, modified and/or damaged components may cause a fire.


In the event of an accident or impact to the underbody, components of the high-voltage electrical system may be damaged although the damage is not visible.

- ▶ Never make any modifications to the high-voltage on-board electrical system.
- ▶ Do not switch on or use the vehicle if its high-voltage on-board electrical system components have been modified or damaged.
- ▶ Never touch damaged components of the high-voltage on-board electrical system.
- ▶ After an accident, do not touch any components of the high-voltage on-board electrical system.
- ▶ After an accident, have the vehicle transported away.
- ▶ Have the components of the high-voltage on-board electrical system checked at a qualified specialist workshop and replaced if necessary.





The components of the high-voltage onboard electrical system are marked with yellow warning stickers. The cables of the high-voltage onboard electrical system are orange.

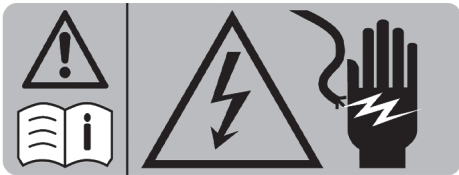

Example

High-voltage components that can become very hot are marked with a separate warning sticker:



Vehicles with an electric motor generate significantly less noise when stationary and on the move than vehicles with a combustion engine.

This means that other road users may fail to hear the vehicle owing to its significantly lower stationary and driving noise.


It is for this reason that the vehicle is equipped with a sound generator, which serves as an acoustic vehicle alerting system (AVAS). This protective measure is prescribed by law.

This exterior noise by the sound generator (AVAS) is audible in the vehicle interior at low speeds, and is not a malfunction.





< Mounting the license plate onto the front license plate bracket

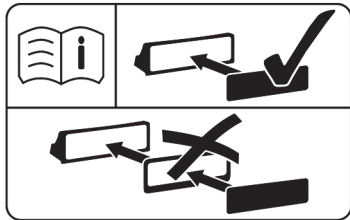

The information label can be found on the license plate bracket, either embossed or in sticker form.



NOTE

Malfunctions and system failures due to incorrect mounting of the license plate on the front license plate holder

If the license plate is incorrectly mounted on the front license plate holder, sensors, cameras or driving and safety systems may malfunction or fail.

Observe the following points when mounting the license plate on the front license plate holder:

- ▶ Mount the license plate directly on the license plate holder without advertising media or other holders.
- ▶ Mount the license plate so that it does not protrude above or to the side of the license plate adapter.





< Country-specific information for regulatory radio components

INFORMATION REGARDING MODIFICATIONS TO RADIO COMPONENTS

Modifications to radio components may invalidate the general operating permit for the radio component in question. The radio component manufacturer shall accept no responsibility for such modifications.

INFORMATION REGARDING CROSSING NATIONAL BORDERS

You must observe the radio regulatory provisions for the country in which you are currently driving when operating the vehicle.

WIRELESS VEHICLE COMPONENTS



USA: "Radio based devices of this vehicle comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) These devices may not cause harmful interference, and 2) These devices must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

Canada: "This vehicle contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) These devices may not cause interference. (2) These devices must accept any interference, including interference that may cause undesired operation of the devices." "Les émetteurs/récepteurs dans cette véhicule sont conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : 1) Ces appareils ne doivent pas produire de brouil-

lage; 2) Ces appareils doivent accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."





< Diagnostics connection

The diagnostics connection is a technical interface in the vehicle. It is used, for example, in the context of repair and maintenance work or for reading out vehicle data in a specialist workshop. Diagnostic devices should therefore only be connected in a qualified specialist workshop.

WARNING

Risk of accident due to connecting devices to the diagnostics connection

If you connect devices to the diagnostics connection of the vehicle, the function of vehicle systems and operating safety may be impaired.

- ▶ For safety reasons, we recommend that you use and connect only products approved by an authorized Mercedes-Benz Service Center.

WARNING

Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This will jeopardize the operating- and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- ▶ Make sure that there is always sufficient clearance for the pedals.
- ▶ Always install the floor mats securely and as prescribed.
- ▶ Do not use loose floor mats and do not place floor mats on top of one another.




**! NOTE**

Battery discharging from using devices connected to the diagnostics connection

Using devices at the diagnostics connection drains the battery.

- ▶ Check the charge level of the battery.
- ▶ If the charge level is low, charge the battery, e.g. by driving a considerable distance.

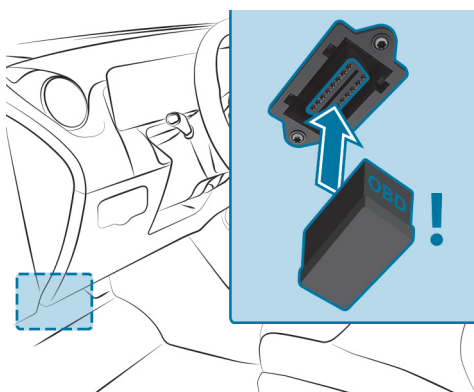**CONNECTING AND USING ANOTHER DEVICE WITH THE DIAGNOSTICS CONNECTION CAN HAVE THE FOLLOWING EFFECTS:**

- Malfunctions in the vehicle system
- Permanent damage to vehicle components

Please refer to the warranty terms and conditions for this matter.





< Qualified specialist workshop

A Mercedes-Benz service center is a qualified specialist workshop. It has the necessary special skills, tools and qualifications to correctly carry out the work required on your vehicle. This particularly applies to safety-critical work.

ALWAYS HAVE THE FOLLOWING WORK ON YOUR VEHICLE CARRIED OUT BY A MERCEDES-BENZ SERVICE CENTER:

- Safety-critical work
- Service and maintenance work
- Repair work
- Modifications as well as installations and conversions
- Work on electronic components
- Work on high-voltage components

Mercedes-Benz recommends a Mercedes-Benz service center.





< Correct use of the vehicle

If you remove any warning stickers, you or others could fail to recognize certain dangers. Leave warning stickers in position.

OBSERVE THE FOLLOWING INFORMATION IN PARTICULAR WHEN DRIVING YOUR VEHICLE:

- the safety notes in this Operator's Manual, vehicle-specific supplements and further supplementary documents
- technical data for the vehicle
- traffic laws and regulations of the country you are currently driving in
- laws pertaining to motor vehicles and safety standards of the country you are currently driving in
- radio regulatory requirements of the country you are currently driving in





< Notes for persons with electronic medical aids

Despite meticulous development of their vehicle systems, Mercedes-Benz AG cannot completely rule out the interaction of vehicle systems with electronic medical aids, such as cardiac pacemakers.

In addition, there are components installed in the vehicle that can generate magnetic fields on a par with permanent magnets, regardless of the operating status of the vehicle. These fields may occur in the area around the multimedia system and sound system, for example, or in the area around the seats, depending on the respective vehicle equipment.

IN SOME CASES, THIS COULD RESULT IN THE FOLLOWING, DEPENDING ON THE AIDS USED:

- Medical aids malfunctioning
- Adverse health effects

Observe the notes and warnings of the manufacturer of the medical aids; if in doubt, contact the device manufacturer and/or your doctor. If there is continuing uncertainty concerning the possibility of medical aids malfunctioning, Mercedes-Benz AG recommends using fewer electrical vehicle systems and/or maintaining a distance from the components.

WHEN CHARGING THE HIGH-VOLTAGE BATTERY, KEEP A DISTANCE OF AT LEAST AN ARM'S LENGTH BETWEEN THE MEDICAL AID AND THE FOLLOWING COMPONENTS:

- the power supply equipment

This includes charging stations in the form of a wallbox or a public charging point, for example.

- vehicle components carrying live voltage

This includes the charging cable and the charging control box, for example.

ALWAYS HAVE REPAIRS AND MAINTENANCE WORK IN THE AREA OF THE FOLLOWING COMPONENTS CARRIED OUT AT A QUALIFIED SPECIALIST WORKSHOP:

- vehicle components carrying live voltage
- transmission antenna
- multimedia system and sound system

If you have any queries or suggestions, consult a qualified specialist workshop.





< Problems with your vehicle

If you should experience any problem with your vehicle, particularly one that you believe may affect its safe operation, we urge you to contact a Mercedes-Benz Service Center immediately to have the problem diagnosed and rectified. If the problem is not resolved to your satisfaction there, please contact a Mercedes-Benz Service Center again or write to one of the following addresses.

In the USA:

Mercedes-Benz USA, LLC

Customer Assistance Center

One Mercedes-Benz Drive

Sandy Springs, GA 30328

In Canada:

Mercedes-Benz Canada, Inc.

Customer Assistance Center

2680 Matheson Blvd E, Suite 500

Mississauga, ON L4W 0A5





< Reporting safety defects

USA ONLY:

The following text is published as required of manufacturers under Title 49, Code of U.S. Federal Regulations, Part 575 pursuant to the “National Traffic and Motor Vehicle Safety Act of 1966”.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Mercedes-Benz USA, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Mercedes-Benz USA, LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153) ; go to <https://www.safercar.gov>; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590, USA.

You can also obtain other information about motor vehicle safety from <https://www.safercar.gov>.

CANADA ONLY:

The following text is published as required of manufacturers under subsection 18.4 (4) of the Motor Vehicle Safety Regulations.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Transport Canada in addition to notifying Mercedes-Benz Canada Inc.

If Transport Canada received similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer, or Mercedes-Benz Canada Inc.

To contact Transport Canada, you may call the Defect Investigations and Recalls Division toll-free in Canada at 1-800-333-0510 or 819-994-3328 in the Gatineau-Ottawa area or internationally; may also go to the following websites for more information:

- English: <https://www.tc.gc.ca/recalls>
- French: <https://www.tc.gc.ca/rappels>





< Limited Warranty

! **NOTE**

Damage to the vehicle arising from violation of these operating instructions.

Damage to the vehicle can arise from violation of these operating instructions.

This damage is not covered either by the Mercedes-Benz implied warranty or by the New- or Used-Vehicle Warranty.

- ▶ Follow the instructions in these operating instructions on proper operation of your vehicle as well as on possible vehicle damage.





< QR code for rescue card

QR codes are attached to the inside of the socket flap and on the opposite side on the B-pillar. In the event of an accident, rescue services can use the QR code to quickly find the appropriate rescue card for your vehicle. The current rescue card contains the most important information about your vehicle (e.g. the routing of the electric lines) in compact form.

You can find further information at: <https://rk.mb-qr.com/de/>





< Data storage

Data processing in the vehicle

ELECTRONIC CONTROL UNITS

There are electronic control units installed in your vehicle. Control units process data that they e.g. receive from vehicle sensors, generate themselves or exchange among themselves. Some control units are required for the safe operation of your vehicle. For example, some assist you when you are driving, such as driver assistance systems, while others enable convenience or information functions.

The following provides you with general information regarding data processing in the vehicle. Additional information on what specific data is collected, stored and transmitted to third parties for what purpose in your vehicle can be found in the notes on the functional features in question in the respective operating instructions. These are also available online and, depending on the equipment, digitally in the vehicle.

PERSONAL DATA

Each vehicle is marked with a unique vehicle identification number. Depending on the country, this vehicle identification number can be used by, for example, government authorities to determine the identity of the owner. There are other possibilities for using data collected from the vehicle to identify the owner or driver, such as the license plate number.

The data generated or processed by control units may therefore be personal or, in certain circumstances, become personal. Depending on which vehicle data are available, it may be possible to make inferences about, for example, your driving behavior, your location, your route or your use patterns.

LEGAL REQUIREMENTS FOR THE DISCLOSURE OF DATA

If legal regulations exist, manufacturers are generally obligated to release data stored by the manufacturer to the necessary extent in individual cases at the request of state authorities. This may be the case during the investigation of a criminal offense, for example.

Within the framework of applicable law, state authorities are also authorized to take data readouts from vehicles themselves in specific cases. In the event of an accident, for example, information readouts can be taken from the air bag control unit to help to establish what happened.

OPERATING DATA IN THE VEHICLE

Control units process data to operate the vehicle.

THIS INCLUDES THE FOLLOWING DATA, FOR EXAMPLE:

- Vehicle status information such as speed, longitudinal acceleration, lateral acceleration, number of wheel revolutions or the fastened seat belts indicator
- Ambient conditions, such as temperature, rain sensor or distance sensor

As a rule, this data is volatile, is not stored beyond the operating time and is processed only in the vehicle itself. Control units (e.g. the vehicle key) often contain data memories. These are used to temporarily or permanently document information about the vehicle's operating state, component stress, maintenance requirements or technical events and malfunctions.



**DEPENDING ON THE TECHNICAL EQUIPMENT, THE FOLLOWING DATA WILL BE STORED:**

- Operating status of system components (e.g. fill levels, tire pressure, battery status)
- Malfunctions or faults in important system components (e.g. lights, brakes)
- System reactions in special driving situations (e.g. air bag deployment, the intervention of stability control systems)
- Information on events leading to vehicle damage
- State of charge of the high-voltage battery; estimated range

In special cases, it may be necessary to store data that would otherwise only be volatile. This may be the case if the vehicle has detected a malfunction, for example.

If you use services such as repair services or maintenance work, stored operational data readouts can be taken and used together with the vehicle identification number, where necessary. Readouts can be taken by service network employees such as workshops and manufacturers, or third parties, such as breakdown services. The same is true in the case of warranty claims and quality assurance measures.

The readout will usually be taken via the diagnostics connection in the vehicle, which is required by law. The operating data readout taken documents technical conditions of the vehicle or individual components and helps to diagnose malfunctions, meet warranty obligations and improve quality. This data, particularly information on component stress, technical events, operating errors and other malfunctions, will be transmitted to the manufacturer for this purpose together with the vehicle identification number if necessary. In addition, the manufacturer is subject to product liability. For this reason, the manufacturer also uses operational data from the vehicle for e.g. recalls. This data can also be used to check customer claims for warranty and guarantee.

Fault memories in the vehicle can be reset by a service outlet or at your request as part of repair or maintenance work.

COMFORT AND INFOTAINMENT FUNCTIONS

You can save comfort settings and individualization in the vehicle and change or reset them at any time.

DEPENDING ON THE VEHICLE EQUIPMENT, THIS INCLUDES THE FOLLOWING SETTINGS, FOR EXAMPLE:

- Seat positions and steering wheel positions
- Suspension tuning and climate control settings
- Custom settings (e.g. interior lighting)

You can incorporate data into the vehicle's infotainment functions yourself as part of the selected equipment.

DEPENDING ON THE VEHICLE EQUIPMENT, THIS INCLUDES THE FOLLOWING DATA, FOR EXAMPLE:

- Multimedia data (e.g. music, films or photos for playback in an integrated multimedia system)
- Address book data for use in conjunction with an integrated hands-free system or an integrated navigation system
- Navigation destinations that have been entered
- Data about the use of internet services

This data for comfort and infotainment functions can be saved locally in the vehicle or stored on a device that you have connected to the vehicle (e.g. smartphone, USB flash drive or MP3 player). If you have entered data yourself, you can delete it at any time.





The transfer of this data out of the vehicle will take place exclusively at your request. This applies in particular when you are using online services according to the settings you have selected.

SMARTPHONE INTEGRATION (E.G. ANDROID AUTO OR APPLE CARPLAY®)

If your vehicle is equipped appropriately, you can connect your smartphone or another mobile device to the vehicle. You will then be able to control them using the controls integrated in the vehicle. The smartphone's picture and sound can be output via the multimedia system. Specific items of information will also be transferred to your smartphone. Depending on the type of integration, this may include position data, day/night mode and other general vehicle statuses. Please refer to the vehicle Operator's Manual / infotainment system operating instructions for further information.

This integration allows the use of selected smartphone apps (e.g. navigation apps, music player apps). There will be no further interaction between your smartphone and the vehicle; in particular, vehicle data will not be directly accessible. The type of additional data processing is determined by the provider of the app being used. Whether you can configure settings for it and, if so, which ones, depend on the app and your smartphone's operating system.

Online services

WIRELESS NETWORK CONNECTION

If your vehicle has a wireless network connection, it enables data to be exchanged between your vehicle and additional systems. The wireless network connection is made possible by the vehicle's own transmitter and receiver or by a mobile end device that you have brought into the vehicle, for example, a smartphone. Online functions can be used via the wireless network connection. This includes online services and applications/apps provided to you by the manufacturer or by other providers.

MANUFACTURER'S SERVICES

Regarding the manufacturer's online services, the individual functions are described by the manufacturer in a suitable place, for example, in the Operator's Manual or on the manufacturer's website, where the relevant data protection information is also given. Personal data may be used for the provision of online services. Data is exchanged via a secure connection, such as the manufacturer's designated IT systems. Any personal data which is collected, processed and used, other than for the provision of services, is done so exclusively on the basis of legal permission. This is the case, for example, for a legally prescribed emergency call system, a contractual agreement or when consent has been given.

You can have services and functions, some of which are subject to a fee, activated or deactivated. This excludes legally prescribed functions and services, such as an emergency call system.

THIRD-PARTY SERVICES

If you use online services from other providers (third parties), these services are the responsibility of the provider in question and subject to that provider's data protection conditions and terms of use. As a general rule, the manufacturer has no influence on the content exchanged.

For this reason, when services are provided by third parties, please ask the service provider in question for information about the type, extent and purpose of the collection and use of personal data.

Data protection rights

Depending on your country or the equipment and range of functions of your vehicle as well as the services you use and the services on offer, you are entitled to different data protection rights. Further information on data protection and your data protection rights can either be found on the manufacturer's website or you will receive this information as part of the various services





and service offers. There you will also find the contact information for the manufacturer and its data protection officers.

At a workshop, for example, with the support of a specialist and possibly for a fee, you can have data read out which is stored only locally in the vehicle.

MBUX multimedia system/Mercedes me connect

If the vehicle is equipped with the MBUX multimedia system or Mercedes me connect, additional data about the vehicle's operation, the use of the vehicle in certain situations, and the location of the vehicle may be compiled by the MBUX multimedia system or Mercedes me connect.

For additional information, please refer to the "MBUX multimedia system" section and/or the Mercedes me connect Terms and Conditions.

Event Data Recorders

USA only:

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

THE EDR IN THIS VEHICLE IS DESIGNED TO RECORD SUCH DATA AS:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;

- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.


These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

EDR data may be used in civil and criminal matters as a tool in accident reconstruction, accident claims, and vehicle safety. Since the Crash Data Retrieval CDR tool that is used to extract data from the EDR is commercially available, Mercedes-Benz USA, LLC („MBUSA“) expressly disclaims any and all liability arising from the extraction of this information by unauthorized Mercedes-Benz personnel.

MBUSA will not share EDR data with others without the consent of the vehicle owners or, if the vehicle is leased, without the consent of the lessee. Exceptions to this representation include responses to subpoenas by law enforcement; by federal, state or local government; in connection with or arising out of litigation involving MBUSA or its subsidiaries and affiliates; or, as required by law.

Warning: The EDR is a component of the Restraint System Module. Tampering with, altering, modifying or removing the EDR component may result in a malfunction of the Restraint System Module and other systems.





State laws or regulations regarding EDRs that conflict with federal regulation are pre\-empted. This means that in the event of such conflict, the federal regulation governs. As of Dec 2016, 17 states have enacted laws relating to EDRs.





< Copyright

Free and open source software

Information on licenses for free and open-source software used in your vehicle can be found on the data carrier in your vehicle document wallet and with updates on the following website:

<https://www.mercedes-benz.com/opensource>

- ZAGAT Survey® and related brands are registered trademarks of Zagat Survey, LLC.

Registered trademarks

- Bluetooth® is a registered trademark of Bluetooth SIG, Inc.
- DTS™ is a registered trademark of DTS, Inc.
- Dolby® and MLP™ are registered trademarks of DOLBY Laboratories.
- ESP® and PRE-SAFE® are registered trademarks of Mercedes-Benz Group AG.
- HomeLink® is a registered trademark of Gentex Corporation.
- iPod® and iTunes® are registered trademarks of Apple Inc.
- Burmester® is a registered trademark of Burmester Audiosysteme GmbH.
- Microsoft® and Windows Media® are registered trademarks of Microsoft Corporation.
- SiriusXM® is a registered trademark of Sirius XM Radio Inc.
- HD Radio™ is a registered trademark of iBiquity Digital Corporation.
- Gracenote® is a registered trademark of Gracenote, Inc.





< Occupant safety

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Brief overview of the most important points



Information on the automatic functions of the restraint system



Purpose and function of the restraint system



Seat belts



Airbags





< Brief overview of the most important points

Basic information

IN PARTICULAR ENSURE THE FOLLOWING CONDITIONS TO ENABLE THE COMPONENTS OF THE RESTRAINT SYSTEM TO UNFOLD THEIR PROTECTIVE POTENTIAL:

- Sit correctly (→ page 121).
- Fasten the seat belt correctly (→ page 122).
 - Function of the  seat belt warning lamp (→ page 124).
 - Function of the rear seat belt status display (→ page 125).
- The  restraint system warning lamp has gone out after the self-test (→ page 123).
- The PASSENGER AIR BAG indicator lamps display the correct status of the front passenger air bag (→ page 125).

FOR CLEAR UNDERSTANDING

The chapter "Occupant safety" includes information on equipment, functions and behaviors that contribute directly to safety of vehicle occupants.

THE INFORMATION IS STRUCTURED AS FOLLOWS:

- **The most important information in brief:** in this chapter, you are provided with an overview of the relationship between the restraint system and the correct behavior of all vehicle occupants.
- **Specific information:** in further sections of the chapter "Occupant safety", you can find specific information on the equipment and functions of the restraint system.

- **Keyword search:** You can also find specific topics using the search field in the Digital Operator's Manual.


INFORMATION ON THE FOLLOWING SUBJECTS, AMONG OTHERS, IS NOT PROVIDED IN THE CHAPTER "OCCUPANT SAFETY":

- Children in the vehicle (→ page 141)
- Driving and driving safety systems (→ page 362)
- Stowage areas (→ page 230)

DEFINING GENERIC TERMS CLEARLY

IN THIS OPERATOR'S MANUAL, THE FOLLOWING GENERIC TERMS ARE USED:

- **Occupant safety:** comprises the components and system functions that help to minimize, as much as possible, the stresses on and consequences for vehicle occupants during an accident.
- **Restraint system:** comprises those components that, along with the vehicle structure, help prevent vehicle occupants from potentially coming into contact with parts of the vehicle interior. The seat belts and air bags, for example, are components of the restraint system.
- **Child restraint system:** you can find all information on this subject in the chapter "Children in the vehicle" (→ page 141).





BE DILIGENT

For the components of the restraint system to provide the intended level of protection, it is essential that your posture is correct and that the seat belt is correctly fastened.

Please bear in mind that carelessness regarding the seating position and putting on the seat belt may have serious consequences. Be diligent and make sure that all vehicle occupants are sitting correctly and have fastened their seat belts properly before starting every journey (→ page 121).

Information on the correct seat position

The seat position must be correct in order for the components of the restraint system to provide the intended level of protection.

The seat position influences both the protection provided by the seat belt and the additional protection provided by the air bags.

A correct seat position in which the seat is nearly perfectly upright and a correctly fastened seat belt reduce the risks posed by the air bag when it is deployed.

Keep in mind space considerations when choosing a seat. With the seat in the correct, nearly upright position, your head should not touch the roof.



WARNING

Risk of injury or death due to an incorrect seat position

If you deviate from the correct seat position, the air bag cannot provide its intended protective function.

Each vehicle occupant must make sure of the following.

- ▶ Put the seat in the correct position.
- ▶ Fasten seat belts correctly.
- ▶ Observe the following information.

IN ORDER FOR THE RESTRAINT SYSTEM TO PROVIDE THE INTENDED LEVEL OF PROTECTION, OBSERVE THE FOLLOWING INFORMATION:

- Before starting your journey, adjust your seat correctly (→ page 207).
When doing so, make sure you are able to fasten your seat belt correctly. The shoulder belt strap must be routed forward from the seat belt outlet over the center of your shoulder.
- Keep your distance from the air bags, especially the front air bags. Set the driver's seat and front passenger seat as far back as possible while making sure the seat belt is fastened correctly.
- If persons are sitting on the rear seats, vehicle occupants should maintain a sufficient distance to the parts of the vehicle interior in front of them.
- Make sure there are no people, animals or objects between the vehicle occupants and an air bag.
- If you are the driver, observe the following information on the correct position of the driver's seat (→ page 207).
Hold the steering wheel only by the steering wheel rim. This allows the driver's air bag to fully deploy.





- Assume a nearly upright sitting posture, with your buttocks positioned as far back as possible in the gap between the seat cushion and the seat backrest.
Your back must lie as flatly and as firmly as possible against the seat backrest.
- While driving, do not lean forward and do not lean against the door or side window. You may otherwise be in the deployment area of the air bags.
- Sit with their feet resting on the floor, if possible. Your thighs are slightly supported by the seat cushion.
Do not put your feet on the cockpit, for example. Your feet may otherwise be in the deployment area of the air bag.
- Fasten the seat belt correctly (→ page 122).

Notes on wearing the seat belt correctly

Always fasten your seat belt correctly before starting a journey. A seat belt can provide the best level of protection only if it is worn correctly.

WARNING

Risk of injury or death due to incorrectly fastened seat belt

If the seat belt is not worn correctly, it cannot perform its intended protective function.

In addition, an incorrectly fastened seat belt can also cause injuries, for example, in the event of an accident or when braking or changing direction suddenly.

- ▶ Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly.

WARNING

Risk of injury or death when additional restraint systems are not used for persons with a smaller stature

Persons under 5 ft (1.50 m) tall cannot wear the seat belt correctly without a suitable additional restraint system.

- ▶ Always secure persons under 5 ft (1.50 m) tall in a suitable restraint system.

Observe the following information on the correct seat position and posture (→ page 121).

EACH VEHICLE OCCUPANT MUST OBSERVE THE FOLLOWING NOTES IN PARTICULAR:

- The seat belt must not be twisted.
- The shoulder belt strap must be routed forward from the seat belt outlet over the center of your shoulder.
- The shoulder belt strap should neither touch your neck nor be routed under your arm or behind your back.
- The lap belt must be routed as low down across the hips as possible.
In addition, push the lap belt down as far as possible across your hips and pull tight with the shoulder belt strap. Never route the lap belt across your abdomen.
- After being tightened, the shoulder belt strap and lap belt must fit snugly against the body.
- Particularly during pregnancy, the instructions for wearing the seat belt correctly must be followed consistently due to the change in stature.
The shoulder strap should run along the side of the abdomen.
- Avoid wearing bulky clothing, e.g. a winter coat.





- Never route the seat belt across sharp, pointed, abrasive or fragile objects.
- Only one person should use each seat belt at any one time.
- Never secure objects with a seat belt if the seat belt is also being used by one of the vehicle's occupants.


Also ensure that no objects, e.g. a cushion, are ever placed between a person and the seat.

If you are driving with a child in the vehicle, observe the information in the chapter "Children in the vehicle" (→ page 141).

Observe the instructions for loading the vehicle when securing objects, luggage or loads (→ page 230).

Fastening and adjusting seat belts

If the seat belt is pulled quickly or sharply, the seat belt retractor locks. The seat belt strap cannot be pulled out any further.

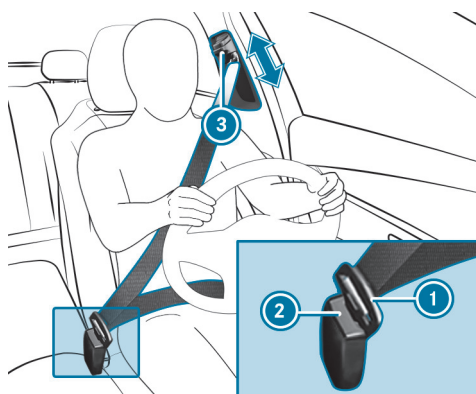

- ▶ Always engage seat belt tongue ① of the seat belt into seat belt buckle ② of the corresponding seat.
- ▶ **To adjust the seat belt height:** press button ③ on the seat belt outlet and slide the seat belt outlet to the desired position.
- ▶ **To engage the seat belt outlet:** release button ③ and ensure that the seat belt outlet engages.

! NOTE

Deployment of components of the restraint system when the front passenger seat is unoccupied and a seat belt is buckled


When the front passenger seat is unoccupied and the seat belt tongue of the seat belt is engaged in the seat belt buckle, components of the restraint system may deploy unnecessarily on the front passenger side, e.g. the Emergency Tensioning Device.

- ▶ Only buckle the seat belts as intended.

- ① Observe the information on the child seat safety feature of the seat belt (→ page 152).

Function of the restraint system warning lamp

When the vehicle is switched on, a self-test will be performed, during which the  restraint system warning lamp will light up. It will disappear no later than a few seconds after the vehicle is started. The components of the restraint system will then be functional.





A MALFUNCTION HAS OCCURRED IN THE RESTRAINT SYSTEM IF:

- the  restraint system warning lamp does not light up or lights up continuously when the vehicle is switched on
- the  restraint system warning lamp lights up continuously or repeatedly during a journey

If components of the restraint system have been deployed, the  restraint system warning lamp will light up continuously.

WARNING

Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.

If the restraint system is malfunctioning, the automatic high voltage emergency shutoff may not function.

DANGER

Risk of fatal injuries due to malfunctions of the automatic high-voltage emergency shutoff

In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may be electrocuted if you touch the damaged component parts of the high-voltage on-board electrical system.

- Have the automatic high-voltage emergency shutoff checked and repaired immediately at a qualified specialist workshop.
- After an accident, switch off the vehicle immediately.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop.

Function of the seat belt warning lamp

The seat belt warning lamp  on the driver's display is a reminder that the driver and/or front passenger are not wearing their seat belts.

The  seat belt warning lamp lights up for six seconds every time the vehicle is started.

All vehicle occupants must fasten their seat belts correctly (→ page 122).

In addition, a warning tone may sound.

When the driver's and front passengers doors are closed and the driver and front passenger have fastened their seat belts, the seat belt warning goes out.





IN THE FOLLOWING CASES, THE SEAT BELT WARNING LIGHTS UP DURING A JOURNEY IF:

- The driver or front passenger has not fastened their seat belt and the following criteria is met:
 - The vehicle speed exceeds 5 mph (9 km/h) for more than 20 seconds.
 - The vehicle speed exceeds 15 mph (25 km/h) once.
- The driver or front passenger unfastens their seat belt while the vehicle is in motion.

Function of the rear seat belt status display

NOTIFICATIONS ON THE DRIVER DISPLAY



The color of the symbol is intended to help you quickly identify the status of the rear seat belt.

The rear seat belt status display in the driver display is a reminder that all vehicle occupants must wear their seat belts correctly.

Every time the vehicle is switched on, the rear seat belt status display informs you for a certain amount of time which rear seat belt is not fastened.

POSSIBLE COLOR OF THE SYMBOL:

- Gray: The rear seat belt is not fastened.
- Green: The seat belt tongue of a rear seat belt is engaged in the seat belt buckle of the displayed seat.
- Red: The person in the rear seat has unfastened their seatbelt.

If a person unfastens a seat belt in the rear passenger compartment while the vehicle is motion, the rear seat belt status display appears again.

In addition, a warning tone may sound.

Function of the PASSENGER AIR BAG indicator lamps (front passenger air bag)



The indicator lamps PASSENGER AIR BAG display the status of the front passenger air bag.

If the front passenger seat is occupied or a child restraint system is installed on it, make sure both before and during the journey that the status of the front passenger air bag is correct for the situation.



**⚠ WARNING**

Risk of potentially fatal injuries due to objects trapped under the front passenger seat

Objects trapped under the front passenger seat may interfere with the function of the automatic front passenger air bag shutoff or damage the system.

- ▶ Do not stow any objects under the front passenger seat.
- ▶ When the front passenger seat is occupied, ensure that no objects have become trapped beneath the front passenger seat.

Self-test: when the vehicle is switched on, both the PASSENGER AIR BAG ON and OFF indicator lamps light up simultaneously for several seconds.

AFTER THE SELF-TEST, YOU CAN DETERMINE THE STATUS OF THE FRONT PASSENGER AIR BAG AS FOLLOWS:

- **Front passenger air bag disabled:** PASSENGER AIR BAG OFF lights up continuously.
The front passenger air bag will not be deployed in the event of an accident. If PASSENGER AIR BAG OFF is lit, no one may use the front passenger seat.
If a rearward-facing child restraint system is installed on the front passenger seat, PASSENGER AIR BAG OFF must be lit continuously.
- **Front passenger air bag enabled:** PASSENGER AIR BAG ON lights up for up to 60 seconds or until both the PASSENGER AIR BAG ON and OFF indicator lamps go out.

The front passenger air bag may be deployed during an accident. If the front passenger air bag is in this status, no rearward-facing child restraint system may be installed on the front passenger seat.

- ⓘ If you are driving with a child in the vehicle, observe the information in the chapter "Children in the vehicle" (→ page 141).

⚠ WARNING

Risk of injury or death due to a disabled front passenger airbag

The front passenger airbag is disabled when the PASSENGER AIR BAG OFF indicator lamp is lit.

A person in the front passenger seat could then, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the cockpit.

IF THE FRONT PASSENGER SEAT IS OCCUPIED, ALWAYS ENSURE THAT:

- The classification of the person in the front passenger seat is correct and the front passenger airbag is enabled or disabled in accordance with the person in the front passenger seat.
- The front passenger seat has been moved as far back as possible.
- The person is seated correctly.
- ▶ Both before and during the journey, ensure that the status of the front passenger airbag is correct.





MALFUNCTION OF THE AUTOMATIC FRONT PASSENGER AIR BAG DEACTIVATION

The PASSENGER AIR BAG OFF indicator lamp and the  restraint system warning lamp light up simultaneously.

In this case, no one may use the front passenger seat and no child restraint system may be installed on the front passenger seat.

Have the automatic front passenger air bag shutoff checked and repaired immediately at a qualified specialist workshop.

Disabling or enabling the front passenger air bag

The automatic front passenger air bag shutoff can disable or enable the front passenger air bag and front passenger knee bag according to the situation.

This happens automatically as a result of the classification of the person or child restraint system on the front passenger seat.

You cannot manually disable or enable the front passenger air bag.

Information on the child restraint system

When installing a child restraint system, observe the notes in "Children in the vehicle" (→ page 141).

NOTES ON THE CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT



WARNING

Risk of injury or fatal injuries if the front passenger air bag is enabled

If the front passenger air bag is enabled, a child on the front passenger seat may be struck by the front passenger air bag in the event of an accident.



NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIR BAG. This can result in the DEATH of or SERIOUS INJURY to the CHILD.

Also pay particular attention to the notes on rearward-facing or forward-facing child restraint systems on the front passenger seat (→ page 147).





< Information on the automatic functions of the restraint system

Function of the automatic front passenger air bag shutoff

A PERSON ON THE FRONT PASSENGER SEAT MUST OBSERVE THE FOLLOWING INSTRUCTIONS:

- Sit correctly (→ page 121).
- Fasten the seat belt correctly (→ page 122).

The automatic front passenger air bag shutoff can switch the front passenger air bag and front passenger knee air bag on or off depending on the situation.

MAKE SURE YOU OBSERVE THE FOLLOWING INFORMATION:

- For the status of the front passenger air bag, see "Function of the PASSENGER AIR BAG indicator lamps"(→ page 125).
- When installing a child restraint system to the front passenger seat, observe the vehicle-specific information (→ page 147).



STATUS OF THE FRONT PASSENGER AIR BAG IN RELATION TO THE STATUS OF THE PERSON:

- **Front passenger air bag disabled:** PASSENGER AIR BAG OFF lights up continuously.
The front passenger air bag will not be deployed in the event of an accident. If PASSENGER AIR BAG OFF is lit, no one may use the front passenger seat.
- **Front passenger air bag enabled:** PASSENGER AIR BAG ON lights up for up to 60 seconds or until both the PASSENGER AIR BAG ON and OFF indicator lamps go out.
The front passenger air bag may be deployed during an accident. Observe the following information on the correct seat position (→ page 121).
Vehicles with rear seats: a person of smaller stature should use a rear seat.



SYSTEM LIMITS

THE FRONT PASSENGER AIR BAG MAY OTHERWISE BE DISABLED BY MISTAKE, E.G. IN THE FOLLOWING SITUATION:

- The front passenger transfers their weight by supporting themselves on a vehicle armrest.
- The front passenger sits in such a way that they unload the seat surface.

NOTE

Deployment of components of the restraint system when the front passenger seat is unoccupied

IN AN ACCIDENT, THE COMPONENTS OF THE RESTRAINT SYSTEM MAY DEPLOY UNNECESSARILY ON THE FRONT PASSENGER SIDE IF:

- There are heavy objects on the front passenger seat.
- The seat belt tongue is engaged in the seat belt buckle of the front passenger seat and the front passenger seat is unoccupied.
- ▶ Store objects in a suitable place.
- ▶ Only one person should use each seat belt at any one time.

Depending on the detected accident situation, the window curtain air bag on the front passenger side may deploy. The air bag is deployed regardless of whether the front passenger seat is occupied.

Function of PRE-SAFE® (anticipatory occupant protection)

PRE-SAFE® is able to detect certain critical driving situations and implement preemptive measures to protect the vehicle occupants.

PRE-SAFE® CAN IMPLEMENT THE FOLLOWING MEASURES INDEPENDENTLY OF EACH OTHER:

- tightening the seat belts on the driver's seat and front passenger seat.
- closing the side windows.
- **Vehicles with sliding sunroof:** closing the sliding sunroof.
- **Vehicles with memory function:** moving the front passenger seat to a more favorable seat position.
- **Vehicles with multicontour seat:** increasing the lateral support by inflating the seat side bolsters of the seat backrest.
- **PRE-SAFE® Sound:** provided that the multimedia system is switched on, generating a brief noise signal to stimulate the innate protective mechanism of a person's hearing.

NOTE

Damage caused by objects in the footwell or behind the seat

The automatic adjustment of the seat position may result in damage to the seat and/or the object.

- ▶ Stow objects in a suitable place.





Reversing the PRE-SAFE® system measures

If an accident did not occur, the pre-emptive measures that were taken are reversed.

You will need to perform certain settings yourself.

- ▶ If the seat belt pre-tensioning is not reduced, move the seat backrest slightly backwards.
The seat belt pre-tensioning releases.

Function of PRE-SAFE® PLUS (anticipatory occupant protection Plus)

PRE-SAFE® PLUS can detect certain impacts, particularly an imminent rear impact, and take preemptive measures to protect the vehicle occupants. These measures cannot necessarily prevent an imminent impact.

PRE-SAFE® PLUS CAN IMPLEMENT THE FOLLOWING MEASURES INDEPENDENTLY OF EACH OTHER:

- tightening the seat belts on the driver's seat and front passenger seat.
- Increasing brake pressure when the vehicle is stationary. This brake application is canceled automatically when the vehicle pulls away.

If an accident did not occur, the preemptive measures that were taken are reversed.

SYSTEM LIMITS

THE SYSTEM WILL NOT INITIATE ANY ACTION IN THE FOLLOWING SITUATIONS:

- When the vehicle is backing up

THE SYSTEM WILL NOT INITIATE ANY BRAKING APPLICATION IN THE FOLLOWING SITUATIONS:

- while driving
or
- when entering or exiting a parking space while using Active Parking Assist


Function of PRE-SAFE® Impulse Side

If an imminent side impact is detected, PRE-SAFE® Impulse Side can preemptively move the upper body of the vehicle occupant in the front seat towards the center of the vehicle. It does this by rapidly inflating an air cushion in the outer seat side bolster of the seat backrest on the side on which the impact is anticipated. This increases the distance between the door and the vehicle occupant.

If PRE-SAFE® Impulse Side has been deployed or is faulty, the [PRE-SAFE Pulse Side Inoperative See Operator's Manual](#) display message appears.

Seat belt adjustment function

Vehicles with PRE-SAFE®: after a front seat belt has been fastened, the automatic seat belt adjustment may apply a certain tightening force by gently pulling taut from the shoulder. Do not hold onto the seat belt while it is adjusting.





You can activate and deactivate the seat belt adjustment function using the multimedia system (→ page 131).

Activating/deactivating seat belt adjustment via the multimedia system

Multimedia system:

 **Settings** **Vehicle** **Occupant Protection**

▶ Activate or deactivate **Belt adjustment**.

Overview of the automatic measures after an accident

DEPENDING ON THE TYPE AND SEVERITY OF THE ACCIDENT, AND DEPENDING ON THE VEHICLE'S EQUIPMENT, THE FOLLOWING MEASURES CAN BE IMPLEMENTED, FOR EXAMPLE:

- automatic braking (post-collision brake) (→ page 131)
- activating the hazard warning lights
- triggering an automatic emergency call (→ page 66)
- Shutting off the drive system and high-voltage on-board electrical system
To start the vehicle again, switch the vehicle off and back on (→ page 303). Depending on the type and severity of the accident, the vehicle might no longer start.
- unlocking the vehicle doors
- lowering the side windows
- displaying the emergency guide on the central display (→ page 609)
- switching on the interior lighting

Function of the post-collision brake after an accident

Depending on the accident situation, the post-collision brake can minimise the severity of a further collision or even avoid it.

If an accident is detected, the post-collision brake can initiate automatic braking. When the vehicle has come to a standstill, the electric parking brake is automatically applied.

THE DRIVER CAN CANCEL AUTOMATIC BRAKING BY TAKING THE FOLLOWING ACTIONS:

- Braking more strongly than automatic braking
- Fully depressing the accelerator pedal with force





< Purpose and function of the restraint system

Overview of deployment situations (restraint system)

MAKE SURE THAT THE FOLLOWING PREREQUISITES IN PARTICULAR HAVE BEEN MET SO THAT THE COMPONENTS OF THE RESTRAINT SYSTEM ARE ABLE TO PROVIDE THE INTENDED LEVEL OF PROTECTION:

- Sit correctly (→ page 121).
- Fasten the seat belt correctly (→ page 122).
 - Function of the seat belt warning lamp (→ page 124).
 - Function of the rear seat belt status display (→ page 125).
- The restraint system warning lamp  is not lit up after the self-test (→ page 123).
- The PASSENGER AIR BAG indicator lamps display the correct status of the front passenger air bag (→ page 125).

DEPENDING ON THE DETECTED DEPLOYMENT SITUATION, THE COMPONENTS OF THE RESTRAINT SYSTEM CAN BE ACTIVATED OR DEPLOYED INDEPENDENTLY OF EACH OTHER:

- Emergency Tensioning Device: frontal impact, rear impact, side impact, rollover
- Driver's air bag, front passenger air bag: frontal impact
- Knee air bag: frontal impact
- Side impact air bag: side impact

- Center air bag in the driver's seat backrest: side impact
- Window curtain air bag: side impact, rollover, frontal impact
- PRE-SAFE® Impulse Side: side impact

The installation location of an air bag is identified by the AIRBAG symbol (→ page 139).

Observe the information on the function of the restraint system (→ page 132).


Information on how the restraint system works

The function of the restraint system depends on the severity of the impact detected and the apparent type of accident.

For more information about types of accidents, see "Overview of deployment situations" (→ page 132).

The activation thresholds for the components of the restraint system are determined based on the evaluation of the sensor values measured at various points in the vehicle. This process is preemptive in nature. The triggering of the components of the restraint system must take place in good time at the start of the impact.

Factors that can be seen and measured only after a collision has occurred cannot play a decisive role in air bag deployment. They also do not provide an indication of air bag deployment.





The vehicle may be deformed significantly without an air bag being deployed. This is the case only if parts that are relatively easily deformed are affected and the rate of vehicle deceleration is not high. Conversely, an air bag may be deployed even though the vehicle suffers only minor deformation. If, e.g. very rigid vehicle parts such as longitudinal members are hit, this may result in sufficiently high levels of vehicle deceleration.

Depending on the apparent type of accident and the detected deployment situation, Emergency Tensioning Devices and/or air bags supplement the protection offered by a correctly worn seat belt.

When enabled, an air bag can provide additional protection for the respective vehicle occupant.

POTENTIAL PROTECTION PROVIDED BY EACH AIR BAG:

- Knee bag: thighs, knees and lower legs
- Driver's air bag, front passenger air bag: head and ribcage
- Window curtain air bag: head
- Side impact air bag: ribcage, also pelvis for front seat occupants
- Center air bag: head and ribcage

However, no system available today can completely eliminate injuries and fatalities in every accident situation. In particular, the seat belt and air bag generally do not protect against objects penetrating the vehicle from the outside. It is also not possible to completely rule out the risk of injury caused by the air bag deploying.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident. Take this into account, particularly if an Emergency Tensioning Device has been triggered or an air bag deployed.

IF THE EMERGENCY TENSIONING DEVICES ARE TRIGGERED OR AN AIR BAG IS DEPLOYED, YOU WILL HEAR A BANG, AND A SMALL AMOUNT OF FINE POWDER MAY ALSO BE RELEASED:

- The bang will not generally affect your hearing.
 - In general, the fine powder released is not hazardous to health but may cause short-term breathing difficulties to persons suffering from asthma or other respiratory problems.
- Provided it is safe to do so, leave the vehicle immediately or open the window in order to prevent breathing difficulties.

Air bags and pyrotechnic Emergency Tensioning Devices contain perchlorate, a substance that may require special handling or environmental protection measures. National guidelines regarding waste disposal must be observed. In California see <https://dtsc.ca.gov/> – Use the search function to find information on e.g. perchlorate.

Information on the limited protection provided by the restraint system

RISK DUE TO THE INCORRECT BEHAVIOR OF VEHICLE OCCUPANTS EVERY VEHICLE OCCUPANT MUST MAKE SURE OF THE FOLLOWING IN PARTICULAR:

- They observe the information on the correct seat position (→ page 121).
- Do not stow any heavy, pointed, sharp or fragile objects in the pockets of clothing items. Stow such objects in a suitable place.



**⚠ WARNING**

Risk of injury or death due to an incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- ▶ Adjust the seat properly before beginning your journey.
- ▶ Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.

RISK DUE TO OBJECTS IN THE VEHICLE INTERIOR**EVERY VEHICLE OCCUPANT MUST MAKE SURE OF THE FOLLOWING IN PARTICULAR:**

- They observe the information on the correct seat position (→ page 121).
- There are no objects between the seat, door and door pillar (B-pillar).
- There are no hard objects, e.g. coat hangers, hanging on the grab handles or coat hooks.
- Do not stow any heavy, pointed, sharp or fragile objects in the pockets of clothing items. Stow such objects in a suitable place.

⚠ WARNING

Risk of injury or death due to blocked seat belt buckle or seat belt anchorage

Objects next to the front seat that block the seat belt buckle or the moving seat belt anchorage on the front seat impair the function of the Emergency Tensioning Devices.

- ▶ Before starting the journey, make sure that there are no objects around the seat belt buckle or between the front seat and door.

⚠ WARNING

Risk of injury from objects in the deployment area of an airbag

Objects in the deployment area of an airbag can hinder or prevent the correct deployment of the airbag.


The airbag may then deploy in an uncontrolled manner and may even cause additional injuries to the vehicle occupants by deploying. This may be the case in particular if the airbag is integrated into the seat.

- ▶ Always stow and secure objects correctly.
- ▶ Before commencing your journey, make sure that no objects are stowed in the deployment area of an airbag.

The installation location of an air bag is identified by the AIRBAG (→ page 139) symbol.

OBSERVE THE FOLLOWING INFORMATION:

- Notes on loading the vehicle (→ page 230)





- Information on the center air bag in the driver's seat backrest (→ page 139)

RISK DUE TO THE INSTALLATION OF ACCESSORIES

Do not attach accessories such as mobile navigation devices, mobile phones or cup holders, within the deployment area of an air bag, e.g. on the cockpit, on the door, on the side window or on the side trim.

In addition, no connecting cables, tensioning straps or retaining straps must be routed or attached to the vehicle within the deployment area of an air bag. Always comply with the accessory manufacturer's installation instructions and, in particular, the notes on suitable places for installation.

WARNING

Risk of injury or death due to unsuitable protective covers

Unsuitable protective covers mean that air bags can no longer protect vehicle occupants as they are designed to do.

- ▶ Use only protective covers approved by Mercedes-Benz for the seat in question.

In addition, the function of the automatic front passenger air bag shutoff could be restricted due to an unsuitable protective cover. If the front passenger seat is occupied, ensure that the PASSENGER AIR BAG indicator lamps display the correct status of the front passenger air bag (→ page 125).

RISK DUE TO PETS IN THE VEHICLE INTERIOR

WARNING

Risk of accident and injury due to animals left unsecured or unattended in the vehicle

If you leave animals in the vehicle unattended or unsecured, they could possibly press buttons or switches.

AN ANIMAL MAY:

- Activate vehicle equipment and become trapped, for example
- Switch systems on or off and endanger other road users

Unsecured animals may be thrown around in the vehicle in the event of an accident or sudden steering and braking maneuvers and injure vehicle occupants in the process.

- ▶ Never leave animals in the vehicle unattended.
- ▶ Always correctly secure animals while driving, e.g. using a suitable animal carrier.





RISK DUE TO MODIFICATION, DAMAGE OR WEAR TO THE COMPONENTS OF THE RESTRAINT SYSTEM

WARNING

Risk of injury or death due to modifications to the restraint system

Vehicle occupants may no longer be protected as intended if alterations are made to the restraint system.

- ▶ Never alter the parts of the restraint system.
- ▶ Never tamper with the wiring or any electronic component parts or their software.

If it is necessary to modify the vehicle to accommodate a person with disabilities, contact an authorized Mercedes-Benz Center for details.

USA only: For details please contact our Customer Assistance Center under 1-800-FOR-MERCEdes (1-800-367-6372).

WARNING

Risk of injury or death due to damaged or modified seat belts

SEAT BELTS CANNOT PROVIDE PROTECTION IN THE FOLLOWING SITUATIONS:

- The seat belt is damaged, has been modified, is extremely dirty, bleached or dyed
- The seat belt buckle is damaged or extremely dirty
- Modifications have been made to the Emergency Tensioning Device, seat belt anchorage or seat belt retractor

Seat belts may sustain non-visible damage in an accident, e.g. due to glass splinters.

Modified or damaged seat belts could tear or fail in the event of an accident, for example.

Modified Emergency Tensioning Devices could accidentally trigger or fail to function as intended.

- ▶ Never modify the seat belt system, for example the seat belt, seat belt buckle, Emergency Tensioning Device, seat belt anchorage and seat belt retractor.
- ▶ Make sure that the seat belts are undamaged, not worn and clean.
- ▶ Always have the seat belts checked immediately after an accident at a qualified specialist workshop.

Use only use seat belts that have been approved for your vehicle by Mercedes-Benz.



**⚠ WARNING**

Risk of injury due to modifications to the cover of an airbag

If you change the cover of an airbag or attach objects, e.g. even stickers, to it, the airbag may no longer function as intended.

- ▶ Never modify the cover of an airbag.
- ▶ Do not attach any objects to the cover.

⚠ WARNING

Risk of burns from hot air bag components

The air bag parts are hot after an air bag has been deployed.

- ▶ Do not touch the air bag parts.
- ▶ Have a deployed air bag replaced at a qualified specialist workshop as soon as possible.

The installation location of an air bag is identified by the AIRBAG symbol (→ page 139).

⚠ WARNING

Risk of injury due to malfunctioning sensors in the door

The function of the airbags can be impaired due to modifications or incorrect work performed on the doors or door trim, or if the doors are damaged.

- ▶ Never modify the doors or parts of the doors.
- ▶ Always have work on the doors or door trim carried out at a qualified specialist workshop.

⚠ WARNING

Risk of injury due to deployed airbag

A deployed airbag no longer offers any protection.

- ▶ Have the vehicle towed to a qualified specialist workshop in order to have the deployed airbag replaced.

Have deployed air bags replaced immediately.

⚠ WARNING


Risk of injury or death from deployed pyrotechnic Emergency Tensioning Devices

Pyrotechnic Emergency Tensioning Devices that have been deployed are no longer operational and are unable to perform their intended protective function.

- ▶ Therefore, have deployed pyrotechnic Emergency Tensioning Devices immediately replaced at a qualified specialist workshop.

RISK DUE TO COMPONENTS OF THE RESTRAINT SYSTEM THAT HAVE ALREADY BEEN DEPLOYED

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident.





< Seat belts

Releasing the seat belts

- ▶ Press the release button in the seat belt buckle and guide the seat belt back with the seat belt tongue.

**NOTE**

Damage caused by trapping the seat belt

If an unused seat belt is not fully retracted, it may become trapped in the door or in the seat mechanism.


- ▶ Always ensure that an unused seat belt is fully retracted.






< Airbags

Overview of air bags

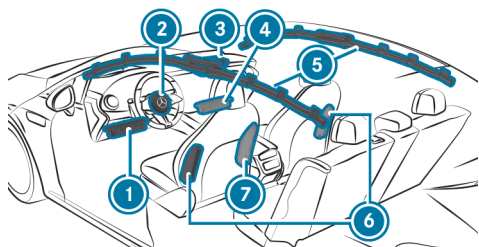

Driver's/front passenger seat:

- ① Driver's knee bag
- ② Driver's air bag
- ③ Front passenger air bag
- ④ Front passenger knee bag
- ⑤ Window curtain air bag
- ⑥ Side impact air bag
- ⑦ Center air bag

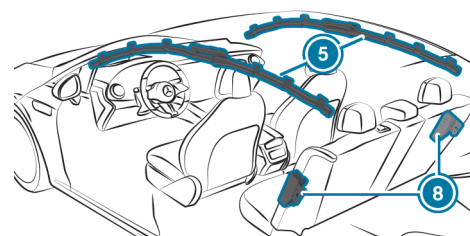

rear seats:

- ⑤ Window curtain air bag
- ⑧ Side impact air bag

The installation location of an air bag is identified by the symbol AIRBAG. An additional arrow symbol ► indicates the installation location for certain air bags.

Observe the information in "Overview of deployment situations" (→ page 132).

Information on the center air bag in the driver's seat backrest

When triggered, the center air bag deploys between the front seats. Do not stow any objects in the deployment area of the center air bag.

Observe the notes on loading the vehicle (→ page 230).





< Children in the vehicle

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Key facts in brief 

Important safety notes 

Suitable child restraint systems for the transport of children 

Securing the child restraint system 


Child safety locks 

Occupant presence reminder 



< Key facts in brief

Safely transporting children in the vehicle

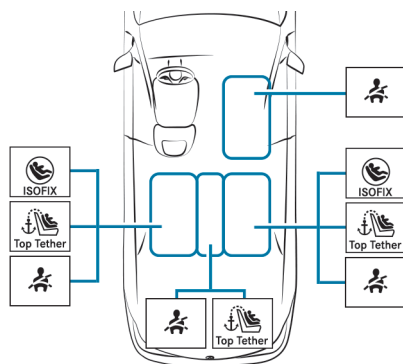

ALWAYS OBSERVE THE FOLLOWING WHEN TRANSPORTING CHILDREN:

- Never leave children unattended in the vehicle (→ page 144).
- Secure children younger than twelve or of a height up to 5 ft (1.50 m) on the seat (see illustration above) properly with a suitable and approved child restraint system and secure small children in a rearward-facing child restraint system.
- Observe the child restraint system manufacturer's installation instructions.

LEFT/RIGHT REAR SEAT (PREFERRED SEATS)

PREFERRED FASTENING SYSTEM:

-  ISOFIX mounting brackets (→ page 153)
-  and additionally fasten Top Tether if available (→ page 155).

ALTERNATIVE ATTACHMENT SYSTEM:

-  Vehicle seat belt (→ page 156)
-  Additionally fasten Top Tether if recommended by the manufacturer of the child restraint system (→ page 155).


FRONT PASSENGER SEAT

FASTENING SYSTEM:

-  Vehicle seat belt (→ page 156)

BE SURE TO OBSERVE:

- If the front passenger seat is occupied, ensure that the status of the front passenger air bag is correct for the current situation (→ page 125).





REAR CENTER SEAT

FASTENING SYSTEM:



Vehicle seat belt (→ page 156)



Additionally fasten Top Tether if recommended by the manufacturer of the child restraint system (→ page 155).





< Important safety notes

Basic information

BE DILIGENT

Bear in mind that negligence when securing a child in the child restraint system may have serious consequences. Always be diligent in securing a child carefully before every journey.

Never allow babies and children to travel sitting on the lap of another vehicle occupant.

TO IMPROVE PROTECTION FOR CHILDREN YOUNGER THAN TWELVE YEARS OR UNDER 5 FT (1.50 M) IN HEIGHT, MERCEDES-BENZ URGENTLY RECOMMENDS THAT YOU OBSERVE THE FOLLOWING:

- Always secure the child in a child restraint system suitable for this Mercedes-Benz vehicle.
- The child restraint system must be appropriate to the age, weight and size of the child.
- The vehicle seat must be suitable for the child restraint system to be installed.

Accident statistics show that children secured on the rear seats are generally safer than children secured on the front seats. For this reason, Mercedes-Benz strongly advises that you install a child restraint system on a rear seat.

THE GENERIC TERM "CHILD RESTRAINT SYSTEM"

THE GENERIC TERM "CHILD RESTRAINT SYSTEM" IS USED IN THIS OPERATOR'S MANUAL. A CHILD RESTRAINT SYSTEM IS, FOR EXAMPLE:

- a baby car seat
- a rearward-facing child seat
- a forward-facing child seat
- a child booster seat – Mercedes-Benz recommends using a child booster seat **with** a seat backrest and seat belt guide.

OBSERVE LAWS AND LEGAL REQUIREMENTS

Always observe the legal requirements when using a child restraint system in the vehicle.

SECURING SYSTEMS FOR CHILD RESTRAINT SYSTEMS IN THE VEHICLE USE ONLY THE FOLLOWING SECURING SYSTEMS FOR CHILD RESTRAINT SYSTEMS:

- ISOFIX mounting bracket
- Vehicle's seat belt system
- Top Tether anchorages

Simply attaching to the ISOFIX mounting brackets on the vehicle can reduce the risk of installing the child restraint system incorrectly.





When securing a child with the integrated seat belt of the ISOFIX/LATCH child restraint system, always comply with the permissible gross mass for the child and child restraint system (→ page 153).

A child booster seat may be necessary to achieve proper seat belt positioning for children over 40 lbs (18 kg) in weight or until they reach a height where a three-point seat belt can be installed properly without a child booster seat.

Mercedes-Benz recommends a suitable child booster seat with a backrest and seat belt guide.

OBSERVE STANDARDS FOR CHILD RESTRAINT SYSTEMS

ALL CHILD RESTRAINT SYSTEMS MUST MEET THE FOLLOWING STANDARDS:

- U.S. Federal Motor Vehicle Safety Standards 213
- Canadian Motor Vehicle Safety Standards 213

Confirmation that the child restraint system complies with the standards can be found on an information label on the child restraint system. This confirmation can also be found in the installation instructions that are included with the child restraint system.

Important warning stickers

ALWAYS SECURE A CHILD RESTRAINT SYSTEM CORRECTLY



WARNING

Risk of injury or death due to incorrect installation of the child restraint system

The child can then not be protected or restrained as intended.

- ▶ Be sure to comply with the manufacturer's installation instructions for the child restraint system and its correct use.
- ▶ Make sure that the entire base of the child restraint system always rests on the sitting surface of the seat.
- ▶ Never place objects (e.g. cushions) under or behind the child restraint system.
- ▶ Use child restraint systems only with the original cover designed for them.
- ▶ Always replace damaged covers with genuine covers.

- Always observe the vehicle-specific information.
 - Installing the ISOFIX/LATCH child restraint system on the right and left rear seats (→ page 153).
 - Securing the child restraint system with the seat belt (→ page 156).
- Observe the warning labels in the vehicle interior and on the child restraint system.



**⚠ WARNING**

Risk of injury or death due to unsecured child restraint systems in the vehicle

If the child restraint system is incorrectly mounted or unsecured, it may come loose.

The child can then not be protected or restrained as intended.

Unused child restraint systems could be flung around and hit vehicle occupants.

- ▶ Always comply with the manufacturer's installation instructions for the child restraint system and its correct use.
- ▶ Always fit child restraint systems correctly, even if they are transported in the vehicle unused.

DO NOT MODIFY THE CHILD RESTRAINT SYSTEM**⚠ WARNING**

Risk of injury due to modifications to the child restraint system

The child restraint system can no longer function properly. This poses an increased risk of injury.

- ▶ Never modify a child restraint system.
- ▶ Only affix accessories which have been specially approved for this child restraint system by the child restraint system's manufacturer.

USE ONLY CHILD RESTRAINT SYSTEMS THAT ARE IN PROPER WORKING CONDITION**⚠ WARNING**

Risk of injury or death caused by the use of damaged child restraint systems

Child restraint systems or their retaining systems that have been subjected to stress in an accident may not be able to perform their intended protective function.

It may be the case that the child cannot be properly restrained.

- ▶ Always immediately replace child restraint systems that have been damaged or involved in an accident.
- ▶ Have the securing systems for the child restraint systems checked at a qualified specialist workshop before installing a child restraint system again.





AVOID DIRECT SUNLIGHT

WARNING

Risk of burns when the child seat is exposed to direct sunlight

If the child restraint system is exposed to direct sunlight or heat, parts could heat up excessively.

Children could suffer burns from these parts, particularly the metallic parts of the child restraint system.

- ▶ Always make sure that the child restraint system is not exposed to direct sunlight.
- ▶ Cover the child restraint system with a blanket, for example.
- ▶ If the child restraint system has been exposed to direct sunlight, allow it to cool before securing a child into it.
- ▶ Never leave children unattended in the vehicle.

OBSERVE WHEN STOPPING OR PARKING

WARNING

Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

- ▶ Never leave persons, particularly children, unattended in the vehicle.

WARNING

Risk of accident and injury if children are left unattended in the vehicle

IF CHILDREN ARE LEFT UNATTENDED IN THE VEHICLE, THEY COULD IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION, FOR EXAMPLE BY:

- releasing the parking brake.
- changing gear.
- starting the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- ▶ Keep the SmartKey out of the reach of children.

This also applies to the Digital Vehicle Key.





Notes on rearward-facing and forward-facing child restraint systems on the front passenger seat

WARNING

Risk of injury or fatal injury when using a rearward-facing child restraint system while the co-driver airbag is enabled

If you secure a child in a rearward-facing child restraint system on the co-driver seat and the PASSENGER AIR BAG OFF indicator lamp is off, the co-driver airbag can deploy in the event of an accident.

The child could be struck by the airbag.

- ▶ Always ensure that the co-driver airbag is disabled. The PASSENGER AIR BAG OFF indicator lamp must be lit.
- ▶ NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG; DEATH or SERIOUS INJURY to the CHILD can occur.

Observe the specific instructions for the rearward-facing and forward-facing child restraint systems (→ page 151).

IF IT IS ABSOLUTELY NECESSARY TO INSTALL A CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT, ALWAYS OBSERVE THE FOLLOWING INFORMATION:

- When a rearward-facing child restraint system is used on the front passenger seat, the front passenger air bag must always be disabled. This is the case only if the PASSENGER AIR BAG OFF indicator lamp is lit continuously (→ page 125).

- The front passenger air bag is enabled when the PASSENGER AIR BAG OFF indicator lamp is not lit. The front passenger air bag may be deployed during an accident. In that case, do not use rearward-facing child restraint systems.

Information on the automatic front passenger air bag deactivation


If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger air bag is correct for the current situation.

WARNING

Risk of injury or death due to objects between the seat surface and the child restraint system

Objects between the seat surface and the child restraint system can interfere with the function of the automatic front passenger air bag shutoff.

- ▶ Do not place any objects between the seat surface and the child restraint system.
- ▶ Make sure that the entire base of the child restraint system rests on the seat cushion of the front passenger seat.
- ▶ The backrest of a forward-facing child restraint system must, as far as possible, be resting against the seat backrest of the front passenger seat.
- ▶ Always comply with the installation instructions from the child restraint system manufacturer.





When installing a child restraint system on the front passenger seat, observe the vehicle-specific information (→ page 147).

REARWARD-FACING CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT

If a rearward-facing child restraint system is installed on the front passenger seat, the front passenger air bag must be deactivated. The PASSENGER AIR BAG OFF indicator lamp must light up continuously (→ page 125).

WARNING

Risk of injury or fatal injury when using a rearward-facing child restraint system while the co-driver airbag is enabled

If you secure a child in a rearward-facing child restraint system on the co-driver seat and the PASSENGER AIR BAG OFF indicator lamp is off, the co-driver airbag can deploy in the event of an accident.

The child could be struck by the airbag.

- ▶ Always ensure that the co-driver airbag is disabled. The PASSENGER AIR BAG OFF indicator lamp must be lit.
- ▶ NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG; DEATH or SERIOUS INJURY to the CHILD can occur.

-  The front passenger air bag is enabled depending on the child restraint system and the stature of the child. The PASSENGER AIR BAG OFF indicator lamp does not light up. The front passenger air bag may be deployed during an accident. If the front passenger air bag is in this status, no rearward-facing child restraint system may be installed on the front passenger seat.

Instead, install the rearward-facing child restraint system on a suitable rear seat.

FORWARD-FACING CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT

If a forward-facing child restraint system is installed on the front passenger seat, the front passenger air bag may be automatically enabled or disabled. The status of the front passenger air bag depends on the child restraint system and the stature of the child.

The PASSENGER AIR BAG OFF indicator lamp is either lit continuously, or it is not lit (→ page 125). Always observe the following information.



**⚠ WARNING**

Risk of injury or death due to incorrect positioning of the child restraint system

IF YOU SECURE A CHILD IN A FORWARD-FACING CHILD RESTRAINT SYSTEM ON THE CO-DRIVER SEAT AND YOU POSITION THE CO-DRIVER SEAT TOO CLOSE TO THE DASHBOARD, IN THE EVENT OF AN ACCIDENT, THE CHILD COULD:

- come into contact with the vehicle's interior if the PASSENGER AIR BAG OFF indicator lamp is lit, for example
- be struck by the airbag if the PASSENGER AIR BAG OFF indicator lamp is off
- ▶ Always move the co-driver seat as far back as possible. In doing so, always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system. The shoulder belt strap must be routed forwards and downwards from the seat belt outlet. If necessary, adjust the seat belt outlet and the co-driver seat accordingly.
- ▶ Always comply with the child restraint system manufacturer's installation instructions.





< Suitable child restraint systems for the transport of children

Information on the advantage of a rearward-facing child restraint system

Transport a baby in a suitable rearward-facing child restraint system only. It is also preferable to transport a small child in a suitable rearward-facing child restraint system. In this case, the child sits in the opposite direction to the direction of travel and faces backwards.

Babies and small children have comparatively weak neck muscles in relation to the size and weight of their head. The risk of injury to the cervical spine during an accident can be reduced in a rearward-facing child restraint system.





< Securing the child restraint system

Adjusting the seat correctly

WHEN INSTALLING A CHILD RESTRAINT SYSTEM ON THE LEFT OR RIGHT REAR SEAT, ALWAYS OBSERVE THE FOLLOWING:

- ▶ Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

If the head restraint of the child restraint system cannot be fully extended when it is installed in the vehicle, this will result in restrictions on the maximum size setting for certain child restraint systems. Observe the child restraint system manufacturer's installation instructions.

 Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.

ALSO OBSERVE THE FOLLOWING WHEN INSTALLING AN ISO-FIX/LATCH CHILD RESTRAINT SYSTEM:

- ▶ **When using a rearward-facing child restraint system on a rear seat:** adjust the front seat so that it does not touch the child restraint system.
- ▶ **When using a forward-facing child restraint system with integrated child seat belt:** adjust the head restraint of the respective seat so that it does not push the child restraint system forwards. If necessary, the respective head restraint can be removed. In addition, the seat backrest of the child restraint system must lie as flat as possible against the backrest of the vehicle seat. After the child restraint system has been

removed, replace the vehicle head restraint immediately and adjust it correctly.

- ▶ The child restraint system must not be put under strain between the roof and the seat cushion and/or be installed facing the wrong direction. Where possible, adjust the seat cushion inclination accordingly.
- ▶ Adjust the vehicle head restraints so that the child restraint system is not put under strain by the head restraint.

WHEN INSTALLING A BELT-SECURED CHILD RESTRAINT SYSTEM, ALSO OBSERVE THE FOLLOWING:

- ▶ **When using a rearward-facing child restraint system on a rear seat:** adjust the front seat so that it does not touch the child restraint system.
- ▶ Additionally fasten Top Tether if present (→ page 155).
- ▶ **When using a forward-facing child restraint system with integrated child seat belt:** adjust the head restraint of the respective seat so that it does not push the child restraint system forwards. If necessary, the respective head restraint can be removed. In addition, the seat backrest of the child restraint system must lie as flat as possible against the backrest of the vehicle seat. After the child restraint system has been removed, replace the vehicle head restraint immediately and adjust it correctly.
- ▶ The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the rear seat.





- ▶ The child restraint system must not be put under strain between the roof and the seat cushion and/or be installed facing the wrong direction. Where possible, adjust the seat cushion inclination accordingly.
- ▶ Adjust the vehicle head restraints so that the child restraint system is not put under strain by the head restraint.
- ▶ Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

 DEPENDING ON THE VEHICLE EQUIPMENT, ALWAYS OBSERVE THE FOLLOWING WHEN INSTALLING A BELT-SECURED CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT:

- ▶ Observe the notes on rearward-facing and forward-facing child restraint systems on the front passenger seat (→ page 147).
- ▶ **When using a forward-facing child restraint system integrated child seat belt:** remove the head restraint from the front passenger seat, if possible. After the child restraint system has been removed, immediately replace the head restraint and adjust it correctly.
- ▶ The backrest of the forward-facing child restraint system must, as far as possible, be resting against the seat backrest of the front passenger seat.
- ▶ The child restraint system must not be put under strain between the roof and the seat cushion and/or be installed facing the wrong direction.
- ▶ Adjust the vehicle head restraints so that the child restraint system is not put under strain by the head restraint.
- ▶ Never place objects (e.g. cushions) under or behind the child restraint system.
- ▶ Set the front passenger seat as far back as possible and move the seat into the highest position if possible. Always make sure that the shoulder

belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system. The shoulder belt strap must be routed forwards from the seat belt outlet and, where possible, downwards to the child restraint system.

- ▶ Fully retract the seat cushion length adjustment.
- ▶ Adjust the seat cushion inclination so that the front edge of the seat cushion is in the highest position and the rear edge of the seat cushion is in the lowest position.
- ▶ Set the seat backrest to the most vertical position possible.

Activating/deactivating the child seat safety feature of the seat belt



WARNING

Risk of injury or death if a seat belt is unfastened while the vehicle is in motion

If the seat belt is released while the vehicle is in motion, the special seat belt retractor is deactivated and the child restraint system is no longer correctly secured. The seat belt is drawn in slightly by the inertia reel and cannot be immediately closed again.

- ▶ Stop the vehicle immediately in accordance with the traffic conditions.
- ▶ Activate the special seat belt retractor again and correctly secure the child restraint system.





When enabled, the child seat safety feature ensures that the seat belts of the front passenger seat and rear seats do not slacken once the child restraint system is secured.

THE SEAT BELTS ON THE FOLLOWING SEATS ARE EQUIPPED WITH A CHILD SEAT SAFETY FEATURE:

- Front passenger seat
- Rear seats

INSTALLING A CHILD RESTRAINT SYSTEM

- ▶ When installing a child restraint system, always observe the manufacturer's installation and operating instructions as well as the information in this Operator's Manual.
- ▶ Pull the seat belt smoothly from the seat belt outlet.
- ▶ Engage the seat belt tongue in the seat belt buckle.

ACTIVATING THE CHILD SEAT SAFETY FEATURE:

- ▶ Pull the seat belt out fully and let the inertia reel retract it again.
When the child seat safety feature is activated, you should hear a ratcheting sound.
- ▶ Push the child restraint system down until the seat belt sits tightly.

DEACTIVATING THE CHILD SEAT SAFETY FEATURE:

- ▶ Press the release button of the seat belt buckle.
- ▶ Hold the seat belt tongue and guide it back to the seat belt outlet.

Installing an ISOFIX/LATCH child restraint system



WARNING

Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even when you are driving.

- As a result, the vehicle occupant will be pushed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the trunk or cargo compartment will not be restrained by the seat backrest.
- ▶ Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.

If the rear seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.





⚠ WARNING

Risk of injury or death if the permissible gross mass of the child and child restraint system together is exceeded.

Too much load may be placed on the LATCH-type (ISOFIX) or iSize child restraint systems and the child may not be restrained correctly in the event of an accident, for example.

- ▶ If the child is secured in a LATCH-type (ISOFIX) child restraint system with integrated seat belt, the total mass of the child and child restraint system must not exceed 73 lb (33 kg).

ALWAYS OBSERVE THE INFORMATION ON THE MASS OF THE CHILD RESTRAINT SYSTEM:


- In the installation instructions and Operator's Manual provided by the manufacturer of the child restraint system used
- on a label on the child restraint system, if present

Regularly check that the permissible gross mass of the child and child restraint system is still being adhered to.

WHEN INSTALLING A CHILD RESTRAINT SYSTEM, ALSO OBSERVE THE FOLLOWING:

- ✓ Always observe the area of use and the suitability of the seats for attaching a child restraint system.

 LATCH-type (ISOFIX) mounting brackets

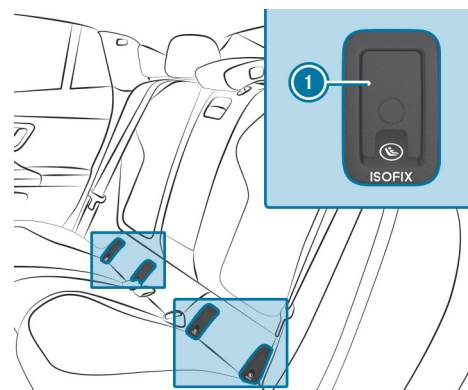

① ISOFIX mounting bracket


- ▶ Before every journey always ensure that the ISOFIX/LATCH child restraint system is correctly engaged in both mounting brackets on the vehicle.

! NOTE

Damage to the seat belt for the center seat during installation of the child restraint system

- ▶ Make sure that the seat belt is not trapped.

- ▶ Remove and stow away the covers ①.
- ▶ Attach the ISOFIX/LATCH child restraint system to both mounting brackets in the vehicle.
- ▶ After removing the child seat, reattach the covers ①.





Fastening a Top Tether

⚠ WARNING

Risk of injury or death if the rear seat backrests are not locked after Top Tether belts are installed

The rear seat backrests may fold forwards when you are driving.


As a result, child restraint systems will no longer be able to perform their intended protective function. This may also cause additional injuries.

- ▶ Always lock rear seat backrests after installing Top Tether belts.
- ▶ Observe the lock verification indicator.


If the rear seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

 If the child restraint system is equipped with a Top Tether belt:

The risk of injury may be reduced by Top Tether. The Top Tether belt enables an additional connection between the child restraint system attached with ISOFIX (left and right rear seats) or the seat belt (all rear seats) and the vehicle.

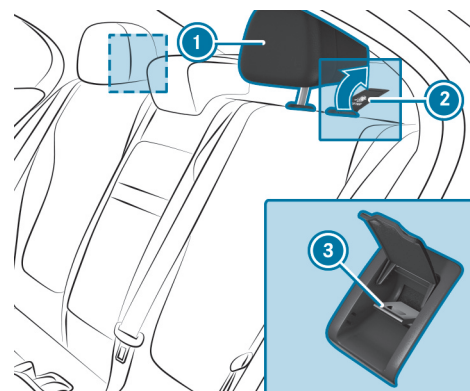

- ▶ If necessary, slide head restraint ① upwards (→ page 215).
- ▶ Fold up cover ② of Top Tether anchorage ③.
- ▶ Install the ISOFIX/LATCH or belt-secured child restraint system with Top Tether. Comply with the child restraint system manufacturer's installation instructions.

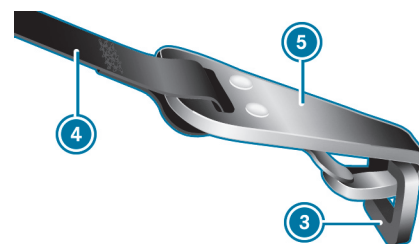

- ▶ Guide Top Tether belt ④ under head restraint ① between the two head restraint bars.
- ▶ Hook Top Tether hook ⑤ of Top Tether belt ④ into Top Tether anchorage ③ without twisting.



- ▶ Tension Top Tether belt ④. Comply with the child restraint system manufacturer's installation instructions.
- ▶ Fold down cover ② of Top Tether anchorage ③.
- ▶ If necessary, slide head restraint ① downwards (→ page 215). Make sure that you do not interfere with the correct routing of Top Tether belt ④.

Fastening the child restraint system with the seat belt

WARNING

Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even when you are driving.

- As a result, the vehicle occupant will be pushed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the trunk or cargo compartment will not be restrained by the seat backrest.
- ▶ Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.

If the rear seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

THE SEAT BELTS ON THE FOLLOWING SEATS ARE EQUIPPED WITH A CHILD SEAT SAFETY FEATURE:

- Front passenger seat
- Rear seats

When enabled, the child seat safety feature ensures that the seat belts of the front passenger seat and rear seats do not slacken once the child restraint system is secured.

- ▶ For a child restraint system of the category "Universal" or "Semi-Universal" ensure that this is approved for the vehicle seat.
- ▶ Install the child restraint system.
The entire base of the child restraint system must always rest on the sitting surface of the seat.
- ▶ Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system.
The shoulder belt strap must be routed forwards from the seat belt outlet and, where possible, downwards to the child restraint system.
- ▶ **When installing on the rear seat:** also secure Top Tether, if present (→ page 155).
- ▶ **When installing on the front passenger seat:** if necessary, adjust the seat belt outlet and the front passenger seat appropriately.





< Child safety locks

Activating/deactivating the child safety lock for the rear doors

WARNING

Risk of accident and injury if children are left unattended in the vehicle

IF CHILDREN ARE LEFT UNATTENDED IN THE VEHICLE, THEY COULD IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION, FOR EXAMPLE BY:

- releasing the parking brake.
- changing gear.
- starting the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

- ▶ Keep the SmartKey out of the reach of children.

WARNING

Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

- ▶ Never leave persons, particularly children, unattended in the vehicle.




**⚠ WARNING**

Risk of accident and injury due to children left unattended in the vehicle

IF CHILDREN ARE TRAVELING IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- Open doors, thereby endangering other persons or road users.
- Get out and be struck by oncoming traffic.
- Operate vehicle equipment and become trapped, for example.
- ▶ Always activate the installed child safety locks if children are traveling in the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

There are child safety locks for the rear doors and the rear side windows. The child safety locks on the rear doors secure each door separately. The doors can no longer be opened from the inside.

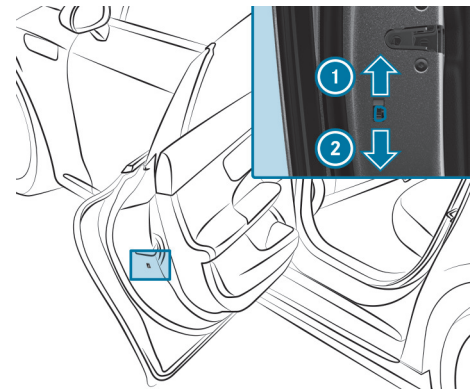

- ▶ Press the lever in the direction of arrow ① (activate) or ② (deactivate).
- ▶ Make sure that the child safety lock is working properly.





Activating/deactivating the child safety lock for the rear side windows

WARNING

Risk of accident and injury if children are left unattended in the vehicle

IF CHILDREN ARE LEFT UNATTENDED IN THE VEHICLE, THEY COULD IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION, FOR EXAMPLE BY:

- releasing the parking brake.
- changing gear.
- starting the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- ▶ Keep the SmartKey out of the reach of children.

WARNING

Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

- ▶ Never leave persons, particularly children, unattended in the vehicle.

WARNING


Risk of accident and injury due to children left unattended in the vehicle

IF CHILDREN ARE TRAVELING IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- Open doors, thereby endangering other persons or road users.
- Get out and be struck by oncoming traffic.
- Operate vehicle equipment and become trapped, for example.
- ▶ Always activate the installed child safety locks if children are traveling in the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

There are child safety locks for the rear doors and the rear side windows.




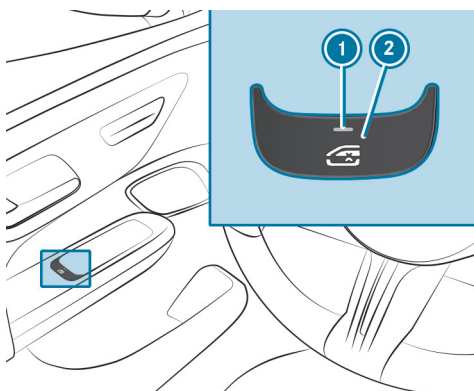

► **To activate/deactivate:** press the button ②.

THE REAR SIDE WINDOW CAN BE OPENED OR CLOSED AS FOLLOWS:

- Indicator lamp ① is lit: via the switch on the driver's door
- Indicator lamp ① is off: via the switch on the corresponding rear door or driver's door





< Occupant presence reminder

Function of the occupant presence reminder

The occupant presence reminder can help to remind you about a child who may have been forgotten in the rear passenger compartment of the vehicle. It activates and deactivates automatically when the rear door is open for an extended period of time and a child, which the system presumes to be present, could enter or exit the vehicle.

When the vehicle is switched off, the [Do Not Leave People or Animals in the Vehicle](#) message appears on the driver's display if the system was already automatically activated.

You can permanently deactivate the function in the multimedia system (→ page 161). When the system is deactivated, the  indicator lamp in the driver's display lights up.

Activating or deactivating the occupant presence reminder in the multimedia system

Multimedia system:

   [Settings](#)  [Vehicle](#)  [Occupant Protection](#)

- ▶ Activate or deactivate the function.





◀ Opening and closing

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

SmartKey >

Digital Vehicle Key >

Doors >

Trunk >

Side windows >

Sliding sunroof >

Anti-theft protection >



< SmartKey

Overview of key functions

WARNING

Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
 - changing the gearbox position.
 - starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.
- Keep the key out of reach of children.

This also applies to the Digital Vehicle Key.

NOTE

Damage to the SmartKey caused by magnetic fields

- Keep the SmartKey away from strong magnetic fields.



Vehicle key with panic alarm

- ① Opens/closes the trunk lid
- ② Unlocks (with embossed surface)
- ③ Locks
- ④ Indicator lamp
- ⑤ Panic alarm

 If indicator lamp ④ does not light up after you press the  or  button, the battery is weak or possibly discharged. Replace the battery as soon as possible.



Replace the key battery (→ page 166).

i Vehicles with comfort doors: If you have switched on the **Comfort Doors** function in the multimedia system (→ page 182), you can open or close the driver's or front passenger door by pressing the  or  button. Additional information on the comfort doors (→ page 179).

THE KEY LOCKS AND UNLOCKS THE FOLLOWING COMPONENTS:

- Doors
- Socket flap
- Trunk lid

If the vehicle is not opened within approximately 40 seconds after unlocking, it will lock again. Anti-theft protection will be armed again.

Do not keep the key together with electronic devices or metal objects. This may affect the key's functionality.

Activating/deactivating the acoustic locking verification signal

Multimedia system:

   **Settings**  **Vehicle**  **Open/Close**

- ▶ Switch the **Acoustic Lock** on or off.

Activating/deactivating the panic alarm

Requirements

- The vehicle is switched off.



- ▶ **To activate:** press button ① for approximately one second. A visual and audible alarm is triggered.
- ▶ **To deactivate:** briefly press button ① again.

or

- ▶ Press the Start/Stop button.
A key belonging to the vehicle must be detected in the vehicle.

Changing the unlocking settings

POSSIBLE UNLOCKING FUNCTIONS OF THE KEY:

- Central unlocking
- Unlocking the driver's door and socket flap



- ▶ **To switch between settings:** press the  and  buttons simultaneously for approximately six seconds until the indicator lamp flashes twice.

OPTIONS IF THE UNLOCKING FUNCTION FOR THE DRIVER'S DOOR AND SOCKET FLAP HAS BEEN SELECTED:

- **To unlock the vehicle centrally:** press the  button twice.
- **Vehicles with KEYLESS-GO:** if you touch the inner surface of the door handle on the driver's door, only the driver's door and the socket flap are unlocked.

Deactivating the function of the key

Vehicles with KEYLESS-GO: if you deactivate the function of the SmartKey, the KEYLESS-GO functions will also be deactivated. Access or drive authorization by KEYLESS-GO will then no longer be possible with that particular SmartKey. Activate the function of the SmartKey so that all its functions will again be available.

You can also deactivate the function of the SmartKey to reduce the energy consumption of the SmartKey if you do not use the vehicle or a SmartKey for an extended period of time.


- ▶ Press and hold the  button on the SmartKey.
- ▶ With the key button  pressed, immediately press key button  twice in quick succession.
The indicator light of the key lights up once briefly and once for a long time.

THE FOLLOWING OPTIONS FOR RE-ACTIVATING THE SMART-KEY ARE AVAILABLE:

- Press any button on the SmartKey.
- Start the vehicle with the SmartKey in the marked space in the center console (→ page 304).


Removing/inserting the emergency key

REMOVING THE EMERGENCY KEY

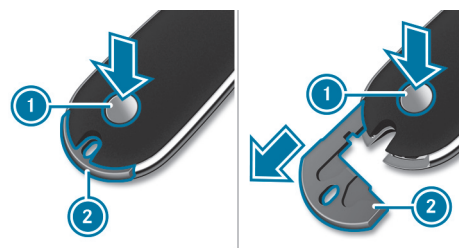

- ▶ Press the release knob  ①.
The emergency key  ② is pushed out slightly.
- ▶ Fully remove the emergency key  ②.

INSERTING THE EMERGENCY KEY

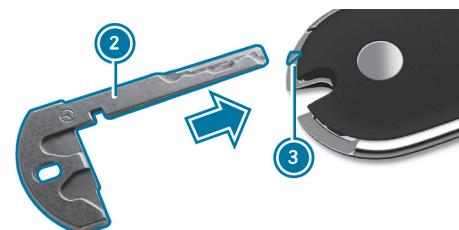



- ▶ Insert the emergency key ② up to the marking ③ until it engages.

① You can use the emergency key ② to attach the key to a key ring.

Replacing the key battery

⚠ DANGER

Risk of fatal injuries due to swallowing batteries

Batteries contain toxic and corrosive substances. If batteries are swallowed or otherwise enter the body, severe internal burns can occur within two hours.

There is a risk of fatal injury.

- ▶ Keep batteries out of the reach of children.
- ▶ If the battery compartment cover and/or lid do not close securely, stop using the key and keep it away from children.
- ▶ If batteries are swallowed or otherwise enter the body, seek immediate medical attention.



ENVIRONMENTAL NOTE

Environmental damage due to improper disposal of batteries

⚠ Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.




▶ Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

Requirements:

- You need a CR 2032 lithium cell battery (3 V).


Mercedes-Benz recommends that you have the battery replaced at a qualified specialist workshop.

- ▶ Remove the emergency key (→ page 165).

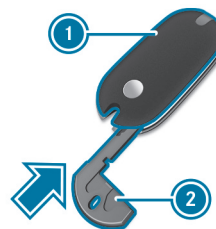

- ▶ Press emergency key ② into the opening in the key in the direction indicated by the arrow until cover ① opens. When doing so, do not press down on cover ①.



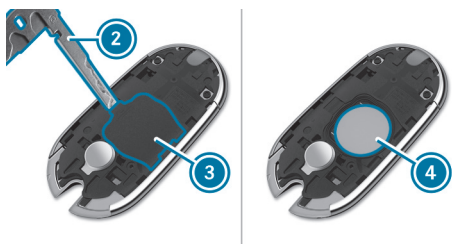

- ▶ Insert emergency key ② into the opening and unclip and remove cover ③.
- ▶ Repeatedly tap the key against your palm until battery ④ is ejected from the key.
- ▶ Insert the new battery with the positive terminal facing upwards. Use a lint-free cloth.
- ▶ Ensure that the surface of the battery is free of lint, grease and other impurities.
- ▶ Insert the front tabs of cover ③ into the housing and then press down on both sides.
- ▶ Ensure that cover ③ is completely closed.
- ▶ Insert the front tabs of cover ① into the housing and then press down until it is completely closed.
- ▶ Insert the emergency key again (→ page 165).

Troubleshooting problems with the key

YOU CAN NO LONGER LOCK OR UNLOCK THE VEHICLE

POSSIBLE CAUSES:

- The key battery is at low capacity or is flat.
- ▶ Check the battery via the indicator lamp (→ page 163).
 - ▶ Replace the key battery as necessary (→ page 166).
 - ▶ Use the replacement key.
 - ▶ Use the emergency key to lock or unlock (→ page 183).
 - ▶ Have the key checked at a qualified specialist workshop.

THERE IS INTERFERENCE FROM A POWERFUL RADIO SIGNAL SOURCE.

POSSIBLE CAUSES IF THE FUNCTION OF THE KEY IS IMPAIRED:

- high-voltage power lines
 - mobile phones
 - electronic devices (notebooks, tablets)
 - shielding due to metallic objects or induction loops for electrical gate systems or automatic barriers
- ▶ Ensure that there is sufficient distance between the key and the potential source of interference.

YOU HAVE LOST A KEY

- ▶ Have the key deactivated at a qualified specialist workshop.
- ▶ If necessary, have the mechanical lock replaced as well.





< Digital Vehicle Key

Function of the Digital Vehicle Key

Once you have activated a compatible mobile end device as a Digital Vehicle Key, e.g. a smartphone, this can then be used in the same way as a conventional vehicle key.

Information on setting up a user account and on activating the "Digital Vehicle Key" service can be obtained by visiting <https://www.mercedes.me>.

THE DIGITAL VEHICLE KEY CAN THEN BE USED FOR THE FOLLOWING FUNCTIONS:

- Locking/unlocking the vehicle with KEYLESS-GO (→ page 176)
- HANDS-FREE ACCESS function (→ page 189)
- Convenience closing (closing the vehicle from outside) (→ page 195)
- Anti-theft protection (→ page 202)
- Starting (→ page 303) or switching off (→ page 350) the vehicle
- Locking and unlocking the vehicle with the NFC function (emergency unlocking) (→ page 172)
- Starting the vehicle in emergency operation mode (→ page 304)

SETTING UP AND MANAGING THE DIGITAL VEHICLE KEY:

- Setting up the Digital Vehicle Key (→ page 168)
- Managing the Digital Vehicle Key (→ page 170)
- Removing the Digital Vehicle Key (→ page 171)

- Unlocking and locking the vehicle with the Digital Vehicle Key (→ page 172)
- Changing the unlocking settings for the Digital Vehicle Key (→ page 173)
- Troubleshooting problems with the Digital Vehicle Key (→ page 173)

Setting up the Digital Vehicle Key

Requirements:

- You have set up a Mercedes me user account: <https://www.mercedes.me>
- A compatible end device with the latest operating system version.
- The Mercedes-Benz app is installed on the end device (optional).
- A Wallet app is installed on the end device.
- You have received an email from Mercedes-Benz Connect.
If you have selected the "Digital Vehicle Key" equipment, you will receive an email with information on how to set up the Digital Vehicle Key.
- Bluetooth® is activated on the end device.
- The end device is sufficiently charged.

YOU HAVE THE FOLLOWING OPTIONS FOR SETTING UP AN END DEVICE AS A DIGITAL VEHICLE KEY:

- using the Mercedes-Benz app
- by email





- via MBUX multimedia system

 The power supply must be switched on to set up the end device. A key belonging to the vehicle must be detected within the vehicle.

SETTING UP USING THE MERCEDES-BENZ APP

- ▶ Open the Mercedes-Benz app.
- ▶ Select the "Digital Vehicle Key" menu.
- ▶ Follow the set-up stages in the Mercedes-Benz app.

When the message "Add key and pair with vehicle" appears:

- ▶ Place the end device in the storage compartment (→ page 304).
- ▶ Follow the steps on the end device.
Your Digital Vehicle Key is now stored in your end device's Wallet app.

SET-UP BY EMAIL

- ▶ Open the email from Mercedes-Benz Connect.
- ▶ Follow the displayed steps as described in the email.
Your Digital Vehicle Key is now stored in your end device's Wallet app.

or

- ▶ Open the link in the email with the end device you want to use as a Digital Vehicle Key.

- ▶ Follow the steps on the end device.

When the message "Add key and pair with vehicle" appears:

- ▶ Place the end device in the storage compartment (→ page 304).
- ▶ Follow the steps on the end device.
Your Digital Vehicle Key is now stored in your end device's Wallet app.

or

- ▶ Set up the end device in the vehicle.
- ▶ Place the end device in the storage compartment (→ page 304).
"Mercedes-Benz Digital Vehicle Key" is displayed on the end device.
- ▶ Press "Enter code".
The display for entering the code appears.
- ▶ Enter the 8-digit code provided in the email.

When the message "Add key and pair with vehicle" appears:

- ▶ Follow the steps on the end device.
Your Digital Vehicle Key is now stored in your end device's Wallet app.

SET-UP VIA MBUX MULTIMEDIA SYSTEM

- ▶ Select the menus [Settings](#), [Vehicle](#), [Open/Close](#) in the multimedia system.
- ▶ Select the menu [Digital Vehicle Key](#).
- ▶ Follow the steps in the multimedia system.
Your Digital Vehicle Key is now stored in your end device's Wallet app.





-  You can now use the Digital Vehicle Key in the same way as the conventional vehicle key (→ page 172).

-  Setting up and managing the Digital Vehicle Key:
- Function (→ page 168)
 - To manage (→ page 170)
 - To remove (→ page 171)
 - Changing the unlocking settings for the Digital Vehicle Key (→ page 173)

Managing the Digital Vehicle Key

Requirements:

- A suitable end device is activated as a Digital Vehicle Key.
- Bluetooth® is activated on the end device (with the Digital Vehicle Key activated).
- The end device is sufficiently charged.

YOU HAVE THE FOLLOWING OPTIONS FOR MANAGING A DIGITAL VEHICLE KEY:

- Switch express mode (comfort mode) off or on
Availability of this function is dependent upon the end device.
- Set up other devices of family members or friends as Digital Vehicle Keys
- Set up authorization for the Digital Vehicle Key

SWITCHING EXPRESS MODE OFF OR ON

- ▶ Open the Wallet-app on the end device.
- ▶ Switch express mode off or on.

-  Express mode is switched on by default. This setting allows you to make the best possible use of the Digital Vehicle Key.
- If express mode is switched off and the rechargeable battery of the end device is at very low capacity, you can no longer unlock the vehicle via the NFC function.**
- Switch off express mode only if you do not want to use the Digital Vehicle Key function.

SETTING UP OTHER END DEVICES AS DIGITAL VEHICLE KEYS

- ▶ Open the Wallet-app on the end device.
- ▶ Select the menu "Invite people to use your Mercedes-Benz key".
- ▶ Follow the steps on the end device.

-  Mercedes-Benz recommends that the shared key be activated immediately after sharing by using it on the vehicle.

SET UP AUTHORIZATION FOR THE DIGITAL VEHICLE KEY

YOU CAN ASSIGN THE FOLLOWING AUTHORIZATION TO THE DIGITAL VEHICLE KEYS:

- Vehicle access and drive authorization
- Vehicle access authorization code

- ▶ Open the Wallet app on the end device.





- ▶ Select the "Invite people to use your Mercedes-Benz key" menu.
- ▶ Select the "Configure car key access" menu.
- ▶ Follow the steps on the end device.

-  Further information on the Digital Vehicle Key:
- Function (→ page 168)
 - Setting up (→ page 168)
 - Removing (→ page 171)
 - Changing the unlocking settings for the Digital Vehicle Key (→ page 173)

Removing the Digital Vehicle Key

Requirements:

- A suitable end device is activated as a Digital Vehicle Key.
- Bluetooth® is activated on the end device (with the Digital Vehicle Key activated).
- The end device is sufficiently charged.

YOU HAVE THE FOLLOWING OPTIONS FOR REMOVING A DIGITAL VEHICLE KEY:

- via the Wallet app
- via the device manufacturer portal
- via your Mercedes me user account
- via the MBUX multimedia system

-  You can remove individual users or your own Digital Vehicle Key from the end device.

REMOVING VIA THE WALLET APP

- ▶ Open the Wallet app on your end device.
- ▶ Select the user whose Digital Vehicle Key is to be removed.
- ▶ Follow the steps on the end device.
The selected Digital Vehicle Key will be removed and will no longer be available for use.

REMOVING VIA THE DEVICE MANUFACTURER PORTAL

- ▶ Log into the device manufacturer portal.
- ▶ Follow the steps.
The selected Digital Vehicle Key will be removed and will no longer be available for use.

REMOVING VIA YOUR MERCEDES ME USER ACCOUNT

THE FOLLOWING OPTIONS ARE AVAILABLE:

- Remove the linked vehicle
 - Decline the terms of use and consents
 - Delete the user account
- ▶ Log in to the Mercedes me user account.
 - ▶ Select one of the above options.
The selected Digital Vehicle Key will be removed and will no longer be available for use.





REMOVING VIA THE MBUX MULTIMEDIA SYSTEM THE FOLLOWING OPTIONS ARE AVAILABLE:

- Disconnect all Digital Vehicle Keys
 - Change the Digital Vehicle Key of the main owner
 - Disconnect the owner's Digital Vehicle Key
 - Remove a Digital Vehicle Key
- ▶ Select the **Settings**, **Vehicle** and **Open/Close** menus in the multimedia system.
- ▶ Select the **Digital Vehicle Key** menu.
- ▶ Select one of the above options.
- ▶ Follow the steps in the multimedia system.
- The selected Digital Vehicle Key will be removed and will no longer be available for use.


- ❗ Further information on the Digital Vehicle Key:
- Function (→ page 168)
 - Setting up (→ page 168)
 - Managing (→ page 170)
 - Changing the unlocking settings for the Digital Vehicle Key (→ page 173)

Locking and unlocking the vehicle with the Digital Vehicle Key


Requirements:

- The "Digital Vehicle Key" function is activated via Mercedes me: <https://www.mercedes.me>.
- Bluetooth® is activated on the end device (with the Digital Vehicle Key activated).
- The end device is sufficiently charged.

When the Digital Vehicle Key's rechargeable battery is at extremely low capacity, it is possible to lock and unlock the vehicle with the NFC function (emergency unlocking).

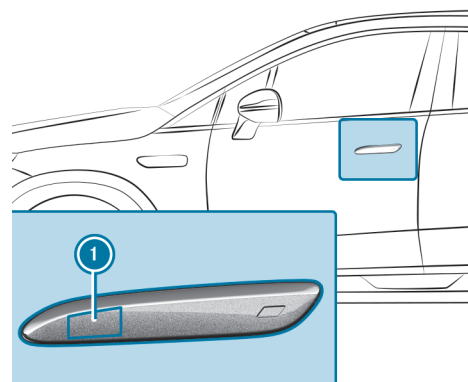

- ▶ **Locking and unlocking the vehicle with the NFC function:** hold the Digital Vehicle Key against the door handle in close proximity to NFC antenna ❶ for approximately five to ten seconds, from a distance of no more than 0.4 in (1 cm).





i If the Bluetooth® connection is not working, or the rechargeable battery for the Digital Vehicle Key is at very low capacity, it is also possible to start the vehicle via the NFC function (→ page 304).

Depending on the end device, you can also continue to use the KEYLESS-GO function for a certain amount of time, even if the rechargeable battery in the Digital Vehicle Key is at very low capacity.

i Mercedes-Benz recommends that you carry the key about your person as a precaution against functional restrictions (→ page 165).

i Mercedes-Benz recommends placing the Digital Vehicle Key in the marked space while driving (→ page 304).

Changing the unlocking settings for the Digital Vehicle Key

Multimedia system:

  >> Settings >> Vehicle >> Open/Close

SET SELECTIVE OR GLOBAL UNLOCKING

- ▶ Activate **Unlock Driver's Door Only**.

Selective unlocking is activated. If this function is deactivated, the owner key unlocks the entire vehicle.

i The entire vehicle is always unlocked whenever the NFC function is used to unlock the vehicle. It is not possible to activate selective unlocking in this case.

i Additional information regarding locking and unlocking with the Digital Vehicle Key (→ page 172).

Troubleshooting problems with the Digital Vehicle Key

YOU CAN NO LONGER LOCK AND UNLOCK THE VEHICLE WITH THE DIGITAL VEHICLE KEY.

POSSIBLE CAUSES:

- Bluetooth® is deactivated on the Digital Vehicle Key.
- The rechargeable battery for the Digital Vehicle Key is at low capacity or is flat.
- ▶ Activate Bluetooth® on the Digital Vehicle Key.
- ▶ Check the state of charge for the Digital Vehicle Key's rechargeable battery.
- ▶ If necessary, charge the rechargeable battery of the Digital Vehicle Key.
- ▶ Using the NFC function of the Digital Vehicle Key for locking or unlocking the vehicle (emergency unlocking) (→ page 172).
- ▶ Use the vehicle key.



- ▶ Use the emergency key to lock or unlock (→ page 183).
- ▶ Have the vehicle and the Digital Vehicle Key checked at a qualified specialist workshop.

THERE IS INTERFERENCE FROM A POWERFUL RADIO SIGNAL SOURCE.**POSSIBLE CAUSES OF DIGITAL VEHICLE KEY IMPAIRMENT:**

- high-voltage power lines
 - mobile phones
 - electronic devices (laptops, tablets)
 - shielding due to metal objects or induction loops for electric gate systems or automatic barriers
-
- ▶ Ensure sufficient distance between the Digital Vehicle Key and any potential source of interference.

YOU HAVE LOST A DIGITAL VEHICLE KEY.


- ▶ Remove the Digital Vehicle Key (→ page 171).






< Doors

Unlocking/opening the doors from the inside

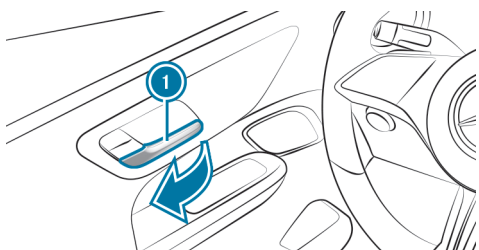

- ▶ **To unlock and open a front door:** pull door handle ①.
- ▶ **To unlock a rear door:** pull the rear door handle.
- ▶ **To open a rear door:** pull the rear door handle again.

Centrally locking and unlocking the vehicle from the inside

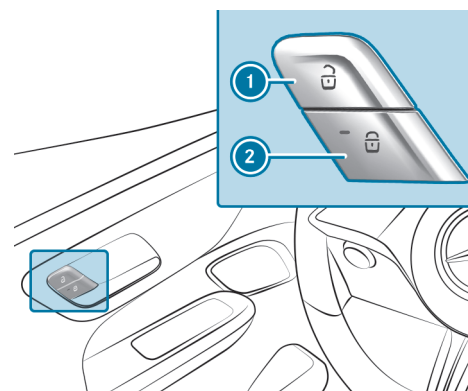

- ▶ **To unlock:** press the button ①.
- ▶ **To lock:** press the button ②.

The red indicator lamp on the button ② lights up when the vehicle is locked.

i The buttons are also located on the front passenger door and rear doors.

The socket flap is also locked and unlocked. The socket flap can be opened even if a key is detected in the vehicle.



**THE VEHICLE IS NOT UNLOCKED WHEN THE BUTTON ① IS PRESSED:**

- If you have locked the vehicle using the key
- If you have locked the vehicle using KEYLESS-GO
- After locking with the NFC function (**vehicles with Digital Vehicle Key:**)


Extending/retracting recessed door handles

THE DOOR HANDLES EXTEND AUTOMATICALLY:

- when you unlock the vehicle with the key
- if you touch the outer sensor surfaces of the door handle (with the vehicle unlocked)

THE DOOR HANDLES RETRACT AUTOMATICALLY:

- when you lock the vehicle with the key
- when pulling away
- after a short delay

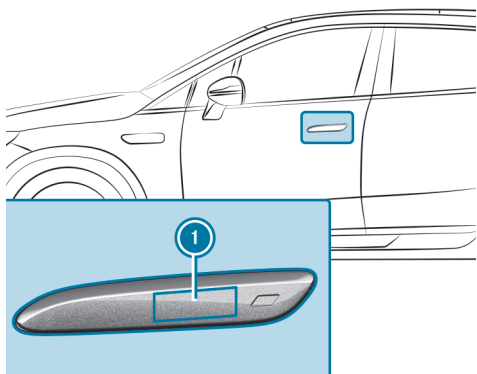

- ▶ **Extend the door handle:** Touch the outer ① sensor surface.

- ▶ **If the vehicle has been locked automatically and another person wants to get in:** To unlock the vehicle, press the button on the driver's door (→ page 175).

The door handles extend.

Locking/unlocking the vehicle with KEYLESS-GO

Requirements:

- The key is outside the vehicle.
- The distance between the key and the vehicle does not exceed 3 ft (1 m).
- The driver's door and the door on which the door handle is actuated are closed.

① **Vehicles with Digital Vehicle Key:** You can use the Digital Vehicle Key in the same way as the conventional vehicle key.

THE DOOR HANDLES EXTEND AUTOMATICALLY:

- when a vehicle key is detected (the vehicle is then not yet unlocked)
- when you unlock the vehicle with the key
- when you touch the outer sensor surface of the door handle to unlock it

THE DOOR HANDLES RETRACT AUTOMATICALLY:

- when you lock the vehicle with the key
- when you touch the recessed sensor surface of the door handle to lock it





- after convenience closing (→ page 195)
- when pulling away
- after a short delay

! **NOTE**

Damage to the vehicle caused by unintentionally opening the trunk lid or a door

- When using an automatic car wash
- When using a high pressure cleaner
- ▶ Deactivate the function of the SmartKey in these situations.

or

- ▶ Make sure that the SmartKey is at a minimum distance of 10 ft (3 m) (power washer) or 20 ft (6 m) (automatic car wash) away from the vehicle.

! **NOTE**

Vehicle damage due to unintentional opening of the trunk lid or one of the doors

- when using a car wash
- when using a power washer
- ▶ In these situations, switch off the Digital Vehicle Key.


or

- ▶ Ensure that the Digital Vehicle Key is at least 10 ft (3 m) (power washer) or 20 ft (6 m) (car wash) away from the vehicle.

OBSERVE THE INFORMATION:


- on washing the vehicle in a car wash (→ page 35)
- on using a power washer (→ page 664)

Vehicles with Digital Vehicle Key:

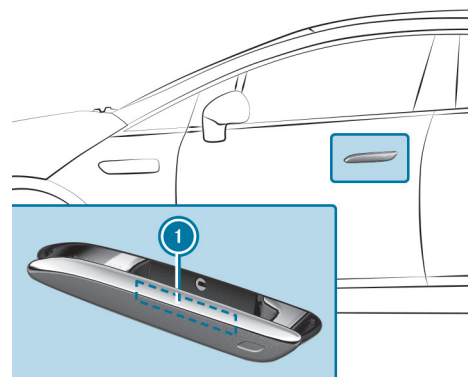




- ▶ **To unlock the vehicle:** with the door handle extended, touch the inside surface of the door handle ❶.

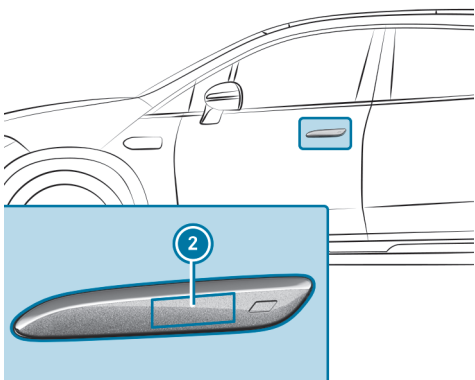

- ▶ To unlock, touch the sensor surface ❷.

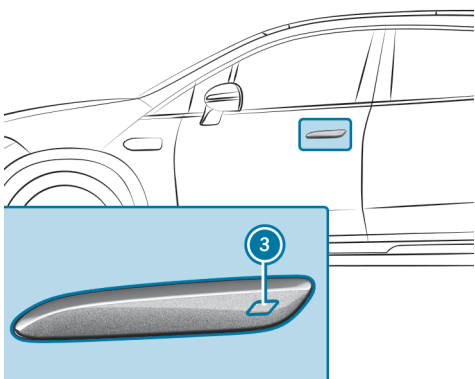

- ▶ **To lock the vehicle:** touch the recessed sensor surface ❸.
- ▶ **Convenience closing:** touch the recessed sensor surface ❸ for a prolonged period.

[i](#) Further information on convenience closing (→ page 195).

You can watch an animation on this topic via the following link:

Troubleshooting problems with KEYLESS-GO

YOU CAN NO LONGER LOCK OR UNLOCK THE VEHICLE USING KEYLESS-GO.

POSSIBLE CAUSES:

- The function of the key has been deactivated.
This also applies to the Digital Vehicle Key.
 - The key battery is at low capacity or is flat.
Vehicles with Digital Vehicle Key: depending on the respective end device, you can continue to use the KEYLESS-GO function for a certain amount of time even when the Digital Vehicle Key's rechargeable battery charge level is extremely low .
- ▶ Activate the function of the key (→ page 65).
 - ▶ Check the battery using the indicator lamp (→ page 163).
 - ▶ Replace the key battery as necessary (→ page 166).
 - ▶ Use the replacement key.
 - ▶ Use the emergency key to lock or unlock (→ page 183).
 - ▶ Have the vehicle and key checked at a qualified specialist workshop.



**THERE IS INTERFERENCE FROM A POWERFUL RADIO SIGNAL SOURCE.
POSSIBLE CAUSES IF THE FUNCTION OF KEYLESS-GO IS IMPAIRED:**

- high-voltage power lines
 - mobile phones
 - electronic devices (laptops, tablets)
 - shielding due to metallic objects or induction loops for electrical gate systems or automatic barriers
- Ensure that there is sufficient distance between the key and the potential source of interference.

Activating/deactivating automatic locking in the MBUX multimedia system

Multimedia system:

  ► Settings ► Vehicle ► Open/Close

 The vehicle will be locked automatically when the vehicle is switched on and the wheels are turning faster than walking pace.

- Activate or deactivate [Automatic Door Lock](#).

IN THE FOLLOWING SITUATIONS, THERE IS A RISK OF BEING LOCKED OUT WHEN THE FUNCTION IS ACTIVATED:

- The vehicle is being towed or pushed.
- The vehicle is being tested on a roller dynamometer.

Opening and closing the front comfort doors



WARNING

Risk of becoming trapped when the front convenience doors close automatically

Parts of the body could become trapped. There may be people or animals in the closing area.

- Make sure that nobody is in the vicinity of the closing area.
- Use one of the following options to stop the closing process:
 - Press the  or  button on the key.
 - Driver's door: depress the brake pedal.
 - Pull the inside or outside door handles.
 - Push against the door or pull the door.
 - Select the "Cancel process" display on the Comfort menu in the multimedia system.




! NOTE

Risk of accident during automatic opening and closing of the front convenience doors

The visibility of your surroundings may be impaired.

- ▶ Make sure that there are no persons, animals or objects in the range of movement of the convenience doors when they are opening and closing.
- ▶ When opening the convenience doors, look out for low-lying objects and obstacles in their range of movement in particular.
- ▶ When opening the convenience doors, look out for objects and obstacles in the side window areas in particular.

OPENING OR CLOSING THE FRONT COMFORT DOORS
THE FOLLOWING FUNCTIONS ARE REQUIRED TO AUTOMATICALLY OPEN AND CLOSE THE FRONT COMFORT DOORS:

- KEYLESS-GO (→ page 176)
- Power closing function (→ page 183)
- Active Blind Spot Assist (→ page 406)

The comfort doors can then be opened and closed automatically.

The vehicle occupants are always responsible for opening and closing the doors safely.

- ❗ If Active Blind Spot Assist is deactivated or unavailable, the function of the comfort doors is still available.

THE FOLLOWING OPTIONS ARE AVAILABLE FOR OPENING OR CLOSING THE FRONT COMFORT DOORS:

- the key (to open and close)
- depressing the brake pedal (to close the driver's door)
- the inner front door handles (to close)
- the outer front door handles (to close)
- the multimedia system (→ page 182)

SPECIAL FEATURES OF THE FRONT COMFORT DOORS:

- If, when closing, the front door has reached the first detent position, the power closing function (→ page 183) will automatically draw the door into the lock.
- When the doors are closed via the comfort function, they are not automatically locked.
- A door arrested in the intermediate position can be opened or closed manually.

- ▶ **To open with the key:** press and hold the  button on the key.

- ❗ In the multimedia system, you can set whether the driver's door, the front passenger door or no doors open when you press the  button on the key (→ page 182).
The convenience opening function is carried out if no front doors open when the  button is pressed. Convenience opening can involve opening of the side windows and the panoramic sliding sunroof, for example. Further information on convenience opening (→ page 195).



- ▶ **To close with the key:** Press and hold the button  on the key until the door starts to close.
All open front doors close.
- ▶ **Convenience closing with the key:** press and hold the  button on the key.
All open front doors, side windows and the panoramic sliding sunroof close.

 Press the  button on the key again to lock the vehicle.

To close the driver's door with the brake pedal:


- ▶ Depress the brake pedal until the door starts to close.

To close the front comfort doors from inside:

- ▶ Pull and hold the door handle until the door starts to close (→ page 175).

 The closing procedure stops if the door handle is pulled during the automatic process. Pulling on the door handle again will resume the closing procedure.

To close the front comfort doors from outside:

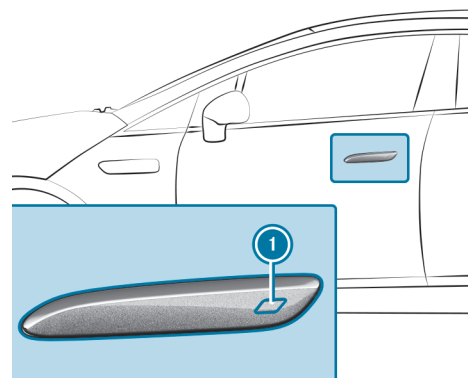

- ▶ Touch the recessed sensor surface  on the door handle.

EXIT WARNING WHEN OPENING THE FRONT DOORS FROM INSIDE

The exit warning of Active Blind Spot Assist is used as an additional safeguard. If an obstacle is detected, the comfort function is deactivated and the moving door will be stopped.

- ▶ Manually open a door stopped in an intermediate position.



WARNING

Risk of accident despite exit warning

The exit warning neither reacts to stationary objects nor to persons or road users approaching you at a greatly differing speed.

The exit warning cannot warn drivers in these situations.

- ▶ Always pay particular attention to the traffic situation when opening the doors and make sure there is sufficient clearance.

The exit warning serves solely as an aid and is not a substitute for attentiveness of the vehicle occupants. The responsibility for opening the doors and exiting the vehicle remains with the vehicle occupants at all times.



 Further information on Active Blind Spot Assist with exit warning (→ page 406).

BLOCKAGE DETECTION WHEN OPENING THE FRONT DOORS

Blockage detection will stop a door obstructed by an obstacle during the automatic opening process. The automatic blockage detection function serves solely as an aid and is not a substitute for your attentiveness.

- ▶ Manually open a door stopped in an intermediate position.

NOTE

Damage to the convenience doors despite blockage detection

Blockage detection may not be able to stop the automatic opening process of the doors in all cases. This can be the case in particular with light, soft objects.

- ▶ Therefore, make sure that there is sufficient clearance next to the vehicle.

AUTOMATIC BACKING-UP FUNCTION WHEN CLOSING THE FRONT DOORS

The doors are equipped with automatic blockage detection with a backing-up function. If an obstacle stops a door during the automatic closing process, the door will automatically open again. The automatic backing-up function serves solely as an aid and is not a substitute for your attentiveness.

- ▶ During the closing process, ensure that no body parts remain within the closing area.

WARNING

Risk of becoming trapped despite reversing function

THE REVERSING FUNCTION DOES NOT REACT:

- to soft, light and thin objects, e.g. fingers
- at the end of the closing process

In these situations in particular, the reversing function cannot prevent someone being trapped.

- ▶ Make sure that no body parts are in the closing area.
- ▶ If someone is trapped, use one of the following options:
 - Press the  or  button on the key.
 - Driver's door: depress the brake pedal.
 - Pull the inside or outside door handles.
 - Push against the door or pull the door.
 - Select the "Cancel process" display on the Comfort menu in the multimedia system.

Setting comfort doors

Multimedia system:

   Settings  Vehicle  Comfort

- ▶ Activate or deactivate [Comfort Doors](#).

OPERATING COMFORT DOORS

- ▶ Select .



- ▶ Select **Open door control**.
The menu for operating the doors opens. The doors can be opened or closed by sliding the control element on the central display.
- ▶ Select **Cancel Process**.
The process is interrupted and the door remains in the position it has reached.
- ▶ Press and hold **Close All**.
All doors are closed simultaneously.

Power closing function

WARNING

Risk of becoming trapped when the doors close automatically
Body parts or objects can become trapped, causing injuries.

- ▶ Ensure that no body parts or objects are in the closing area.
- ▶ Automatic closing of the doors can be canceled by pulling the outer or inner door handle.

If you push the door into the lock to the first detent position, the power closing function will automatically pull the door into the lock.

-  Automatic closing of the doors may be triggered if the vehicle is locked from the outside, or during pulling away.


Locking/unlocking the vehicle with the emergency key

UNLOCKING THE DRIVER'S DOOR WITH THE EMERGENCY KEY

-  If you unlock and open the driver's door with the emergency key, this triggers the Anti-Theft Alarm system.
-  If you unlock the driver's door with the emergency key, the trunk lid will not be unlocked.
-  Information on starting the vehicle in emergency operation mode (→ page 304).

Vehicles without KEYLESS-GO

- ▶ Remove the emergency key (→ page 165).

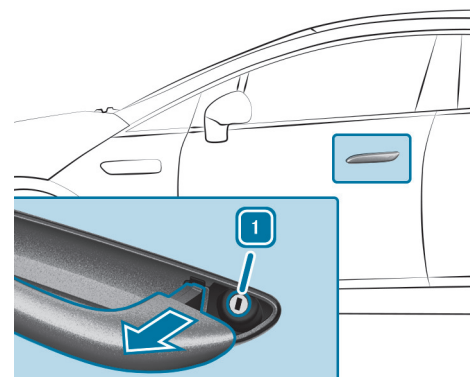




- ▶ Pull out the door handle slightly and hold it in position.
- ▶ Insert the emergency key into the lock cylinder.
- ▶ Turn the emergency key counter-clockwise to position 1.
- ▶ Turn the emergency key back to its starting position.
- ▶ Remove the emergency key and release the door handle.


Vehicles with KEYLESS-GO

- ▶ Remove the emergency key (→ page 165).

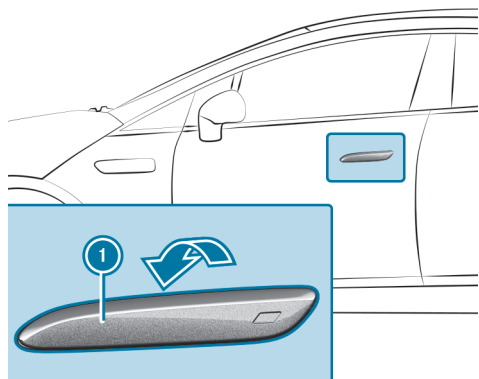

If the door handle is retracted:


- ▶ Insert a flat, non-metallic object behind the retracted door handle ① from above and pry it slightly outward.
- ▶ Reach behind the door handle ① from below, pull it outward to the pressure point and hold it in position.

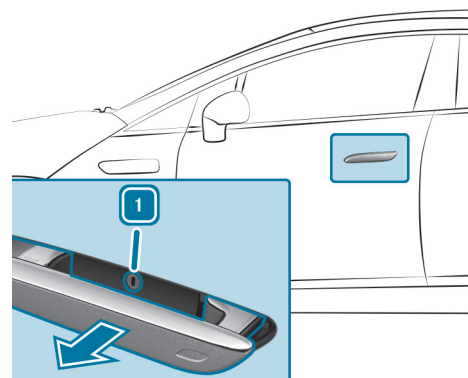

If the door handle is extended:


- ▶ Pull the door handle ① outward to the pressure point and hold it in position.
- ▶ Insert the emergency key into the lock cylinder.
- ▶ Turn the emergency key counter-clockwise to position 1.
- ▶ Forcefully pull the door handle ① outward past the pressure point.
- ▶ Turn the emergency key back to its starting position.
- ▶ Remove the emergency key and release the door handle.

You can watch an animation on this topic via the following link:





LOCKING THE DOORS

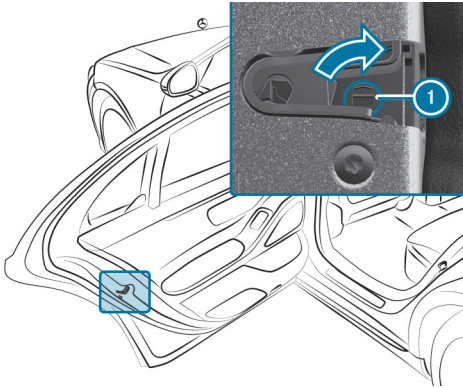

- ▶ Insert a suitable object, e.g. the emergency key, into the opening ① on the door lock.
- ▶ **To lock the left-hand side of the vehicle:** turn the emergency key clockwise as far as it will go.
- ▶ **To lock the right-hand side of the vehicle:** turn the emergency key counter-clockwise as far as it will go.

If the locked door is then closed, it can no longer be opened from the outside.





< Trunk

Opening the trunk lid

NOTE


Damage to the trunk lid by obstacles above the vehicle

The trunk lid swings upwards when it is opened.

- ▶ Therefore, make sure that there is sufficient clearance above the trunk lid.

- ▶ With the trunk lid unlocked, press on the upper area of the star and fold the star in until the trunk lid opens.
- ▶ **Vehicles with HANDS-FREE ACCESS:** Make a kicking movement with your foot below the bumper (→ page 189).

VEHICLES WITH TRUNK LID CONVENIENCE CLOSING

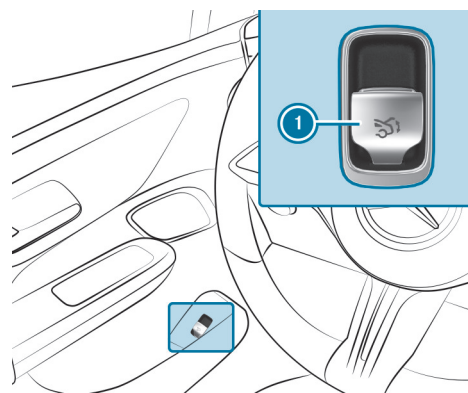


- ▶ Pull remote operating switch ① until the trunk lid opens.

or

- ▶ Press and hold the  button on the SmartKey.
- ▶ If the trunk lid is stopped in an intermediate position, pull it upwards. Release it as soon as it begins to open.
- ▶ With the trunk lid opening height restriction activated, manually pull the stopped trunk lid upwards.

If an obstacle obstructs the trunk lid during the automatic opening process, blockage detection will stop the trunk lid. The automatic blockage detection function is only an aid and is not a substitute for your attentiveness.





Closing the trunk lid

WARNING

Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around.
- ▶ Before the journey, secure objects, luggage or loads against slipping or tipping over.

Observe the notes on loading the vehicle.

Notes on closing the trunk lid: your vehicle is equipped with automatic key recognition.

NOTE THAT THE TRUNK LID WILL NOT BE LOCKED AND WILL POP BACK OPEN IF THE FOLLOWING SITUATION OCCURS:

- You have locked the vehicle and closed the trunk lid while a key belonging to the vehicle is inside the vehicle and is detected.
and
- A second key belonging to the vehicle is not detected outside the vehicle.

Automatic key recognition is only an aid and is not a substitute for your attentiveness.

- ▶ Before locking, ensure that at least one key belonging to the vehicle is outside the vehicle.
- ▶ **To close the trunk lid:** pull the trunk lid downwards using the handle recess and push it closed.



Vehicles with trunk lid convenience closing: if you lightly push the trunk lid closed, the power closing function will automatically pull the trunk lid into the lock.

VEHICLES WITH TRUNK LID CONVENIENCE CLOSING



WARNING

Risk of becoming trapped during automatic closing of the trunk lid

Parts of the body could become trapped. There may be people in the closing area.

- ▶ Make sure that nobody is in the vicinity of the closing area.
- ▶ Use one of the following options to stop the closing process:
 - Press the  button on the SmartKey.
 - Press or pull the remote operating switch on the driver's door.
 - Press the closing or locking button on the trunk lid.
 - Pull the trunk lid handle.

Vehicles with HANDS-FREE ACCESS: it is also possible to stop the closing process by making a kicking motion below the rear bumper.


- ▶ Pull the trunk lid handle. Release it as soon as it begins to close.






- ▶ If the trunk lid is stopped in an intermediate position, push it downwards.

The trunk lid will continue to close.

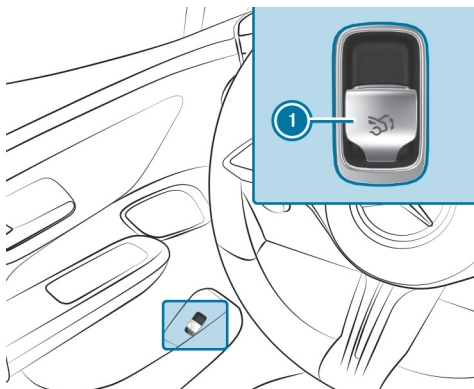

- ▶ Push remote operating switch ① until the trunk lid is fully closed.

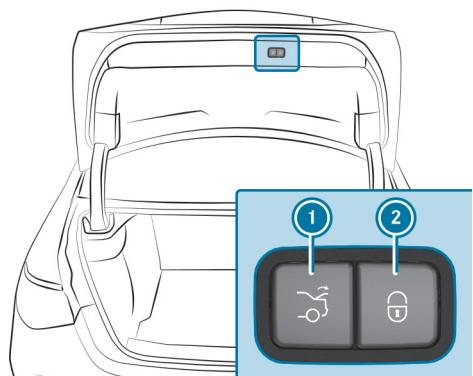

- ▶ Press closing button ① on the trunk lid.

VEHICLES WITH KEYLESS-GO

- ▶ Press locking button ② on the trunk lid.

If a key is detected outside the vehicle, the trunk lid will close and the vehicle will be locked.

① Vehicles with Digital Vehicle Key: this also applies to the Digital Vehicle Key if the function is activated and the Digital Vehicle Key is connected to the vehicle.

- ▶ With the trunk lid completely open, press and hold the  button on the key. The key must be in the vicinity of the vehicle.


VEHICLES WITH HANDS-FREE ACCESS

- ▶ With the trunk lid completely open, make a kicking movement with your foot below the bumper (→ page 189).

TRUNK LID AUTOMATIC REVERSING FUNCTION

The trunk lid is equipped with automatic blockage detection with a reversing function. If an obstacle obstructs the trunk lid during the automatic closing process, it will automatically open again. The automatic reversing function serves solely as an aid and is not a substitute for your attentiveness.

- ▶ During the closing process, ensure that no body parts remain within the closing area.





WARNING

Risk of becoming trapped despite reversing function

THE REVERSING FUNCTION WILL NOT REACT:

- to soft, light and thin objects, e.g. fingers
- towards the end of the closing procedure

In these situations in particular, the reversing function cannot prevent someone being trapped.

- ▶ Ensure that no body parts are in the closing area.
- ▶ If someone is trapped, use one of the following options:
 - Press the  button on the SmartKey.
 - Press the remote operating switch on the driver's door.
 - Press the closing or locking button on the trunk lid.
 - Pull the trunk lid handle.

HANDS-FREE ACCESS allows you to open and close the trunk lid, or even stop the opening and closing process at any point, by performing a kicking motion under the bumper. The transmission must be in position **P** for this function.

THE KICKING MOTION TRIGGERS THE OPENING OR CLOSING PROCESS ALTERNATELY.

- If you stop the trunk lid opening process with a kicking motion, the trunk lid is closed with the next kicking motion.
- If you stop the trunk lid closing process with a kicking motion, the trunk lid is opened with the next kicking motion.



IN THE FOLLOWING CASES, THE TRUNK LID CAN ONLY BE CLOSED WITH HANDS-FREE ACCESS:

- If the vehicle is switched on and the key's unlock function has been set so that only the driver's door is unlocked when activated (→ page 164).
- If the vehicle has been centrally locked from the inside (→ page 175).

Observe the notes when opening (→ page 186) and closing (→ page 187) the trunk lid.

 A warning tone sounds while the trunk lid is opening or closing.

HANDS-FREE ACCESS function

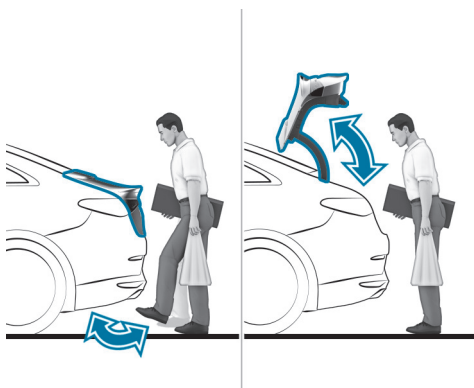



! NOTE

Damage to the vehicle caused by unintentionally opening the trunk lid or a door

- When using an automatic car wash
- When using a high pressure cleaner
- ▶ Deactivate the function of the SmartKey in these situations.

or

- ▶ Make sure that the SmartKey is at a minimum distance of 10 ft (3 m) (power washer) or 20 ft (6 m) (automatic car wash) away from the vehicle.

Vehicles with Digital Vehicle Key:

! NOTE

Vehicle damage due to unintentional opening of the trunk lid or one of the doors

- when using a car wash
- when using a power washer
- ▶ In these situations, switch off the Digital Vehicle Key.


or

- ▶ Ensure that the Digital Vehicle Key is at least 10 ft (3 m) (power washer) or 20 ft (6 m) (car wash) away from the vehicle.

Ensure that you are standing firmly on the ground when performing the kicking motion. You could otherwise lose your balance, e.g. on ice.

OBSERVE THE FOLLOWING NOTES:

- The key is behind the vehicle.
If the key is not recognized:
 - Take the key in your hand.
 - or
 - Ensure that the function of the key is activated (→ page 65).
- **Vehicles with Digital Vehicle Key:** The Digital Vehicle Key is behind the vehicle.
- Stand at least 12 in (30 cm) away from the vehicle when performing the kicking motion.
- Do not come into contact with the bumper when performing the kicking motion.
- Do not carry out the kicking motion too slowly.
- The kicking motion must be towards the vehicle and back again.

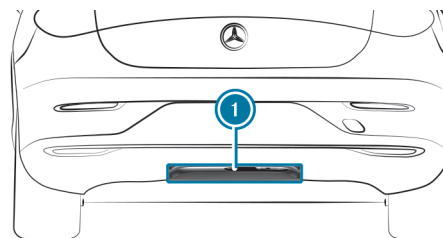

① Detection range of the sensors

If several consecutive kicking motions are not successful, wait ten seconds.

SYSTEM LIMITS

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING CASES:

- The sensors are dirty, e.g. due to road salt or snow.



- The kicking motion is performed with a prosthetic leg.

THE TRUNK LID COULD BE OPENED OR CLOSED UNINTENTIONALLY IN THE FOLLOWING SITUATIONS:

- A person's arms or legs are moving in the sensor detection range, e.g. when polishing the vehicle or picking up objects.
- Objects are moved or placed behind the vehicle, e.g. a charging cable or luggage.
- Retaining straps, tarps or other covers are pulled over the bumper.
- A protective mat with a length reaching over the loading sill down into the detection range of the sensors is used.
- The protective mat is not secured correctly.

Deactivate the function of the key (→ page 65) or do not carry the key about your person in such situations.

Switching separate trunk locking on and off

Multimedia system:

  >> Settings >> Vehicle >> Locking Function

SWITCHING SEPARATE TRUNK LOCKING ON

- ▶ Select **Block Trunk Access**.
- ▶ Create a PIN.
- ▶ Confirm the PIN with **OK**.
- ▶ Enter the PIN again and confirm it.

The trunk will remain locked if you unlock the vehicle centrally.

-  If an accident has been detected, the trunk will unlock even if separate locking is switched on.


SWITCHING SEPARATE TRUNK LOCKING OFF

- ▶ Select **Block Trunk Access**.
- ▶ Enter the PIN.
If the PIN is correct, separate trunk locking will be switched off and the PIN deleted.

Unlocking and opening the trunk from inside with the emergency release

Requirements

- The 12 V vehicle battery is connected and charged.

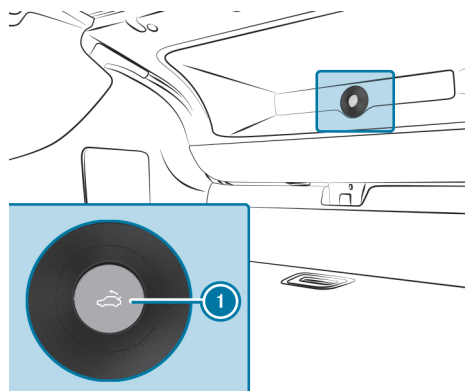

- ▶ Press emergency release button  briefly.



Activating/deactivating the trunk lid opening height restriction

Multimedia system:

   Settings  Vehicle  Other Functions

- ▶ Switch **Opening Height Limiter** on or off.

This function prevents the trunk lid from hitting a low garage ceiling, for example.





< Side windows

Opening and closing the side windows

WARNING

Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- ▶ When opening, make sure that nobody is touching the side window.
- ▶ If someone is trapped, release the button immediately or pull it in order to close the side window again.

WARNING

Risk of becoming trapped when closing a side window

When closing a side window, body parts could be trapped in the closing area in the process.

- ▶ When closing, make sure that no body parts are in the closing area.
- ▶ If someone is trapped, release the button immediately or press the button in order to reopen the side window.

WARNING

Risk of becoming trapped when children operate the side windows


Children could become trapped if they operate the side windows, particularly when unattended.

- ▶ Activate the child safety lock for the rear passenger compartment side windows.
- ▶ When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- ▶ Never leave children unattended in the vehicle.

Requirements:

- The power supply or the vehicle has been switched on.



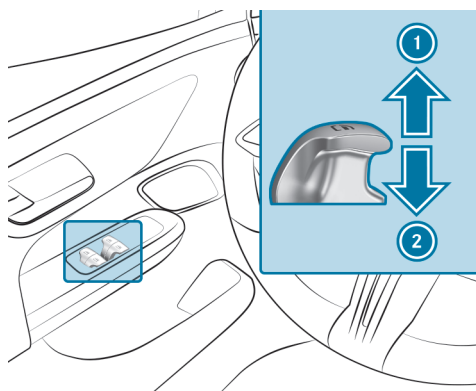

① Closes

② Opens

The buttons on the driver's door take precedence.

- ▶ **To start automatic operation:** press the  button beyond the point of resistance or pull and release it.
- ▶ **To interrupt automatic operation:** press or pull the  button again.

When the vehicle is switched off, you can continue to operate the side windows.

This function will be available for around four minutes or until a front door is opened.

AUTOMATIC REVERSING FUNCTION OF THE SIDE WINDOWS

If an obstacle impedes a side window during the closing process, the side window will open again automatically. The automatic reversing function serves solely as an aid and is not a substitute for your attentiveness.

- ▶ During the closing process, ensure that no body parts remain within the closing area.



WARNING


Risk of becoming trapped despite there being reversing protection on the side window

THE REVERSING FUNCTION DOES NOT REACT:

- To soft, light and thin objects, e.g. fingers.
- During resetting.

The reversing function cannot prevent someone from becoming trapped in these situations.

- ▶ During the closing process, make sure that no body parts are in the closing area.
- ▶ If someone becomes trapped, press the  button to open the side window again.





Convenience opening (ventilating the vehicle before starting a journey)

WARNING

Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- ▶ When opening, make sure that nobody is touching the side window.
- ▶ Release the button immediately if somebody becomes trapped.

Requirements:

- The key is in immediate proximity to the vehicle.

- ▶ Press and hold the  button on the key.

THE FOLLOWING FUNCTIONS ARE PERFORMED:

- The vehicle is unlocked.
- The side windows open.
- The panoramic sliding sunroof opens.
- The driver's seat ventilation is switched on.

 If the roller sunblind of the panoramic sliding sunroof is closed, the roller sunblind is opened first.

- ▶ **Interrupt convenience opening:** Release the  button.

- ▶ **Continue convenience opening:** Press and hold the  button again.

Convenience closing (closing the vehicle from outside)

WARNING

Risk of entrapment due to not paying attention during convenience closing

When the convenience closing feature is operating, parts of the body could become trapped in the closing area of the side window and the sliding sunroof.

- ▶ When the convenience closing feature is operating, monitor the entire closing process and make sure that no body parts are in the closing area.

Requirements:

- The key is in immediate proximity to the vehicle.

- ▶ Press and hold the  button on the key.

THE FOLLOWING FUNCTIONS ARE PERFORMED:

- The vehicle is locked.
- The side windows are closed.
- The panoramic sliding sunroof is closed.

- ▶ **To interrupt convenience closing:** release the  button.



- ▶ **To continue convenience closing:** press and hold the  button again.

 Convenience closing also functions with KEYLESS-GO (→ page 176).

Resolving problems with the side windows

WARNING

Risk of becoming trapped or fatally injured if reversing protection is not activated

If you close a side window again immediately after it has been blocked, the side window will close with increased or maximum force. The reversing function is then not active and body parts may become trapped.

- ▶ Make sure that no parts of the body are in the closing area.
- ▶ To stop the closing process, release the button or press the button again to reopen the side window.

A SIDE WINDOW CANNOT BE CLOSED AND YOU CANNOT SEE THE CAUSE.

- ▶ Check to see whether any objects are in the window guide.
- ▶ Adjust the side windows.

Adjusting the side windows

If a side window is obstructed during closing and reopens again immediately:

- ▶ Immediately after this, pull and hold the corresponding button again until the side window has closed and hold the button for at least one more second (re-adjustment).
The side window will be closed without the automatic reversing function.

If the side window is obstructed again and reopens again immediately:

- ▶ Immediately after this, pull and hold the corresponding button again until the side window has closed and hold the button for at least one more second (follow-up adjustment).
The side window will be closed without the automatic reversing function.
- ▶ If a side window is obstructed again during closing and reopens again slightly, consult a qualified specialist workshop.

THE SIDE WINDOWS CANNOT BE OPENED OR CLOSED USING THE CONVENIENCE OPENING FEATURE.

POSSIBLE CAUSES:

- The key is not in the immediate vicinity of the vehicle.
 - The key battery is at low capacity or is flat.
- ▶ Check the battery using the indicator lamp (→ page 163).
 - ▶ Replace the key battery, if necessary (→ page 166).





< Sliding sunroof

Opening and closing the sliding sunroof

 The term "sliding sunroof" refers to the panorama roof with power tilt/sliding panel.

WARNING

Risk of becoming trapped when the sliding sunroof is being opened and closed

Body parts may become trapped in the range of movement.

- ▶ During the opening and closing process, make sure that no body parts are in the sweep of the sliding sunroof.
- ▶ If someone is trapped, release the control panel immediately.

or

- ▶ Touch the control panel during automatic operation.
The opening/closing process will be stopped.

WARNING

Risk of becoming trapped if the sliding sunroof is operated by children

Children operating the sliding sunroof could get caught in the moving parts, particularly if unattended.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

WARNING

Risk of becoming trapped when the roller sunblind is being opened and closed

Body parts may become trapped between the roller sunblind and frame or sliding roof.

- ▶ During the opening or closing process, make sure that no body parts are in the roller sunblind's range of movement.
- ▶ If someone is trapped, release the control panel immediately.

or

- ▶ Touch the control panel during automatic operation.
The opening/closing process will be stopped.



**! NOTE**

Malfunction due to snow and ice

Snow and ice may cause the sliding sunroof to malfunction.

- ▶ Open the sliding sunroof only if it is free of snow and ice.

! NOTE

Damage caused by moisture ingress

- ▶ Do not open the sliding sunroof if it has just rained.
- ▶ Do not open the sliding sunroof immediately after washing the vehicle in a car wash.

! NOTE

Damage caused by protruding objects

Objects that protrude from the sliding sunroof may damage the seals.


- ▶ Do not allow anything to protrude from the sliding sunroof.

! NOTE

Damage to panorama roof with power tilt/sliding panel caused by roof luggage rack

If the panorama roof with power tilt/sliding panel is opened when a roof luggage rack is installed, the panorama roof with power tilt/sliding panel may be damaged by the roof luggage rack.

- ▶ Do not open the panorama roof with power tilt/sliding panel if a roof luggage rack is installed.

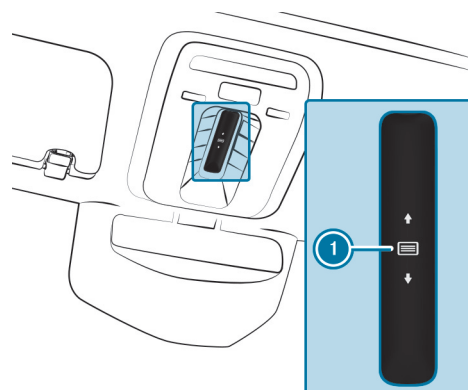

The sliding sunroof and the roller sunblind are operated using control panel ①.

The panorama roof with power tilt/sliding panel can be operated only when the roller sunblind is open.

- ▶ **To open:** swipe backwards across control panel ① and hold it.
- ▶ **To close:** swipe forwards across control panel ① and hold it.
- ▶ **To raise or lower:** press control panel ① briefly.





- ▶ **To start automatic operation:** swipe forwards or backwards across control panel ①.

- ▶ **To cancel automatic operation:** press control panel ① again.

The opening/closing process will be stopped.

AUTOMATIC REVERSING FUNCTION OF THE SLIDING SUNROOF

If an obstacle obstructs the sliding sunroof during the closing process, the sliding sunroof will open again automatically. The Automatic reversing function serves solely as an aid and is not a substitute for your attentiveness.

- ▶ Keep the opening area and the guide rails free of debris (e.g. ice, snow or leaves).
- ▶ When closing the sliding sunroof, make sure that no body parts or objects are in the closing area.

⚠ WARNING

Risk of becoming trapped despite reversing function

THE REVERSING FUNCTION WILL NOT REACT:

- To soft, light and thin objects, e.g. fingers.
- Towards the end of the closing procedure.
- During resetting.
- ▶ During the closing process, make sure that no body parts are in the closing area.
- ▶ If someone is trapped, release the control panel immediately.

or

- ▶ Touch the control panel during automatic closing.
The closing process will be stopped.

AUTOMATIC REVERSING FUNCTION OF THE ROLLER SUNBLIND

If an obstacle obstructs the roller sunblind during the closing process, the roller sunblind will open again automatically. The Automatic reversing function serves solely as an aid and is not a substitute for your attentiveness.

- ▶ Keep the opening area and the guide rails free of debris (e.g. ice, snow or leaves).
- ▶ When closing the roller sunblind, make sure that no body parts or objects are in the range of movement.



WARNING

Risk of becoming trapped despite reversing function

In particular, the reversing function does not react to soft, light and thin objects, e.g. fingers.

- ▶ When closing the roller sunblind, make sure that no body parts are in the range of movement.
- ▶ If someone is trapped, release the control panel immediately.

or

- ▶ Touch the control panel during automatic closing.
The closing process will be stopped.

Automatic functions of the sliding sunroof



The term "sliding sunroof" refers to the panorama roof with power tilt/sliding panel.





RAIN CLOSING FUNCTION WHEN DRIVING

Vehicles with a panorama roof with power tilt/sliding panel: if it starts to rain, the raised sliding sunroof will automatically be lowered while the vehicle is in motion.

AUTOMATIC LOWERING FUNCTION

Vehicles with a panorama roof with power tilt/sliding panel: if the sliding sunroof is raised at the rear, it will automatically be lowered slightly at higher speeds. At low speeds, it will be raised again automatically.

WARNING

Risk of becoming trapped by automatic lowering of the sliding sunroof

At higher speeds, the raised sliding sunroof will automatically be lowered slightly at the rear.

- ▶ Make sure that nobody reaches into the sliding sunroof's range of movement while the vehicle is in motion.
- ▶ If someone becomes trapped, touch the control panel.

Rectifying problems with the sliding sunroof

WARNING

Risk of becoming trapped or fatal injuries when the sliding sunroof is closed again

If you close the sliding sunroof again immediately after it has been blocked or reset, the sliding sunroof will close with increased or maximum force.

There is a risk of becoming trapped or even of fatal injuries!

- ▶ Make sure that no parts of the body are in the closing area.
- ▶ If someone is trapped, release the control panel immediately.

or

- ▶ Touch the control panel during automatic closing.
The closing process will be stopped.

THE SLIDING SUNROOF CANNOT BE CLOSED AND YOU CANNOT SEE THE CAUSE.

-  The term "sliding sunroof" refers to the panorama roof with power tilt/sliding panel.

If the sliding sunroof is obstructed during closing and reopens again slightly:

- ▶ Immediately after automatic reversing, swipe forwards across the control panel (→ page 197) and hold it until the sliding sunroof is closed.
The sliding sunroof will be closed with increased force.





If the sliding sunroof is obstructed again and opens again slightly:

- ▶ Repeat the previous step.
The sliding sunroof will be closed again with increased force.

THE SLIDING SUNROOF OR THE ROLLER SUNBLIND IS NOT OPERATING SMOOTHLY.

- ▶ Reset the sliding sunroof and the roller sunblind.

Resetting the sliding sunroof and the roller sunblind

- ▶ Swipe forwards across the control panel (→ page 197) and hold it repeatedly until the sliding sunroof is completely closed.
- ▶ Swipe across the control panel and hold it for another second.
- ▶ Swipe across and hold the control panel until the roller sunblind is fully closed.
- ▶ Swipe across the control panel and hold it for another second.
- ▶ Use automatic operation to fully open and then close the sliding sunroof.





< Anti-theft protection

Function of the immobilizer

The immobilizer prevents your vehicle from being started without the correct key.

This also applies to the Digital Vehicle Key.

The immobilizer is automatically activated when the vehicle is switched off and deactivated when the vehicle is switched on.

When leaving the vehicle, always take the key with you and lock the vehicle. Anyone can start the vehicle if a valid key has been left inside the vehicle.

- i** If the drive system cannot be started even though the starter battery is charged, the immobilizer may be defective. Contact an authorized Mercedes-Benz Service Center or call 1-800-FOR-MERCEdes (in the USA) or 1-800-387-0100 (in Canada).

- When the interior protection is triggered (→ page 204)
- When the tow-away alarm is triggered (→ page 203)

i Vehicles with Digital Vehicle Key: The ATA works with the Digital Vehicle Key in the same way as with the conventional vehicle key.

THE ATA SYSTEM WILL BE ARMED AUTOMATICALLY AFTER APPROXIMATELY TEN SECONDS IN THE FOLLOWING SITUATIONS:


- After you lock the vehicle with the key
- After you lock the vehicle using KEYLESS-GO
- After you lock the vehicle with the NFC function (**vehicles with Digital Vehicle Key:**)


ATA (anti-theft alarm system)

FUNCTION OF THE ATA SYSTEM

IF THE ATA SYSTEM IS ARMED, A VISUAL AND AUDIBLE ALARM WILL BE TRIGGERED IN THE FOLLOWING SITUATIONS:

- When a door is opened
- When the trunk lid is opened



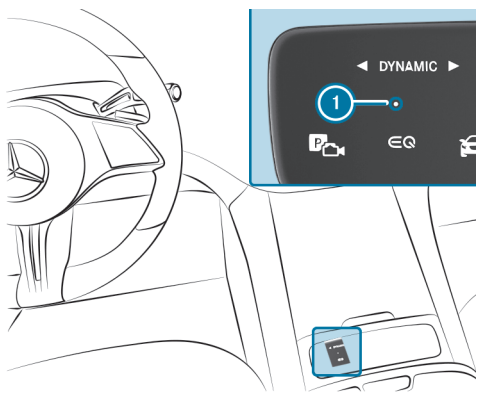

Example: with MBUX hyperscreen

Indicator lamp ❶ will flash when the ATA system is armed.

THE ATA SYSTEM WILL BE DISARMED AUTOMATICALLY IN THE FOLLOWING SITUATIONS:

- After you unlock the vehicle with the key
- After you unlock the vehicle using KEYLESS-GO
- After you unlock the vehicle with the NFC function (**vehicles with Digital Vehicle Key**)
- After you press the Start/Stop button with the key in the marked space (→ page 304)

DEACTIVATING THE ATA

- ▶ Press the ,  or  button on the key.

or

- ▶ Press the Start/Stop button with the key in the marked space (→ page 304)

- ▶ **Vehicles with Digital Vehicle Key:** press the Start/Stop button with the Digital Vehicle Key in the marked space (→ page 304).

DEACTIVATING THE ALARM USING KEYLESS-GO:

- ▶ With the key outside the vehicle, touch the inner surface of the door handle.
The distance between key and vehicle should be no greater than 3 ft (1 m).
This also applies to the Digital Vehicle Key.

Function of tow-away alarm

 This function may not be available in all countries.


A visual and audible alarm will be triggered if an alteration to your vehicle's angle of inclination is detected while the tow-away alarm is armed.

THE TOW-AWAY ALARM WILL BE ARMED AUTOMATICALLY AFTER ABOUT 60 SECONDS:

- After you lock the vehicle with the key
- After you lock the vehicle using KEYLESS-GO
This also applies to the Digital Vehicle Key.
- After locking with the NFC function (**vehicles with Digital Vehicle Key**)

THE TOW-AWAY ALARM WILL BE ARMED ONLY WHEN THE FOLLOWING COMPONENTS ARE CLOSED:

- Doors
- Trunk lid





THE TOW-AWAY ALARM WILL AUTOMATICALLY BE DEACTIVATED:

- After you press the  or  button on the key
- After you press the start/stop button with the key in the marked space (→ page 304)
- After you press the start/stop button with the Digital Vehicle Key in the marked space **(vehicles with Digital Vehicle Key)**
- After you unlock the vehicle using KEYLESS-GO
This also applies to the Digital Vehicle Key.
- After unlocking with the NFC function **(vehicles with Digital Vehicle Key)**
- When using HANDS-FREE ACCESS

Information on collision detection on a parked vehicle (→ page 360).

Arming/deactivating tow-away alarm

Multimedia system:

   Settings  Vehicle  Opening/closing
 Vehicle Protection

 Arm or deactivate [Tow-away Protection](#).

TOW-AWAY ALARM IS ARMED AGAIN IN THE FOLLOWING CASES:

- The vehicle is unlocked again.
- A door is opened.
- The vehicle is locked again.

Function of interior protection

 This function may not be available in all countries.

When interior protection is armed, a visual and audible alarm will be triggered if movement is detected in the vehicle interior.

INTERIOR PROTECTION WILL BE ARMED AUTOMATICALLY AFTER APPROXIMATELY TEN SECONDS:

- After locking the vehicle with the key
- After locking the vehicle using KEYLESS-GO
This also applies to the Digital Vehicle Key.
- After locking with the NFC function **(vehicles with Digital Vehicle Key)**

INTERIOR PROTECTION WILL BE ARMED ONLY WHEN THE FOLLOWING COMPONENTS ARE CLOSED:

- Doors
- Trunk lid

INTERIOR PROTECTION WILL AUTOMATICALLY BE DEACTIVATED:

- After the  or  button on the key is pressed
- After the start/stop button is pressed with the key in the marked space (→ page 304)
- After the start/stop button is pressed with the Digital Vehicle Key in the marked space **(vehicles with Digital Vehicle Key)**
- After you unlock the vehicle using KEYLESS-GO
This also applies to the Digital Vehicle Key.



- After unlocking with the NFC function (**vehicles with Digital Vehicle Key**)
- When using HANDS-FREE ACCESS

THE FOLLOWING SITUATIONS CAN LEAD TO A FALSE ALARM:

- When there are moving objects such as mascots in the vehicle interior
- If a side window is open
- If the panoramic sliding sunroof is open

Arming/disarming interior protection

Multimedia system:

   Settings  Vehicle  Opening/closing

 Vehicle Protection

- ▶ Activate or deactivate [Interior Protection](#).

INTERIOR PROTECTION WILL BE ARMED AGAIN IN THE FOLLOWING CASES:

- The vehicle is unlocked again.
- A door is opened.
- The vehicle is locked again.





< Seats and stowing

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Notes on the correct driver's seat position	>	Cup holder	>
Notes on grab handles	>	Sockets	>
Seats	>	Charging a mobile phone wirelessly	>
Steering wheel	>	Installing and removing floor mats	>
Easy entry and exit feature	>		
Memory function	>		
Stowage areas	>		



< Notes on the correct driver's seat position

⚠ WARNING



Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

ENSURE THE FOLLOWING WHEN ADJUSTING STEERING WHEEL ①, SEAT BELT ② AND DRIVER'S SEAT ③:

- You are sitting as far away from the driver's air bag as possible, taking the following points into consideration:
- You are sitting in an upright position
- Your thighs are slightly supported by the seat cushion
- Your legs are not fully extended and you can depress the pedals properly
- The back of your head is supported at eye level by the center of the head restraint
- You can hold the steering wheel with your arms slightly bent
- You can move your legs freely
- You can see all the displays on the driver display clearly
- You have a good overview of the traffic conditions
- Observe the notes on correctly fastening the seat belt (→ page 122).

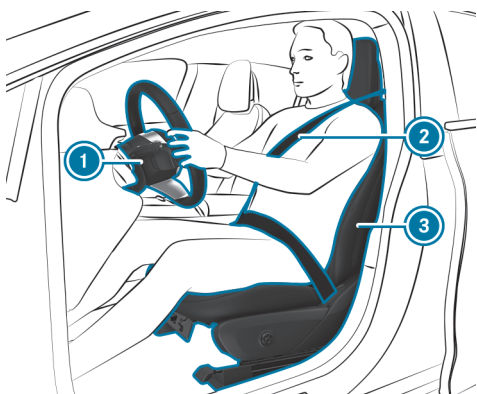



< Notes on grab handles

WARNING

Risk of injury due to excessive load on the grab handles

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or come loose from its anchorage. This may result in injuries.

- ▶ Use the grab handles only to stabilize the seating position or to assist in getting in and out of the seat.





< Seats

Adjusting the front seat manually and electrically

WARNING

Risk of becoming trapped if the seats are adjusted by children
Children could become trapped if they adjust the seats, particularly when unattended.

- ▶ When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- ▶ Never leave children unattended in the vehicle.

You can adjust the seats when the vehicle is switched off.

WARNING

Risk of becoming trapped if the seats are adjusted
When adjusting a seat, you may trap yourself or a vehicle occupant, e.g. on the seat guide rail.

- ▶ Make sure that no part of the body is within the seat's range of motion when adjusting a seat.



WARNING

Risk of accident due to the driver's seat not being engaged
The driver's seat may move unexpectedly while driving.

This could cause you to lose control of the vehicle.

- ▶ Always make sure that the driver's seat is engaged before starting the vehicle.



WARNING

Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

Observe the safety notes on "Air bags" and "Children in the vehicle".



**⚠ WARNING**

Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

- ▶ While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

⚠ WARNING

Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- ▶ Always drive with the head restraints installed.
- ▶ Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

⚠ WARNING

Risk of injury or death due to an incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- ▶ Adjust the seat properly before beginning your journey.
- ▶ Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.

⚠ WARNING

Risk of potentially fatal injuries due to objects trapped under the front passenger seat

Objects trapped under the front passenger seat may interfere with the function of the automatic front passenger air bag shutoff or damage the system.

- ▶ Do not stow any objects under the front passenger seat.
- ▶ When the front passenger seat is occupied, ensure that no objects have become trapped beneath the front passenger seat.




**NOTE**

Damage to the seats when adjusting

The seats may be damaged by objects when adjusting the seats.

- ▶ When adjusting the seats, make sure that there are no objects in the footwell, under or behind the seats.

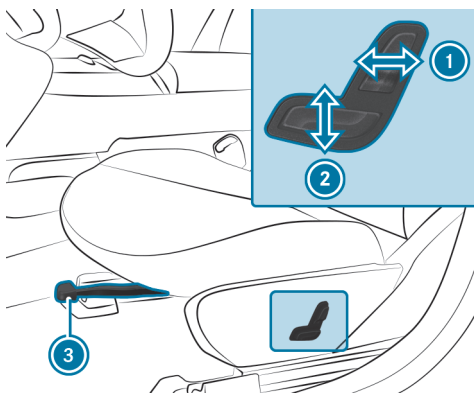

① Seat backrest inclination

② Seat height

③ Seat fore-and-aft position

- ▶ **To adjust the seat fore-and-aft position:** lift lever ③ and slide the seat into the desired position.
- ▶ Make sure that the seat is engaged.

Adjusting the front seat electrically

WARNING

Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

- ▶ When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- ▶ Never leave children unattended in the vehicle.

You can adjust the seats when the vehicle is switched off.

WARNING

Risk of becoming trapped if the seats are adjusted

When adjusting a seat, you may trap yourself or a vehicle occupant, e.g. on the seat guide rail.

- ▶ Make sure that no part of the body is within the seat's range of motion when adjusting a seat.

Observe the safety notes on "Air bags" and "Children in the vehicle".



 **WARNING**

Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

 WARNING

Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

- ▶ While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

 WARNING

Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- ▶ Always drive with the head restraints installed.
- ▶ Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

 WARNING

Risk of injury or death due to an incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- ▶ Adjust the seat properly before beginning your journey.
- ▶ Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.



**⚠ WARNING**

Risk of potentially fatal injuries due to objects trapped under the front passenger seat

Objects trapped under the front passenger seat may interfere with the function of the automatic front passenger air bag shutoff or damage the system.

- ▶ Do not stow any objects under the front passenger seat.
- ▶ When the front passenger seat is occupied, ensure that no objects have become trapped beneath the front passenger seat.


! NOTE

Damage to the seats when adjusting

The seats may be damaged by objects when adjusting the seats.

- ▶ When adjusting the seats, make sure that there are no objects in the footwell, under or behind the seats.


The switches for adjusting the seats do not move. You will therefore receive no direct feedback on the switch while pressing it. Feedback is provided only by the movement of the seat.

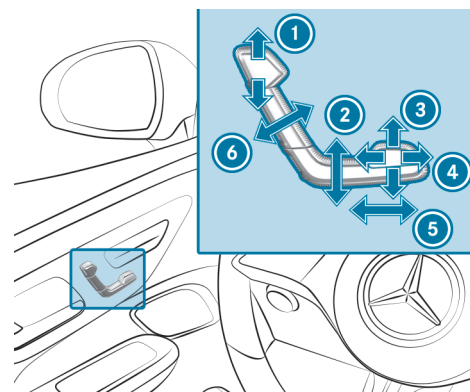

- ① Head restraint height
- ② Seat height
- ③ Seat cushion inclination
- ④ Seat cushion length
- ⑤ Seat fore-and-aft position
- ⑥ Seat backrest inclination


- ▶ Save the settings with the memory function (→ page 228).

i The head restraint height will be adjusted automatically when you adjust the seat height or the seat fore-and-aft position.





Adjusting the 4-way lumbar support

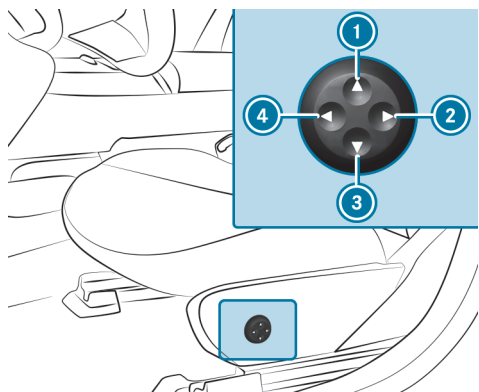

- ① Higher
- ② Softer
- ③ Lower
- ④ Firmer

► Use buttons ① to ④ to adjust the contour of the backrest.

Head restraints

ADJUSTING THE FRONT SEAT HEAD RESTRAINTS MANUALLY



WARNING

Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.



WARNING

Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.


- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.






Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

ADJUSTING MANUALLY

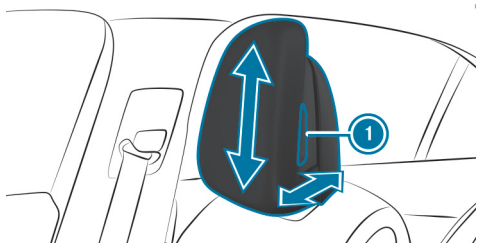

- ▶ Take hold of the head restraint on both sides and press release knob ①. The head restraint will be unlocked in all directions of movement simultaneously.
- ▶ **To raise or lower:** pull the head restraint upwards or push it downwards.
- ▶ **To move forwards or backwards:** pull the head restraint forwards or push it backwards.
- ▶ Let go of release knob ①.

ADJUSTING PARTIALLY ELECTRICALLY

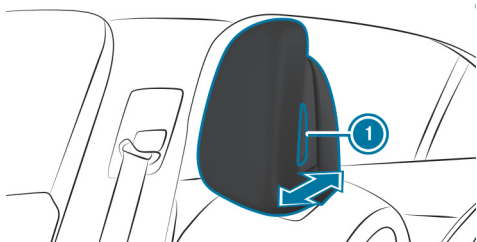

- ▶ **To raise or lower:** adjust the head restraint using the buttons on the door operating unit (→ page 211).

- ▶ **To move forwards or backwards:** take hold of the head restraint on both sides and press release knob ①.
- ▶ Pull the headrest forwards or push it backwards.
- ▶ Let go of release knob ①.

ADJUSTING THE HEAD RESTRAINTS OF THE REAR SEATS MANUALLY




WARNING

Risk of injury due to incorrectly adjusted head restraints

If head restraints have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or sudden braking.

- ▶ Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

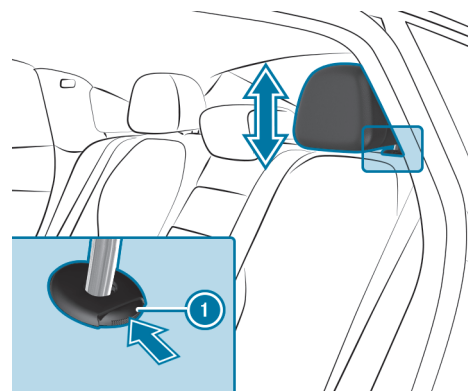



- ▶ **To set the center head restraint in the first position:** pull the head restraint up until it engages.
- ▶ **To raise:** push release knob ① in the direction of the arrow and pull the head restraint up until it engages.
- ▶ **To lower:** press release knob ① in the direction of the arrow and push the head restraint down until it engages.

INSTALLING/REMOVING THE REAR SEAT HEAD RESTRAINTS

⚠ WARNING


Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- ▶ Always drive with the head restraints installed.
- ▶ Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.


REMOVING

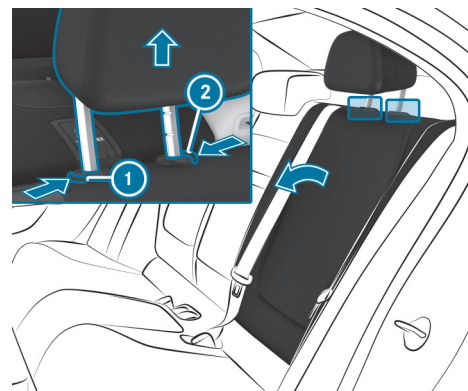

- ▶ Release the rear seat backrest and fold it forwards slightly (→ page 44).
- ▶ Press release knob ② and pull the head restraint upwards as far as it will go.
Release knob ① will extend.
- ▶ Push both release knobs ① and ② at the same time in the direction of the arrow and pull out the head restraint.
- ▶ Fold the rear seat backrest back until it engages.

INSTALLING

- ▶ Release the rear seat backrest and fold it forwards slightly (→ page 44).
- ▶ Insert the head restraint such that the notches on the bar are on the left when viewed in the direction of travel.
- ▶ Push the head restraint down until it engages.
- ▶ Fold the rear seat backrest back until it engages.





Configuring the seat settings

Multimedia system:

  >> Comfort >> Seat

ADJUSTING THE AIR CUSHIONS

- ▶ On the corresponding menu, adjust the air cushions for [Lumbar](#), [Shoulders](#) or [Side Bolsters](#).

SETTING THE SEAT HEATING BALANCE

- ▶ Select [Heating Settings](#).
- ▶ Select [Seat Heating Balance](#).
- ▶ Adjust the heat distribution for the desired seat.

 The seat heating balance can be set in the [Seat Climate Control](#) menu in the rear passenger compartment.

COUPLING NECK WARMER TO SEAT HEATING

- ▶ Select [Switch On Headroom Heating](#).
- ▶ Switch the function for the desired seat on or off.
If the function is active, the neck warmer of the additional cushion has been coupled to the seat heating.

Setting automatic seat adjustment

WARNING

Risk of becoming trapped during adjustment of the driver's seat after calling up a driver profile

Selecting a user profile may trigger an adjustment of the driver's seat to the position saved under the user profile. You or other vehicle occupants could be injured in the process.

- ▶ Make sure that when the position of driver's seat is being adjusted using the multimedia system, no people or body parts are in the seat's range of movement.

If there is a risk of someone becoming trapped, immediately stop the adjustment process by:

- ▶ a) Tapping the warning message on the central display.

or


- ▶ b) Pressing a position button of the memory function or a seat adjustment switch in the driver's door.
The adjustment process is stopped.

Multimedia system:

  >> Comfort >> Seat >> [Automatic Seat Positioning](#)

MANUALLY ADJUSTING DRIVER'S SEAT AND STEERING WHEEL POSITION TO BODY SIZE

The vehicle will calculate suitable driver's seat and steering wheel positions on the basis of the driver's body size and set them directly.





- ▶ **To set the unit of measurement:** select [cm](#) or [ft/in.](#)

- ▶ Set the size using the scale.

- ▶ Select [Start Positioning](#).

The driver's seat and steering wheel positions will be adjusted to the body size that has been set.

-  You can also configure these settings via the Mercedes-Benz user account for your user profile. By synchronizing the profiles in the vehicle and the Mercedes-Benz connect profiles, you can adopt these settings for your vehicle. Further information about synchronizing user profiles (→ page 504).

-  If the driver's seat and steering wheel positions calculated by the vehicle are not practical or comfortable, they can be manually adapted at any time via the control buttons. The outside mirrors are not set via this function. Instead, they have to be set manually via the operating switches.

Overview of massage programs

- [Classic Massage](#): Relaxing back massage program.
- [Mobilizing Massage](#): Mobilizing Massage program with upward-moving massage waves. Can promote slower, deeper respiration. This can improve the supply of oxygen to cells and the brain.
- [Activating Massage](#): Invigorating massage program with upward-moving massage waves.

- [Hot Relaxing Back](#): Based on hot stone massage, the program combines heat and massage. It starts by massaging the back. In addition, you will start to notice warm pressure points, beginning in the pelvic area.
- [Hot Relaxing Shoulders](#): Combination of heat and massage. It starts by massaging the shoulders. In addition, you will start to notice warm pressure points, beginning in the pelvic area.
- [Wave Massage](#): Regenerating massage program via soothing waves across the back and in the seat cushion.
- [Deep Waves](#): Wave-like movements in the cushion can promote blood flow and metabolic processes in the lower back and legs.
- [Deep Workout](#): Connect the [Workout, Backrest](#) to the [Workout, Cushion](#). The vibration massage in the cushion intensify the effectiveness of tensing and releasing muscles when you tense against the pressure point. This supports metabolic processes and blood flow in the buttocks and legs.
- [Workout, Backrest](#) and [Workout, Cushion](#): These programs require your cooperation. Alternating between tensing and releasing helps to improve blood flow to your muscles. Press against a pressure point as soon as you feel it to activate back, abdominal and leg muscles.

Selecting the massage program for the front seats

Multimedia system:



- ▶ Select [Massage](#).
- ▶ Select a massage program (→ page 218).
- ▶ Start the program for the desired seat .



- ▶ **To set the massage intensity:** switch **Intensive** on or off .

- ▶ **To stop the massage:** select .

 The availability of this function is dependent on the vehicle's equipment.

Resetting seat settings

Multimedia system:



- ▶ Select **Reset**.
- ▶ Select  for the desired seat.
The settings for the selected seat will be reset.

Switching the seat heating on/off

WARNING

Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

- ▶ Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it has been switched on repeatedly.

NOTE


Damage to the seats caused by objects or documents when the seat heating is switched on

When the seat heating is switched on, overheating may occur due to objects or documents placed on the seats, e.g. seat cushions or child seats. This could cause damage to the seat surface.

- ▶ Make sure that no objects or documents are on the seats when the seat heating is switched on.

Requirements

- The power supply is switched on.

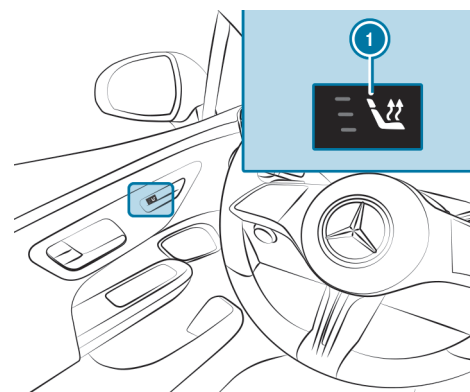

Seat heating in the door operating unit in the cockpit (example)



- ▶ Press button ① for the respective seat repeatedly until the desired heating level is reached.

Depending on the heating level, up to three indicator lamps will light up. If all indicator lamps are off, the seat heating is switched off.


- ① The seat heating will automatically switch down from the three heating levels after around 8, 10 and 20 minutes until the seat heating is switched off.

- ① If you switch the power supply off and on again within 20 minutes, the previous setting of the seat heating for the driver's seat will remain active.

Switching the seat ventilation on/off

Requirements

- The power supply is switched on.

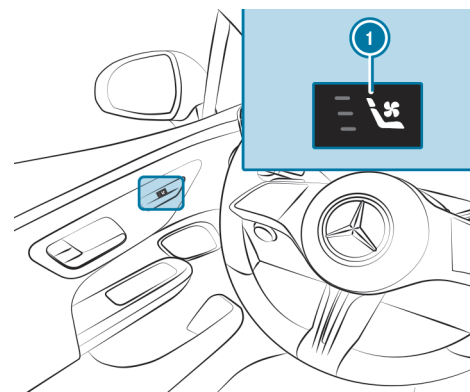

Seat ventilation in the door operating unit in the cockpit (example)

- ▶ Press button ① for the respective seat repeatedly until the desired blower setting is reached.
Depending on the blower setting, up to three indicator lamps will light up. If all indicator lamps are off, the seat ventilation is switched off.

- ① If you switch the power supply off and on again within 20 minutes, the previous seat ventilation setting for the driver's seat will remain active.





< Steering wheel

Adjusting the steering wheel manually

⚠️ WARNING

Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:


- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

⚠️ WARNING

Risk of entrapment for children when adjusting the steering wheel
Children could injure themselves if they adjust the steering wheel.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

UNLOCKING

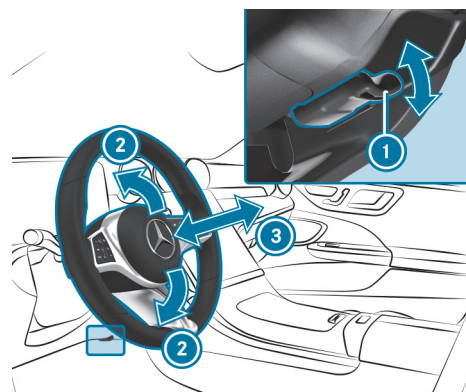


- ▶ Fold release lever ① down as far as it will go.
- ▶ Adjust height ② and distance ③ to the steering wheel.





LOCKING

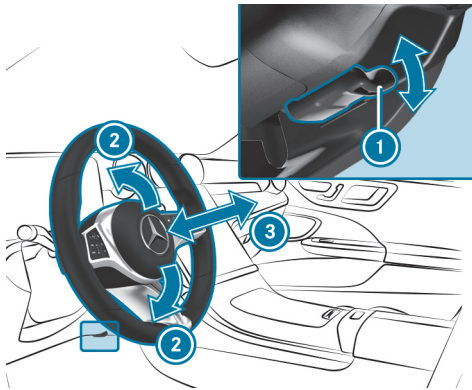

- ▶ Fold release lever ① up as far as it will go.
- ▶ Check and make sure that the steering column is locked by moving the steering wheel.

Adjusting the steering wheel electrically



WARNING

Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
 - If you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.




WARNING

Risk of entrapment for children when adjusting the steering wheel
Children could injure themselves if they adjust the steering wheel.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

The steering wheel can be adjusted when the power supply is disconnected.



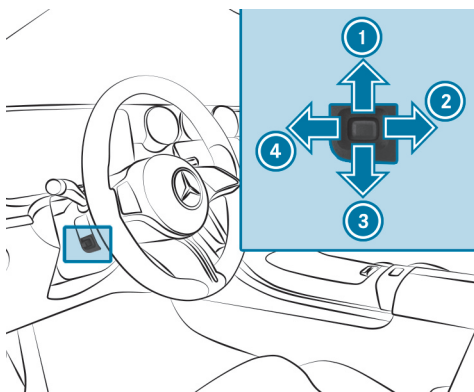

- ① To move up
- ② To move back
- ③ To move down
- ④ To move forward

► Save the settings with the memory function (→ page 228).

► Tap on [Switch On Steering Wheel Heater](#).

The steering wheel heater will be decoupled from the seat heating.

① The steering wheel heater can also be deactivated via the MBUX voice assistant.

Decoupling the steering wheel heater from the seat heating

Requirements:

- The power supply or the vehicle has been switched on.
- The steering wheel heater and the seat heating are linked.

Multimedia system:

→ [Home](#) ► [Comfort](#) ► [Seat](#) ► [Heating Settings](#)

The function is active by default and the steering wheel heater will automatically be activated and deactivated when the seat heating is switched on and off.





< Easy entry and exit feature

Using the easy entry and exit feature

WARNING

Risk of accident when pulling away during the adjustment process of the easy entry and exit feature

You could lose control of the vehicle.

- ▶ Always wait until the adjustment process is complete before driving off.

WARNING

Risk of becoming trapped when adjusting the easy entry and exit feature

You and other vehicle occupants, particularly children, may become trapped.

- ▶ Make sure that no one has any part of their body within the range of movement of the steering wheel and driver's seat.

If there is a risk of becoming trapped by the steering wheel:

- ▶ Move the steering wheel adjustment lever.
The adjustment process is stopped.

If there is a risk of becoming trapped by the driver's seat:

- ▶ Press the switch for seat adjustment.
The adjustment process is stopped.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

Vehicles with memory function: you can stop the adjustment process by pressing one of the memory function position switches.





WARNING

Risk of becoming trapped if children activate the easy entry and exit feature

Children could become trapped if they activate the easy entry and exit feature, particularly when unattended.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

In order to use the easy entry and exit feature, the automatic seat adjustment function must have been switched on (→ page 217).

WHEN THE EASY ENTRY AND EXIT FEATURE IS ACTIVE, THE STEERING WHEEL AND DRIVER'S SEAT WILL MOVE AS FOLLOWS:

- The steering wheel will move upwards.
- The driver's seat will move forward or backward to a position suitable for getting in or out of the vehicle.

THIS WILL OCCUR IN THE FOLLOWING SITUATIONS:

- You switch off the vehicle when the driver's door is open.
- You open the driver's door when the vehicle is switched off.

 The steering wheel will then move upwards only if it is not already as high as it will go. The driver's seat will move forwards or backwards only if it is not already in the ideal position for getting in or out of the vehicle.

THE STEERING WHEEL AND THE DRIVER'S SEAT WILL MOVE BACK TO THE LAST DRIVING POSITION IN THE FOLLOWING CASES:

- You switch the power supply or the vehicle on when the driver's door is closed.
- You close the driver's door when the vehicle is switched on.

THE LAST DRIVE POSITION WILL BE SAVED WHEN:

- If you switch off the vehicle.
- **Vehicles with memory function:** you call up the seat settings via the memory function.
- **Vehicles with memory function:** you save the seat settings via the memory function.

Vehicles with memory function: press one of the memory function position switches to stop the adjustment process.

Setting the easy entry and exit feature

Requirements:

- The automatic seat adjustment has been activated (→ page 217).
- The power supply or the vehicle has been switched on.

Multimedia system:

   Settings  Vehicle  Comfort
 Easy Entry And Exit Feature

SETTING THE EASY ENTRY AND EXIT FEATURE

- ▶ Select **Steering Wheel & Seat**, **Steering Wheel Only** or **Off**.



 If you are using a custom user profile, this information will be used for the easy entry and exit feature. This will cause the driver's seat and steering wheel to move into the correct position automatically (→ page 501).





< Memory function

The memory function

WARNING

Risk of an accident if the memory function is used while driving
If you use the memory function on the driver's side while driving, you could lose control of the vehicle as a result of the adjustments being made.

- ▶ Only use the memory function on the driver's side when the vehicle is stationary.

WARNING

Risk of entrapment when adjusting the seat with the memory function

When the memory function adjusts the seat, you and other vehicle occupants – particularly children – could become trapped.

- ▶ During the adjusting process of the memory function, ensure that no body parts are in the area of movement of the seat or the steering wheel.
- ▶ If someone becomes trapped, press a preset position button or seat adjustment switch immediately.
The adjustment process is stopped.

WARNING

Danger of entrapment when memory function is activated by children

When children activate the memory function, they can get trapped, especially if they are unsupervised.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

This also applies to the Digital Vehicle Key.

You can use the memory function when the vehicle is switched off. Seat adjustments for up to three people can be stored and called up using the memory function.

YOU CAN SAVE THE FOLLOWING SETTINGS FOR THE FRONT SEAT:

- Seat, backrest, head restraint position and contour of the seat backrest in the lumbar region
- Seat heating: distribution of the heated sections of the seat cushion and seat backrest
- Driver's side: steering wheel position and outside mirror positions on the driver's and front passenger sides
- Head-up display





Operating the memory function

⚠️ WARNING

Risk of an accident if the memory function is used while driving
If you use the memory function on the driver's side while driving, you could lose control of the vehicle as a result of the adjustments being made.

- ▶ Only use the memory function on the driver's side when the vehicle is stationary.

⚠️ WARNING

Risk of entrapment when adjusting the seat with the memory function
When the memory function adjusts the seat, you and other vehicle occupants – particularly children – could become trapped.

- ▶ During the adjusting process of the memory function, ensure that no body parts are in the area of movement of the seat or the steering wheel.
- ▶ If someone becomes trapped, press a preset position button or seat adjustment switch immediately.
The adjustment process is stopped.

⚠️ WARNING

Danger of entrapment when memory function is activated by children


When children activate the memory function, they can get trapped, especially if they are unsupervised.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

This also applies to the Digital Vehicle Key.

You can use the memory function when the vehicle is switched off.

STORING

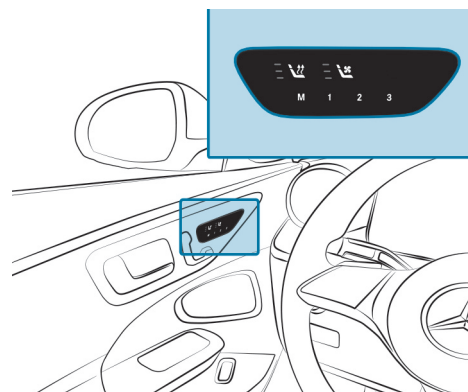


- ▶ Set the front seat, the steering wheel, the head-up display and the outside mirror to the desired position.
- ▶ Press the **M** button and then release it.





- ▶ Press one of the preset position buttons **1**, **2** or **3** within three seconds.

An acoustic signal sounds. The settings are stored.

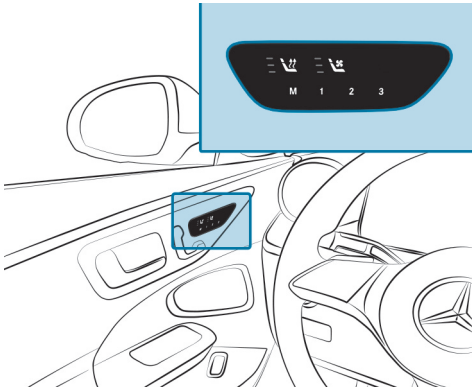

- ▶ **To call up:** press the preset position button **1**, **2** or **3**.
The seat will be moved to the stored position. After releasing the button, the front seat, outside mirror, head-up display and steering column will continue to move into the stored position automatically.

You can watch an animation on this topic via the following link:





< Stowage areas

Notes on loading the vehicle

Objects in the deployment area of an air bag may prevent the air bag from functioning correctly. Observe the notes on air bags (→ page 139).

WARNING

Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around.
- ▶ Before the journey, secure objects, luggage or loads against slipping or tipping over.

WARNING

Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone receptacles cannot always retain all objects within.

There is a risk of injury, particularly in the event of sudden braking or abrupt changes in direction.

- ▶ Always store objects such that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- ▶ Close the lockable storage spaces before starting a journey.
- ▶ Stow and secure objects that are heavy, hard, pointed, sharp-edged, fragile or too large in the cargo compartment.



 **WARNING**

Risk of accident due to objects in the driver's and front-passenger footwell

Objects in the driver's and front-passenger footwell may impede pedal travel or block a depressed pedal.

This jeopardizes the operating- and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's or front-passenger footwell.
- ▶ Always ensure that the pedals have sufficient free space.
- ▶ Always install the floor mats securely and as prescribed.
- ▶ Do not use loose floor mats and do not place floor mats on top of one another.

Vehicles with automatic front passenger air bag shut-off: Objects trapped under the front passenger seat may interfere with the function of automatic front passenger air bag shutoff or damage the system. Therefore please observe the notes on the function of automatic front passenger air bag shutoff (→ page 127).

 NOTE

Damage to the vehicle caused by spilled liquids

If liquids are spilled in the vehicle, parts of the vehicle may be damaged.

- ▶ Always securely close containers containing liquids that you have brought with you.
- ▶ Clean the vehicle as soon as possible if liquids are spilled.
- ▶ If larger quantities of liquids are spilled, have the vehicle checked in a qualified specialist workshop.

 NOTE

Damage to the cargo floor caused by an unevenly distributed load or an abrupt application of load.

The cargo floor may be damaged by an unevenly distributed load or an abrupt application of load.

- ▶ Distribute the load evenly.
- ▶ Drive carefully when the vehicle is laden. Avoid abrupt starts, braking and steering as well as rapid cornering.

 Leather is a natural product. It exhibits natural surface characteristics, such as differences in structure, marks caused by growth and injury or subtle color differences. These surface characteristics are particular to leather, and are not material defects. Leather is also subject to a natural aging process, which changes the surface characteristics.





THE HANDLING CHARACTERISTICS OF YOUR VEHICLE ARE DEPENDENT ON THE DISTRIBUTION OF THE LOAD WITHIN THE VEHICLE. YOU SHOULD BEAR THE FOLLOWING IN MIND WHEN LOADING THE VEHICLE:

- Never allow the payload – including occupants – to exceed the gross vehicle weight rating or the gross axle weight rating for the vehicle. The values are specified on the vehicle identification plate on the vehicle's B-pillar.
- The load must not protrude above the upper edge of the seat backrests.
- Always place the load behind unoccupied seats if possible.
- Secure the load using the cargo tie-down rings and distribute the tension evenly (→ page 47).

NOTES ON CARRYING A ROOF LOAD:

- Distribute the roof load and vehicle load evenly, and place heavy objects at the bottom. Also observe the notes on loading the vehicle.
- Drive with care. Avoid abrupt starts, braking and steering maneuvers as well as fast cornering.
- When carrying a roof load or when the vehicle is fully loaded or occupied, select drive program **E** or **C**. These are configured for good stability (→ page 318).

 Further information on storage compartments and stowage facilities can be found in the Digital Operator's Manual.

Stowage spaces in the vehicle interior

OVERVIEW OF THE FRONT STORAGE COMPARTMENTS



WARNING

Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- ▶ Close the lockable storage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Observe the notes on loading the vehicle.





⚠ WARNING

Risk of accident due to objects in the driver's and front-passenger footwell

Objects in the driver's and front-passenger footwell may impede pedal travel or block a depressed pedal.


This jeopardizes the operating- and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's or front-passenger footwell.
- ▶ Always ensure that the pedals have sufficient free space.
- ▶ Always install the floor mats securely and as prescribed.
- ▶ Do not use loose floor mats and do not place floor mats on top of one another.

- ④ Stowage tray below the central display of the multimedia system with USB ports
- ⑤ Glove box

i The rubber mat in the storage compartment in front center console ③ can be removed for cleaning with clean, lukewarm water. Observe the notes on caring for the interior (→ page 668).

i Use the rubber strap to securely store objects in the stowage tray under the central display.

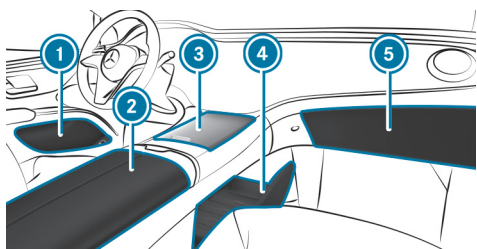

- ① Stowage spaces in the doors
- ② Stowage and telephone compartment beneath the armrest with multimedia and USB ports as well as stowage space, e.g. for an MP3 player
- ③ Storage compartment in the front center console, with cup holders, USB ports and charging module for wireless charging of mobile phones depending on the vehicle version





OPENING AND CLOSING THE STORAGE COMPARTMENT IN THE FRONT CENTER CONSOLE

⚠ WARNING


Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- ▶ Close the lockable storage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Observe the notes on loading the vehicle.

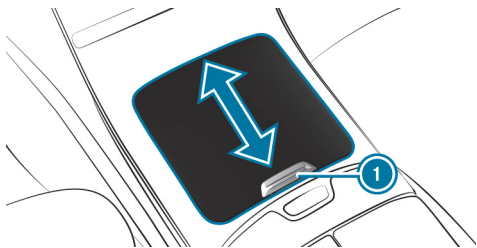

- ▶ **To open:** slide the cover of the storage compartment in the front center console all the way forwards in the direction of the arrow using handle ①.
- ▶ **To close:** briefly push handle ① of the open cover of the storage compartment in the front center console forwards.
The cover will automatically close the storage compartment in the front center console.

OPENING AND CLOSING THE STORAGE COMPARTMENT IN THE FRONT ARMREST

⚠ WARNING

Risk of injury due to objects being stowed incorrectly


If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- ▶ Close the lockable storage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Observe the notes on loading the vehicle.



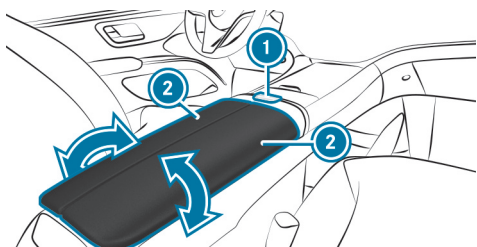

- ▶ **To open:** press release catch ① downwards.
The covers of the storage compartment in front armrest ② will open automatically in the direction of the arrow.
- ▶ **To close:** move the covers of the storage compartment in front armrest ② inwards in the direction of the arrow.
The storage compartment in the front armrest is now closed.

OPENING AND CLOSING THE GLOVE BOX



WARNING

Risk of injury due to objects being stowed incorrectly


If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- ▶ Close the lockable storage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Observe the notes on loading the vehicle.



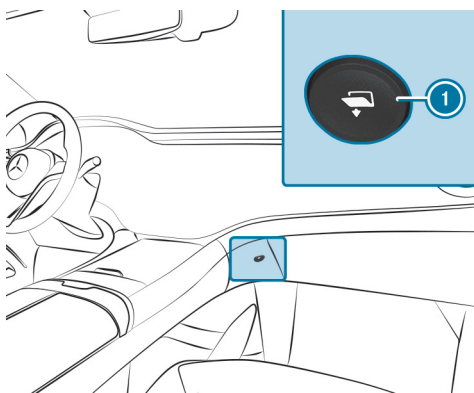

- ▶ **To open:** press button ①.
The glove box will open.
- ▶ **To close:** fold the glove box upwards.
The glove box will close.

Through-loading feature in the rear bench seat (EASY-PACK Quickfold)

FOLDING THE REAR SEAT BACKRESTS FORWARD

- ⚠ WARNING**
Risk of becoming trapped when adjusting the seats
When you adjust a seat, you may trap yourself or a vehicle occupant.
- ▶ When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

⚠ WARNING

Risk of an accident because the seat backrest is not engaged
The seat backrest may fold forwards.

THERE IS A RISK OF THE FOLLOWING, IN PARTICULAR:

- The vehicle occupant may be pressed against the seat belt. The seat belt cannot protect as intended and could cause additional injury.
- A child restraint system is no longer properly supported or properly positioned and may no longer fulfill its function as intended.
- The seat backrest cannot restrain objects or goods in the trunk or cargo compartment.

ALWAYS ENSURE THAT THE SEAT BACKREST IS ENGAGED, ESPECIALLY:

- After the seat has been adjusted.
- After the cargo compartment enlargement has been folded forwards

Make sure that the red marking of the lock verification indicator is no longer visible. Otherwise, the seat backrest will not be locked.

Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly. Particular attention must be paid to children.

Requirements:

- The rear seat backrest head restraints are fully inserted.
- Vehicles with a folding rear armrest: the rear armrest has been folded up.






FOLDING THE REAR OUTER SEAT BACKRESTS FORWARD

You can fold the center and right seat backrests forwards separately.


The left seat backrest can be folded forwards only together with the center seat backrest.

If you no longer require the folded-down rear seat backrest as a load area, fold the backrest back into place.

- ▶ Ensure that the center seat backrest is in an upright position and locked to the left seat backrest (→ page 239).

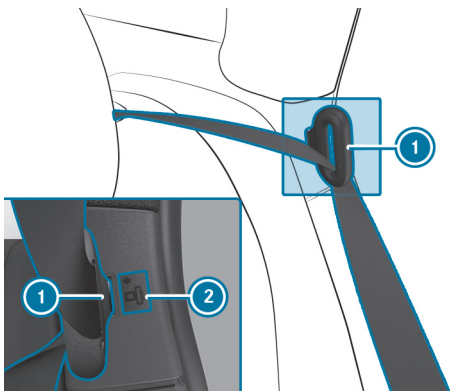

- ▶ Press the seat belt tongue of seat belt ① into marked position ②.
- ▶ Move the driver's or front passenger seat forwards, if necessary.

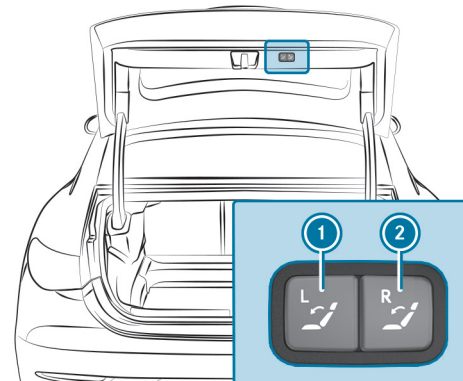

- ▶ **To fold the left or right seat backrest forwards:** briefly press button ① or ②.

The rear seat will fold forwards. The center seat backrest will fold forwards together with the left seat backrest.


OBSERVE THE FOLLOWING RECOMMENDATIONS:

- If you wish to fold only one of the outer seat backrests forwards, it is recommended that you fold the right seat backrest forwards.
- If you wish to fold one of the outer seat backrests forwards together with the center seat backrest, it is recommended that you fold the left and center seat backrests forwards.

FOLDING THE CENTER REAR SEAT BACKREST FORWARDS SEPARATELY

If you no longer require the folded-down seat backrest as a loading area, fold the backrest back into place.



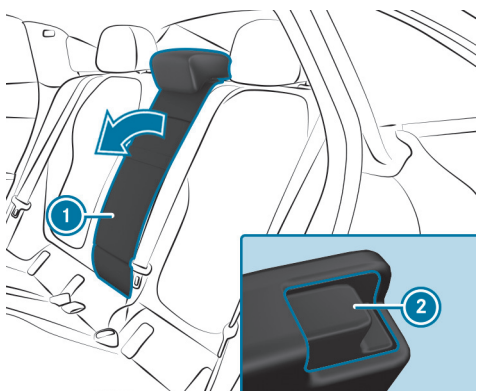

- ▶ Press release catch ②.
- ▶ Fold seat backrest ① forwards.

FOLDING BACK THE REAR SEAT BACKREST

⚠ WARNING

Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

- ▶ When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

⚠ WARNING

Risk of an accident because the seat backrest is not engaged
The seat backrest may fold forwards.

THERE IS A RISK OF THE FOLLOWING, IN PARTICULAR:


- The vehicle occupant may be pressed against the seat belt. The seat belt cannot protect as intended and could cause additional injury.
- A child restraint system is no longer properly supported or properly positioned and may no longer fulfill its function as intended.
- The seat backrest cannot restrain objects or goods in the trunk or cargo compartment.

ALWAYS ENSURE THAT THE SEAT BACKREST IS ENGAGED, ESPECIALLY:

- After the seat has been adjusted.
- After the cargo compartment enlargement has been folded forwards

Make sure that the red marking of the lock verification indicator is no longer visible. Otherwise, the seat backrest will not be locked.

Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly. Particular attention must be paid to children.




**! NOTE**

Damage caused by trapping the seat belt when folding back the seat backrest

The seat belt could become trapped and thus damaged when the seat backrest is folded back.

- ▶ Make sure that the seat belt is not trapped when folding back the seat backrest.

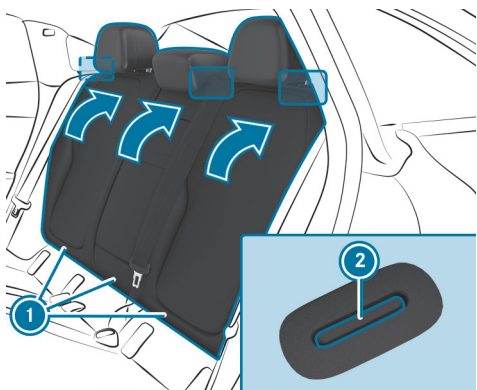

- ▶ Move the driver's or front passenger seat forwards, if necessary.
- ▶ Swivel seat backrest ① back until it engages.
If the seat backrest is not engaged and locked in place, red lock verification indicator ② will be visible.

LOCKING AND RELEASING THE RELEASE CATCH OF THE CENTER REAR SEAT BACKREST**⚠ WARNING**

Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

- ▶ When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

⚠ WARNING

Risk of an accident because the seat backrest is not engaged


The seat backrest may fold forwards.

THERE IS A RISK OF THE FOLLOWING, IN PARTICULAR:

- The vehicle occupant may be pressed against the seat belt. The seat belt cannot protect as intended and could cause additional injury.
- A child restraint system is no longer properly supported or properly positioned and may no longer fulfill its function as intended.
- The seat backrest cannot restrain objects or goods in the trunk or cargo compartment.

ALWAYS ENSURE THAT THE SEAT BACKREST IS ENGAGED, ESPECIALLY:


- After the seat has been adjusted.
- After the cargo compartment enlargement has been folded forwards





Make sure that the red marking of the lock verification indicator is no longer visible. Otherwise, the seat backrest is not locked.


Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly. Particular attention must be paid to children. You can lock the center seat backrest release catch if you want to secure the trunk against unauthorized access. The center seat backrest can then be folded forwards only together with the left seat backrest.

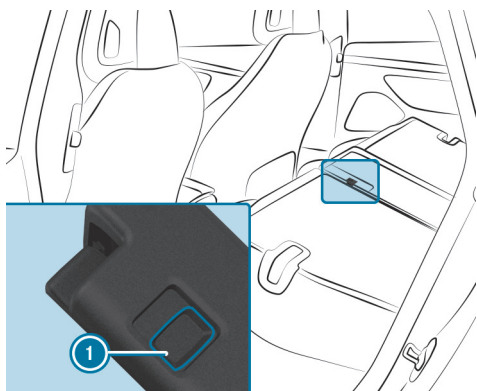

► **To lock or unlock:** slide catch ① upwards or downwards.

Overview of the tie-down eyes


Observe the notes on loading the vehicle (→ page 230).

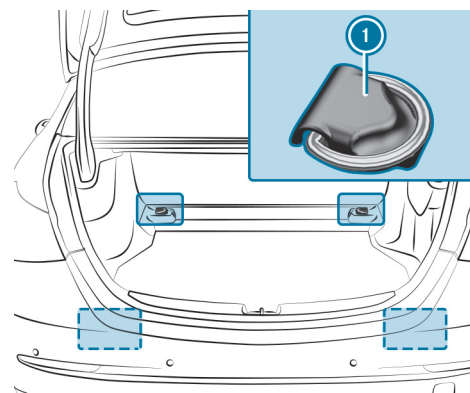

① Tie-down eyes

❗ Four tie-down eyes are available only in vehicles equipped with the through-loading feature in the rear bench seat (EASY-PACK Quickfold).

Opening the stowage space under the trunk floor

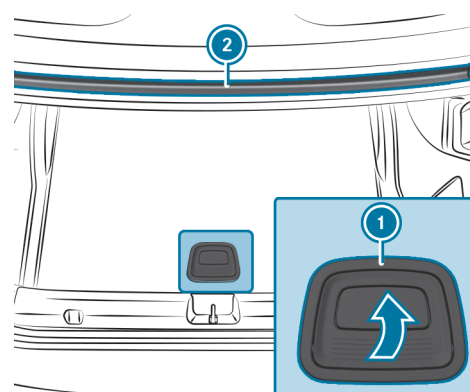



- Pull handle ① up and hook it into drip rail ②.

Attaching a roof luggage rack

WARNING

Risk of accident due to exceeding the maximum roof load

The vehicle center of gravity and the usual driving characteristics as well as the steering and braking characteristics alter.

If you exceed the maximum roof load, the driving characteristics, as well as steering and braking, will be greatly impaired.

- Never exceed the maximum roof load and adjust your driving style.

Vehicle-specific weight information can be found on the vehicle identification plate.

NOTE

Vehicle damage due to failure to observe the maximum permissible clearance height

If the vehicle height exceeds the maximum permissible clearance height, the roof and other vehicle parts may be damaged.

- Please observe the maximum clearance height indicated.
- If the vehicle exceeds the permissible clearance height, do not drive in.
- Take the modified vehicle height into account in the case of roof superstructures or other carrier systems.

NOTE

Vehicle damage from non-approved roof luggage racks

The vehicle could be damaged by roof luggage racks that have not been tested and approved by Mercedes-Benz.

- Only use roof luggage racks tested and approved for Mercedes-Benz.
- Depending on the vehicle equipment, ensure that when the roof luggage rack is installed, the tailgate can be fully opened.
- Position the load on the roof luggage rack in such a way that the vehicle will not sustain damage even when it is in motion.


NOTE

Damage to panorama roof with power tilt/sliding panel caused by roof luggage rack

If the panorama roof with power tilt/sliding panel is opened when a roof luggage rack is installed, the panorama roof with power tilt/sliding panel may be damaged by the roof luggage rack.

- Do not open the panorama roof with power tilt/sliding panel if a roof luggage rack is installed.

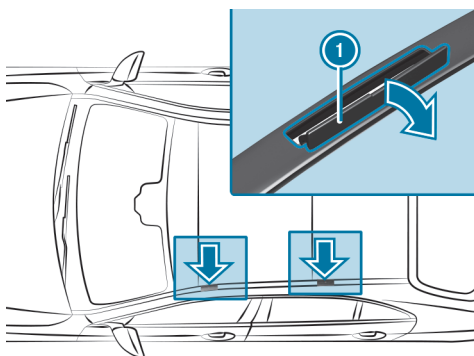

**! NOTE**

Damage to the covers

The covers may be damaged and scratched when being opened.

- ▶ Do not use metallic or hard objects.

- ▶ Fold covers ① carefully upwards in the direction of the arrow.
- ▶ Secure the roof luggage rack to the fastening points beneath covers ①.
- ▶ Comply with the installation instructions of the roof luggage rack manufacturer.
- ▶ Secure the load on the roof luggage rack.





< Cup holder

Installing the cup holder in or removing it from the center console

WARNING

- Risk of accident or injury when using the cup holder while the vehicle is moving

The cup holder cannot secure containers while the vehicle is moving.

If you use a cup holder while the vehicle is moving, the container may be flung around and liquids may be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

- ▶ Only use the cup holder when the vehicle is stationary.
- ▶ Only use the cup holder for containers of the right size.
- ▶ Close the container, particularly if the liquid is hot.

WARNING

Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.


There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- ▶ Close the lockable storage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Requirements:


- For installation: the locking catch is pushed in the direction of the cup holder.

Observe the notes on loading the vehicle (→ page 230).






INSTALLING

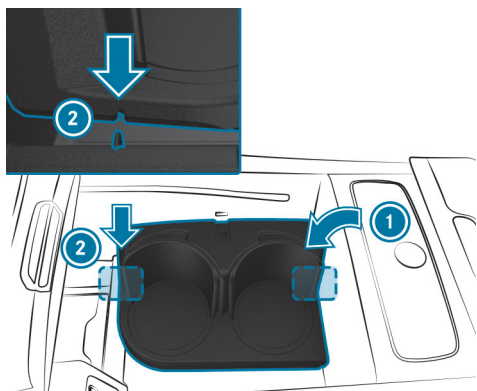


- ▶ Insert cup holder housing ❶ into the stowage compartment at a slight angle.
- ▶ Place cup holder housing ❶ in the stowage compartment, aligning the recesses with the two hubs ❷ so that they fit.
- ▶ Push the cup holder down.

LOCKING

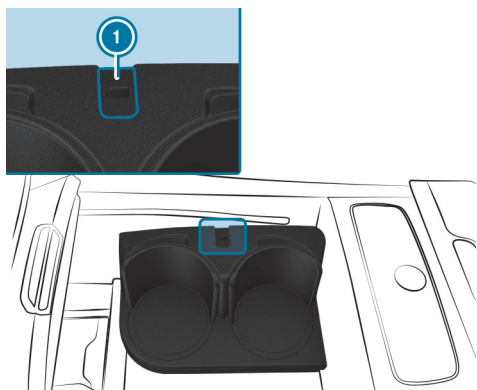

- ▶ Slide locking catch ❶ toward the side wall of the center console. The cup holder will be locked.

REMOVING

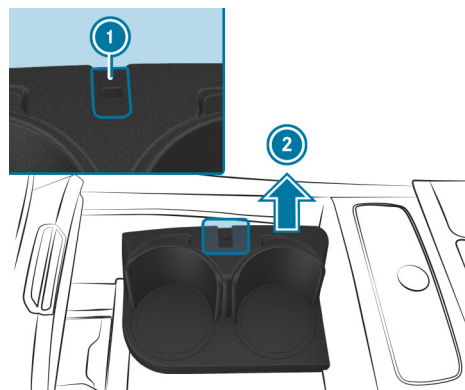


- ▶ Slide locking catch ❶ toward the cup holder. The cup holder will be unlocked.
- ▶ First pull the cup holder up in the direction of arrow ❷ and then tilt it slightly to remove it from the stowage compartment.





Using the cup holder

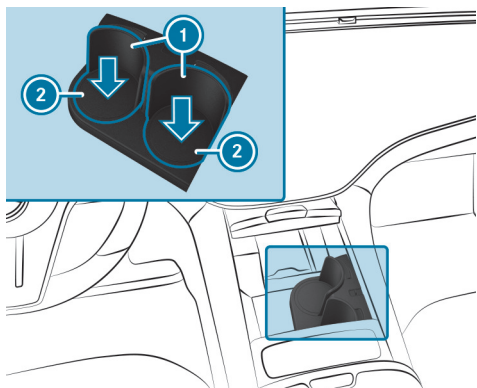

- ▶ Place a beverage container in the cup holder.
Bottom ② of the cup holder will lower automatically and side walls ① of the cup holder will move forward automatically.

i The cup holder will automatically adjust to the size of the container placed in it.


THE SIDE WALLS OF THE CUP HOLDER CAN ALSO BE ACTIVATED MANUALLY IN DIFFERENT WAYS:

- Press the bottom down slightly with the beverage container.
- Press on the grooved surface on the side wall of the cup holder.


i Check whether the beverage container is held firmly by the cup holder. Some beverage containers will not be secured adequately in the cup holder due to their shape or size.

ORIGINAL POSITION

When the cup holder is not in use, the side walls of the cup holder can be retracted manually. The bracket arms of the cup holder will automatically be retracted as well, and the cup holder's holding function will then no longer be available.

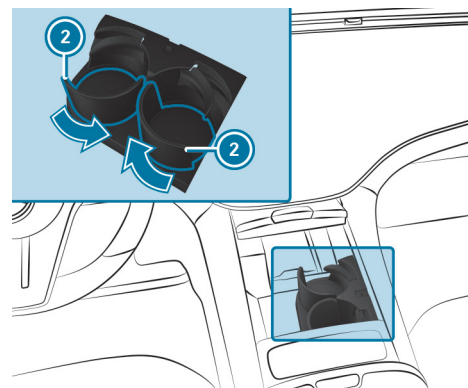

- ▶ Manually push back the side walls of cup holder ② in the direction of the arrow.





Opening or closing the cup holder and small stowage compartment in the rear armrest

⚠️ WARNING

- Risk of accident or injury when using the cup holder while the vehicle is moving

The cup holder cannot secure containers while the vehicle is moving.

If you use a cup holder while the vehicle is moving, the container may be flung around and liquids may be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

- ▶ Only use the cup holder when the vehicle is stationary.
- ▶ Only use the cup holder for containers of the right size.
- ▶ Close the container, particularly if the liquid is hot.

ⓘ NOTE

Damage to the rear armrest due to body weight

When folded out, the rear armrest can be damaged by body weight.

- ▶ Do not sit or support yourself on the rear seat armrest.


ⓘ NOTE

Damage to the cup holder

The cup holder can be damaged when folding back the rear armrest. When open, the cup holder can be damaged by body weight.

- ▶ The rear armrest can only be folded back when the cup holder is closed.
- ▶ Do not sit or support yourself on the cup holder when it is open.

OPENING THE MOBILE PHONE HOLDER IN THE REAR ARMREST

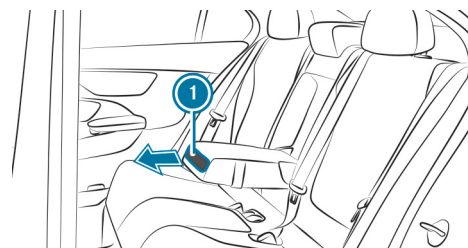

- ▶ Press cover trim ❶ once.
The mobile phone holder will open in the direction of the arrow.
- ▶ Place the mobile phone in or remove it from the holder.

CLOSING THE MOBILE PHONE HOLDER IN THE REAR ARMREST

- ▶ Press cover trim ❶.
The mobile phone holder and the cup holder will both open.
- ▶ Press cover trim ❶ a second time.
The mobile phone holder will be closed.






❗ The mobile phone holder is designed for two mobile phones or one tablet. You can also charge the devices in the holder by inserting the charging cable into the devices through the opening on the underside of the holder.

❗ Observe the notes on loading the vehicle (→ page 230).

OPENING OR CLOSING THE CUP HOLDERS IN THE REAR ARMREST

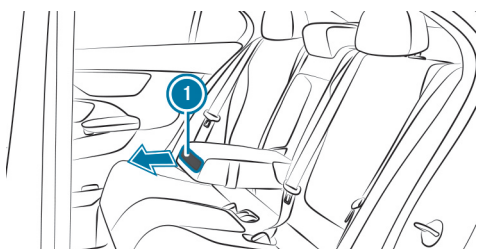

- ▶ **To open:** press cover trim ❶ twice.
The cup holder will open in the direction of the arrow.
- ▶ Place a container in or remove a container from the cup holder.
- ▶ **To close:** slide the cup holder back into the rear armrest.






< Sockets

Using the 12 V socket

Requirements

- Only connect devices up to a maximum of 180 W (15 A).

Depending on the vehicle equipment, the vehicle has 12 V sockets in the front passenger footwell and in the cargo compartment.

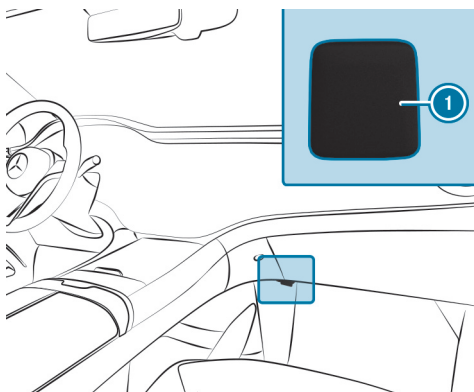

Example: 12 V socket in the front passenger footwell


- ▶ Fold up the cap of socket ①.
- ▶ Insert the plug of the device.


- ▶ Make sure that no cables are running through or secured in the deployment area of an air bag when using the socket. Also observe the notes on the air bags (→ page 139).

USB ports

DEPENDING ON ITS EQUIPMENT, THE VEHICLE HAS THE FOLLOWING USB PORTS:


- In the storage compartment in the front center console
- In the storage compartment under the front armrest
- In front of the stowage tray under the central display of the multimedia system
- In the center console in the rear



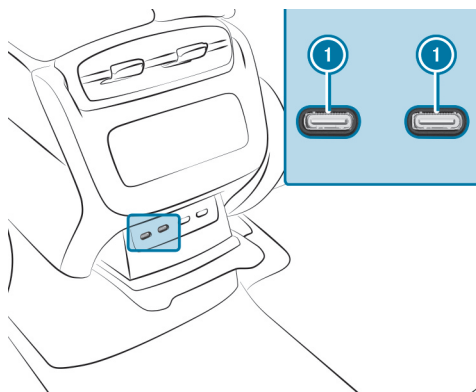

Example: USB ports in the electronics compartment in the center console of the rear passenger compartment

You can charge a USB device, such as a mobile phone, at the USB ports using a suitable charging cable. Depending on the vehicle equipment, the devices can be charged with up to 20 V (5 A) when the vehicle is switched on.





< Charging a mobile phone wirelessly

WARNING

Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- ▶ Close the lockable storage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

WARNING

Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they may slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles will not always be able to retain all objects that they contain in the event of an accident.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects such that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from stowage spaces, parcel nets or stowage nets.
- ▶ Close the lockable stowage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk/cargo compartment.

Observe the notes on loading the vehicle.



**⚠ WARNING**

Risk of fire from placing objects in the mobile phone storage compartment

Placing other objects in the mobile phone storage compartment could constitute a fire hazard.

- ▶ Apart from a mobile phone, do not place any other objects in the mobile phone storage compartment, especially those made of metal.

Observe the notes on loading the vehicle.

Requirements:

- The mobile phone is suitable for wireless charging.
You can find a list of compatible mobile phones at: <https://www.mercedes-benz-mobile.com/>

! NOTE

Damage to objects caused by placing them in the mobile phone storage compartment

If objects are placed in the mobile phone storage compartment, these may be damaged by electromagnetic fields.

- ▶ Do not place credit cards, storage media, ski passes or other objects sensitive to electromagnetic fields in the mobile phone storage compartment.

! NOTE

Damage to the mobile phone stowage compartment caused by liquids

If liquids enter the mobile phone stowage compartment, the compartment may be damaged.

- ▶ Ensure that no liquids enter the mobile phone stowage compartment.

Always observe the notes for persons with electronic medical aids.


- Depending on the vehicle equipment, the mobile phone is connected to the vehicle's exterior antenna via the charging module.
- The charging function and wireless connection of the mobile phone to the vehicle's exterior antenna are only available if the vehicle is switched on.
- Small mobile phones may not be able to be charged in every position of the mobile phone tray.
- Large mobile phones which do not rest flat in the mobile phone tray may not be able to be charged or connected with the vehicle's exterior antenna.
- The mobile phone may heat up during the charging process. This may also depend on the applications (apps) currently open in the background.
- To ensure more efficient charging and connection with the vehicle's exterior antenna, remove the protective cover from the mobile phone. This does not apply to protective covers which are required for wireless charging.






DEPENDING ON THE EQUIPMENT THE VEHICLE HAS THE FOLLOWING OPTIONS FOR WIRELESS CHARGING OF THE MOBILE PHONE IN THE COCKPIT:

- In the front storage compartment of the center console

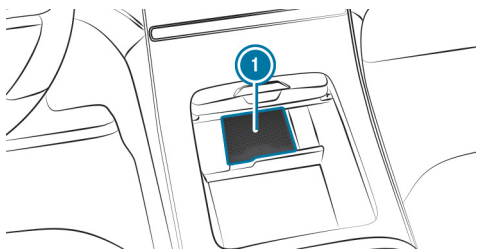

Wirelessly charging a mobile phone in the front storage compartment (with central display)

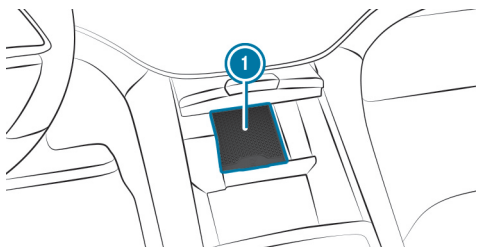


Wirelessly charging the mobile phone in the front storage compartment (with MBUX hyperscreen)

- ▶ Place the mobile phone as close to the center of mat ① as possible with the display facing up.

When the charging symbol is shown in the multimedia system, the mobile phone is being charged. In addition, malfunctions during the mobile phone's charging process are shown in the multimedia system display.


- ① The mat can be removed for cleaning, e.g. using clean, lukewarm water.

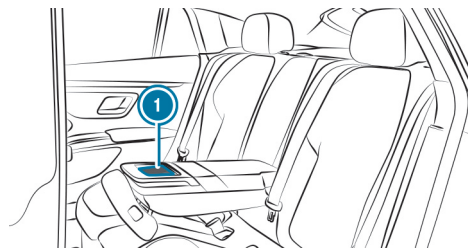

Wireless charging in the rear passenger compartment in vehicles without MBUX rear tablet


- ▶ Fold down the rear armrest.
- ▶ Place the mobile phone as close to the center of mat ① as possible with the display facing up.

When the indicator lamp at the front of the mobile phone system lights up, the mobile phone is being charged. In addition, malfunctions during the mobile phone's charging process are shown by the indicator lamp flashing three times.

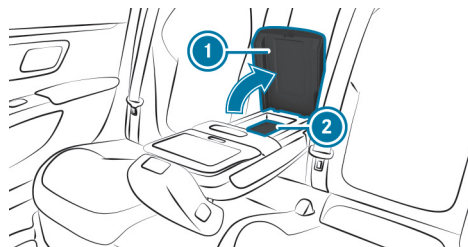

Wireless charging in the rear passenger compartment in vehicles with MBUX rear tablet

- ▶ Fold down the rear armrest.





- ▶ Open the storage compartment in rear armrest ❶ (→ page 246).
- ▶ Place the mobile phone as close to the center of mat ❷ as possible with the display facing up.

When the indicator lamp at the front of the mobile phone system lights up, the mobile phone is being charged. In addition, malfunctions during the mobile phone's charging process are shown by the indicator lamp flashing three times.

❶ Observe the notes on loading the vehicle (→ page 230).





< Installing and removing floor mats

⚠ WARNING


Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This will jeopardize the operating- and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- ▶ Make sure that there is always sufficient clearance for the pedals.
- ▶ Always install the floor mats securely and as prescribed.
- ▶ Do not use loose floor mats and do not place floor mats on top of one another.

INSTALLING FLOOR MATS

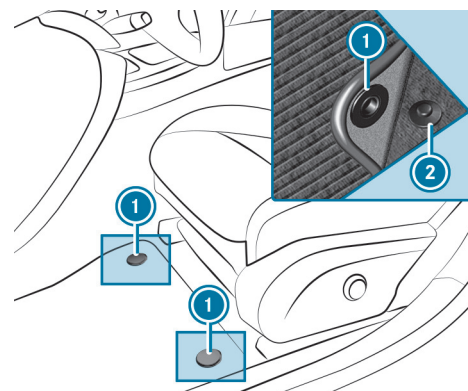

- ▶ Slide the corresponding seat backwards and lay the floor mat in the footwell such that it fits flush.
- ▶ Press studs ① onto holders ②.
- ▶ Adjust the corresponding seat.

REMOVING FLOOR MATS

- ▶ Slide the corresponding seat backwards and pull the floor mat off holders ②.
- ▶ Adjust the corresponding seat.





◀ Light and visibility

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Exterior lighting >

Interior lighting >

Windshield wiper and windshield washer system >

Mirrors >

Area permeable to radio waves on the windshield >

Infrared-reflective windshield function >




< Exterior lighting

Information about lighting systems and your responsibility

The various lighting systems of the vehicle are only aids. The driver of the vehicle is responsible for correct vehicle illumination in accordance with the prevailing light and visibility conditions, legal requirements and traffic situation.

Light switch

OPERATING THE LIGHT SWITCH

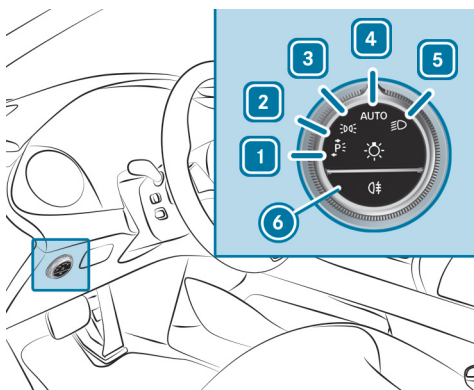

- 1 Left-hand parking lights
- 2 Right-hand parking lights
- 3 Standing lights and license plate lamp

- 4 Automatic driving lights (preferred light switch position)
- 5 Low beam/high beam
- 6 Activates or deactivates the rear fog light.

When low beam is activated, the indicator lamp for the standing lights will be deactivated and replaced by the low-beam indicator lamp.

- ▶ Always park your vehicle safely using sufficient lighting, in accordance with the relevant legal stipulations.

! NOTE

Battery discharging by operating the parking lamps

Do not have the parking lamps switched on over a period of several hours.

If the battery is insufficiently charged, the standing lights or parking lights will be switched off automatically to facilitate the next engine start.

THE EXTERIOR LIGHTING (EXCEPT STANDING AND PARKING LIGHTS) WILL SWITCH OFF AUTOMATICALLY WHEN THE DRIVER'S DOOR IS OPENED.

- Observe the notes on locator lighting (→ page 267).

SWITCHING ON ACCIDENT SCENE LIGHTING

- ▶ Switch off the vehicle.



- ▶ Switch on the hazard warning lamps (→ page 57).
- ▶ Turn the light switch from the **AUTO** position to the position.
The low beam will be switched on despite the vehicle being switched off.

THE ACCIDENT SCENE LIGHTING WILL BE SWITCHED OFF IF:

- you switch off the hazard warning lights.
- you turn the light switch back to **AUTO**.
- the battery is insufficiently charged.

AUTOMATIC DRIVING LIGHTS FUNCTION

When the vehicle is switched on, the standing lights, low beam and daytime running lights will be switched on automatically depending on the ambient light.

⚠ WARNING

Risk of accident when the low beam is switched off in poor visibility

When the light switch is set to **AUTO**, the low beam may not be switched on automatically if there is fog, snow or other causes of poor visibility such as spray.

- ▶ In such cases, turn the light switch to .

The automatic driving lights are only an aid. You are responsible for the vehicle lighting.

SWITCHING THE REAR FOG LIGHT ON/OFF


Requirements

- The light switch is in the or **AUTO** position.

- ▶ Press button .

Please observe the country-specific laws on the use of rear fog lamps.

Operating the combination switch for the lights

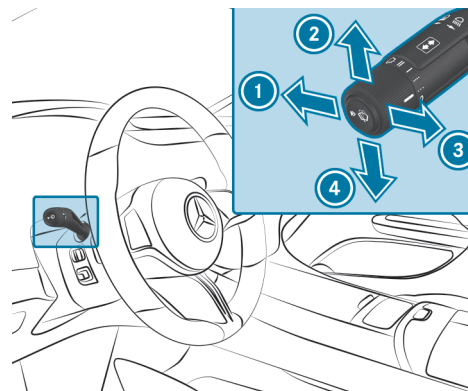

- ① High beam
- ② Turn signal light, right
- ③ Headlamp flashing
- ④ Turn signal light, left

- ▶ Use the combination switch to select the desired function.

SWITCHES ON HIGH BEAM

- ▶ Turn the light switch to the or **AUTO** position.
- ▶ Push the combination switch in the direction of arrow ①.

When high beam is activated, the indicator lamp for low beam will be deactivated and replaced by the high-beam indicator lamp .



SWITCHING OFF HIGH BEAM

- ▶ Push the combination switch in the direction of arrow ❶ or pull it in the direction of arrow ❸.

HEADLAMP FLASHING

- ▶ Pull the combination switch in the direction of arrow ❸.

TURN SIGNAL LIGHTS

- ▶ **To indicate briefly:** push the combination switch briefly to the point of resistance in the direction of arrow ❷ or ❹.


The corresponding turn signal light will flash three times.

- ▶ **To indicate permanently:** push the combination switch beyond the point of resistance in the direction of arrow ❷ or ❹.


VEHICLES WITH ACTIVE LANE CHANGE ASSIST:

- A turn signal indicator activated by the driver may continue to operate for the duration of the lane change.
- If the driver indicated directly beforehand but a lane change was not immediately possible, the turn signal indicator may activate automatically.

Activating/deactivating the hazard warning lights

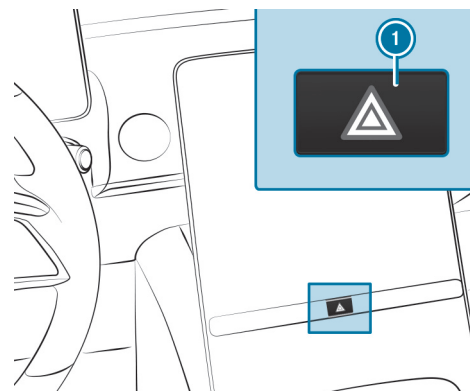


Vehicles without MBUX Hyperscreen

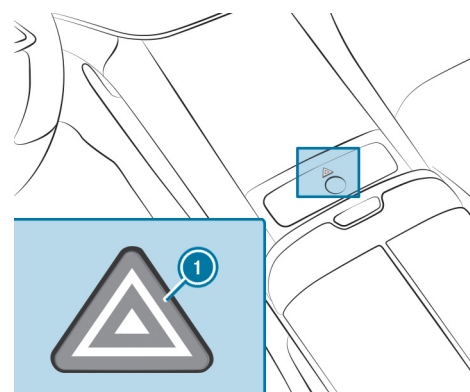

Vehicles with MBUX Hyperscreen

- ▶ Press button ❶.





IN THE FOLLOWING SITUATIONS, THE HAZARD WARNING LAMPS WILL SWITCH ON AUTOMATICALLY:

- The air bag has been deployed
- An emergency stop has been initiated (→ page 390)

DIGITAL LIGHT adaptive functions

FUNCTION OF DYNAMIC LOW BEAM

You can watch an animation on this topic via the following link:

With this system, the headlamps adapt to the driving and weather situation. It also provides extended functions for improved illumination of the road.


 The availability of the functions is country-dependent.

THE SYSTEM COMPRISES THE FOLLOWING FUNCTIONS:

- Active Headlamps (→ page 259)
- Cornering Light (→ page 259)
- Highway mode (→ page 260)
- Enhanced fog light function (→ page 260)
- Bad weather light (→ page 260)
- City lighting (→ page 260)
- Topographical compensation (→ page 261)

The system will be active only when it is dark.

ACTIVE HEADLAMPS FUNCTION

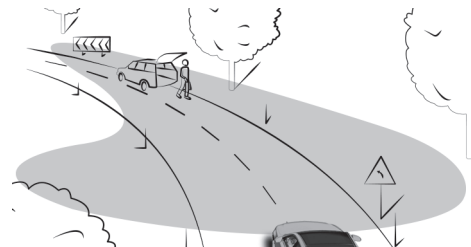


- The headlamps will follow your steering movements.
- Relevant areas will be better illuminated during a journey.

The functions will be active when the low beam is switched on.

Depending on the vehicle's equipment, the course of the lane in which you are driving will also be evaluated and the active headlamps function will adjust the light in advance.

CORNERING LIGHT FUNCTION

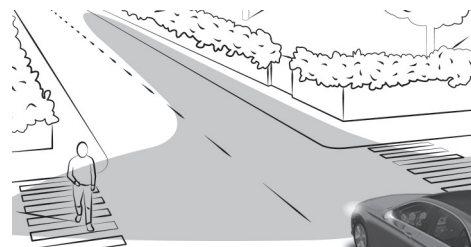

The cornering light improves the illumination of the road over a wide angle in the turning direction, enabling better visibility on tight bends, for example. The cornering light will be activated only when low beam is switched on.






THE FUNCTION WILL BE ACTIVE IN THE FOLLOWING CASES:

- At speeds below 25 mph (40 km/h) when the turn signal light is switched on or the steering wheel is turned
- At speeds between 25 mph (40 km/h) and 43 mph (70 km/h) and when the steering wheel is turned

Traffic circle and intersection function (Canada): the cornering light will be activated on both sides based on an evaluation of the vehicle's current navigation position. It will remain active until after the vehicle has left the traffic circle or intersection.

HIGHWAY MODE FUNCTION (CANADA)

Highway mode increases the range and brightness of the cone of light, enabling better visibility.

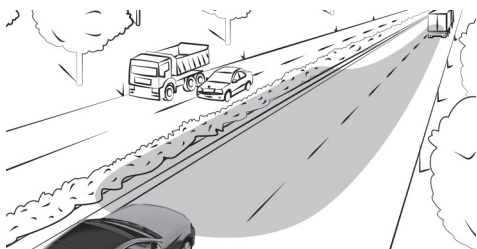

THE FUNCTION WILL BE ACTIVE IF A HIGHWAY JOURNEY IS DETECTED BY MEANS OF:


- the vehicle's speed
- the multifunction camera
- the navigation system

THE FUNCTION WILL NOT BE ACTIVE IN THE FOLLOWING CASES:

- At speeds below 50 mph (80 km/h)

ENHANCED FOG LIGHT FUNCTION (CANADA)

The enhanced fog light function reduces self-dazzling and improves the illumination of the edge of the carriageway.

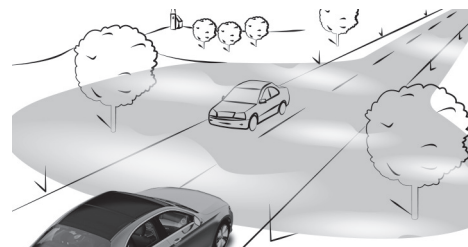

THE FUNCTION IS AUTOMATICALLY ACTIVATED UNDER THE FOLLOWING CONDITIONS:

- At speeds below 43 mph (70 km/h) and when the rear fog light is switched on.

THE FUNCTION IS AUTOMATICALLY DEACTIVATED UNDER THE FOLLOWING CONDITIONS:


- When speeds greater than 62 mph (100 km/h) are reached.
- When the rear fog light is switched off.

FUNCTION OF THE BAD WEATHER LIGHT (CANADA)

The bad weather light reduces reflections in rainy conditions by dimming individual areas of the headlamps. There will be less glare for the driver and other road users as a result.

THE CITY LIGHTING FUNCTION (CANADA)

City lighting improves the illumination of roadsides in urban areas using a broad distribution of light.





THE FUNCTION WILL BE ACTIVE IN THE FOLLOWING CASES:

- At low speeds
- In illuminated parts of urban areas

FUNCTION OF THE TOPOGRAPHICAL COMPENSATION

Based on available map data, the lighting system responds pre-emptively to different road heights. This means that the headlamp range will remain virtually constant when you are driving uphill or downhill.

- ❗ Only vehicles with a multimedia system with navigation have this function.

ASSISTANCE FUNCTIONS OF DIGITAL LIGHT

DIGITAL LIGHT visually expands on the driver assistance systems by projecting the assistant displays in front of the vehicle while it is in motion. DIGITAL LIGHT can therefore help the driver in critical situations.


- ❗ The availability of the functions is country-dependent.

- ❗ The assistance functions of DIGITAL LIGHT may be an on-demand feature (→ page 96).

The system will remain active when Highbeam Assist is switched on.

- ❗ Depending on the country in which you are currently driving, certain functions may be disabled due to different legal requirements, even if they are enabled in the multimedia system. When you cross a border, the vehicle will automatically adapt to the applicable requirements.

SPOTLIGHT

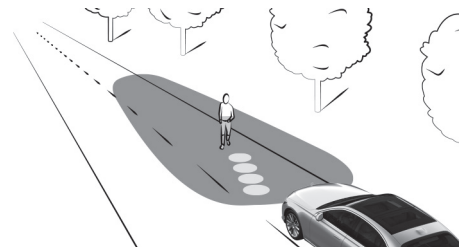


The spotlight function runs in the background and will flash the headlamps in four short bursts at persons detected within the lane markings. You will also be made aware of the position of the person by a projected symbol.

THE FUNCTION WILL BE ACTIVE IN THE FOLLOWING CIRCUMSTANCES:

- You are driving in an unlit area.
- The system detects a lane marking.

NOTES

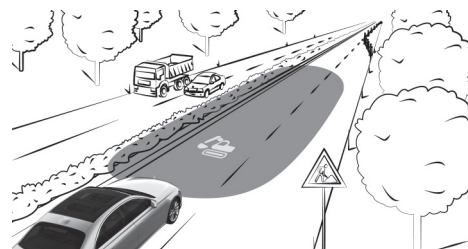


IF TRAFFIC SIGN ASSIST DETECTS A ROADWORKS ZONE, THE SYSTEM WILL PROVIDE SUPPORT AS FOLLOWS:

- A corresponding symbol will be projected onto the road when you enter a roadworks zone.

Observe the system limitations of Traffic Sign Assist (→ page 402).




COLLISION WARNING

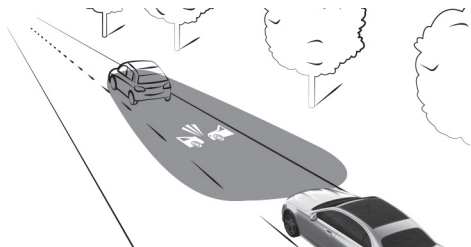

If you fall below the safe distance at speeds of at least 19 mph (30 km/h), a collision warning symbol will be projected onto the road.

Observe the system limitations of Active Brake Assist (→ page 397).

LANE CHANGE WARNING

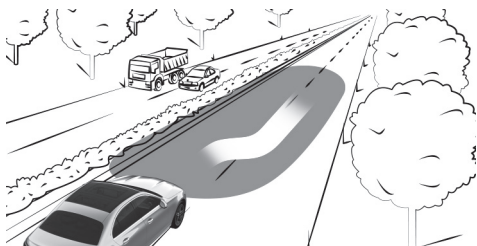

During assisted lane changes at speeds of at least 19 mph (30 km/h), the course of the lane change will flash.

Observe the system limitations of Active Lane Change Assist (→ page 392).

LANE KEEPING AND BLIND SPOT WARNING



AT SPEEDS OF AT LEAST 19 MPH (30 KM/H), A TRIANGLE THAT INDICATES A LANE CORRECTION AND ITS DIRECTION WILL BE PROJECTED ONTO THE ROAD IN THE FOLLOWING CASES:

- You leave the lane unintentionally.
Observe the system limitations of Active Lane Keeping Assist (→ page 410).
- You switch on the turn signal light while an object or obstacle is in your blind spot.
Observe the system limitations of Active Blind Spot Assist (→ page 406).

ACTIVATING/DEACTIVATING DYNAMIC LOW BEAM

Requirements:

- The vehicle is switched on.

Multimedia system:

- [Settings](#) > [Light](#) > [DIGITAL LIGHT](#)
 ▶ Activate or deactivate [Dynamic Low Beam](#).



ACTIVATING/DEACTIVATING ENHANCED ASSISTANCE FUNCTIONS

 The availability of the functions is country-dependent.

 This function is a Digital Extra (→ page 96).

- ▶ Select [Supporting Projections](#).
- ▶ Activate or deactivate the desired projections.
- ▶ Switch [Projection for greeting/farewell](#) on or off.

If the locator lighting or the exterior switch-off delay time is activated, a high-resolution greeting or farewell scene will be played back for a short period of time when the vehicle is opened or switched off. You can choose between the [Digital Rain](#) and [Pixel Impact](#) sequences.

 More information on locator lighting (→ page 267).
More information on the exterior switch-off delay time (→ page 267).

Adaptive Highbeam Assist

ADAPTIVE HIGHBEAM ASSIST FUNCTION



WARNING

Risk of accident despite Adaptive Highbeam Assist

ADAPTIVE HIGHBEAM ASSIST DOES NOT REACT TO:

- Road users without lights, e.g. pedestrians
- Road users with poor lighting, e.g. cyclists
- Road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist may fail to recognize other road users with their own lighting, or may recognize them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.

- ▶ Always observe the road and traffic conditions carefully and switch off the high beam in good time.

Adaptive Highbeam Assist cannot take into account road, weather or traffic conditions.

DETECTION MAY BE RESTRICTED IN THE FOLLOWING CASES:


- In poor visibility, e.g. fog, heavy rain or snow
- if there is dirt on the sensors or the sensors are obscured

Adaptive Highbeam Assist is only an aid. You are responsible for adjusting the vehicle's lighting to the prevailing light, visibility and traffic conditions.





 Adaptive Highbeam Assist is available on demand (→ page 96).

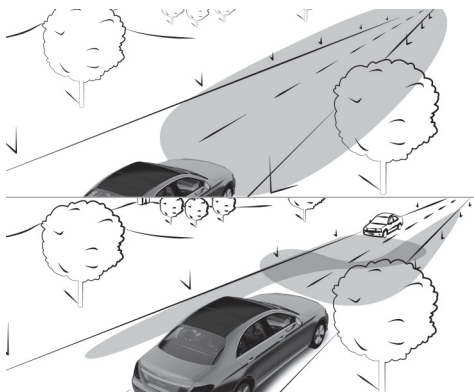

ADAPTIVE HIGHBEAM ASSIST AUTOMATICALLY SWITCHES BETWEEN THE FOLLOWING TYPES OF LIGHT:

- Low-beam headlamps
- High beam

AT SPEEDS GREATER THAN 19 MPH (30 KM/H):

- If no other road users are detected, high beam will switch on automatically.

HIGH BEAM WILL SWITCH OFF AUTOMATICALLY IN THE FOLLOWING CASES:

- At speeds below 16 mph (25 km/h)
- If other road users are detected
- If street lighting is sufficient

 The system's optical sensor is located behind the windshield near the overhead control panel.

SWITCHING ADAPTIVE HIGHBEAM ASSIST ON/OFF



WARNING

Risk of accident despite Adaptive Highbeam Assist

ADAPTIVE HIGHBEAM ASSIST DOES NOT REACT TO:

- Road users without lights, e.g. pedestrians
- Road users with poor lighting, e.g. cyclists
- Road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist may fail to recognize other road users with their own lighting, or may recognize them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.

- ▶ Always observe the road and traffic conditions carefully and switch off the high beam in good time.

SWITCHING ON

- ▶ Turn the light switch to the **AUTO** position.

- ▶ Switch on high beam using the combination switch.

If Adaptive Highbeam Assist is activated, the  indicator lamp will light up on the driver's display.



SWITCHING OFF

- ▶ Switch off high beam using the combination switch.

Adaptive Highbeam Assist Plus

ADAPTIVE HIGHBEAM ASSIST PLUS FUNCTION (CANADA)

⚠ WARNING

Risk of accident despite Adaptive Highbeam Assist Plus

ADAPTIVE HIGHBEAM ASSIST PLUS DOES NOT REACT TO:

- Road users without lights, e.g. pedestrians
- Road users with poor lighting, e.g. cyclists
- Road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist Plus may fail to recognize other road users with their own lighting, or may recognize them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.

- ▶ Always observe the road and traffic conditions carefully and switch off the high beam in good time.

Adaptive Highbeam Assist Plus cannot take into account road, weather or traffic conditions.

DETECTION MAY BE RESTRICTED IN THE FOLLOWING CASES:

- in poor visibility, e.g. fog, heavy rain or snow

- if there is soiling on the sensors or the sensors are obscured

Adaptive Highbeam Assist Plus is only an aid. You are responsible for adjusting the vehicle's lighting to the prevailing light, visibility and traffic conditions.



ADAPTIVE HIGHBEAM ASSIST PLUS AUTOMATICALLY SWITCHES BETWEEN THE FOLLOWING TYPES OF LIGHT:

- Low beam
- Partial high beam
- High beam

Partial high beam does not include other road users in the high beam area. It does not dazzle them but enables full high-beam illumination for the driver apart from the excluded vehicles. Highly reflective signs are also illuminated with reduced brightness.

AT SPEEDS BELOW 16 MPH (25 KM/H) OR WHEN THERE IS SUFFICIENT STREET LIGHTING:

- Partial high beam and high beam will be switched off automatically.



AT SPEEDS ABOVE 19 MPH (30 KM/H):

- If no other road users are detected, the high beam will be switched on automatically.
- If other road users are detected, partial high beam will be switched on automatically.

 The system's optical sensor is located behind the windshield near the overhead control panel.

SWITCHING ADAPTIVE HIGHBEAM ASSIST PLUS ON/OFF (CANADA)

WARNING

Risk of accident despite Adaptive Highbeam Assist Plus

ADAPTIVE HIGHBEAM ASSIST PLUS DOES NOT REACT TO:

- Road users without lights, e.g. pedestrians
- Road users with poor lighting, e.g. cyclists
- Road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist Plus may fail to recognize other road users with their own lighting, or may recognize them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.

- ▶ Always observe the road and traffic conditions carefully and switch off the high beam in good time.

SWITCHING ON

- ▶ Turn the light switch to the **AUTO** position.
- ▶ Switch on high beam using the combination switch.
If Adaptive Highbeam Assist Plus is activated, the  indicator lamp will light up on the driver's display. When partial high beam or high beam is active, the corresponding blue indicator lamp will also light up.

SWITCHING OFF

- ▶ Switch off high beam using the combination switch.

Switching the daytime running lights on/off

Multimedia system:

   Settings  Light  DIGITAL LIGHT

- ▶ Switch the **Daytime Running Lights** on or off.

 In vehicles without DIGITAL LIGHT headlamps, the daytime running lights can be switched on or off on the **driving lights** menu.

 Availability of the function is country-dependent.



Setting the exterior lighting switch-off delay time

Multimedia system:

   Settings  Light  Interior/Exterior Lighting
 Exterior Lighting Switch-off Delay

- ▶ Set a switch-off delay time.

After parking and locking the vehicle, the exterior lighting will be activated for the set time.

Activating/deactivating locator lighting

Multimedia system:

   Settings  Light  Interior/Exterior Lighting

- ▶ Activate or deactivate [Locator Lighting](#).


When the function is activated, the exterior lighting will light up for 40 seconds after the vehicle is unlocked or the driver's door is opened when the vehicle is parked and not locked. When you start the vehicle, the locator lighting will be deactivated and the automatic driving lights activated.





< Interior lighting


Adjusting the interior lighting

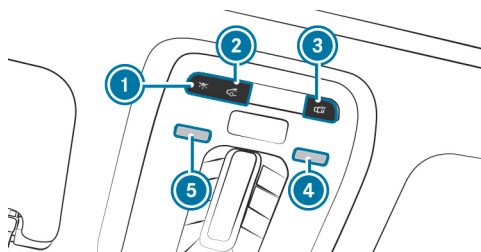

- ①  Switches the front interior lighting on/off.
- ②  Switches the rear interior lighting on/off.
- ③  Switches automatic interior lighting control on/off.

- ▶ **To switch reading lamps on/off:** touch respective reading lamp ④ or ⑤.

OPERATING UNIT IN THE REAR PASSENGER COMPARTMENT

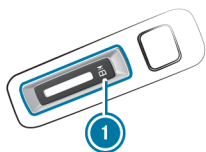

- ①  Rear reading lamp

- ▶ **To switch on or off:** press button ①.

Adjusting the ambient lighting

Multimedia system:



SETTING THE COLOR

- ▶ Select **Color**.
- ▶ Select **Monochrome** or **Multi-color**.
- ▶ Set the desired color or color scheme.

ENERGY SHINE

- The interactive Energy Shine color scheme shows the different phases during a journey. Depending on the type of driving condition (speed, boost effect or recuperation), this will be shown in color by the active ambient lighting.

ADJUSTING THE BRIGHTNESS

- ▶ Select **Brightness**.
- ▶ Adjust the brightness.

 Depending on the ambient light conditions, the ambient lighting will automatically switch between day and night modes.



ACTIVATING THE BRIGHTNESS FOR ZONES

- ▶ Select **Brightness**.
- ▶ Switch off **Link Zones**.

The **Direct**, **Indirect** and **Accents** zones can be set separately.

- ❗ The **Light Band** zone can also be set in vehicles with active ambient lighting.

ACTIVATING EFFECTS

⚠ WARNING

Risk of accident if ambient lighting and active ambient lighting effects are not switched on

The warning assistance effects will be fully active only when the relevant driving or driving safety systems are activated on the Driving Assistance menu.

- ▶ Make sure that the relevant driving or driving safety systems are activated.

- ❗ Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize dangers (→ page 362).

- ▶ Select **Effects**.
- ▶ Activate the desired effect.

- ❗ Different effects will be available depending on the vehicle equipment.

OPERATING FEEDBACK EFFECTS

- **Climate**: If changes are made to the temperature setting in the vehicle, the color of the ambient lighting will change briefly.
- **Voice Assistant**: In vehicles with active ambient lighting, the voice assistant will be visually animated.
- **Greeting**: When you get into the vehicle, a special color animation will play.
- **Charging animation**: The ambient lighting provides visual feedback on the different states of charge when the vehicle is connected to or disconnected from the charging station.

WARNING ASSISTANCE EFFECTS

- **Warning When Exiting**: If an object is detected in the blind spot while you are getting out of the vehicle, the ambient lighting on the affected door will flash red.
Further information on the exit warning (→ page 406).
- **Active Lane Keeping Assist**: If there is a warning from Active Lane Keeping Assist, the active ambient lighting will flash red.
Further information on Active Lane Keeping Assist (→ page 410).
- **Active Brake Assist**: If there is a warning from Active Brake Assist, the active ambient lighting in the center of the cockpit will flash bright red.
Further information on Active Brake Assist (→ page 397).
- **Active Blind Spot Assist**: In vehicles with active ambient lighting, the ambient lighting on the affected side will flash red if there is a warning from Active Blind Spot Assist.





Further information on Active Blind Spot Assist (→ page 406).

- Parking Assist **PARKTRONIC**: The information from the parking sensors during parking maneuvers will be displayed in color.

Further information on Parking Assist PARKTRONIC (→ page 425)

MULTI-COLOR ANIMATION

- The chosen color combination will change at predefined intervals.

 In vehicles with active ambient lighting, an animation will be played.

 The desired operating feedback and warning assistance can be activated or deactivated via the  symbol. Depending on the equipment, different operating feedback and warning assistance effects are available.

 If the brightness is set to a low level, warning animations will be displayed at a higher basic brightness.

Switching the interior lighting switch-off delay time on/off

Multimedia system:

  >> Settings >> Light >> Interior/Exterior Lighting
>> Interior Lighting Switch-off Delay

- ▶ Activate or deactivate **Interior Lighting Switch-off Delay**.


If this function is active, the interior lighting will be switched on for a short time after the end of the journey.





< Windshield wiper and windshield washer system

Switching the windshield wipers on/off

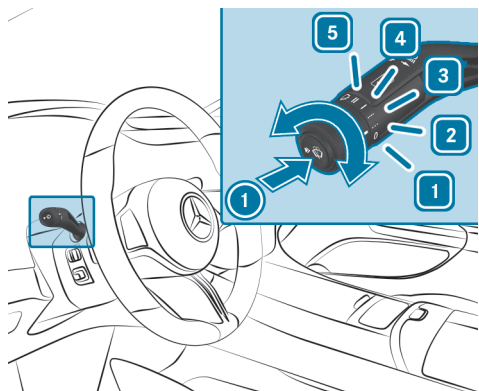

- 1** **0** Windshield wipers off
- 2** **...** Automatic wiping, normal
- 3** **....** Automatic wiping, frequent
- 4** **—** Continuous wiping, slow
- 5** **==** Continuous wiping, fast

- ▶ Turn the combination switch to the corresponding position **1** - **5**.
- ▶  **Single wipe:** press button **1** as far as the pressure point.
- ▶  **Wiping with washer fluid:** press button **1** beyond the pressure point.

i Observe the notes on washing the vehicle in a car wash (→ page 35).

Changing the windshield wiper blades



WARNING

Risk of becoming trapped if the windshield wipers are switched on while wiper blades are being replaced

If the windshield wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.

- ▶ Always switch off the windshield wipers and vehicle before changing the wiper blades.

MOVING THE WIPER ARMS INTO THE REPLACEMENT POSITION


- ▶ Switch the vehicle on and then off again immediately.
- ▶ Within around 15 seconds, press the  button on the combination switch for approximately three seconds (→ page 271).
The wiper arms will move into the replacement position.

i Depending on the production period of the vehicle, different variants of the wiper blades will have been installed.



REMOVING THE WIPER BLADES (VARIANT 1)


- ▶ Fold the wiper arms away from the windshield.

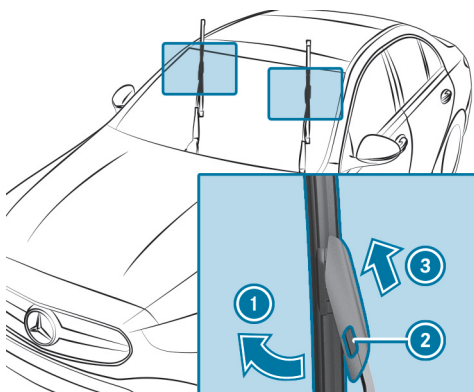

- ▶ Hold the wiper arm with one hand. With the other hand, turn the wiper blade away from the wiper arm in the direction of arrow ① as far as it will go.
- ▶ Press release knob ②.
- ▶ Remove the wiper blade in the direction of arrow ③ away from the wiper arm.


REMOVING THE WIPER BLADES (VARIANT 2)

- ▶ Fold the wiper arms away from the windshield.

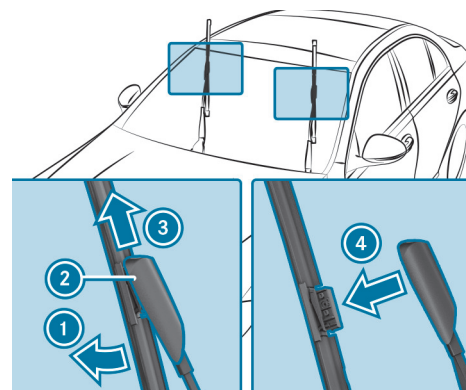

- ▶ Hold the wiper arm with one hand. With the other hand, turn the wiper blade away from the wiper arm in the direction of arrow ① as far as it will go.
- ▶ Slide catch ② in the direction of arrow ③ until it engages in the removal position.
- ▶ Remove the wiper blade from the wiper arm in the direction of arrow ④.


INSTALLING THE WIPER BLADES (VARIANT 1)

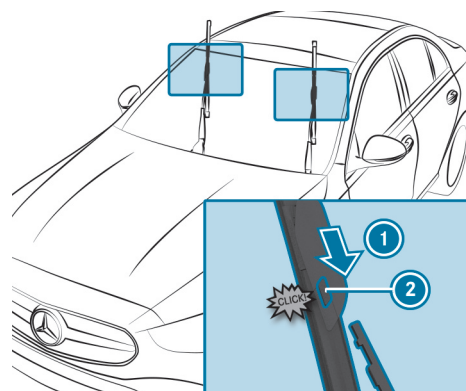



- ▶ Insert the new wiper blade in to the wiper arm in the direction of arrow ① until release knob ② engages.
- ▶ Make sure that the wiper blade is seated correctly.
- ▶ Fold the wiper arms back onto the windshield.
- ▶ Switch on the vehicle.
- ▶ Press the  button on the combination switch. The wiper arms will return to their original positions.
- ▶ Switch off the vehicle.

INSTALLING THE WIPER BLADES (VARIANT 2)

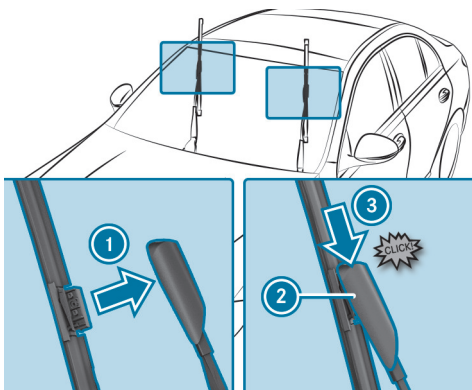


- ▶ Insert the new wiper blade into the wiper arm in the direction of arrow ①.
- ▶ Slide catch ② in the direction of arrow ③ until it engages in the locking position.
- ▶ Make sure that the wiper blade is seated correctly.

- ▶ Fold the wiper arms back onto the windshield.
- ▶ Switch on the vehicle.
- ▶ Press the  button on the combination switch. The wiper arms will return to their original positions.
- ▶ Switch off the vehicle.


MAINTENANCE DISPLAY

A maintenance display can be found at the tip of the blade on the newly installed wiper blades.

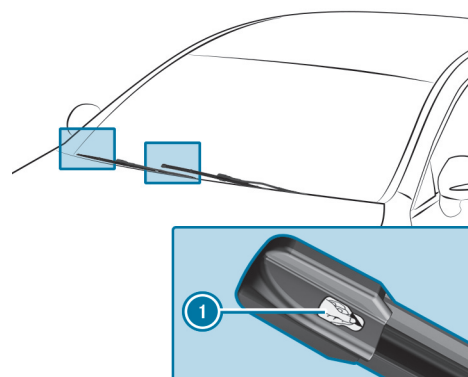

- ▶ Remove protective film ① from the maintenance display.

When the color of the maintenance displays changes from black to yellow, you should replace the wiper blades.





< Mirrors

Operating the outside mirrors

⚠ WARNING

Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.


⚠ WARNING

Risk of accident due to misjudgment of distance when using the front-passenger mirror

The outside mirror on the front passenger side reflects objects on a smaller scale. The objects in view are in fact closer than they appear.

- ▶ Therefore, always look over your shoulder to check the actual distance between you and the road users traveling behind you.

ADJUSTING THE OUTSIDE MIRRORS

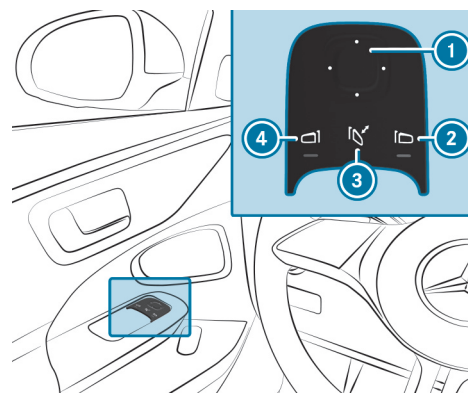

- ▶ Use button ② or ④ to select the desired mirror.
- ▶ Use button ① to adjust the position of the selected mirror.

FOLDING THE OUTSIDE MIRRORS IN/OUT (VEHICLES WITH ELECTRICALLY FOLDING OUTSIDE MIRRORS)

- ▶ Briefly press button ③.

ⓘ If the battery has been disconnected or has discharged, the outside mirrors must be moved briefly using button ③. Only then will the automatic mirror folding function work properly.

ENGAGING THE OUTSIDE MIRRORS

If an outside mirror has been forcibly disengaged, proceed as follows.



- ▶ Vehicles without electrically folding outside mirrors: manually move the outside mirror into the correct position until it audibly engages.
- ▶ Vehicles with electrically folding outside mirrors: press and hold button .
You will hear a click and the mirror will audibly engage. The outside mirror will now be set to the correct position.

Automatic anti-glare mirrors function



WARNING

Risk of acid burns and poisoning due to the anti-glare mirror electrolyte

Electrolyte may escape if the glass in an automatic anti-glare mirror breaks.

The electrolyte is hazardous to health and causes irritation. It must not come into contact with your skin, eyes, respiratory organs or clothing or be swallowed.

- ▶ If you come into contact with electrolyte, observe the following:
 - Immediately rinse the electrolyte from your skin with water and seek medical attention.
 - If electrolyte comes into contact with your eyes, immediately rinse them thoroughly with clean water and seek medical attention.
 - If the electrolyte is swallowed, immediately rinse your mouth out thoroughly. Do not induce vomiting. Seek medical attention immediately.
 - Immediately change out of clothing which has been contaminated with electrolyte.
 - If an allergic reaction occurs, seek medical attention immediately.

The inside rearview mirror and the outside mirror on the driver's side will automatically go into anti-glare mode if light from a headlamp hits the sensor on the inside rearview mirror.





SYSTEM LIMITS

THE SYSTEM WILL NOT GO INTO ANTI-GLARE MODE IF:

- The vehicle is switched off.
- Reverse gear is engaged.
- The interior lighting is switched on.

Front-passenger outside mirror parking position function

The parking position makes parking easier.

THE FRONT-PASSENGER OUTSIDE MIRROR WILL SWIVEL DOWNWARDS IN THE DIRECTION OF THE REAR WHEEL ON THE FRONT PASSENGER'S SIDE WHEN:


- The parking position is stored (→ page 276).
- The front-passenger mirror is selected.
- Reverse gear is engaged.

THE FRONT-PASSENGER OUTSIDE MIRROR WILL MOVE BACK TO ITS ORIGINAL POSITION WHEN:

- You shift the transmission to another transmission position.
- You are traveling at a speed greater than 9 mph (15 km/h).
- You press the button for the outside mirror on the driver's side.

Storing the parking position of the front-passenger outside mirror using reverse gear

STORING

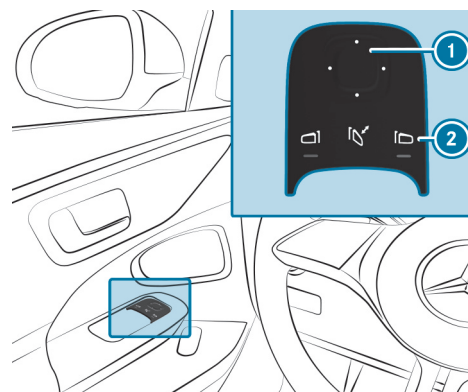


- ▶ Select the front-passenger outside mirror using button ②.
- ▶ Engage reverse gear.
- ▶ Move the front-passenger outside mirror into the desired parking position using button ①.

CALLING UP


- ▶ Select the front-passenger outside mirror using button ②.
- ▶ Engage reverse gear.

The front-passenger outside mirror will move into the stored parking position.





< Area permeable to radio waves on the windshield

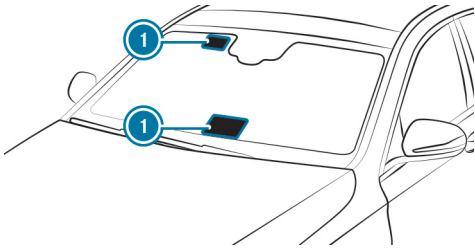

Radio-controlled equipment such as toll systems can be mounted only on areas ❶ of the windshield that are permeable to radio waves.

Areas permeable to radio waves ❶ are best visible from outside the vehicle when the windshield is illuminated with an external light source.

NOTE THIS POSITION FOR VEHICLES WITH:

- Windshield heater
- Infra-red reflective windshield





< Infrared-reflective windshield function

The infrared-reflective windshield is coated and reduces the build-up of heat in the vehicle interior.

The coating shields the vehicle interior from radio waves.





< Climate control

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Overview of climate control systems



Operating the climate control system






< Overview of climate control systems

Notes on climate control

An interior air filter in combination with the prefilter in the engine compartment must always be used so that the air conditioning system, pollution level monitoring and the air filtration work correctly. Use filters recommended and approved by Mercedes-Benz. Always have maintenance work carried out at a qualified specialist workshop.

Overview of the THERMATIC climate bar

The indicator lamps indicate that the corresponding functions are activated.

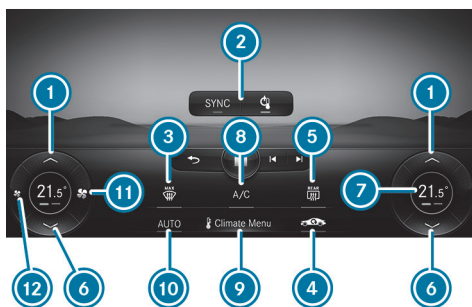

Front climate bar on the central display (example)

- ① Increases the temperature

- ② Upper display area of the climate bar with the examples of switching climate control on/off (→ page 283) and **SYNC** synchronization function (→ page 288)
- ③ Defrosts the windshield (→ page 284)
- ④ Switches the A/C function on/off (→ page 285) or Fine particulate status display (→ page 284)
- ⑤ Switches the rear window heater on/off
- ⑥ Reduces the temperature
- ⑦ Depending on vehicle equipment and settings: temperature display, display for the defrost function, airflow, pre-entry climate control or climate mode
- ⑧ Switches air-recirculation mode on/off (→ page 288)
- ⑨ Calls up the air-conditioning menu (→ page 284)
- ⑩ **AUTO** Sets climate control to automatic mode (→ page 285)
- ⑪ Increases the airflow or switches on climate control (→ page 283)
- ⑫ Reduces the airflow or switches off climate control (→ page 283)


❗ The climate bar is visible even when the vehicle is parked or the air conditioning is switched off (→ page 283).

❗ The availability of individual functions depends on country and equipment.



Overview of the THERMOTRONIC climate bar

The indicator lamps indicate that the corresponding functions are activated.

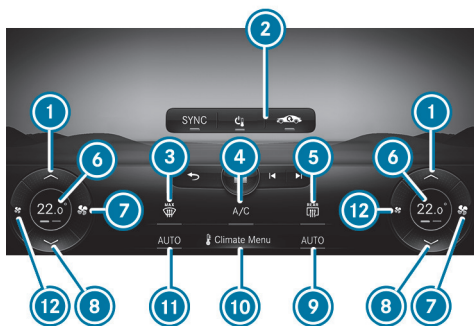

Front climate bar on the central display (example)

- ① Increases the temperature
- ② **SYNC** Synchronisation function (→ page 288)
- Switches climate control off (→ page 283)
- Switches air-recirculation mode on/off
- ③ Defrosts the windshield
- ④ **A/C** Switches the A/C function on/off (→ page 285) or
- Fine particulate status display (→ page 284)
- ⑤ Switches the rear window defroster on/off
- ⑥ Depending on vehicle equipment and settings:
 - Temperature display
 - Display for the defrost function
 - Airflow
 - Pre-entry climate control
- ⑦ Increases the airflow or switches on climate control (→ page 283)
- ⑧ Reduces the temperature

- ⑨ **AUTO** Sets climate control to automatic mode, right (→ page 285)
- ⑩ **MENU** Calls up the air-conditioning menu (→ page 284)
- ⑪ **AUTO** Sets climate control to automatic mode, left (→ page 285)
- ⑫ Reduces the airflow or switches off climate control (→ page 283)


i The airflow will automatically be reduced in the event of an incoming call to keep noise sources to a minimum. The airflow can be adjusted again via ⑦ or ⑫.


i The climate bar is visible even when the vehicle is parked or the air conditioning is switched off (→ page 283).

i The availability of individual functions depends on country and equipment.

Overview of the rear operating unit

The rear operating unit is available only for vehicles with the THERMOTRONIC air conditioning control panel.



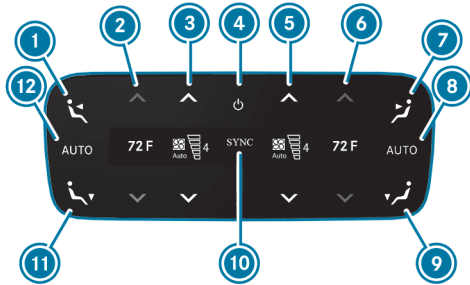

Example: USA

- ❶ Sets the air distribution to the center air vent in the rear passenger compartment, left
- ❷ Sets the temperature in the rear passenger compartment, left
- ❸ Sets the airflow in the rear passenger compartment, left, or switches climate control on/off (→ page 283)
- ❹ Switches climate control on/off (→ page 283)
- ❺ Sets the airflow in the rear passenger compartment, right, or switches climate control on/off (→ page 283)
- ❻ Sets the temperature in the rear passenger compartment, right
- ❼ Sets the air distribution to the center air vent in the rear passenger compartment, right
- ❽ Sets rear climate control to automatic mode, right (→ page 285)
- ❾ Sets the air distribution to the right rear passenger compartment footwell vents
- ❿ Synchronization is activated (→ page 288)
- ⓫ Sets the air distribution to the rear passenger compartment left footwell vents
- ⓬ Sets rear climate control to automatic mode, left (→ page 285)

DEPENDING ON THE EQUIPMENT, THE SETTINGS FOR THE SECOND ROW OF SEATS CAN BE ADJUSTED ON THE FOLLOWING DEVICES:

- the rear operating unit
- an MBUX high-end rear passenger compartment entertainment system display
- the rear tablet
- the front passenger display
- the central display





< Operating the climate control system

Switching climate control on/off

SWITCHING ON CLIMATE CONTROL

- ▶ Set the airflow to level 1 or higher via  on the climate bar on the central display.

or

- ▶ Press **AUTO**, ,  or .

SWITCHING OFF CLIMATE CONTROL

- ▶ Set the airflow to level 0 via  on the climate bar on the central display

or

- ▶ Press .

If climate control is switched off, the windows may fog up more quickly. Switch climate control off only briefly.


-  If climate control is switched off via , **OFF** will be shown on the climate bar.

-  When the range maximization function is activated, certain climate control functions are restricted and the window and mirror heaters are switched off. This can lead to windows fogging up and reduced visibility due to weather conditions. To quickly reac-

ivate the climate control functions, press the  button on the climate bar on the central display.

Switching climate control on/off via the rear operating unit

SWITCHING ON

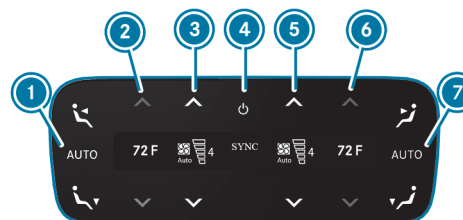

Example: USA

- ▶ Press button .

or

- ▶ Set the airflow to level 1 or higher using buttons  and .



or

- ▶ Press buttons , ,  or .

SWITCHING OFF

- ▶ Press button .

or

- ▶ Set the airflow to level 0 using buttons  and .

-  If rear climate control is switched off via button , **OFF** will be shown on the displays.

Activating/deactivating the A/C function via the climate bar

The A/C function heats, cools and dehumidifies the vehicle's interior air.

- ▶ Press  on the climate bar on the central display.

-  Switch off the A/C function only briefly; otherwise, the windows may fog up more quickly. Condensation may drip from the underside of the vehicle when cooling mode is active. This is not indicative of a malfunction.

Calling up the air conditioning menu using the climate bar

The air conditioning menu can be called up via the climate bar. The climate bar is always shown on the lower edge of the central display.

- ▶ Select the **Climate Menu** entry in the air conditioning bar. The **First Row of Seats** menu is opened.

JUMPING DIRECTLY TO THE AIR QUALITY MENU

- ▶ Select the  fine particle status display in the air conditioning bar. The **Air Quality** menu is opened. An animation of the automatic air cleaning taking place is shown.

-  The fine particle status display is on the home screen next to the temperature display on the right and it informs you of the current particulate levels inside and outside of the vehicle. The measurement values are shown with the $\mu\text{g}/\text{m}^3$ units (micrograms per cubic meter).

Defrosting the windshield via the climate bar

SWITCHING ON


- ▶ Press  on the climate bar on the central display.

SWITCHING OFF

- ▶ Press , **AUTO** or  on the climate bar on the central display.

or

- ▶ Set the airflow to 0.





 When the defrost function is activated, some functions (e.g. the temperature setting) will automatically be deactivated.

Activating/deactivating the A/C function via the air conditioning menu

Multimedia system:

  Climate Menu  First Row of Seats

Depending on the external conditions, support for improved cooling and dehumidification of the interior air will be provided when the A/C function is activated. If it is not possible to operate the A/C function on the climate bar on the central display, switch the function on or off in the climate menu of the central display.

► Select **A/C** (A/C).

Switch off the A/C function only briefly; otherwise, the windows may fog up more quickly.

Condensation may drip from the underside of the vehicle when cooling mode is active. This is not indicative of a malfunction.

Setting climate control to automatic mode via the climate bar

In automatic mode, the set vehicle interior temperature is controlled automatically and maintained at a constant level by the air supply.


► Press **AUTO** on the climate bar on the central display.

► **To switch to manual operation:** switch off automatic mode or adjust the air distribution, e.g. .

 You can manually increase or reduce the airflow by pressing  on the climate bar on the central display.


Setting climate control to automatic mode via the rear operating unit

In automatic mode, the temperature is automatically regulated by the temperature of the dispensed air and the airflow.

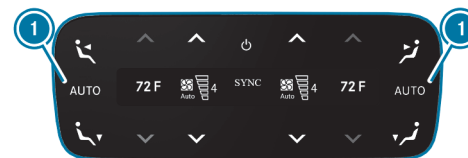

Example: USA

► Press button .





Selecting climate modes via the air conditioning menu

Multimedia system:

 [Climate Menu](#)  [First Row of Seats](#)

It is possible to switch between different climate modes on the Climate menu.

If ECO or ECO+ mode is activated, certain climate control functions will be restricted to conserve energy and extend the vehicle's range.

THE FOLLOWING MODES ARE AVAILABLE ON THE CLIMATE MENU:

- **Comfort:** maximum climate comfort
- **ECO:** while heating and cooling output are limited, it remains possible to operate climate control without restriction. If you activate , the system will automatically switch to Comfort mode.
- **ECO+:** mode using only the blower and waste heat, if applicable. The temperature can no longer be adjusted. If you activate , the system will automatically switch to Comfort mode.

 The windows may fog up more when ECO or ECO+ mode is activated.

 ECO+ climate mode can also be switched on and off via the range maximization button in the EQ menu under [Range](#). When the range maximization function is deactivated, the system will automatically switch to the last selected climate mode. Pressing the temperature or blower display on the climate bar of the central display allows direct access to the air conditioning menu

when ECO or ECO+ mode is active. The climate mode can be changed by pressing the ECO button.

 The vehicle's climate control automatically detects seat occupancy. If the vehicle detects unoccupied seats, the climate control functions will be restricted. If you activate , the climate control will automatically switch to Comfort mode.

 If the vehicle is parked in the ECO or ECO+ mode for a short period, the previously selected mode will still be activated the next time the vehicle is started. If the vehicle is parked in ECO or ECO+ mode for a longer period of time, the system will automatically switch to Comfort mode the next time the vehicle is started.

- ▶ Tap on [ECO](#).
- ▶ Select [Comfort](#), [ECO](#) or [ECO+](#).

If an ECO mode is selected via the air conditioning menu, two LEDs will appear on the temperature display on the climate bar. When ECO mode is switched on, one LED will light up green on the temperature display. When ECO+ mode is switched on, both LEDs will light up green and the ECO+ display will appear.

Overview of the air distribution settings

THE SYMBOLS ON THE CENTRAL DISPLAY INDICATE THE VENTS THROUGH WHICH THE AIRFLOW IS BEING DIRECTED:



Defroster vents





Center air vents



Footwell vents

Setting air distribution using the air conditioning menu

Multimedia system:



- ▶ Select [First Row of Seats](#) or [Second Row of Seats](#).
- ▶ To set air distribution: select ,  or .
- ▶ Set the airflow.

 When the air conditioning system is switched on, at least one zone is always active. However, several air distribution options can be selected at the same time, for example to set the climate control for the vehicle interior and the footwells simultaneously. The  climate control for the windshield can only be selected for the first seat row. When automatic mode is active, the buttons for setting the air distribution are automatically deactivated. When the air conditioning system is switched off, the buttons remain operable and the last setting is saved.

Setting rear climate control using the air conditioning menu

Multimedia system:



SETTING THE TEMPERATURE

- ▶ Select [Second Row of Seats](#).
- ▶ Set the temperature.

SETTING THE AIRFLOW

- ▶ Select [Second Row of Seats](#).
- ▶ Set the air flow with  or .

CONTROLLING THE REAR CLIMATE CONTROL AUTOMATICALLY

- ▶ Select [AUTO](#).

 When the defrost function is activated, some functions (e.g. the temperature setting) will automatically be deactivated. To deactivate the defrost function, press either , [AUTO](#) or  set the air flow to level 0 (→ page 284).





Switching the synchronization function on/off via the air conditioning menu

Multimedia system:

 **Climate Menu**  **First Row of Seats**

The synchronization function controls the climate control centrally. The driver's settings for temperature, airflow and air distribution are automatically adopted for each climate zone.

- ▶ Select **SYNC** (SYNC).

Removing condensation from the windows

WINDOWS FOGGED UP ON THE INSIDE

- ▶ Press **AUTO** on the climate bar on the central display.
- ▶ If the windows remain fogged up: press  on the climate bar on the central display.

WINDOWS FOGGED UP ON THE OUTSIDE

- ▶ Switch on the windshield wipers.
- ▶ Press **AUTO** on the climate bar on the central display.

Switching air-recirculation mode on/off via the climate bar

Requirements:

- The THERMATIC air conditioning control panel without fine particle pre-filter is available.

- ▶ Press  on the climate bar on the central display.
The interior air will be recirculated.

Air-recirculation mode will automatically switch to fresh air mode after a while.

-  If air-recirculation mode is switched on, the windows may fog up more quickly. Switch on air-recirculation mode only briefly.

Switching air-recirculation mode on/off via the air-conditioning menu

Requirements:

- The THERMATIC air conditioning control panel with fine particle prefilter is available.
- The THERMOTRONIC air conditioning control panel with or without fine particle prefilter is available.

Multimedia system:

 **Climate Menu**  **First Row of Seats**

- ▶ Press  in the upper display area of the climate bar.
The interior air will be recirculated.

Air-recirculation mode will automatically switch to fresh air mode after a while.

-  If air-recirculation mode is switched on, the windows may fog up more quickly. Switch on air-recirculation mode only briefly.





 By selecting the fine particle status display  on the climate bar, you can jump directly to the air quality menu.

Activating or deactivating ionization via the air conditioning menu

Multimedia system:

  Climate Menu  Air Quality

When ionization is activated, the air in the vehicle interior is enriched with negatively charged oxygen ions. These can promote the well-being of the vehicle occupants.

- ▶ Select **Ionization**.

 The function can be performed only if AUTO mode is activated or the air distribution is set to the side air vent. The function is restricted if the side air vent on the driver's side is closed.

Fragrance system

ACTIVATING/DEACTIVATING THE FRAGRANCE SYSTEM USING THE MULTIMEDIA SYSTEM

Requirements

- Automatic climate control is activated.
- The glove compartment is closed.
- A flacon is inserted.

Multimedia system:

  Climate Menu  Air Quality

The fragrance system distributes a pleasant fragrance throughout the vehicle interior from a flacon located in the glove compartment.

- ▶ Navigate down until the climate control bar is active.
- ▶ Select **Fragrance**.
- ▶ Activate or deactivate fragrancing.

SETTING THE FRAGRANCE SYSTEM USING THE MULTIMEDIA SYSTEM

Requirements


- A flacon is inserted.
- The glove compartment is closed.
- Climate control is activated.

Multimedia system:

  Climate Menu  Air Quality

The fragrance system distributes a pleasant fragrance throughout the vehicle interior from a flacon located in the glove compartment.

- ▶ Select **Fragrance**.
- ▶ Keep pressing until the desired intensity is reached.





INSERTING/REMOVING THE FLACON OF THE FRAGRANCE SYSTEM

WARNING

Risk of injury from liquid perfume

If children open the flacon, they could drink the liquid perfume or it could come into contact with their eyes.

- ▶ Do not leave children unattended in the vehicle.
- ▶ Consult a doctor immediately if liquid perfume has been drunk.
- ▶ If liquid perfume comes into contact with your eyes or skin, rinse your eyes with clean water.
- ▶ If symptoms continue, consult a doctor.




ENVIRONMENTAL NOTE

Environmental damage due to improper disposal of full flacons

 Full flacons must not be disposed of together with household waste.

- ▶  Hand in full flacons at a pollutant collection point.

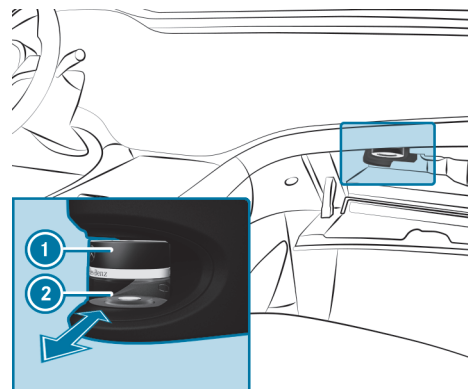

① Cap

② Flacon

- ▶ **To insert:** slide the flacon into the holder as far as it will go.
- ▶ **To remove:** After opening the glove compartment, wait for approximately seven seconds and pull out the flacon.

If you do not use genuine Mercedes-Benz interior perfumes, observe the manufacturers' safety notes on the fragrance packaging.

Dispose of the genuine Mercedes-Benz interior fragrance flacon when it is empty and do not refill it.

REFILLABLE FLACON

- ▶ Unscrew the cap of the empty flacon.
- ▶ Fill the flacon with a maximum of 0.5 fl. oz. (15 ml).
- ▶ Screw the cap back onto the flacon.

Always refill the empty refillable flacon with the same fragrance. Observe the separate information sheet attached to the flacon.



Information on the windshield heater

WARNING

Risk of burns from touching the windshield when the windshield heater is switched on

The windshield can become very hot when the windshield heater is switched on.

The health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

- ▶ Do not touch the windshield while the windshield heater is switched on.
- ▶ Allow the windshield to cool down before touching it.

The windshield heater will be switched on automatically if  is activated on the climate bar on the central display.

After the vehicle is started, the windshield heater will be switched on automatically as required.

-  If the on-board electrical system voltage is low, the function of the windshield heater may be impaired.

Pre-entry climate control when the vehicle is unlocked

FUNCTION OF PRE-ENTRY CLIMATE CONTROL WHEN THE VEHICLE IS UNLOCKED

You can watch an animation on this topic via the following link:

The seats can be briefly pre-heated or pre-cooled before you get into the vehicle.

DEPENDING ON THE VEHICLE'S EQUIPMENT, THE FOLLOWING FUNCTIONS WILL BE ACTIVATED AS NEEDED DURING PRE-COOLING:

- Automatic climate control
- Blower
- Seat ventilation

DEPENDING ON THE VEHICLE'S EQUIPMENT, THE FOLLOWING FUNCTIONS WILL BE ACTIVATED AS NEEDED DURING PRE-HEATING:

- Automatic climate control
- Blower
- Seat heating
- Steering wheel heater
- Mirror heater
- Rear window defroster
- Windshield heater
- Wiper park position heater





DEPENDING ON THE VEHICLE'S EQUIPMENT, THE FOLLOWING FUNCTIONS WILL ALSO BE ADJUSTED DURING PRE-ENTRY CLIMATE CONTROL IF THEY HAVE ALREADY BEEN SWITCHED ON DURING REGULAR VEHICLE OPERATION:

- Fragrancing
- Ionization

SETTING PRE-ENTRY CLIMATE CONTROL WHEN THE VEHICLE IS UNLOCKED IN THE MULTIMEDIA SYSTEM

Multimedia system:

 **Climate Menu**  **Pre-entry Climate Ctrl.**

- ▶ Activate or deactivate the function.

SELECTING SEATS

- ▶ Select **Driver**, **Passenger**, **Rear Left** or **Rear Right**.

The pre-entry climate control functions (e.g. seat heating) available for the seat are switched on or off for the selected seats.

When pre-entry climate control is enabled, an LED on the climate bar on the central display will light up blue for a cooled vehicle and red for a heated vehicle.

ACTIVATING/DEACTIVATING PRE-ENTRY CLIMATE CONTROL WHEN THE VEHICLE IS UNLOCKED

Requirements

- The high-voltage battery is charged sufficiently.
- The function has been activated via the multimedia system.

- ▶ **To switch on:** unlock the vehicle.

The climate control functions are activated for up to five minutes for pre-heating and pre-cooling.

Pre-entry climate control via unlocking cannot be activated more than three times in succession when the vehicle is switched off.

- ▶ **To switch off:** press  on the climate bar on the central display.

THE FOLLOWING FUNCTIONS WILL REMAIN ACTIVE ONCE THE VEHICLE HAS BEEN STARTED:

- Seat heating
- Seat ventilation

DEPENDING ON THE VEHICLE'S EQUIPMENT, THE FOLLOWING FUNCTIONS WILL ALSO BE ADJUSTED DURING PRE-ENTRY CLIMATE CONTROL IF THEY HAVE ALREADY BEEN SWITCHED ON DURING REGULAR VEHICLE OPERATION:

- Fragrancing
- Ionization





Pre-entry climate control for departure time

PRE-ENTRY CLIMATE CONTROL FOR DEPARTURE TIME FUNCTION

WARNING

Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

- ▶ Never leave persons, particularly children, unattended in the vehicle.

WARNING

Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

- ▶ Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it has been switched on repeatedly.

You can watch an animation on this topic via the following link:

The air inside the vehicle can be heated, ventilated or cooled to the set temperature when the vehicle is parked.

When the vehicle is connected to power supply equipment, priority will be given to charging the high-voltage battery to a specified minimum state of charge.

THE RUNNING TIME OF PRE-ENTRY CLIMATE CONTROL MAY BE REDUCED IN THE FOLLOWING CIRCUMSTANCES:

- The vehicle is not connected to power supply equipment.
- The high-voltage battery is not fully charged

With active pre-entry climate control, the state of charge of the high-voltage battery may be reduced, even if the charging cable connector is connected.

If available, seat ventilation will be activated in the cooling and ventilation modes.

IF PRESENT, THE FOLLOWING FUNCTIONS WILL BE ACTIVATED IN HEATING MODE:

- Seat heating
- Steering wheel heater
- Mirror heater
- Rear window defroster
- Windshield heater
- Wiper park position heater

When the set temperature is changed, the climate control mode will automatically be updated. It will be switched from heating mode to ventilation or cooling mode, from cooling mode to ventilation or heating mode or from ventilation mode to heating or cooling mode.





DEPENDING ON THE VEHICLE'S EQUIPMENT, THE FOLLOWING FUNCTIONS WILL ALSO BE ADJUSTED DURING PRE-ENTRY CLIMATE CONTROL IF THEY HAVE ALREADY BEEN SWITCHED ON DURING REGULAR VEHICLE OPERATION:

- Fragrancing
- Ionization

SETTING PRE-ENTRY CLIMATE CONTROL FOR DEPARTURE TIME VIA THE CLIMATE BAR

Multimedia system:

 **Climate Menu**  **Pre-entry Climate Ctrl.**

SETTING THE DEPARTURE TIME

-  The set departure times are used for the vehicle's pre-entry climate control and for predictions regarding the approximate state of charge and range at the time selected. Additional information on the charging settings (→ page 347).

- ▶ Select **Edit Departure Time** .
- ▶ Select a departure time or set a new departure time.

-  If the range maximization function is activated, an approximate time for reaching the desired state of charge will be determined automatically during a charging stop. This will be used as an approximate departure time for pre-entry climate control and will be set automatically. Previously set departure times cannot be changed when the function is active. The automatically determined departure time can be activated or deactivated via the air conditioning menu.

SETTING REPEAT DAYS

- ▶ Select **Edit Departure Time** .
- ▶ Set the desired departure time and select the corresponding days on which this departure time is to apply.
- ▶ Press **OK** to confirm.

SELECTING SEATS

- ▶ Select **Driver**, **Passenger**, **Rear Left** or **Rear Right**.
Pre-entry climate control will take place for the selected seats.

If a departure time is set, a yellow LED will appear on the climate bar of the central display. In addition, an LED on the climate bar will indicate when pre-entry climate control is activated. It will light up blue when the vehicle is being cooled and red when it is being heated.

ACTIVATING/DEACTIVATING PRE-ENTRY CLIMATE CONTROL FOR DEPARTURE TIME



WARNING

Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

- ▶ Never leave persons, particularly children, unattended in the vehicle.





WARNING

Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

- ▶ Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it has been switched on repeatedly.

Requirements

- The high-voltage battery is charged sufficiently.
- The function has been activated via the multimedia system.
- ▶ **To activate:** set the departure time (→ page 294).
Pre-entry climate control for departure time will switch on a maximum of 55 minutes before the selected departure time. It will remain active for another five minutes if departure is delayed.
- ▶ **To deactivate the pre-entry climate control for departure time early:** press  on the climate bar on the central display or switch off the preselection of the time on the climate menu.

DEPENDING ON THE VEHICLE'S EQUIPMENT, THE FOLLOWING FUNCTIONS WILL REMAIN ACTIVE ONCE THE VEHICLE HAS BEEN STARTED:

- Seat heating

- Seat ventilation

DEPENDING ON THE VEHICLE'S EQUIPMENT, THE FOLLOWING FUNCTIONS WILL ALSO BE ADJUSTED DURING PRE-ENTRY CLIMATE CONTROL IF THEY HAVE ALREADY BEEN SWITCHED ON DURING REGULAR VEHICLE OPERATION:

- Fragrancing
- Ionization


Operating immediate pre-entry climate control via the climate bar

WARNING

Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

- ▶ Never leave persons, particularly children, unattended in the vehicle.





WARNING

Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

- ▶ Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it has been switched on repeatedly.

Requirements

- The vehicle is switched off.

Air conditioning of the vehicle interior can continue for up to 50 minutes, e.g. if the journey is interrupted.

- ▶ Press the  button on the climate bar on the central display.
- ▶ Set the temperature using the  and  arrows on the climate bar on the central display.

An LED on the climate bar on the central display indicates when pre-entry climate control is activated. It will light up blue when the vehicle is being cooled and red when it is being heated.

Air vents

ADJUSTING THE FRONT AIR VENTS

WARNING


Risk of burns or frostbite due to being too close to the air vents

Very hot or very cold air can flow from the air vents.

- ▶ Make sure that all vehicle occupants always maintain a sufficient distance from the air vents.
- ▶ If necessary, direct the airflow to another area of the vehicle interior.

TO GUARANTEE THE FLOW OF FRESH AIR THROUGH THE AIR VENTS INTO THE VEHICLE INTERIOR, NOTE THE FOLLOWING:

- Always keep the vents and ventilation grilles in the vehicle interior clear.
- Keep the air inlet grilles free of residue build-up (→ page 659).

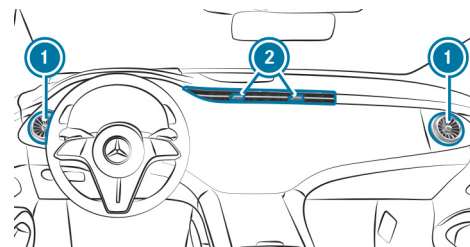

- ▶ **To open or close the side air vents:** hold the outer ring of side air vent  and turn it to the left or right as far as it will go.






- ▶ **To open or close the center air vent:** move controller ② inwards or outwards as far as it will go.
- ▶ **To adjust the airflow direction of the side air vents:** hold the center of side air vent ① and move it up or down or to the left or right.
- ▶ **To adjust the airflow direction of the center air vent:** hold the controller of center air vent ② and move it up or down or to the left or right.

ADJUSTING THE REAR AIR VENTS

⚠ WARNING

Risk of burns or frostbite due to being too close to the air vents
Very hot or very cold air can flow from the air vents.

- ▶ Make sure that all vehicle occupants always maintain a sufficient distance from the air vents.
- ▶ If necessary, direct the airflow to another area of the vehicle interior.

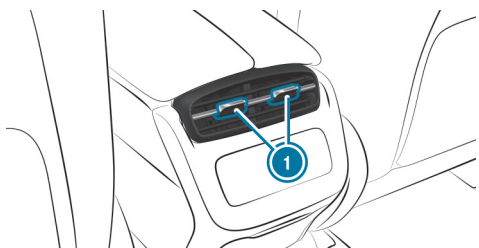

- ▶ **To open or close the rear air vents:** hold the controller of rear air vent ① and move it inwards or outwards as far as it will go.
- ▶ **To set the airflow direction of the rear air vents:** hold controller ① and move it up or down or to the left or right.





< Driving and parking

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Driving	>	Vehicle towing instructions	>
DYNAMIC SELECT	>		
Transmission	>		
Function of 4MATIC	>		
Charge the high-voltage battery	>		
Parking	>		
Driving and driving safety systems	>		



< Driving

Notes on electric driving

WARNING

Risk of chemical burns and poisoning from damaged high-voltage battery

If the housing of the high-voltage battery has been damaged, electrolyte and gases may leak out.

- ▶ Avoid contact with the skin, eyes or clothing.
- ▶ Immediately rinse electrolyte splashes off with water and seek medical attention straight away.

DANGER


Risk of fire and explosion from excessive internal pressure of the high-voltage battery

In the event of a vehicle fire, flammable gas can escape and ignite.

- ▶ If there is an unusual smell, smoke or burn marks, stop the charging process immediately.
- ▶ Leave the danger zone immediately. Secure the danger area at a sufficient distance.
- ▶ Call the fire service.

OBSERVE THE FOLLOWING NOTES ON VEHICLE NOISE EMISSIONS AND THE ACOUSTIC VEHICLE ALERTING SYSTEM:

- The vehicle is equipped with an all-electric drive system and produces considerably lower stationary and vehicle noise emissions than a vehicle with a combustion engine.
It is for this reason that the vehicle is equipped with a sound generator, which serves as an acoustic vehicle alerting system (AVAS). This safety system is prescribed by law.
The external noise produced by the sound generator can be heard in the vehicle interior when the vehicle is stationary and at low speeds and does not represent a malfunction.
- The sound generator will produce idling and speed-dependent driving noises up to a speed of approximately 25 mph (30 km/h).
This will help other road users, particularly pedestrians and cyclists, to hear your vehicle better.
- From a speed of 20 mph (20 km/h), the acoustic vehicle alerting system will gradually switch off.
- Despite the sound generator, the vehicle still may not be heard by other road users. Adapt your driving style accordingly.





Manually disconnecting the high-voltage on-board electrical system

DANGER

Risk of death and fire due to modified and/or damaged components of the high-voltage on-board electrical system

The vehicle's high-voltage on-board electrical system is under high voltage. If you modify component parts in the vehicle's high-voltage on-board electrical system or touch damaged component parts, you may be electrocuted. In addition, modified and/or damaged components may cause a fire.

In the event of an accident or impact to the underbody, components of the high-voltage electrical system may be damaged although the damage is not visible.

- ▶ Never make any modifications to the high-voltage on-board electrical system.
- ▶ Do not switch on or use the vehicle if its high-voltage on-board electrical system components have been modified or damaged.
- ▶ Never touch damaged components of the high-voltage on-board electrical system.
- ▶ After an accident, do not touch any components of the high-voltage on-board electrical system.
- ▶ After an accident, have the vehicle transported away.

- ▶ Have the components of the high-voltage on-board electrical system checked at a qualified specialist workshop and replaced if necessary.

Requirements:

ONLY DISCONNECT THE HIGH-VOLTAGE ON-BOARD ELECTRICAL SYSTEM MANUALLY IN THE FOLLOWING SITUATIONS:


- The restraint system  warning lamp lights up on the driver display, e.g. after an accident.
- The vehicle is badly damaged, e.g. after an accident, and restraint system components have not been triggered.

OPERATING THE HIGH-VOLTAGE DISCONNECT DEVICE

Only disconnect the high-voltage on-board electrical system manually in the above-mentioned situations.


- ▶ Switch off the vehicle.
- ▶ Shift the transmission to position **P**.
- ▶ Apply the electric parking brake.
- ▶ Secure the vehicle against rolling away.



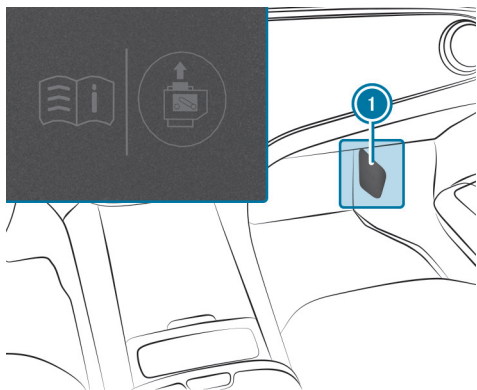

- ▶ Carefully remove cover ① of the fuse box in the front passenger footwell.

High-voltage disconnect device ③ is on the rear of the cover ①.

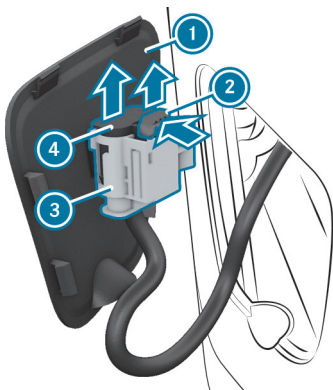

- ▶ Press release tab ② on high-voltage disconnect device ③ in the direction of the arrow and pull it out.

- ▶ Pull plug ④ in the direction of the arrow until it engages.

The high-voltage on-board electrical system is switched off.

All work on the drive system (including after disconnecting the high-voltage on-board electrical system manually) may only be carried out at a qualified specialist workshop.

Switching on the power supply or the vehicle



WARNING

Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.


IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the key out of reach of children.


This also applies to the Digital Vehicle Key.

**Requirements:**

- The key is in the vehicle and is detected.
- **Vehicles with Digital Vehicle Key:** a Digital Vehicle Key with drive authorization is detected.
- The brake pedal is not depressed.

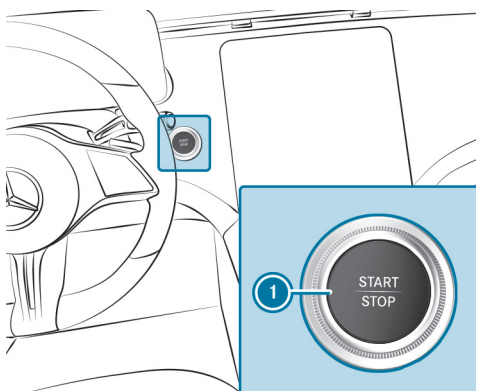

Vehicles with central display

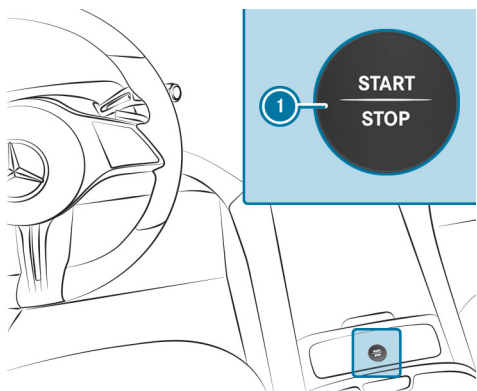

Vehicles with MBUX Hyperscreen

- ▶ **To switch on the power supply:** press button ① once.

You can e.g. switch on the windshield wiper.

THE POWER SUPPLY WILL BE SWITCHED OFF AGAIN IF THE FOLLOWING CONDITIONS ARE MET:


- You open the driver's door.
- You press button ① twice more.

- ▶ **To switch on the vehicle:** press button ① twice.

Indicator and warning lamps will light up on the driver display.

THE VEHICLE WILL BE SWITCHED OFF AGAIN IF ONE OF THE FOLLOWING CONDITIONS IS MET:

- You do not start the vehicle within 15 minutes and the transmission is in position **P** or the electric parking brake is applied.
- You press button ① once.





Starting the vehicle with the start/stop button

WARNING

Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:


- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the key out of reach of children.

This also applies to the Digital Vehicle Key.


Requirements:

- The key is in the vehicle and is detected.

- **Vehicles with Digital Vehicle Key:** a Digital Vehicle Key with drive authorization is detected.

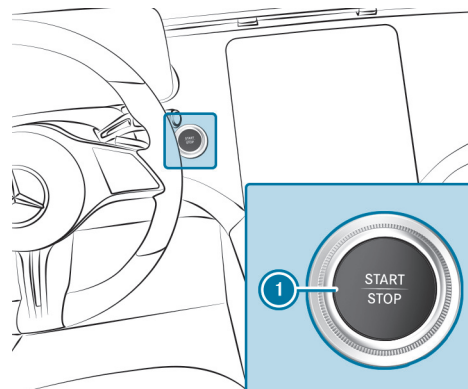

Vehicles with central display

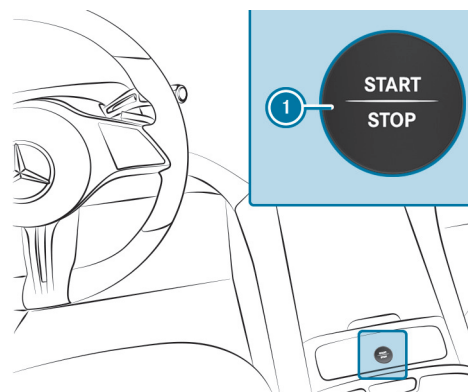

Vehicles with MBUX Hyperscreen

- ▶ Shift the transmission to position **P** or **N**.
- ▶ Depress the brake pedal and press button  once.
 - The vehicle will be started.



- The **READY** indicator appears on the driver display: the vehicle is ready to drive.
- ▶ If the vehicle does not start: switch off non-essential consumer equipment and press button  once.
- ▶ If the vehicle still does not start and the **Place the Key in the Marked Space** See **Operator's Manual** display message appears on the driver display: start the vehicle with the key in the marked space (emergency operation mode) (→ page 304).

 You can switch off the vehicle while driving. To do this, press and hold button  for about three seconds or press button  three times within three seconds. The transmission will shift to neutral **N** automatically. When you press button  again, the vehicle will start again and you can engage drive position **D** again. Be sure to observe the safety notes concerning this under "Driving tips" (→ page 306).

Observe any information regarding display messages that may be shown on the driver display.

Starting the vehicle in emergency operation mode



WARNING

Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the key out of reach of children.


This also applies to the Digital Vehicle Key.





STARTING THE VEHICLE WITH THE KEY IN THE STOWAGE SPACE

If the vehicle does not start and the [Place the Key in the Marked Space See Operator's Manual](#) display message appears on the driver's display, you can start the vehicle in emergency operation mode.

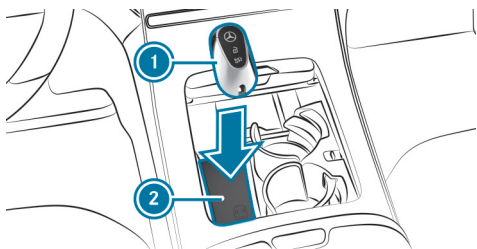

- ▶ Make sure that marked space ② is empty.
- ▶ Remove key ① from the key ring.
- ▶ Place key ① on symbol in marked space ②.

The vehicle will start after a short time.

If you remove key ① from marked space ②, it will still be possible to continue driving the vehicle. For further engine starts, however, key ① must be located on symbol in marked space ② during the entire journey.

- ▶ Have key ① checked at a qualified specialist workshop.

IF THE VEHICLE DOES NOT START:

- ▶ Place key ① in marked space ② and leave it there.
- ▶ Depress the brake pedal and start the vehicle using the start/stop button.

 You can switch on the power supply or the vehicle with the start/stop button (→ page 301).

Observe any information regarding display messages that may be shown on the driver display.


STARTING THE VEHICLE WITH THE DIGITAL VEHICLE KEY IN THE STOWAGE SPACE

REQUIREMENTS:

- The vehicle is equipped with the "Digital Vehicle Key" pre-installation.
- A Digital Vehicle Key with drive authorization is detected.

 Alternatively, you can use the vehicle key for emergency operation mode.
Mercedes-Benz recommends that you carry the vehicle key about your person in case of function restrictions.

If the vehicle does not start and the [Searching for Key in Stowage Tray or Digital Vehicle Key in Inductive Charging Bracket... See Operator's Manual](#) display message appears on the driver display, you can start the vehicle in emergency operation mode.

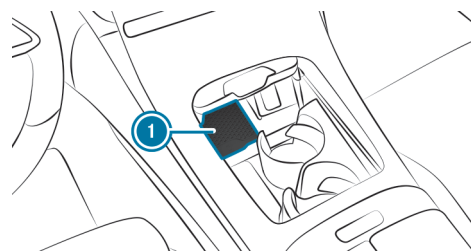

- ▶ Place the Digital Vehicle Key in marked space ①.



- ▶ Depress the brake pedal and start the vehicle using the start/stop button.
It may take a few seconds until the engine starts.
- ▶ When the **Key Not Detected** display message appears on the driver display, press the Start/Stop button again.

When the **READY** display appears on the driver's display, the vehicle is ready to drive.

Breaking-in notes

- In certain handling and driving safety systems, the sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered or after repairs. Full system effectiveness is reached only when this teaching-in process has concluded.
- Brake pads, brake discs and tires that are either new or have been replaced achieve optimum braking effect and grip only after the vehicle has been driven several hundred kilometers. Compensate for the reduced braking effect by applying greater force to the brake pedal.

Notes on acceleration increase

 Acceleration increase is not available for all models and versions.

 This function is an on-demand feature (→ page 96).

When the function is activated, a higher maximum power is available for the vehicle and the acceleration characteristics are improved. This does not change the maximum design speed of the vehicle.

Due to the increased power, there may be changes in the electric range.

Notes on driving



WARNING

Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This will jeopardize the operating- and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- ▶ Make sure that there is always sufficient clearance for the pedals.
- ▶ Always install the floor mats securely and as prescribed.
- ▶ Do not use loose floor mats and do not place floor mats on top of one another.



 **WARNING**

Risk of accident due to incorrect footwear

INCORRECT FOOTWEAR INCLUDES, FOR EXAMPLE:

- Shoes with platform soles
- Shoes with high heels
- Slippers

There is a risk of an accident.

- ▶ Always wear suitable footwear so that you can operate the pedals safely.

 WARNING

Risk of accident if the vehicle is switched off while driving

If you switch off the vehicle while driving, safety functions are restricted or no longer available.

This may affect the power steering system and the brake force boosting, for example.

You will need to use considerably more force to steer and brake, for example.

- ▶ Do not switch off the vehicle while driving.

 WARNING

Risk of accident and injury due to being under the influence of alcohol and drugs while driving

Drinking and driving and/or taking drugs and driving are very dangerous combinations. Even a small amount of alcohol or drugs can affect your reflexes, perceptions and judgment.

The possibility of a serious or even fatal accident are greatly increased when you drink or take drugs and drive.

- ▶ Do not drink or take drugs and drive or allow anyone to drive who has been drinking or taking drugs.

 WARNING

Risk of accident due to the brake system overheating

If you leave your foot on the brake pedal when driving, the brake system may overheat.

This increases the braking distance and the brake system can even fail.

- ▶ Never use the brake pedal as a footrest.
- ▶ Do not depress the brake pedal and the accelerator pedal at the same time while driving.





NOTE

Vehicle damage due to failure to observe the maximum permissible clearance height

If the vehicle height exceeds the maximum permissible clearance height, the roof and other vehicle parts may be damaged.

- ▶ Please observe the maximum clearance height indicated.
- ▶ If the vehicle exceeds the permissible clearance height, do not drive in.
- ▶ Take the modified vehicle height into account in the case of roof superstructures or other carrier systems.

 Please bear in mind that all speed values stated in this Operator's Manual are approximate values and are subject to a certain tolerance.

OBSERVE THE NOTES ON DRIVING WITH A ROOF LOAD, TRAILER OR FULLY LADEN VEHICLE.

Driving with a loaded roof luggage rack or trailer or with the vehicle fully laden or occupied changes the handling and steering characteristics of your vehicle.

THEREFORE PLEASE OBSERVE THE FOLLOWING NOTES:

- Do not exceed the permissible roof load and trailer load. Also observe the information in the technical data in this respect.
- Distribute the roof load and vehicle load evenly, and place heavy objects at the bottom. Also comply with the notes on loading the vehicle (→ page 230).

- Drive with care. Avoid sudden starting, braking and steering maneuvers or fast cornering.

NOTES ON DRIVING ON ROADS TREATED WITH DE-ICING SALT

The braking effect is limited on road surfaces treated with de-icing salt.

PLEASE THEREFORE BEAR IN MIND THE FOLLOWING NOTES:

- Due to salt build-up on the brake discs and brake linings, the braking distance can increase considerably or braking may be one-sided.
- Maintain a much greater safety distance to the vehicle traveling ahead.

REMOVE SALT BUILD-UP AS FOLLOWS:

- Brake occasionally, paying attention to the traffic conditions.
- Carefully depress the brake pedal at the end of the journey and when starting the next journey.

NOTES ON BRAKE CARE MODE IN CASE OF CORROSION ON THE BRAKE DISCS

Corrosion may occur on a vehicle's brake discs, for example as a result of an extended non-operational time, temperature and high air humidity or wetness. Aggressive cleaning agents or de-icing salt can also lead to increased corrosion on the brake discs.

REMOVE THE CORROSION AS FOLLOWS:

- Activate brake care mode in the multimedia system (→ page 664).

 Further information on brake care mode (→ page 663).
Brake care mode is not available in Mercedes-AMG vehicles.



NOTES ON HYDROPLANING

Hydroplaning can take place if a certain depth of water has built up on the road surface.

OBSERVE THE FOLLOWING NOTES DURING HEAVY PRECIPITATION OR IN CONDITIONS IN WHICH HYDROPLANING MAY OCCUR:

- Reduce speed.
- Avoid tire ruts.
- Avoid sudden steering movements.
- Brake carefully.

 Also observe the notes on regularly checking wheels and tires (→ page 37).

NOTES ON DRIVING THROUGH WATER ON THE ROAD

Water ingress can damage the drive system, electrics and transmission.

OBSERVE THE FOLLOWING IF YOU NEED TO DRIVE THROUGH WATER:

- The water, when calm, should reach no higher than the lower edge of the vehicle body.
- Drive at a walking pace at most, otherwise water may enter the vehicle.
- Vehicles traveling ahead or oncoming vehicles can create waves that may exceed the maximum permissible depth of water.

The service brakes have a reduced braking effect after driving through water. The regenerative brake system is not adversely affected. Brake carefully with the service brake, paying attention to the traffic conditions, until the braking effect has been fully restored.

NOTES ON LONG DOWNHILL STRETCHES

If you keep the brake pedal continuously depressed when negotiating a long downhill stretch, you will cause excessive brake wear and the brake system may overheat.

PLEASE THEREFORE BEAR IN MIND THE FOLLOWING NOTES:

- When negotiating downhill gradients, use the braking effect of the regenerative brake system. Set the recuperation level to **D**  (→ page 311).
- Please note that if the high-voltage battery is cold or has a high state of charge, the braking effect of the regenerative brake system is reduced or completely absent.
- Charge the high-voltage battery to a maximum of 80 % before making long descents.

Function of rear axle steering

The rear axle steering is an electromechanical auxiliary steering on the rear axle which adjusts the steering of the rear wheels according to the position of the front wheels, depending on the speed. This results in greater mobility and improved driving stability for the vehicle.

REAR AXLE STEERING HAS THE FOLLOWING CHARACTERISTICS:

- reduced steering effort and turning circle resulting in reduced parking effort
- more direct steering resulting in improved control of the vehicle
- improved cornering of the vehicle

Observe the notes on snow chains and snow chain mode (→ page 700).





Information on the AMG ceramic high-performance composite brake system


The brake system is designed for heavy loads. This may lead to noise when braking. This effect can also occur after washing the vehicle.

THE NOISE DEPENDS ON THE FOLLOWING FACTORS:

- speed
- brake force
- environmental conditions, e.g. temperature and air humidity

i Have the brake system checked at a qualified specialist workshop after it has been subjected to extreme loads.

ECO display function

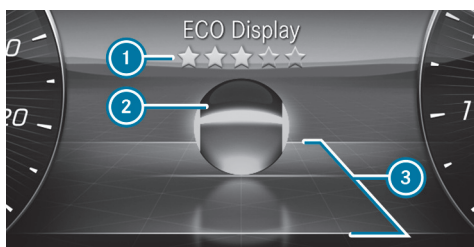

The ECO display shows an evaluation of your driving style on the driver display depending on the situation. This enables you to check the efficiency of your driving style and adjust it if necessary. The **ECO Display** menu shows a ball (2) that will roll forwards or backwards in the direction of travel on a stylized road according to the driving characteristics.

Above and below the road, lines mark the area for an efficient driving style (3). Ball (2) will light up in green if it is rolling within these lines. Outside the lines, the ball will light up in orange.

THE ECO DISPLAY ASSESSES THE FOLLOWING CRITERIA FOR AN ECONOMICAL DRIVING STYLE:

- Coasting at the right times
- Consistent speed
- Moderate acceleration

The overall assessment of your driving style "from start" is indicated using stars (1). It starts with five empty stars, which you can fill one after the other if you drive efficiently. When all five stars are filled, a glow will appear in the background.

i You can call up the **ECO Display** function via the **Classic** menu (→ page 455).

Regenerative brake system

FUNCTION OF THE REGENERATIVE BRAKE SYSTEM

The regenerative brake system converts the vehicle's kinetic energy into electrical energy during overrun mode and braking.

Depending on the selected recuperation level, the electric motors are operated as an alternator when in overrun mode and during braking in order to charge the high-voltage battery while driving. As soon as you take your foot off the accelerator pedal while driving in transmission position **[D]** or **[R]**, recuperation starts in overrun mode.



The higher the recuperation, the more sharply the vehicle is braked when coasting and the more electrical energy is fed into the high-voltage battery.

The deceleration in overrun mode may not be sufficient depending on the driving situation. Also brake with the service brake if necessary. Always adapt your speed to the driving situation and keep sufficient distance.

-  If you brake heavily, the mechanical brake is also used. This means that the maximum recuperation energy cannot be recovered. The more proactively you accelerate and brake, the more efficiently energy can be recuperated.

SYSTEM LIMITS

WITH RECUPERATION IN OVERRUN MODE, THE BRAKING EFFECT OF THE ELECTRIC MOTOR IS ONLY REDUCED OR NON-EXISTENT IN THE FOLLOWING SITUATIONS:


- when the high-voltage battery state of charge increases
- if the high-voltage battery is not yet at a normal operating temperature

-  Be mindful of the system limits, especially before long downhill stretches where the braking effect of the regenerative brake system is to be used (→ page 306).

You can watch an animation on this topic via the following link:

MANUALLY SETTING REGENERATIVE DECELERATION

In transmission position **D**, you can use the steering wheel shift paddles to manually adjust the intensity of the recuperation in overrun mode.

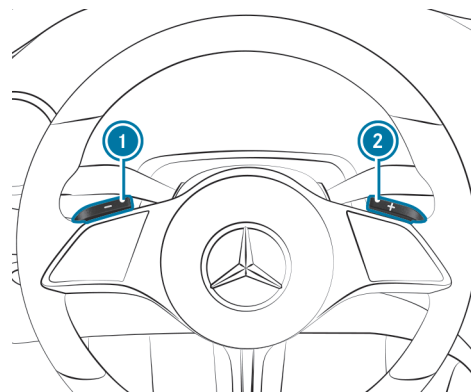

THE FOLLOWING RECUPERATION LEVELS ARE AVAILABLE:

- **D AUTO** Intelligent, anticipatory recuperation with ECO Assist (→ page 312)
 - **D +** No recuperation: the vehicle glides, rolls freely
 - **D** Normal recuperation (standard setting)
 - **D -** Increased recuperation: increased deceleration in overrun mode
- ▶ Select transmission position **D**.
- ▶ **Increase recuperation:** Pull shift paddle **1** briefly.
- ▶ **Reduce recuperation:** Pull shift paddle **2** briefly.
- ▶ Select **D AUTO** : Pull shift paddle **1** or **2**.

When changing to transmission position **R**, the current recuperation level is adopted with the exception of **D AUTO**. If **D AUTO** was previously selected, the vehicle deceleration of the recuperation level **D** is set in transmission position **R**. With a subsequent change to transmission position **D**, the previously selected variable recuperation **D AUTO** is set again.



- i** After restarting the vehicle, **D** is automatically set as the recuperation level.

The driver display shows the currently set recuperation level next to the transmission position indicator.

ECO Assist

ECO ASSIST FUNCTION

ECO Assist is only an aid. It is not a substitute for you paying attention to your surroundings and does not relieve you of your responsibility pertaining to road traffic law. The driver is responsible for keeping a safe distance from the vehicle in front, for vehicle speed and for braking in good time.

WARNING

Risk of accident if ECO Assist does not provide sufficient deceleration

ECO Assist only brakes your vehicle when you take your foot off the gas pedal. If vehicles are detected late, e.g. after tight curves, or if you do not react immediately to the ECO Assist display, the deceleration may not be sufficient.

- React promptly to the ECO Assist recommendation and take your foot off the gas pedal.
- Adjust your speed to the driving conditions and maintain a suitable distance from the vehicle in front.
- Brake the vehicle yourself and/or take evasive action.

ECO Assist is active only in **D** **AUTO** (→ page 311).

Depending on the vehicle's equipment, ECO Assist analyzes data for the vehicle's expected route. This allows the system to optimally adjust the driving style for the route ahead, use minimal energy and recuperate as much as possible. If the system has detected an event ahead or a vehicle in front and the vehicle is approaching the event, ECO Assist will calculate an optimized speed profile based on the distance, speed and available route information.

If you release the accelerator pedal in this case, intelligent recuperation will start in overrun mode. If ECO Assist has detected a vehicle traveling in front or a stationary vehicle ahead, it can apply the brakes to bring your vehicle to a standstill. This may be the case, for example, at the end of a traffic jam or if the detected vehicle ahead stops in front of you.

If the deceleration provided by ECO Assist is not sufficient, you will also need to brake with the service brake. This will be the case particularly if, for example, you pull away again in slow-moving traffic and the distance to the vehicle in front is very short.

Depending on the vehicle equipment and at low speeds, e.g. in a parking garage or on play streets, no adjustment will be made for stationary vehicles and therefore there will be no display.



- ① "Foot off the accelerator" recommendation
- ② Route event ahead



 ECO Assist can also be shown on the head-up display.

If a route event that requires an adjustment of your driving style is detected ahead, corresponding symbol  and the  symbol (gray) will be displayed.

If you release the accelerator pedal, the  symbol will turn green and recuperation in overrun mode will be initiated. If the deceleration is not sufficient, also apply the service brake.

If ECO Assist intervenes for a route event ahead and you press the accelerator pedal, you will end control by ECO Assist. This does not apply in the case of a vehicle in front.

THE ECO ASSIST DISPLAY WILL BE HIDDEN AGAIN IN THE FOLLOWING CASES:

- You do not react to the ECO Assist recommendation for a long time.
- You depress the accelerator pedal while ECO Assist is intervening because of a route event ahead. This does not apply in the case of a vehicle in front.
- ECO Assist cannot identify any further recommendations from the route ahead.

IN ADDITION TO A VEHICLE IN FRONT , ECO ASSIST CAN DETECT THE FOLLOWING ROUTE EVENTS  DEPENDING ON THE VEHICLE'S EQUIPMENT:

-  Traffic circle
-  Sharp bend
-  Intersection

 T-intersection

 Downhill gradient

 Speed limit

ECO Assist can also react to other intersections or intersections if you activate the turn signal indicator in good time.

 On roads with an obligation to drive in a lane as far to the right as possible, vehicles driving in the lane to your left will also be recognized as vehicles ahead of you.

To enable ECO Assist to react to future route events, the equipment-dependent speed adaptation functions of Active Distance Assist must be active (→ page 387).


SYSTEM LIMITS

If the calculated route is adhered to when route guidance is active, ECO Assist will operate with greater accuracy. The basic function is also available when route guidance is not active. Not all information and traffic situations can be foreseen. The quality depends on the map data.

 ECO Assist will be available after you drive off, as soon as the sensor check is completed.

THE SYSTEM MAY BE IMPAIRED OR MAY NOT FUNCTION IN THE FOLLOWING SITUATIONS:

- if there is poor visibility, e.g. owing to insufficient road illumination, highly variable shadows, rain, snow, fog or heavy spray
- if there is glare, e.g. from oncoming traffic, direct sunlight or reflections





- if the windshield is dirty in the vicinity of the multifunction camera
- if the multifunction camera is fogged up, damaged or obscured
- if road signs are hard to detect, e.g. due to dirt, snow or insufficient lighting, or because they are obscured
- if the digital road map of the navigation system has incorrect or outdated information
- if signs are ambiguous, e.g. road signs in roadworks or in adjacent lanes
- if the radar sensors are dirty or obscured
- when you drive on roads with steep gradients
- if there are narrow vehicles in front, such as bicycles or motorcycles

You can watch an animation on this topic via the following link:

Function of the haptic accelerator pedal

The haptic accelerator pedal features an additional pressure point to help you drive as efficiently as possible in drive program .

Range maximization

RANGE MAXIMIZATION FUNCTION

The range maximization function enables a maximum range gain. To achieve this, the function partially or completely switches off convenience systems that are not relevant to driving and activates efficiency-enhancing driving functions.

THE RANGE MAXIMIZATION FUNCTION CONTROLS THE RESTRICTIONS OF THE FOLLOWING FUNCTION GROUPS:

- **Climate control**

- Restricting climate control functions and deactivating front windshield, rear window and mirror heaters

- **Interior**

- Switching off ambient lighting, displays and certain charging functions

- **Seating comfort**

- Deactivating the steering wheel heater, seat heating, ventilation and massage programs

- **ECO drive functions**

- Changing to the  drive program, activating ECO Assist and the   recuperation level

If necessary, you can deactivate the restrictions of individual function groups again. This will reduce the maximum range gain by the value specified for the function group.

If you switch on a deactivated function while range maximization is activated, all restrictions of the corresponding function group are removed, and the maximum range gain is reduced accordingly. If you switch on the seat heating again, for example, all restrictions on the "Seating comfort" function group are deactivated.

This does not apply to the "ECO driving functions" group, as the range gain in this case depends mainly on your personal driving style. The activated ECO driving functions help you to drive in an energy-efficient manner. The specified range gain for the ECO drive functions can be achieved only if you observe the driving instructions and recommendations displayed and drive without kickdown.





ACTIVATING/DEACTIVATING RANGE MAXIMIZATION

Multimedia system:

Settings EQ Range

- ▶ Activate or deactivate **Maximum Range**.

All function groups concerned will be activated or deactivated.


or

- ▶ Individually activate or deactivate the individual subsystems of the four **Climate Control**, **Interior**, **Seat Comfort** and **ECO Driving Functions** function groups.

AMG Active Sound

SELECTING A SUPPORTING SOUND CHARACTERISTIC WITH THE STEERING-WHEEL BUTTON

- You can select a comfortable (Balanced), sporty (Sport) or very sporty (Powerful) supporting sound characteristic for interior and drive noises using the steering-wheel button or the multimedia system (→ page 322).

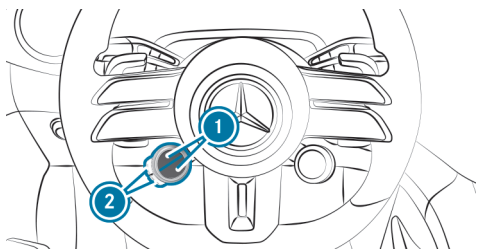

- ▶ Press upper or lower display button repeatedly until it displays the symbol.


- If the display button does not show the symbol, then it is hidden. How functions are displayed and the order in which they are displayed can be set in the multimedia system (→ page 316).

- ▶ Press corresponding button .

THE COLOR OF THE SYMBOL INDICATES THE SUPPORTING SOUND CHARACTERISTIC CURRENTLY SELECTED:


- **Blue:** Balanced – comfortable
- **Orange:** Sport – sporty
- **Red:** Powerful – very sporty

Function of the AMG steering wheel buttons

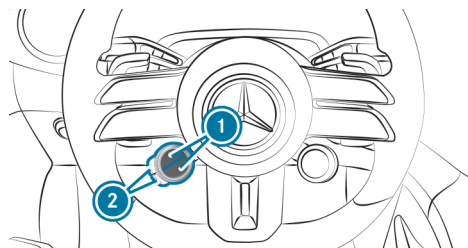

The AMG steering wheel buttons are an additional control element with two buttons on the steering wheel.

You can assign two vehicle functions of your choice to the control element. You can change between the available functions for the corresponding button





① by pressing the upper or lower part of the display buttons ② repeatedly. The display buttons ① show each function selected.

THE FOLLOWING FUNCTIONS ARE AVAILABLE DEPENDING ON THE EQUIPMENT:

- ESP® (→ page 367)
- AMG RIDE CONTROL + (→ page 413)
- Camera views (→ page 420)
- AMG DYNAMICS (→ page 319)
- AMG Active Sound (→ page 315)

In addition, all the functions you have saved as favorites in the multimedia system are available for selection. Information on favorites (→ page 504).

Individual functions may be hidden. How functions are displayed and the order in which they are displayed can be set in the multimedia system (→ page 316).

If you have assigned a specific function to one of the display buttons ①, you can operate this function with the corresponding button ②.

The assignment of the display buttons ① remains stored even after a vehicle restart. But the operating status of the respective function is reset to the default.

Setting the AMG steering wheel buttons

Multimedia system:

>> Settings >> System >> Control Elements
 >> AMG Steer. Wheel Buttons

OVERVIEW OF THE AMG SETTINGS SELECT MENU

The left display buttons on the steering wheel can be set in the **SETTINGS SELECT** menu.



(Example of representation) Representation and arrangement of content equipment-dependent.

- ① Selection area for the available functions
- ② Adjustable steering wheel buttons
- ③ Calls up setting mode

► Select the appropriate steering wheel button.

SETTING THE STEERING WHEEL BUTTONS

The **SETTINGS SELECT** menu can also be called up using the AMG button on the center console or by pressing and holding the respective display button.

► Select the upper or lower display button in the central display.



- ▶ Press ③ and select the desired function for assignment from ①.

 The setting mode can also be called up by pressing and holding the current assignment in selection area ①.

ADDING NEW FUNCTIONS FOR SELECTION

- ▶ Select the upper or lower display button in the central display.
- ▶ Press  in selection area ① and select the desired function from the list.
The selected function is assigned to selection area ① and can be selected from there for the steering wheel buttons.

DELETING BUTTON ASSIGNMENT

- ▶ Select the upper or lower display button in the central display.
- ▶ Press ③.
- ▶ Press  for the respective function in selection area ① to delete the selected assignment of the display button.





< DYNAMIC SELECT

Function of DYNAMIC SELECT

DYNAMIC SELECT allows a drive program to be selected quickly according to the current driving conditions or the desired vehicle characteristics.

DEPENDING ON THE DRIVE PROGRAM SELECTED, THE FOLLOWING VEHICLE CHARACTERISTICS WILL CHANGE:

- Drive
- **Vehicles with AIRMATIC:** suspension (→ page 413)
 - Suspension and damping
 - Vehicle level (speed-dependent)
- Steering
- ESP®
- Point of resistance in the haptic accelerator pedal

 In drive program , an additional point of resistance is activated in the haptic accelerator pedal.

- First point of resistance: at approximately 60% of pedal travel (only in )
- Second point of resistance: transition to kick-down (always available)

AVAILABLE DRIVE PROGRAMS

INDIVIDUAL

- Individual settings for the following vehicle characteristics (→ page 321):
 - Drive
 - Suspension
 - Steering
 - ESP®

SPORT

- Sporty and dynamic driving characteristics
- Suitable only for good road conditions, a dry surface and a clear stretch of road

COMFORT

- Comfortable driving style
- Recommended for all road conditions
- Best balance between efficiency and performance for all driving conditions

ECO

- Economical setting of vehicle functions





- Recommended for all road conditions
- Additional first point of resistance in the haptic accelerator pedal indicates an efficient, economical driving style

The ESP® settings in the  and  drive programs are designed for stability. Therefore, choose one of these drive programs especially when transporting roof loads, in trailer operation and when the vehicle is fully laden or fully occupied.

Function of DYNAMIC SELECT (Mercedes-AMG vehicles)

DYNAMIC SELECT allows a drive program to be selected quickly according to the current driving conditions or the desired vehicle characteristics.

YOU CAN SELECT THE FOLLOWING DRIVE PROGRAMS:

-  **Slippery**
 - Power level 1
 - With limited power release for optimized pulling away and driving characteristics in wintry and slippery road conditions
 - Kickdown not available
-  **Comfort**
 - Power level 2
 - With moderate power release for comfortable driving and maximum range
-  **Individual**
 - For custom settings for drive system, AMG DYNAMICS, suspension and sound in the vehicle interior
-  **Sport**

- Power level 3
- With somewhat limited power release for sporty driving
-  **Sport+**
 - Power level 4
 - Maximum power availability for particularly sporty driving

DEPENDING ON THE DRIVE PROGRAM SELECTED, THE FOLLOWING VEHICLE CHARACTERISTICS WILL CHANGE:

- Drive and power availability
 - Power release for the drive system will be selected automatically depending on the drive program.
 - The four power levels are designed to provide constant power over as long a period as possible in the respective drive program.
- AMG DYNAMICS
 - The three agility functions, Basic, Advanced and Pro, will be selected automatically depending on the drive program.
 - The steering, all-wheel drive and stabilization functions will be adapted to the selected drive program.
- Suspension
- Steering
- AMG Active Sound sound characteristic

The ESP® settings in drive programs  and  are designed for stability. Therefore, choose one of these drive programs especially when transporting roof loads, in trailer operation and when the vehicle is fully laden or fully occupied.

If you depress the accelerator pedal beyond the point of resistance (kick-down), the maximum power will always be available in all drive programs with the exception of the drive program . Kickdown is not available in the drive program .






i You can set the vehicle characteristics using the multimedia system (→ page 322).

i You can also adjust the agility functions of AMG Dynamics using the AMG steering-wheel buttons.


Selecting a drive program

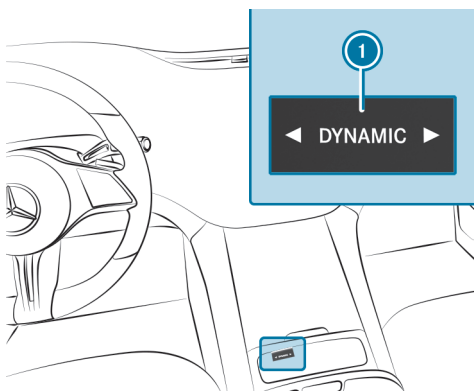

- ▶ Press DYNAMIC SELECT button **1** on the left or right.
The drive program selected will appear on the driver display.

Selecting a drive program (Mercedes-AMG vehicles)


SELECTION WITH THE RIGHT-HAND AMG STEERING-WHEEL BUTTON

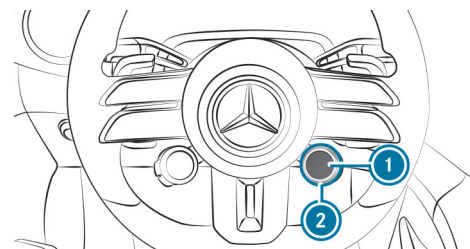

- ▶ Turn rotary switch **2**.
The selected drive program will appear on display button **1** and on the driver's display.


i Individual drive programs may not be shown. How drive programs are displayed and the order in which they are displayed can be set in the multimedia system (→ page 322).

- ▶ **To select the  drive program directly:** press display button **1**.





SELECTION VIA THE CENTRAL DISPLAY (MULTIMEDIA SYSTEM)

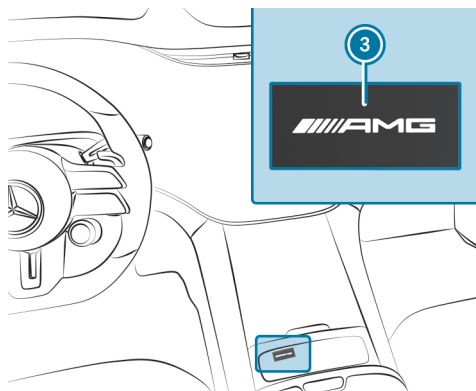

- ▶ Press button and select the drive program via the central display (→ page 322).

Configuring DYNAMIC SELECT in the multimedia system

Multimedia system:



SETTING THE I DRIVE PROGRAM

- ▶ Select Individual.
- ▶ Select and set a category.

SETTING DRIVE PROGRAM C

- ▶ Select **Comfort**.

- ▶ Select **Route Based** or **Standard**.

If route guidance is active and the **Route Based** option has been switched on, the electrical energy is distributed intelligently in both urban and non-urban areas over the entire route.

With the **Standard** option, the vehicle drives in its standard drive program (**Comfort**). There is no distribution of electrical energy over the entire route. The high-voltage battery is exhausted.

SWITCHING THE RESET DISPLAY ON/OFF

- ▶ Activate or deactivate **Request at Start**.

- This function must be activated for each user profile separately. The drive program for the respective user profile of the last driver is only stored if this function is activated.

Function on: the next time the vehicle is started a prompt appears asking whether the last active drive program should be restored.

- The prompt appears only if the previously active settings deviate from the standard settings.

Function off: the next time the vehicle is started the **Comfort** drive program is set automatically.

Displaying vehicle data

Multimedia system:



- ▶ Select **Vehicle**.

The vehicle data is displayed.



Calling up the fuel consumption indicator

Multimedia system:



- ▶ Select **Consumption**.


The current and average fuel consumption will be displayed.

Setting AMG DYNAMIC SELECT in the MBUX multimedia system

Multimedia system:



OVERVIEW OF THE AMG DYNAMIC SELECT MENU

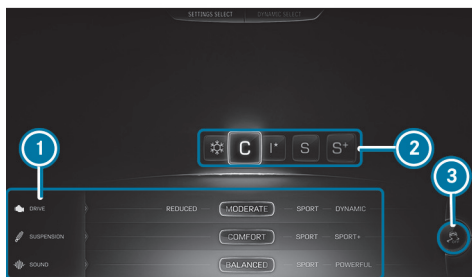

(Example of representation) Representation and arrangement of content equipment-dependent.

- ① AMG drive program settings
- ② Drive programs
- ③ ESP® (→ page 367)

- ① Depending on the equipment, the AMG **DYNAMIC SELECT** menu can also be called up using the AMG button in the center console.

- ▶ Select the appropriate drive program.

The settings of the drive programs can be adjusted individually. The setting mode for the drive programs can also be called up by pressing and holding the current configuration in selection area ②.

- ▶ Select the desired tab on the left and make the relevant setting.

SETTING OPTIONS FOR THE DRIVE PROGRAMS (EQUIPMENT-DEPENDENT):

- AMG DYNAMICS:
Basic/Advanced/Pro
- Sound:
Balanced/Sport/Powerful
- Drive (can only be set in the  **Individual** drive program):
Reduced/Moderate/Sport/Dynamic
- Suspension:
Comfort/Sport/Sport+

SETTING THE I DRIVE PROGRAM

- ▶ Select  **Individual**.
- ▶ Select and set a category.

- ① A sporty ESP mode can be set in conjunction with a sporty suspension mode.



< Transmission

DIRECT SELECT lever

FUNCTION OF THE DIRECT SELECT LEVER

WARNING

Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
 - changing the gearbox position.
 - starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.

- Keep the key out of reach of children.

This also applies to the Digital Vehicle Key.





WARNING

Risk of accident- and injury when the transmission position is not engaged

The current transmission position will be highlighted on the driver display.


If the selected transmission position is not highlighted, the vehicle may pull away in the wrong direction or roll away.

- After changing the transmission position, always check the transmission position indicator on the driver display.

If the transmission position is not highlighted on the driver display even after a short time:


- Pay attention to the display messages.
- Pull away carefully and check the engaged transmission position.
- When parking, engage the parking brake and secure the vehicle against rolling away.
- Have the transmission checked immediately at a qualified specialist workshop.

Use the DIRECT SELECT lever to switch the transmission position. The current transmission position will be highlighted on the driver display.

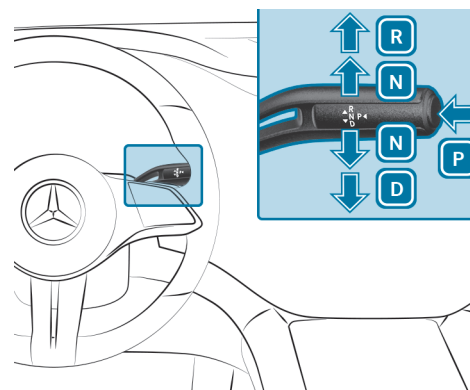

- P** Park position
- R** Reverse gear
- N** Neutral
- D** Drive position


ENGAGING REVERSE GEAR R

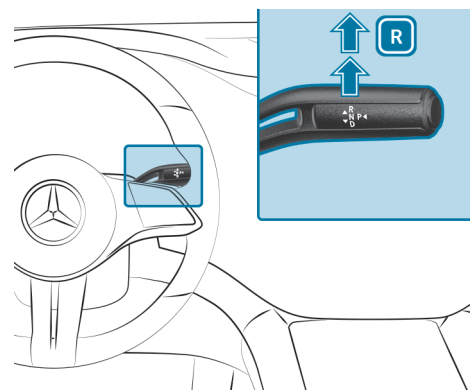

- Depress the brake pedal and push the DIRECT SELECT lever up past the first point of resistance.



ENGAGING NEUTRAL N

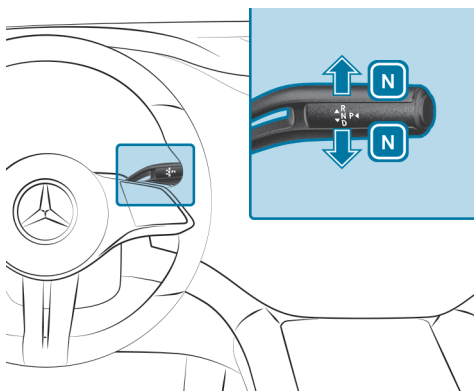

- ▶ Depress the brake pedal and push the DIRECT SELECT lever up or down to the first point of resistance, holding it there until transmission position **N** is shown on the driver display.

Subsequently releasing the brake pedal will allow you to move the vehicle freely, e.g. to push it or tow it.

IF YOU WANT THE TRANSMISSION TO REMAIN IN NEUTRAL N EVEN IF THE VEHICLE IS SWITCHED OFF:

- ▶ Start the vehicle.
- ▶ Depress the brake pedal and engage neutral **N**.
- ▶ Release the brake pedal.
- ▶ Switch off the vehicle.

i If you then exit the vehicle leaving the key in the vehicle, the transmission will remain in neutral **N**.

Vehicles with Digital Vehicle Key: Make sure that a vehicle key or Digital Vehicle Key is in the vehicle and that the automatic transmission remains in neutral **N**.

IF THE AUTOMATIC TRANSMISSION DOES NOT STAY IN NEUTRAL ⁽¹³⁾:

- Restart the vehicle and repeat the procedure.





ENGAGING PARK POSITION P

WARNING

Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:


- releasing the parking brake.
 - changing the gearbox position.
 - starting the vehicle.
- ▶ Never leave children unattended in the vehicle.
 - ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
 - ▶ Keep the key out of reach of children.

NOTE

Damage due to engaging park position **P** while the vehicle is rolling

If you shift the transmission into park position **P** while the vehicle is rolling, the transmission may be damaged.

- ▶ If the vehicle is rolling, do not open a door.
- ▶ Only engage park position **P** when the vehicle is stationary.

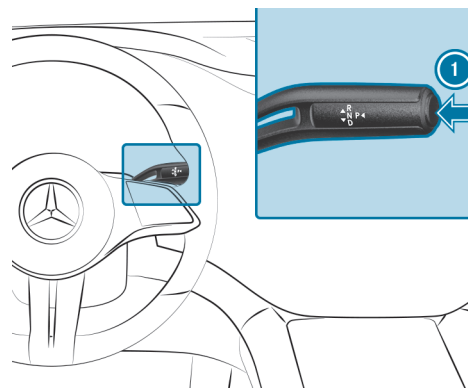

- ▶ Observe the notes on parking the vehicle (→ page 350).
- ▶ Depress the brake pedal until the vehicle comes to a standstill.
- ▶ When the vehicle is stationary, press button ①.

When the **P** transmission position display is shown, park position is engaged. If the **P** transmission position display is not shown, apply the parking brake and secure the vehicle to prevent it from rolling away.






- i** Depending on the situation, it may take a short time until **P** is engaged. Therefore, always pay attention to the transmission position display.

PARK POSITION ¹⁴ WILL BE ENGAGED AUTOMATICALLY IF ONE OF THE FOLLOWING CONDITIONS IS MET:


- You switch the stationary vehicle off in transmission position **D** or **R**.
- You open the driver's door when the vehicle is stationary in transmission position **D** or **R**.
- When the vehicle is rolling, you switch it off in transmission position **D** or **R** and bring it to a standstill.
- When the vehicle is rolling, you shift to transmission position **N**, bring the vehicle to a standstill and open the driver's door when the vehicle is stationary.
- Engaging park position **P** automatically is required by the vehicle.

- i** To maneuver with the driver's door open, open the driver's door while the vehicle is stationary and engage transmission position **D** or **R** again.

ENGAGING DRIVE POSITION D

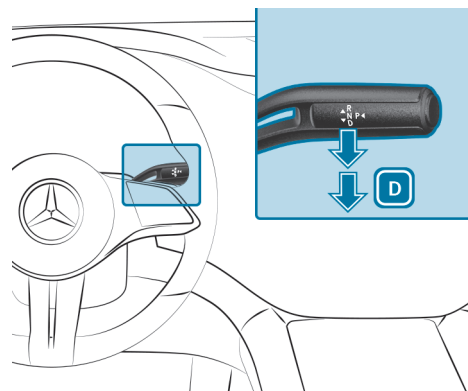

- Depress the brake pedal and push the DIRECT SELECT lever down past the first point of resistance.





< Function of 4MATIC

The flexible all-wheel distribution of the 4MATIC means the drive is always ideally distributed between both axles. Depending on the situation, only the front axle or only the rear axle can be driven, or the drive can be distributed continuously between both axles.

This means that recuperation can be used even more effectively and the range of the vehicle can be increased (→ page 310).

Together with ESP® and 4ETS, 4MATIC improves the traction of your vehicle whenever a driven wheel spins due to insufficient traction.

If you fail to adapt your driving style, 4MATIC can neither reduce the risk of an accident nor override the laws of physics. It cannot take into account road, weather or traffic conditions. 4MATIC is only an aid. You are responsible especially for maintaining a safe distance from the vehicle in front, for vehicle speed, for braking in good time and for staying in lane.

-  In wintry road conditions, the maximum effect of the flexible all-wheel distribution can be achieved only if you use winter tires (M+S tires), with snow chains if necessary.





< Charge the high-voltage battery

Notes on charging the high-voltage battery

NOTE

High-voltage battery damage due to leaving the vehicle idle for lengthy periods of time

Lithium-ion batteries experience a natural self-discharge.

Exhaustive discharging can therefore occur if the vehicle is idle for several months. This can damage the high-voltage battery.

- ▶ To avoid damage, please observe the following recommendations when handling the high-voltage battery.

NOTE

Accelerated aging of the high-voltage battery due to not observing the following recommendations

As a result of its basic characteristics, the storage capacity of and the amount of energy available from the high-voltage battery decreases over the course of its life. Due to this, both the maximum electrical range that can be achieved by the vehicle and its maximum electrical output can be impaired.

THE FOLLOWING FACTORS COULD ACCELERATE THE AGING OF THE HIGH-VOLTAGE BATTERY:

- Frequent full charging (condition of charge 100%) of the high-voltage battery, in particular without subsequently driving directly afterwards
- Frequent rapid charging with direct current (mode 4)
- Leaving the vehicle idle for lengthy periods at high ambient temperatures
- ▶ To avoid accelerated aging, please observe the following recommendations when handling the high-voltage battery.





NOTE

Damage to the drive system when the high-voltage battery is charged at extreme altitudes

The drive system may be damaged if you charge the high-voltage battery at extreme altitudes more than 13123.36 ft (4000 m) above sea level.

Continuing the journey may then no longer be possible.

- Avoid charging processes at extreme altitudes.

RECOMMENDATIONS WHEN HANDLING THE HIGH-VOLTAGE BATTERY:


- If the outside temperature is above 50 °F (10 °C), park the vehicle overnight with a state of charge below 20 % every six months.
- From a state of charge of 80 % the charging time increases significantly.
- At a state of charge below 20 % there may be problems restarting the vehicle, especially in very low outside temperatures below 32 °F (0 °C).
- Quick-charge the high-voltage battery with direct current (mode 4) only when required.
- The charging time of the high-voltage battery may change during the battery service life.
- In the case of longer non-operational times:
 - Park the vehicle with the high-voltage battery at a state of charge between 30% and 50%.
 - Do not permanently connect the high-voltage battery to power supply equipment.
 - Avoid high outside temperatures if possible.
 - Do not disconnect the 12 V battery, otherwise the condition of the vehicle's high-voltage battery cannot be monitored.

- Check the high-voltage battery's state of charge every six weeks (→ page 346).

YOU CAN CONTRIBUTE TO REDUCING THE VEHICLE'S ENERGY CONSUMPTION IN THE FOLLOWING WAYS:

- An anticipatory driving style (→ page 310)
- Reduced use of electrical consumers
- Having the vehicle regularly serviced

You can charge the high-voltage battery with both alternating current (mode 2 or 3) and direct current (mode 4).

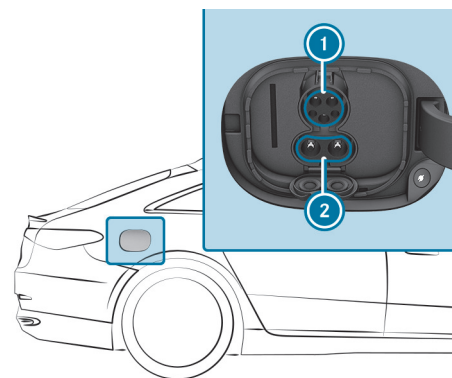

- ① AC charging connection
- ② Socket extension for DC charging

i When using a CCS charging cable (Combined Charging System) for charging with direct current, both areas of the vehicle socket are covered by the charging cable plug.



The lower DC charging socket is protected by a hinged cover.

CHARGING OPTIONS FOR THE HIGH-VOLTAGE BATTERY (MODE 2, 3 OR 4):

- while driving by means of recuperation
- stationary AC charging:
 - at a mains socket (mode 2)
 - at a wallbox or charging station (mode 3)
- stationary DC charging:
 - at a rapid-charging station (mode 4)

Depending on the country-specific vehicle equipment and your vehicle's charging cable, single-phase AC charging is also possible.

Observe the different mains requirements of your current location when charging. Only use charging cables which conform to the mains requirements. Consult a qualified electrician or your local mains operator if you have any questions.

It is recommended that you charge the high-voltage battery at a wallbox or charging station due to the higher charging power and better charging efficiency offered.

SYSTEM LIMITS

THE PERFORMANCE OF THE HIGH-VOLTAGE BATTERY MAY BE IMPAIRED BY THE FOLLOWING:

- high or low outside temperatures
- electrical auxiliary consumers in the vehicle being switched on, e.g. operating the air conditioning system
- extended non-operational periods without charging

THE CHARGING TIME OR THE CHARGING POWER OF THE HIGH-VOLTAGE BATTERY MAY BE INCREASED BY THE FOLLOWING:

- high or low outside temperatures
- a low or high state of charge of the high-voltage battery
- the maximum available charging current of the charging device
- the charging process settings in the multimedia system (→ page 347)

You can watch an animation on this topic via the following link:

Stowing the charging cable

Always stow the vehicle's charging cable in the charging cable bag provided, and secure the charging cable bag in the trunk or load compartment with the included retaining strap. Otherwise, the charging cable bag with the charging cable is not sufficiently secured.




Example: charging cable bag in the trunk/load compartment

As delivered, charging cable bag ① with retaining strap ② is located in the trunk or load compartment. To secure the charging cable bag, the retaining



strap must be attached to tie-down eye ③. Do not use bag hooks to attach the retaining strap.

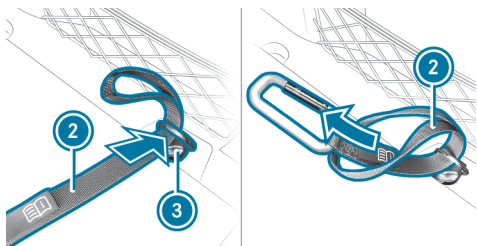

- ▶ Feed the loop end of retaining strap ② through tie-down eye ③ in the trunk or load compartment.
- ▶ Feed the end with the snap hook through the loop of retaining strap ②.



- ▶ Tighten retaining strap ② so that the knot around tie-down eye ③ is tight and secure.
- ▶ Hook the snap hook of retaining strap ② in a tie-down eye of charging cable bag ①.

Notes on charging the high-voltage battery at a mains socket (mode 2)



DANGER

Risk of fatal injury from incorrectly installed component parts

Connecting the charging cable to a mains socket using incorrectly installed components could cause fires or an electrical shock, for example.

- ▶ Only connect the charging cable to a mains socket that:
 - has been properly installed and
 - has been inspected by a qualified electrician.
- ▶ For safety reasons, only use the charging cable supplied with the vehicle or an original Mercedes-Benz charging cable.
- ▶ Purchase these parts at a Mercedes-Benz service center and obtain advice there.

Mercedes-Benz thoroughly tests these original charging cables for their suitability for high-voltage charging of your vehicle.

- ▶ Never use a damaged charging cable.
- ▶ Do not use:
 - Extension cables
 - Extension reels





- Multiple sockets
- ▶ Only use a socket adapter that has been tested and approved by the manufacturer for charging the high-voltage battery in an electric vehicle. Never use several socket adapters. For charging at the mains socket, only use appropriate socket adapters for AC charging.
- ▶ Observe the safety notes in the Operator's Manual for the socket adapter.

ONLY THE FOLLOWING CHARGING CABLES MAY BE USED:

- The charging cable supplied with the vehicle.
- A charging cable that has been approved for the vehicle.

The charging process can vary depending on the power supply equipment. The charging times when charging the high-voltage battery at a mains socket are considerably longer than when charging at a wallbox or charging station.

When doing so, always observe the local information.

Do not leave the charging cable operating unit hanging loose from a mains socket.

DO NOT LIFT THE OPERATING UNIT BY THE FOLLOWING COMPONENT PARTS:

- the charging cable plug
- the mains plug

When charging, protect the charging cable operating unit from excessive heat such as direct sunlight. Otherwise the charging process may be aborted.

Notes on charging the high-voltage battery at a wallbox or charging station (mode 3)

**DANGER**

Risk of fatal injury from incorrectly installed component parts

Connecting the charging cable to the vehicle using incorrectly installed components could cause a fire or an electric shock, for example.

- ▶ Only connect the charging cable to a wallbox if:
 - The wallbox has been properly installed
 - The wallbox has been inspected by a qualified electrician
 - The charging cable is not damaged
- ▶ Do not extend the charging cable.
- ▶ Do not use adapters.
- ▶ Observe the safety notes in the operating instructions for the wallbox.



**⚠ DANGER**

Risk of fatal injury if damaged component parts are used

If you use a damaged component to connect the vehicle to a charging station, this may lead to fires or an electrical shock, for example.

- ▶ Visually inspect the charging station for obvious signs of damage, e.g. serious damage to the housing or charging cable connection.
- ▶ Never use damaged charging cables.
- ▶ Do not extend the charging cable.
- ▶ Only use a socket adapter that has been tested and approved by the manufacturer for charging the high-voltage battery in an electric vehicle. Never use several socket adapters. When charging at a charging station with alternating current (mode 3), only use the corresponding socket adapters for charging with alternating current and when charging at a fast charging station with direct current (mode 4), only use socket adapters for direct current charging.
- ▶ Be sure to observe the safety notes at the charging station.

Most charging stations must be activated before the charging process, e.g. using an RFID card or via Plug-and-Charge. Observe the on-site operating instructions for the charging station and the notes on Mercedes-Benz Charge (→ page 551).

The amount of energy dispensed for the charging process, shown by the charging station, may be higher than the amount of energy actually absorbed by the high-voltage battery. This is the result of different levels of charging losses and is described as recharge efficiency. Charging losses occur e.g. owing

to heat build-up during charging or from running auxiliary consumers. Further information on recharge efficiency can be obtained at a qualified specialist workshop.


Notes on charging the high-voltage battery at a quick charging station (mode 4)

⚠ DANGER

Risk of fatal injury if damaged component parts are used

If you use a damaged component to connect the vehicle to a charging station, this may lead to fires or an electrical shock, for example.

- ▶ Visually inspect the charging station for obvious signs of damage, e.g. serious damage to the housing or charging cable connection.
- ▶ Never use damaged charging cables.
- ▶ Do not extend the charging cable.
- ▶ Only use a socket adapter that has been tested and approved by the manufacturer for charging the high-voltage battery in an electric vehicle. Never use several socket adapters. When charging at a charging station with alternating current (mode 3), only use the corresponding socket adapters for charging with alternating current and when charging at a fast charging station with direct current (mode 4), only use socket adapters for direct current charging.
- ▶ Be sure to observe the safety notes at the charging station.



**⚠ DANGER**

Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

- ▶ Do not perform any maintenance work during the charging process.

Most charging stations must be activated before the charging process, e.g. using an RFID card or via Plug-and-Charge. Observe the on-site operating instructions for the charging station and the notes on Mercedes-Benz Charge (→ page 551).

The amount of energy dispensed for the charging process, shown by the charging station, may be higher than the amount of energy actually absorbed by the high-voltage battery. This is the result of different levels of charging losses and is described as recharge efficiency. Charging losses occur e.g. owing to heat build-up during charging or from running auxiliary consumers. Further information on recharge efficiency can be obtained at a qualified specialist workshop.

Maximum permissible charging current for charging at a mains socket

! NOTE

Overloading the mains socket due to excessive charging current

If the charging current is too high, the fuse could be tripped or the external mains supply could overheat.

- ▶ Ensure that the external mains supply has been designed to handle the charging current provided.
- ▶ For safety reasons, only use the charging cable supplied with the vehicle or an original Mercedes-Benz charging cable.
Mercedes-Benz thoroughly tests these original charging cables for their suitability for high-voltage charging of your vehicle.
- ▶ Purchase these parts at a Mercedes-Benz service center and obtain advice there.
- ▶ Check the maximum charging current using the charging capacity shown on the driver's display.

The charging cable supplied is set to a country-specific maximum charging current. When charging abroad, the maximum value may exceed the permitted value for that country.

- ▶ Before charging at a mains socket, have the maximum permissible charging current for the relevant mains socket or the building set-up checked by a qualified electrician.
- ▶ When abroad, observe the country-specific laws when charging.






If you have questions concerning the charging current or if there is a malfunction, please contact a qualified specialist workshop.

Overview of the charging cable control panel

Your vehicle may be equipped with one of the following two mode 2 charging cables. The control panel of the respective mode 2 charging cable shows the current status of the charging process.

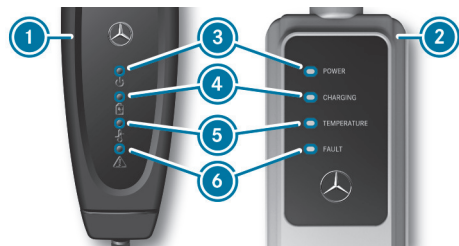

- 1 Gen5 charging cable
- 2 Gen4 charging cable
- 3 Supply voltage indicator
- 4 Charging process display
- 5 Temperature monitor display
- 6 Safety system display

MAINS CURRENT DISPLAY 3 POWER

Display	Meaning
Lights up white	There is supply voltage.

CHARGING PROCESS DISPLAY 4 CHARGING

Display	Meaning
Flashes green	The high-voltage battery is charging.

TEMPERATURE MONITOR DISPLAY 5 TEMPERATURE

Display	Meaning
Lights up red	The green LED flashes simultaneously: over-temperature – The charging power is reduced. The green LED does not flash: overtemperature – The charging process is stopped.
Flashes red	Overtemperature at the mains plug – The charging process is stopped.


SAFETY SYSTEM DISPLAY 6 FAULT

Display	Meaning
Flashes red	Charging cable or internal malfunction – Charging not possible Reset charging cable control panel (Gen5 charging cable 1)
Lights up red (Gen5 charging cable 1)	White LED is off: power supply malfunction – Charging process not possible, use a different mains socket. White LED is on: vehicle malfunction – Charging process not possible, reset the charging cable control panel.
Lights up red (Gen4 charging cable 2)	Infrastructure malfunction – Charging process not possible, use a different mains socket

If the temperature monitor 5 indicates a malfunction, it may help to protect the charging cable from direct sunlight.

GEN4 CHARGING CABLE 2

If the charging cable control panel detects residual current or a malfunction, the charging process is interrupted. The charging process is resumed automatically when the malfunction has been rectified.






GEN5 CHARGING CABLE ①

When all four displays light up, the charging cable control panel is performing a self-test.

Reset the Gen5 charging cable control panel: if the safety system ⑥ indicates a charging cable malfunction or a vehicle malfunction, first reset the charging cable control panel. To do this, disconnect the charging cable from the vehicle and from the mains socket and wait for approximately five seconds. If the malfunction persists after the charging cable is reconnected, charging at the mains socket is not possible. The charging cable must be replaced or the vehicle plug must be checked at a qualified specialist workshop, depending on the readout.

Functions of the indicator lamp on the vehicle socket

The socket flap is centrally locked and unlocked together with the vehicle.

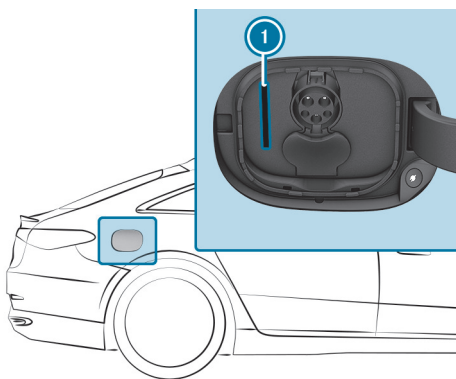

The color and behavior of the status display ① have the following meaning:

LOCKING STATUS

- Lights up white: vehicle socket unlocked; insert or remove charging cable
- Flashes white: malfunction during locking or unlocking

STATE OF CHARGE

- Lights up blue (for approx. 90 s): charging process completed
- Flashes blue: charging; active energy flow
- Lights up orange (for approx. 90 s): charging break
- Flashes orange: connection is being established
- Flashes red (for approx. 90 s): malfunction in vehicle; charging not possible

① Vehicles with active ambient lighting: when the charging orchestration is activated, the state of charge is also accentuated by the ambient lighting (→ page 268).





Starting the alternating current charging process (mode 2/3)

DANGER

Risk of death when charging at a damaged socket

The charging process uses high voltage.

If the charging cable, the vehicle socket or the mains socket are damaged, you could receive an electric shock.

- ▶ Only use an undamaged charging cable.
- ▶ Avoid mechanical damage such as crushing, abrading or driving over the cable.
- ▶ Have a damaged vehicle socket replaced at a qualified specialist workshop as soon as possible.
- ▶ Never connect the charging cable to a damaged vehicle socket.

NOTE

Damage due to overheating of charging cable and charge port

Charging cable and charge port may generate heat within the permissible limiting values during the charging process.

THE HEAT GENERATED BY THE CHARGING CABLE AND CHARGE PORT IS INFLUENCED BY THE FOLLOWING FACTORS:

- The power supply of the mains and the charging cable are intact.
- The notes on handling the charging cable and operating unit on the charging cable were observed.
- ▶ If the charging cable or the charge port generate too much heat, have the power supply of the mains supply checked.

NOTE

Damaged or dirty vehicle socket when the socket flap is open

- ▶ Always keep the socket cover and the socket flap closed when there is no charging cable connected. This protects the vehicle socket from dirt and damage.
- ▶ Make sure that the socket cover is closed properly before closing the socket flap. This can otherwise result in damage which may prevent the socket flap from being opened again.





NOTE


Damage to the vehicle socket or the charging cable connector due to incorrect handling

Do not use excessive force (maximum 67.4 lbf (300 N)) to fully insert the charging cable connector into the vehicle socket. You may otherwise damage the vehicle socket, the charging cable connector or their contacts.

- ▶ If you feel there is increased resistance, pull the charging cable connector out of the socket and reinsert it.

Requirements:

- The transmission is in position **P**.
- The vehicle is unlocked or the vehicle is locked and the distance between the key and the vehicle does not exceed 3 ft (1 m).
- The vehicle has not been started. The **READY** indicator on the driver display is off.
- The charging cable is not under tension.

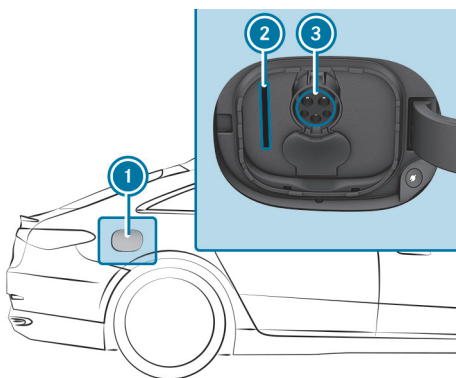

- ▶ Open the socket flap ① via the EQ module of the multimedia system (→ page 493).

or

- ▶ Press on the center of the socket flap ①.
The socket flap ① swings open and the status display ② lights up white.

Vehicles with electric socket flap: If an obstacle stops the socket flap during opening, the socket flap closes again automatically.

- ① When the vehicle is started (symbol **READY** on the driver display lights up), the socket flap ① cannot be opened.

- ① Only the upper connection ③ is required for the charging cable plug.

- ▶ For charging at a mains socket, fully insert the mains plug into the mains socket of the external power source.
- ▶ Fully insert the charging cable connector into vehicle socket ③. If the wallbox/charging station is not equipped with a charging cable, fully insert the plug of the vehicle's charging cable into the wallbox/charging station socket.

Make sure that the inserted charging cable is not under tension.

If the charging station is enabled, the indicator lamp ② flashes orange, and blue as soon as the high-voltage battery is being charged.



-  If the charging orchestration for the ambient lighting is activated, the ambient lighting lights up for about 30 seconds analogous to the status display  (→ page 268).

When the Sound Experience is switched on, various situations, such as plugging in the charging cable or the start of the charging process, are accentuated by selected sounds (→ page 649).

Vehicles with electric socket flap: If no charging cable is connected to the vehicle after opening the socket flap, the socket flap closes automatically after about 60 seconds.

When the charging cable is connected to the vehicle, the vehicle cannot be started or moved.

At the start of the charging process, the charge level display is shown on the driver display with a charging prediction. The charging prediction is the point in time at which the high-voltage battery will be fully charged.

-  Depending on the temperature, the fan and battery cooling system may audibly switch on during the charging process.

-  If the vehicle is idle for long periods and connected to the mains supply, the high-voltage battery will be recharged automatically as needed or when electrical consumers are activated (e.g. pre-entry climate control).

Ending the alternating current charging process (mode 2/3)



DANGER

Risk of death when charging at a damaged socket

The charging process uses high voltage.

If the charging cable, the vehicle socket or the mains socket are damaged, you could receive an electric shock.

- ▶ Only use an undamaged charging cable.
- ▶ Avoid mechanical damage such as crushing, abrading or driving over the cable.
- ▶ Have a damaged vehicle socket replaced at a qualified specialist workshop as soon as possible.
- ▶ Never connect the charging cable to a damaged vehicle socket.





! NOTE

Damage due to overheating of charging cable and charge port
Charging cable and charge port may generate heat within the permissible limiting values during the charging process.

THE HEAT GENERATED BY THE CHARGING CABLE AND CHARGE PORT IS INFLUENCED BY THE FOLLOWING FACTORS:

- The power supply of the mains and the charging cable are intact.
- The notes on handling the charging cable and operating unit on the charging cable were observed.
- ▶ If the charging cable or the charge port generate too much heat, have the power supply of the mains supply checked.


! NOTE

Damaged or dirty vehicle socket when the socket flap is open

- ▶ Always keep the socket cover and the socket flap closed when there is no charging cable connected. This protects the vehicle socket from dirt and damage.
- ▶ Make sure that the socket cover is closed properly before closing the socket flap. This can otherwise result in damage which may prevent the socket flap from being opened again.

Requirements:

- The vehicle is unlocked or the vehicle is locked and the distance between the key and the vehicle does not exceed 3 ft (1 m).

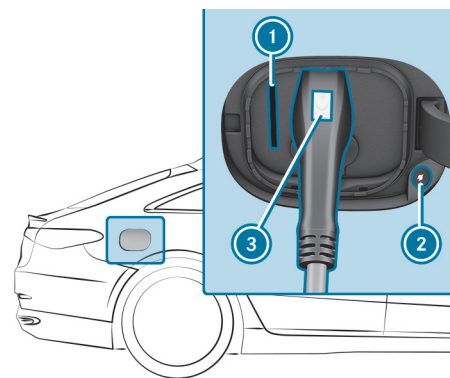

- ▶ Press charging interruption button ②.

The charging process is ended. Status display ① lights up white. The vehicle socket is unlocked.

- ① Alternatively, it is possible to unlock the vehicle with the vehicle key in order to end the charging process, but only if charging interruption button ② is not functioning. To do so, press button  once on the vehicle key. When status display ① lights up white, the vehicle socket is unlocked for approx. 30 seconds.

- ▶ Press and hold button ③ on the charging cable plug and remove the charging cable plug from the vehicle socket.

- ① If you cannot remove the charging cable plug, repeat the unlocking procedure. If the charging cable plug is still locked, contact a qualified specialist workshop.





 Status display  remains lit for some time after the charging cable plug has been removed and then goes out.

- ▶ Close the socket flap.
For vehicles with an electric socket flap, observe the following notes on closing the socket flap.
- ▶ Remove the charging cable plug from the mains socket, or from the socket on the wallbox/charging station, and stow the vehicle's charging cable safely in the vehicle (→ page 331).

THE ELECTRIC SOCKET FLAP CLOSSES AUTOMATICALLY IN THE FOLLOWING SITUATIONS:

- shortly after the charging cable plug has been removed
- after the socket flap has been tapped in the closing direction
- after transmission position **N**, **D** or **R** has been engaged

AUTOMATIC REVERSING FUNCTION OF THE ELECTRIC SOCKET FLAP

If an obstacle impedes the electrical socket flap while it is closing, the socket flap will open again automatically.

- ▶ When closing the socket flap, make sure that no body parts or objects are in the closing area.

Starting the DC charging process (mode 4)

DANGER

Risk of death when charging at a damaged socket

The charging process uses high voltage.

If the charging cable, the vehicle socket or the mains socket are damaged, you could receive an electric shock.

- ▶ Only use an undamaged charging cable.
- ▶ Avoid mechanical damage such as crushing, abrading or driving over the cable.
- ▶ Have a damaged vehicle socket replaced at a qualified specialist workshop as soon as possible.
- ▶ Never connect the charging cable to a damaged vehicle socket.



**! NOTE**

Damage due to overheating of charging cable and charge port
Charging cable and charge port may generate heat within the permissible limiting values during the charging process.

THE HEAT GENERATED BY THE CHARGING CABLE AND CHARGE PORT IS INFLUENCED BY THE FOLLOWING FACTORS:

- The power supply of the mains and the charging cable are intact.
- The notes on handling the charging cable and operating unit on the charging cable were observed.
- ▶ If the charging cable or the charge port generate too much heat, have the power supply of the mains supply checked.

! NOTE

Damaged or dirty vehicle socket when the socket flap is open

- ▶ Always keep the socket cover and the socket flap closed when there is no charging cable connected. This protects the vehicle socket from dirt and damage.
- ▶ Make sure that the socket cover is closed properly before closing the socket flap. This can otherwise result in damage which may prevent the socket flap from being opened again.

! NOTE



Damage to the vehicle socket or the charging cable connector due to incorrect handling

Do not use excessive force (maximum 67.4 lbf (300 N)) to fully insert the charging cable connector into the vehicle socket. You may otherwise damage the vehicle socket, the charging cable connector or their contacts.

- ▶ If you feel there is increased resistance, pull the charging cable connector out of the socket and reinsert it.

Requirements:

- The transmission is in position **P**.
- The vehicle is unlocked or the vehicle is locked and the distance between the key and the vehicle does not exceed 3 ft (1 m).
- The vehicle has not been started. The icon **READY** on the driver display is off.
- The charging cable is not under tension.

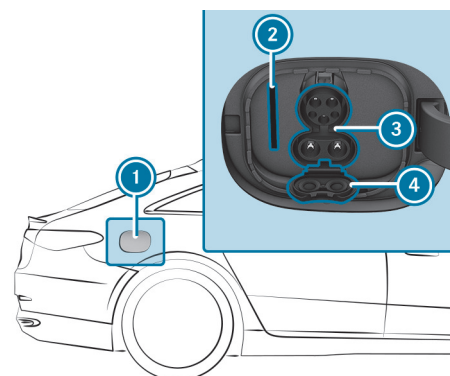



- ▶ Open the socket flap ① via the EQ module of the multimedia system (→ page 493).

or

- ▶ Press on the center of the rear area of the socket flap ①.
The socket flap ① swings open and the status display ② lights up white.

Vehicles with electric socket flap: If an obstacle stops the socket flap during opening, the socket flap closes again automatically.

- ① When the vehicle is started (symbol  on the driver display lights up), the socket flap ① cannot be opened.

- ▶ Open the socket cover ④ from the lower connection of the vehicle socket ③ until it clicks into place.

- ① For the CCS charging cable plug, both connections of the vehicle socket ③ are required.

- ▶ Fully insert the charging cable plug into vehicle socket ③.
Make sure that the inserted charging cable is not under tension.
If the charging station is enabled, the indicator lamp ② flashes orange, and blue as soon as the high-voltage battery is being charged.

- ① If the charging orchestration for the ambient lighting is activated, the ambient lighting lights up for about 30 seconds analogous to the status display ② (→ page 268).

When the Sound Experience is switched on, various situations, such as plugging in the charging cable or the start of the charging process, are accompanied by selected sounds (→ page 649).

Vehicles with electric socket flap: If no charging cable is connected to the vehicle after opening the socket flap, the socket flap closes automatically after about 60 seconds.

When the charging cable is connected to the vehicle, the vehicle cannot be started or moved.

At the start of the charging process, the state of charge indicator is shown on the driver display with a charging prediction. The charging prediction is the point in time at which the high-voltage battery will be fully charged.

- ① Depending on the temperature, the fan and battery cooling system may audibly switch on during the charging process.

- ① If the vehicle is idle for long periods and connected to the mains supply, the high-voltage battery will be recharged automatically as needed or when electrical consumers are activated (e.g. pre-entry climate control).





Ending the DC charging process (mode 4)

DANGER

Risk of death when charging at a damaged socket

The charging process uses high voltage.

If the charging cable, the vehicle socket or the mains socket are damaged, you could receive an electric shock.

- ▶ Only use an undamaged charging cable.
- ▶ Avoid mechanical damage such as crushing, abrading or driving over the cable.
- ▶ Have a damaged vehicle socket replaced at a qualified specialist workshop as soon as possible.
- ▶ Never connect the charging cable to a damaged vehicle socket.

NOTE

Damage due to overheating of charging cable and charge port

Charging cable and charge port may generate heat within the permissible limiting values during the charging process.

THE HEAT GENERATED BY THE CHARGING CABLE AND CHARGE PORT IS INFLUENCED BY THE FOLLOWING FACTORS:

- The power supply of the mains and the charging cable are intact.
- The notes on handling the charging cable and operating unit on the charging cable were observed.
- ▶ If the charging cable or the charge port generate too much heat, have the power supply of the mains supply checked.

NOTE


Damaged or dirty vehicle socket when the socket flap is open

- ▶ Always keep the socket cover and the socket flap closed when there is no charging cable connected. This protects the vehicle socket from dirt and damage.
- ▶ Make sure that the socket cover is closed properly before closing the socket flap. This can otherwise result in damage which may prevent the socket flap from being opened again.

Requirements:

- The vehicle is unlocked or the vehicle is locked and the distance between the key and the vehicle does not exceed 3 ft (1 m).



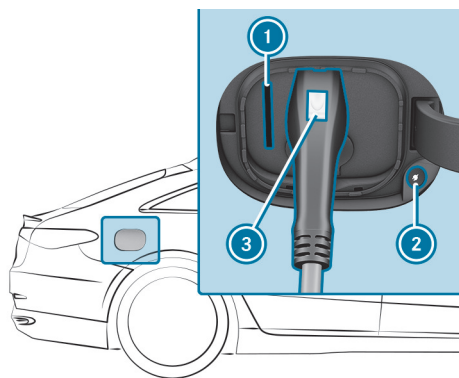

- ▶ Press charging interruption button ②.

The charging process is ended. Status display ① lights up white. The vehicle socket is unlocked.

- ① Alternatively, it is possible to unlock the vehicle with the vehicle key in order to end the charging process, but only if charging interruption button ② is not functioning. To do so, press button  once on the vehicle key. When status display ① lights up white, the vehicle socket is unlocked for approx. 30 seconds.

- ▶ Press and hold button ③ on the charging cable plug and remove the charging cable plug from the vehicle socket.
The hinged socket cover swings up and seals the lower connection on the vehicle socket.

- ① If you cannot remove the charging cable plug, unlock the vehicle and repeat the unlocking procedure. If the charging cable plug is still locked, contact a qualified specialist workshop.

- ① Status display ① remains lit for some time after the charging cable plug has been removed and then goes out.

- ▶ Close the socket flap.
For vehicles with an electric socket flap, observe the following notes on closing the socket flap.

THE ELECTRIC SOCKET FLAP CLOSES AUTOMATICALLY IN THE FOLLOWING SITUATIONS:

- shortly after the charging cable plug has been removed
- after the socket flap has been tapped in the closing direction
- after transmission position **N**, **D** or **R** has been engaged


AUTOMATIC REVERSING FUNCTION OF THE ELECTRIC SOCKET FLAP


If an obstacle impedes the electrical socket flap while it is closing, the socket flap will open again automatically. The automatic reversing function serves solely as an aid and is not a substitute for your attentiveness.

- ▶ When closing the socket flap, make sure that no body parts or objects are in the closing area.

Function of the charge level display in the driver display

- ① The data in the illustration is shown as an example.



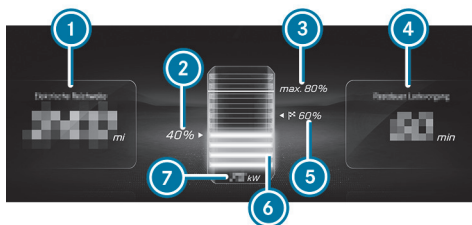

- ① Remaining range at current state of charge
- ② Current state of charge of the high-voltage battery
- ③ Maximum state of charge (as per the setting)
- ④ Expected end of charge or remaining time until fully charged (up to the selected maximum state of charge).
- ⑤ State of charge recommended by the range assistant to reach the next destination
- ⑥ Dynamic charge level display
- ⑦ Current charging power

i The indicated remaining range ① may vary due to various factors, e.g. driving style or topography.

When the vehicle is switched off and connected to the mains supply, the driver display shows the charge level display for approximately two minutes.

i The value of current charging power ⑦ can differ from the display on the charging station. At a charging power of 10 kW or higher, the value in the charge level display is rounded off and shown without a decimal place.

The value in ④ varies depending on the setting of the charging process. It displays the charging prediction, e.g. the time at which the selected charge level will be reached or the state of charge at the pre-selected departure time.

Configuring the charging settings

Multimedia system:



SETTING THE CHARGING PROGRAM

- ▶ Select [Home](#), [Work](#) or [Standard](#).

You can watch an animation on this topic via the following link:

OPENING AND CLOSING THE SOCKET FLAP USING THE MBUX MULTIMEDIA SYSTEM

- ▶ [Open Socket Flap](#) to open the socket flap.
- ▶ Press [Cancel Charging](#) to end the charging process and unlock the charging cable.
- ▶ Press [Close Socket Flap](#) to close the socket flap. The socket flap also closes automatically when the transmission is shifted out of position **P**. The socket flap also closes automatically after one minute if it has been opened, but no plug has been inserted, and ten to fifteen seconds after the plug has been removed.

i Closing the socket flap via the MBUX multimedia system is only available on vehicles with an electric socket flap.



-  Further notes on charging with alternating current: (→ page 338) or direct current: (→ page 342).

UNLOCKING THE CHARGING CABLE (MODE 3 OR 4)

-  When the function is active, the charging cable is unlocked when the maximum state of charge is reached.

- ▶ Select [Home](#) or [Work](#).
- ▶ Activate or deactivate [Unlock Charging Cable](#).

ACTIVATING OR DEACTIVATING LOCATION-BASED CHARGING

- ▶ Select [Charging Program, Home](#) or [Charging Program, Work](#).
- ▶ Activate or deactivate [Select Based on Location](#).

When the function is activated, the vehicle's current position is saved as one of the selected options. The charging program is automatically switched when arriving at the address again.

ACTIVATING OR DEACTIVATING ECO CHARGING

- ▶ Activate or deactivate the function.

The [ECO Charging](#) function limits the charging current at charging stations to conserve the vehicle's battery.

SWITCHING THE BATTERY PREHEATING ON OR OFF

- ▶ Select [High-Voltage Battery Pre-Temp. Control](#).
- ▶ Activate or deactivate the function.

When driving to a charging station guided by the navigation system, the temperature of the high-voltage battery is controlled in advance so that an optimum charging experience can be realized. On the central display, the active advance temperature control of the battery is shown with . The display disappears when the temperature level is reached, when the driver interrupts navigation guidance or when the charging plug is inserted.

-  If the battery has to be preheated, this has consequences for the remaining range of the vehicle. When using the Navigation with Electric Intelligence, the preheating is taken into account in the energy prediction. Further information on Navigation with Electric Intelligence(→ page 548)

SETTING THE DEPARTURE TIME

The set departure times are used for the vehicle's pre-entry climate control and for predictions regarding the approximate state of charge and range at the time selected.

DC charging: the charging process always starts without delay.

AC charging: if the ECO charging function is activated, the charging process pauses and is resumed as late as possible depending on the set state of charge. The charging process is time-based.


- ▶ Select [Departure Time](#).

THE FOLLOWING CHARGING TIMES CAN BE SELECTED:

- individual charging times
- a [Week Profile](#)

SETTING AN INDIVIDUAL DEPARTURE TIME

- ▶ Select [Add New Time](#) and set a new departure time.





or

- ▶ Select  and edit an existing departure time.

SETTING REPEAT DAYS

- ▶ Select [Add New Time](#) and set a new departure time.
- ▶ Mark the relevant weekdays for which the departure time will apply and confirm with .

or

- ▶ Select  and edit existing repeat days.

SETTING A BREAK IN THE CHARGING PROCESS (ALTERNATING CURRENT ONLY)

Up to four interruptions in the charging process can be set during which the vehicle is not charged, even if it is connected to a charging station.

- ▶ Select [Charging Pauses](#).
- ▶ Select [Add New Time](#) and then set and save the times for the beginning and end of the interruption.
- ▶ Activate or deactivate the charging breaks that have been set.

Set charging breaks can be edited with the  button or deleted with the  button.





< Parking

Parking the vehicle

WARNING

Risk of accident and injury caused by an insufficiently secured vehicle rolling away

If the vehicle is not securely parked sufficiently, it can roll away in an uncontrolled way even at a slight downhill gradient.

- ▶ On uphill or downhill gradients, turn the front wheels so that the vehicle rolls towards the curb if it starts moving.
- ▶ Apply the parking brake.
- ▶ Switch the transmission to position **P**.



WARNING

Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the key out of reach of children.

This also applies to the Digital Vehicle Key.





! NOTE

Damage to the vehicle due to it rolling away

- ▶ Always secure the vehicle against rolling away.

! NOTE

Damage caused by vehicle being lowered


Vehicles AIRMATIC: The vehicle can be lowered due to differences in temperature or extended non-operational times. This can cause damage to parts of the body.

- ▶ When stopping the vehicle and when driving off, make sure that there are no obstacles such as curbs under or in the immediate vicinity of the body.


i IF YOU PARK THE VEHICLE FOR A LONG PERIOD, OBSERVE THE FOLLOWING NOTES:

- Especially at very low outside temperatures below 32°F (0°C), ensure that the state of charge of the high-voltage battery is at least 20%. That way, you can avoid any problems when you subsequently start the vehicle.
- If possible, avoid parking spaces in direct sunlight.

Observe the notes on charging the high-voltage battery (→ page 329).

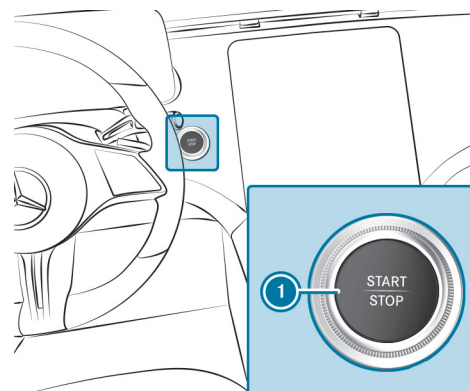


Vehicles with central display

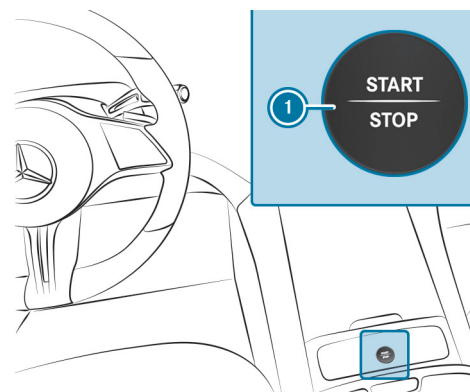

Vehicles with MBUX Hyperscreen

- ▶ Bring the vehicle to a standstill by depressing the brake pedal.
- ▶ On inclines, turn the front wheels so that the vehicle will roll towards the curb if it starts moving.
- ▶ Apply the electric parking brake.





- ▶ Engage transmission position **P** when the vehicle is stationary and the brake pedal is depressed (→ page 326).
- ▶ Switch off the vehicle by pressing button ①.
- ▶ Release the service brake slowly.
- ▶ Get out of the vehicle and lock it.

i When you park the vehicle, you can still operate the side windows and the panoramic sliding sunroof for approximately four minutes if the driver's door is closed.

Garage door opener

PROGRAMMING BUTTONS FOR THE GARAGE DOOR OPENER

⚠ WARNING

Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.

- ▶ Always make sure that nobody is within the range of the garage door's movement.

OPERATE ONLY THE FOLLOWING DOORS USING THE GARAGE DOOR OPENER:

- Doors with a safety stop and reversing function


- Doors that conform to the current U.S. safety standards

Before programming the garage door opener, park the vehicle outside the garage. Ensure that the vehicle is switched on but not started.

Requirements:

- The vehicle has been parked outside the garage or outside the range of movement of the door.
- The vehicle is switched on.
- The vehicle is not in **READY** (→ page 303).

i The garage door opener function will always be available when the vehicle is switched on.

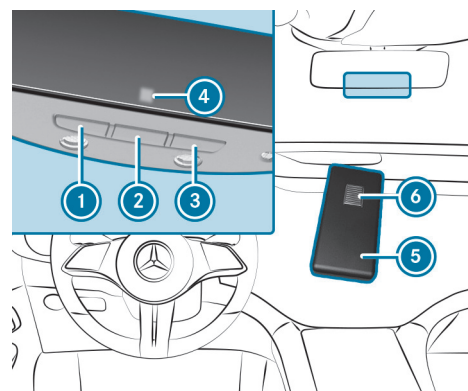

- ▶ Check whether the transmitter frequency of the remote control has the frequency range of 280 to 868 MHz.

RADIO EQUIPMENT APPROVAL NUMBER:

- NZLMUAHL5 (USA)



- 4112A-MUAHL5 (Canada)

- ▶ Press and hold button ①, ② or ③ that you wish to program.
Indicator lamp ④ will flash yellow.

 It may take up to 20 seconds before the indicator lamp flashes yellow.

- ▶ Release the button that you pressed previously.
Indicator lamp ④ will continue to flash yellow.
- ▶ Point remote control ⑤ towards button ①, ② or ③ from a distance of between 0.4 in (1 cm) and 3 in (8 cm).
- ▶ Press and hold button ⑥ on remote control ⑤ until one of the following signals appears:
 - Indicator lamp ④ lights up green continuously. Programming is complete.
 - Indicator lamp ④ flashes green. Programming was successful. Additionally, the rolling code must be synchronized with the door system.
- ▶ If indicator lamp ④ does not light up or flash green: repeat the process.
- ▶ Release all the buttons.

 The remote control for the door drive is not included in the scope of delivery for the garage door opener.

SYNCHRONIZING THE ROLLING CODE



WARNING

Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.

- ▶ Always make sure that nobody is within the range of the garage door's movement.

OPERATE ONLY THE FOLLOWING DOORS USING THE GARAGE DOOR OPENER:

- Doors with a safety stop and reversing function
- Doors that conform to the current U.S. safety standards

Before programming the garage door opener, park the vehicle outside the garage. Ensure that the vehicle is switched on but not started.


Requirements:

- The door system uses a rolling code.
- The vehicle is within range of the garage door or door drive.
- The vehicle, as well as persons and objects, are located outside the range of movement of the door.



The garage door opener function will always be available when the vehicle is switched on.



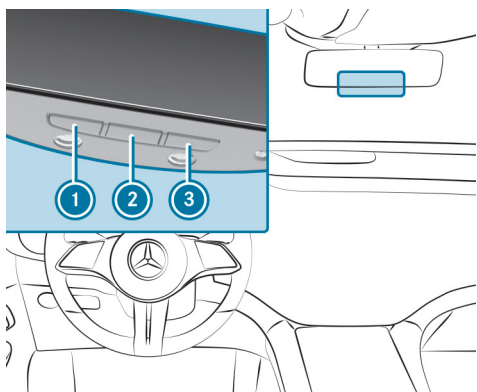

- ▶ Press the programming button on the door drive unit.
Initiate the next step within approximately 30 seconds.
- ▶ Press previously programmed button ①, ② or ③ repeatedly until the door closes.
When the door closes, programming is complete.

 Please also read the operating instructions for the door drive.

TROUBLESHOOTING WHEN PROGRAMMING THE REMOTE CONTROL

WARNING

Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.


- ▶ Always make sure that nobody is within the range of the garage door's movement.

OPERATE ONLY THE FOLLOWING DOORS USING THE GARAGE DOOR OPENER:

- Doors with a safety stop and reversing function
- Doors that conform to the current U.S. safety standards

Before programming the garage door opener, park the vehicle outside the garage. Ensure that the vehicle is switched on but not started.

 The garage door opener function will always be available when the vehicle is switched on.

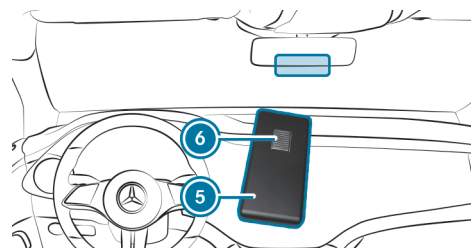

- ▶ Check whether the transmitter frequency of remote control ⑤ is supported.
- ▶ Replace the batteries in remote control ⑤.
- ▶ Hold remote control ⑤ at various angles in front of the inside mirror at a distance of between 0.4 in (1 cm) and 3 in (8 cm). You should test every position for at least 25 seconds before trying another position.
- ▶ Hold remote control ⑤ at the same angles at various distances in front of the inside mirror. You should test every position for at least 25 seconds before trying another position.



- ▶ Press button ⑥ on remote control ⑤ again before transmission ends on remote controls that transmit only for a limited period.
- ▶ Angle the antenna cable of the garage door opener unit towards the remote control.

i It is possible that you will not be able to operate older garage doors using the remote control in the inside mirror even after you have successfully performed the measures described above. In this case, contact the HomeLink® Hotline.

i SUPPORT AND ADDITIONAL PROGRAMMING INFORMATION:

- from the toll-free HomeLink® Hotline on 1-800-355-3515
- online on the <https://www.homelink.com/mercedes>

OPENING/CLOSING A GARAGE DOOR

⚠ WARNING

Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.

- ▶ Always make sure that nobody is within the range of the garage door's movement.

OPERATE ONLY THE FOLLOWING DOORS USING THE GARAGE DOOR OPENER:


- Doors with a safety stop and reversing function
- Doors that conform to the current U.S. safety standards

Before programming the garage door opener, park the vehicle outside the garage. Ensure that the vehicle is switched on but not started.

Requirements:

- The corresponding button is programmed to operate the door.

i The garage door opener function will always be available when the vehicle is switched on.

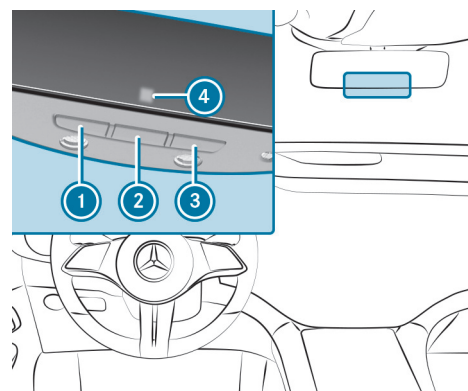

- ▶ Press and hold buttons ①, ② or ③ until the door opens or closes.
- ▶ If indicator lamp ④ flashes yellow after approximately 20 seconds: press and hold the previously pressed button again until the door opens or closes.



CLEARING THE GARAGE DOOR OPENER MEMORY

⚠ WARNING

Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.


- ▶ Always make sure that nobody is within the range of the garage door's movement.

OPERATE ONLY THE FOLLOWING DOORS USING THE GARAGE DOOR OPENER:

- Doors with a safety stop and reversing function
- Doors that conform to the current U.S. safety standards

Before programming the garage door opener, park the vehicle outside the garage. Ensure that the vehicle is switched on but not started.

- ⓘ The garage door opener function will always be available when the vehicle is switched on.

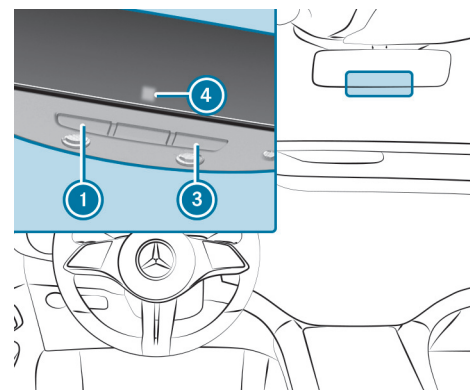

- ▶ Press and hold buttons ① and ③.
Indicator lamp ④ will light up yellow.
- ▶ If indicator lamp ④ flashes green: release buttons ① and ③.
The entire memory will be deleted.





Electric parking brake

FUNCTION OF THE ELECTRIC PARKING BRAKE (APPLYING AUTOMATICALLY)

WARNING

Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the key out of reach of children.

This also applies to the Digital Vehicle Key.

THE ELECTRIC PARKING BRAKE IS APPLIED IF THE TRANSMISSION IS IN POSITION AND ONE OF THE FOLLOWING CONDITIONS IS FULFILLED:

- The vehicle is switched off.
- The driver's seat belt is not fastened and the driver's door is opened.

 To prevent application: pull the handle of the electric parking brake (→ page 358).

IN THE FOLLOWING SITUATIONS, THE ELECTRIC PARKING BRAKE IS ALSO APPLIED:

- The HOLD function is keeping the vehicle stationary.
- Active Distance Assist DISTRONIC is bringing the vehicle to a standstill.
- Active Parking Assist is keeping the vehicle stationary.
- **In addition, one of the following conditions must be fulfilled:**
 - The vehicle is switched off.
 - The driver's seat belt is not fastened.
 - There is a system malfunction.
 - The power supply is insufficient.
 - The vehicle is stationary for a lengthy period.

When the electric parking brake is applied, the red indicator lamp lights up on the driver display  (USA) or  (Canada).

FUNCTION OF THE ELECTRIC PARKING BRAKE (AUTOMATIC RELEASE) THE ELECTRIC PARKING BRAKE IS RELEASED WHEN THE FOLLOWING CONDITIONS ARE FULFILLED:

- The driver's door is closed.
- The vehicle has been started.



- The transmission is in position **D** or **R** and you depress the accelerator pedal, or you shift from transmission position **P** to **D** or **R** on level ground.
- If the transmission is in position **R**, the trunk lid must be closed.
- The driver's seat belt is properly fastened.

If the driver's seat belt is not fastened, the following condition must be met:

- You shift out of transmission position **P**.

When the electric parking brake is released, the red **PARK** (USA) or **(P)** (Canada) indicator lamp on the driver display goes out.

APPLYING/RELEASING THE ELECTRIC PARKING BRAKE MANUALLY



WARNING

Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:


- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.
- Keep the key out of reach of children.

This also applies to the Digital Vehicle Key.





APPLYING

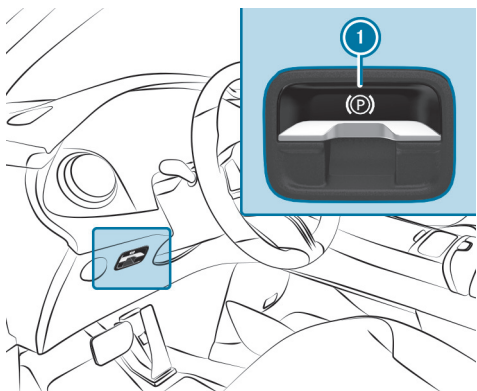


- ▶ Push handle ①.

The red indicator lamp **PARK** (USA) or **(P)** (Canada) lights up on the driver's display.

i The electric parking brake is only securely applied if the red indicator lamp **PARK** (USA) or **(P)** (Canada) is lit continuously.

RELEASING


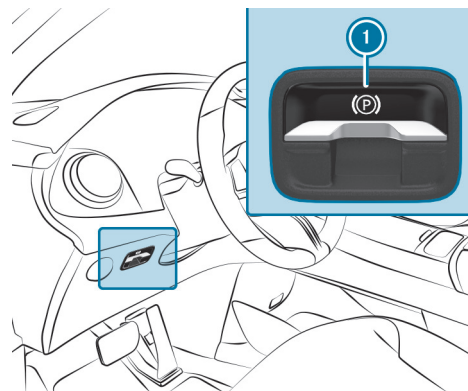


- ▶ Switch on the vehicle.

- ▶ Pull handle ①.

The red indicator lamp **PARK** (USA) or **(P)** (Canada) on the driver's display goes out.

EMERGENCY BRAKING

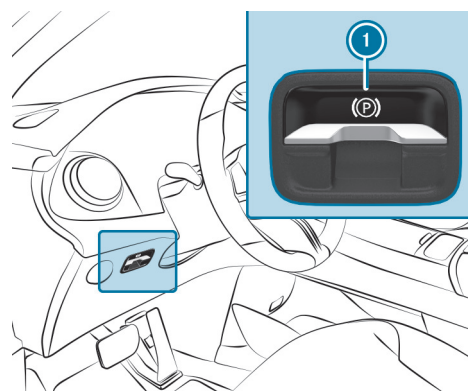



- Press and hold handle .

As long as the vehicle is in motion, the **Release Parking Brake** message is displayed and the red indicator lamp  (USA) or  (Canada) flashes.

When the vehicle has been braked to a standstill, the electric parking brake is applied. The red indicator lamp lights up on the driver display  (USA) or  (Canada).

Information on collision detection for a parked vehicle

If an impact is detected when the tow-away alarm is switched on in the vehicle and collision detection is active, a message is displayed in the multimedia system when the vehicle is switched on.

YOU WILL THEN RECEIVE INFORMATION REGARDING THE FOLLOWING:

- The area of the vehicle that may have been damaged.
- The force of the impact.

THE FOLLOWING SITUATION CAN LEAD TO INADVERTENT ACTIVATION:

- The parked vehicle is moved, foreexample in a double-decker garage.

-  Deactivate the tow-away alarm to prevent inadvertent activation. If you deactivate the tow-away alarm, collision detection will also be deactivated.
- You can permanently deactivate collision detection via the multimedia system (→ page 360).

-  If the battery is heavily discharged, the function for collision detection on a parked vehicle is automatically deactivated to facilitate the next vehicle start.

SYSTEM LIMITS

DETECTION MAY BE RESTRICTED IN THE FOLLOWING SITUATIONS:

- if damage is caused to the vehicle without impact, for example, if an outside mirror is torn off or the paint is damaged by a key
- if an impact occurs at low speed
- if the electric parking brake is not applied

-  You are responsible for your vehicle. You should therefore always ensure that your vehicle is free of damage and is roadworthy.

Setting collision detection for a parked vehicle

Multimedia system:

    **Settings**  **Vehicle**  **Open/Close**  **Vehicle Protection**

- Activate or deactivate the function via **Collision Notification**.

-  A maximum of three incidents can be registered. Up to 15 photos are taken for every incident. In the event of another incident, the photos of the first incident will be overwritten if they have not been deleted already.



ACTIVATING OR DEACTIVATING THE COLLISION PHOTOS FUNCTION

Please note that legal restrictions regarding automatic recording of the vehicle surroundings may be in place in certain countries.

- ▶ Activate or deactivate [Collision Photos](#).

TRANSFERRING COLLISION PHOTOS WITH THE MERCEDES-BENZ APP

- ▶ Select [Upload Collision Photos](#).

or

- ▶ Select [Upload Automatically](#).
- ▶ Scan the QR code generated on the central display using the Mercedes-Benz app.

The encoded collision photos are uploaded.

 In the Mercedes-Benz app, you can view the collision photos on all devices which were used to scan the QR code.

COPYING THE COLLISION PHOTOS TO A USB FLASH DRIVE

- ▶ Connect a USB flash drive (→ page 632).
- ▶ Select [Manage Collision Photos](#).
- ▶ Select [Copy \(USB\)](#).

All collision photos are copied to the USB flash drive.

 Use only FAT32 or exFAT formatted USB storage devices to ensure secure operation.

DELETING COLLISION PHOTOS

- ▶ Select [Manage Collision Photos](#).
- ▶ Select [Delete](#).

All collision photos are deleted.





< Driving and driving safety systems

Driving systems and your responsibility

Your vehicle is equipped with driving systems that assist you in driving, parking and maneuvering the vehicle. The driving systems are only aids. They are not a substitute for you paying attention to your surroundings and do not relieve you of your responsibility pertaining to road traffic law. The driver is always responsible for maintaining a safe distance to the vehicle in front, for vehicle speed, for braking in good time and for staying in lane. Pay attention to the traffic conditions at all times and intervene when necessary. Be aware of the limitations regarding the safe use of these systems.

Driving systems can neither reduce the risk of an accident if you fail to adapt your driving style nor override the laws of physics. They cannot always take into account road, weather or traffic conditions.

 Some driving systems can regulate or limit the speed to a previously set value. Draw attention to the stored speed when changing drivers.

Information on vehicle sensors and cameras



WARNING


Risk of accident if the detection capability of the vehicle sensors or cameras is impaired

If the areas of the vehicle sensors or cameras are obscured, damaged or dirty, some driving and driving safety systems may no longer function correctly. There is a risk of an accident.

- ▶ Always keep the areas of the vehicle sensors and cameras clear of obstructions and clean.
- ▶ Have damage to the bumpers, radiator shell or stone chipping in the area of the cameras in the windshield repaired at a qualified specialist workshop.

Some driving and driving safety systems use cameras as well as radar or ultrasonic sensors to monitor the area in front of, behind or next to the vehicle.



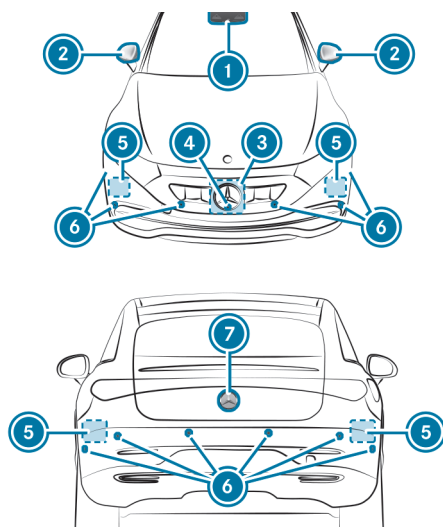

- ① Multifunction camera
- ② Cameras in the exterior mirrors
- ③ Front radar
- ④ Front camera
- ⑤ Corner radars
- ⑥ Ultrasonic sensors
- ⑦ Reversing camera

Keep the areas of the cameras and sensors in particular free of dirt, ice and slush (→ page 667). The sensors and cameras must not be obscured and the detection ranges around them must be kept clear. Do not attach additional license plate brackets, advertisements, stickers, wraps or rock chip protection films in the detection range of the sensors and cameras. Make sure there are no overhanging loads protruding into the detection range.

If there is damage to a bumper or the radiator shell, or after an impact, have the function of the sensors checked at a qualified specialist workshop.


Have damage or stone chipping in the area of the cameras in the windshield repaired at a qualified specialist workshop.

i The rear-view camera may retract and extend automatically for calibration purposes, even if no camera image appears on the display.

Overview of driving systems and driving safety systems

DRIVING SYSTEMS AND DRIVING SAFETY SYSTEMS

- ABS (→ page 365)
- BAS (→ page 365)
- ESP® (→ page 366)
- ESP® (Mercedes-AMG vehicles) (→ page 367)
- ESP® Crosswind Assist (→ page 369)
- EBD (→ page 370)
- STEER CONTROL (→ page 370)
- HOLD function (→ page 371)
- Hill Start Assist (→ page 372)
- Valet Service Mode (→ page 372)
- Beginner Driver Mode (→ page 373)
- ATTENTION ASSIST (→ page 374)
- Cruise control (→ page 376)
- Traffic Sign Assist (→ page 402)
- DYNAMIC BODY CONTROL (→ page 412)
- AIRMATIC (→ page 413)





- AMG RIDE CONTROL + (→ page 413)
- RACE START (→ page 416)

DRIVING ASSISTANCE PACKAGE

- Active Distance Assist DISTRONIC (→ page 379)
- Active Speed Limit Assist (→ page 385)
- Route-based speed adaptation (→ page 386)
- Active Brake Assist (→ page 397)
- Active Steering Assist (→ page 388)
- Active Emergency Stop Assist (→ page 390)
- Active Lane Change Assist (→ page 392)
- Active Stop-and-Go Assist (→ page 388)
- Blind Spot Assist and Active Blind Spot Assist with exit warning (→ page 406)
- Active Lane Keeping Assist (→ page 410)
- PRE-SAFE® Impulse Side (→ page 130)

 The availability of some functions or partial functions of the Driving Assistance Package depends on the equipment or country. The functions of your Driving Assistance Package may differ from the functions listed here.

THE FOLLOWING DRIVING ASSISTANCE SYSTEMS ARE ALSO AVAILABLE WITHOUT THE DRIVING ASSISTANCE PACKAGE, ALBEIT WITH RESTRICTED FUNCTIONALITY:

- Active Distance Assist DISTRONIC
- Active Brake Assist
- Active Emergency Stop Assist
- Active Blind Spot Assist with exit warning

- Active Lane Keeping Assist

PARKING SYSTEMS

- Reversing camera (→ page 418)
- 360° camera (→ page 420)
- Parking Assist PARKTRONIC (→ page 425)
- Active Parking Assist (→ page 429)
- Remote Parking Assist (→ page 435)
- Memory Parking Assist (→ page 443)

 The availability of individual functions depends on country and equipment.

Information on the AMG DYNAMIC PLUS Package

 The AMG DYNAMIC PLUS package can be a Digital Extra (→ page 96).





NOTE

Vehicle and tire damage caused by non-approved tire types

Driving at increased maximum design speed is only approved for a specific types of tire.

- ▶ Before using the functions, observe the information on approved tire types. You could otherwise fail to recognize dangers.

You will find the information on the approved tire types in the "Wheels and tires" section (→ page 720).

THE AMG DYNAMIC PLUS PACKAGE COMPRISES THE FOLLOWING FUNCTIONS:

- Increasing the maximum design speed (→ page 808)
- RACE START with boost function (→ page 416)
- Additional Performance Sound Experience for a particularly sporty driving experience (→ page 650)

Function of ABS

THE ANTI-LOCK BRAKE SYSTEM (ABS) REGULATES THE BRAKE PRESSURE IN CRITICAL DRIVING SITUATIONS:

- During braking, for instance, at maximum full-stop braking or if there is insufficient tire traction, the wheels are prevented from locking.
- Vehicle steerability while braking is ensured.

If ABS intervenes when braking, you will feel a pulsing in the brake pedal. The pulsating brake pedal can be an indication of hazardous road conditions and can serve as a reminder to take extra care while driving.

SYSTEM LIMITS

- ABS is active from speeds of approx. 3 mph (5 km/h).
- ABS may be impaired or may not function if a malfunction has occurred and the yellow  ABS warning lamp lights up continuously after the vehicle is started.

Function of BAS



WARNING

Risk of an accident caused by a malfunction in BAS (Brake Assist System)

If BAS is malfunctioning, the braking distance in an emergency braking situation is increased.

- ▶ Depress the brake pedal with full force in emergency braking situations. ABS prevents the wheels from locking.

The Brake Assist System (BAS) supports your emergency braking situation with additional brake force.

IF YOU DEPRESS THE BRAKE PEDAL QUICKLY, BAS IS ACTIVATED:

- BAS automatically boosts the brake pressure.
- BAS can shorten the braking distance.
- ABS prevents the wheels from locking.





The brakes will function as usual once you release the brake pedal. BAS is deactivated.

ESP® (Electronic Stability Program)

FUNCTION OF ESP®

CHARACTERISTICS WHEN ESP® IS ACTIVATED

THE ELECTRONIC STABILITY PROGRAM (ESP®) CAN MONITOR AND IMPROVE DRIVING STABILITY AND TRACTION IN THE FOLLOWING SITUATIONS WITHIN PHYSICAL LIMITS:

- when starting off on wet or slippery roads
- when braking

IF THE VEHICLE DEVIATES FROM THE DIRECTION DESIRED BY THE DRIVER, ESP® CAN STABILISE THE VEHICLE BY INTERVENING IN THE FOLLOWING WAYS:

- One or more wheels are individually braked.
- The output of the drive system is adjusted according to the situation.

WHEN ESP® IS DEACTIVATED, THE  WARNING LAMP LIGHTS UP CONTINUOUSLY:

- Driving stability will no longer be improved.
- The drive wheels could spin.
- ETS/4ETS traction control is still active.

WHEN THE  WARNING LAMP FLASHES, ONE OR SEVERAL WHEELS HAS REACHED ITS GRIP LIMIT:

- Adapt your driving style to suit the current road and weather conditions.

- Do not deactivate ESP®.
- Only depress the accelerator pedal as far as is necessary when starting off.

CHARACTERISTICS WHEN ESP® IS DEACTIVATED



WARNING

Risk of skidding if ESP® is deactivated

If you deactivate ESP®, ESP® cannot carry out vehicle stabilization.

- ▶ ESP® should only be deactivated in the following situations.

TO IMPROVE TRACTION, ESP® CAN BE SWITCHED OFF IN THE FOLLOWING SITUATIONS:

- when using snow chains
- in deep snow
- on sand or gravel



Spinning the wheels results in a cutting action, which enhances traction.

If the  warning lamp lights up continuously, ESP® is not available due to a malfunction.

OBSERVE THE FOLLOWING INFORMATION:

- Indicator and warning lamps (→ page 881)
- Display messages (→ page 812)



ETS/4ETS

ETS/4ETS traction control (Electronic Traction System) is part of ESP® and makes it possible to pull away and accelerate on a slippery road.

ETS/4ETS CAN IMPROVE THE VEHICLE'S TRACTION BY INTERVENING IN THE FOLLOWING WAYS:

- The drive wheels are braked individually if they spin.
- More drive torque is transferred to the wheel or wheels with traction.

INFLUENCE OF DRIVE PROGRAMS ON ESP®

The drive programs enable ESP® to adapt to different weather and road conditions as well as the driver's preferred driving style. Depending on the selected drive program, the appropriate ESP® mode will be activated (→ page 318).

FUNCTION OF ESP® (MERCEDES-AMG VEHICLES)

YOU CAN SELECT BETWEEN THE FOLLOWING MODES OF THE ELECTRONIC STABILITY PROGRAM (ESP®):

- ESP® ON
- ESP® SPORT
- ESP® OFF

CHARACTERISTICS WHEN ESP® IS ACTIVATED

ESP® MONITORS AND IMPROVES DRIVING STABILITY AND TRACTION, PARTICULARLY IN THE FOLLOWING SITUATIONS:

- When starting off on wet or slippery roads.
- When braking.
- When there is a strong crosswind from 50 mph (80 km/h)

ESP® CAN STABILIZE THE VEHICLE BY INTERVENING IN THE FOLLOWING WAYS:

- One or more wheels are braked.
- The drive system output is adapted according to the situation.

ESP® is activated every time the vehicle is started regardless of whether ESP® SPORT or ESP® OFF was selected before the engine was switched off.

WHEN THE WARNING LAMP FLASHES, ONE OR MORE WHEELS HAS REACHED ITS GRIP LIMIT:

- Adapt the driving style to suit the prevailing road and weather conditions.
- Do not deactivate ESP® under any circumstances.
- Only depress the accelerator pedal as far as necessary when starting off.

CHARACTERISTICS OF ESP® SPORT



WARNING

Risk of skidding if ESP® SPORT is used incorrectly

When you activate ESP® SPORT, there is an increased risk of skidding and having an accident.

- ▶ Activate ESP® SPORT only in the circumstances described below.

When ESP® SPORT is selected, the  and  warning lamps light up continuously.

Select ESP® SPORT when the vehicle's own oversteering and understeering characteristics are desired, e.g. on cordoned-off roads.





Driving with ESP® SPORT or with ESP® deactivated requires an extremely qualified and experienced driver.

If ESP® SPORT is activated and one or more wheels start to spin, the  warning lamp flashes. ESP® then only stabilizes the vehicle to a limited degree.

ESP® SPORT ALSO HAS THE FOLLOWING CHARACTERISTICS:

- ESP® only improves driving stability to a limited degree.
- ETS/4ETS traction control is still active.
- The power of the drive system is only slightly limited according to the situation and the drive wheels can spin.
The spinning of the wheels results in a cutting action for better traction on loose surfaces.
- ESP® continues to provide assistance when the brakes are firmly applied.
- Crosswind Assist is no longer active.

CHARACTERISTICS WHEN ESP® IS DEACTIVATED

WARNING

Risk of skidding if ESP® is deactivated

If you deactivate ESP®, ESP® cannot carry out vehicle stabilization.

- ▶ ESP® should only be deactivated in the following situations.

When ESP® is switched off, the  and  warning lamps light up continuously.

DEACTIVATING ESP® HAS THE FOLLOWING EFFECTS:

- Driving stability will no longer be improved.
- The drive wheels could spin.

- ETS/4ETS traction control is still active.
- Crosswind Assist is no longer active.

 Even when ESP® is deactivated, you are still assisted by ESP® when braking hard.

IT MAY BE BEST TO ACTIVATE ESP® SPORT OR DEACTIVATE ESP® IN THE FOLLOWING SITUATIONS:

- When using snow chains.
- In deep snow.
- On sand or gravel.


 Spinning the wheels results in a cutting action, which enhances traction.

 Activate ESP® as soon as the situations described above no longer apply. ESP® will otherwise not be able to stabilize the vehicle if the vehicle starts to skid or a wheel starts to spin.

If the  warning lamp lights up continuously, ESP® is not available due to a malfunction.

OBSERVE THE DISPLAY MESSAGES AND INDICATOR AND WARNING LAMPS WHICH ARE DISPLAYED:

- Indicator and warning lamps (→ page 881)
- Display messages (→ page 812)





ETS/4ETS (ELECTRONIC TRACTION SYSTEM)

ETS/4ETS traction control is part of ESP®.

ETS/4ETS CAN IMPROVE THE VEHICLE'S TRACTION BY INTERVENING IN THE FOLLOWING WAYS:

- The drive wheels are braked individually if they spin.
- More drive torque is transferred to the wheel or wheels with traction.

FUNCTION OF ESP® CROSSWIND ASSIST

ESP® CROSSWIND ASSIST DETECTS SUDDEN GUSTS OF SIDE WIND AND HELPS THE DRIVER TO KEEP THE VEHICLE IN THE LANE:

- ESP® Crosswind Assist operates at vehicle speeds between approximately 50 mph (80 km/h) and 125 mph (200 km/h) when you are driving straight ahead or cornering slightly.
- The system stabilizes the vehicle by applying the brakes to specific wheels on one side.

SWITCHING ESP® (ELECTRONIC STABILITY PROGRAM) ON OR OFF IN THE MBUX MULTIMEDIA SYSTEM

Multimedia system:




- ▶ Select **ESP**.
- ▶ Select **On** or **Off**.

ESP® is deactivated if the ESP® OFF warning lamp lights up continuously on the driver display.

Observe the information on the warning lamps and the display messages which may be shown on the driver display.

SETTING ESP® WITH THE AMG STEERING WHEEL BUTTON

- ① You can also adjust ESP® via the multimedia system (→ page 370).

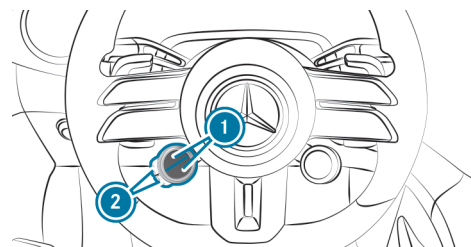

- ▶ **To adjust ESP®:** press upper or lower display button ① repeatedly, until it displays the symbol.

- ① If the display button does not show the symbol, then it is hidden. How functions are displayed and the order in which they are displayed can be set in the multimedia system (→ page 316).

THE ROAD COLOR OF THE BUTTON SYMBOL INDICATES THE CURRENT SETTING:

- (blue): ESP® ON
- (yellow): ESP® SPORT
- (red): ESP® OFF

- ▶ **To set ESP® SPORT:** briefly press button ② when ESP® is activated. The road in the button symbol lights up yellow.



The and warning lamps appear on the driver display.

- ▶ **To deactivate ESP® : set ESP® SPORT** then press and hold button ②.

The road in the button symbol lights up red.

The and warning lamps appear on the driver display.

- ▶ **To activate ESP® :** briefly press button ② when ESP® SPORT is selected or ESP® is deactivated.

The road in the button symbol lights up blue.

The and or warning lamps go out.

When the symbol is shown with a red ! on the display button, ESP® is malfunctioning. Observe the information on warning lamps and display messages which are shown in the driver display.

ADJUSTING ESP® IN THE MULTIMEDIA SYSTEM (MERCEDES-AMG VEHICLES)

Multimedia system:

Settings Vehicle DYNAMIC SELECT

- ① Depending on the equipment, the AMG **DYNAMIC SELECT** menu can also be accessed via the AMG button in the center console.

ESP is always activate when the engine is started. The road in the button symbol lights up blue.

- ▶ **To engage ESP® SPORT:** when ESP® is activated, briefly press to change to the **Sport** program.

The road in the button symbol lights up yellow.

- ▶ Switch off **ESP®** : engage the ESP® SPORT program and press and hold to switch off ESP®.

The road in the button symbol lights up red. The and warning lamps appear on the driver display.

- ▶ Switch on **ESP®** : in ESP® SPORT or when ESP® is switched off, briefly press .

The road in the button symbol lights up blue.

The and or warning lamps go out.

- ① You can also set ESP® via the steering-wheel buttons (→ page 369).

Function of EBD

ELECTRONIC BRAKEFORCE DISTRIBUTION (EBD) IS CHARACTERIZED BY THE FOLLOWING:

- Monitoring and regulating the brake pressure on the rear wheels.
- Improved driving stability when braking, especially on bends.

Function of STEER CONTROL

STEER CONTROL assists you by transmitting a noticeable steering force to the steering wheel in the direction required for vehicle stabilization.

THIS STEERING RECOMMENDATION WILL BE GIVEN IN THE FOLLOWING SITUATIONS:

- both right wheels or both left wheels are on a wet or slippery road surface when you brake



- the vehicle starts to skid

SYSTEM LIMITS

STEER CONTROL MAY BE IMPAIRED OR MAY NOT FUNCTION IN THE FOLLOWING SITUATIONS:

- ESP® is deactivated.
- ESP® is malfunctioning.
- The steering is malfunctioning.

If ESP® is malfunctioning, you will be assisted further by the power steering.

HOLD function

HOLD FUNCTION

The HOLD function holds the vehicle at a standstill without requiring you to depress the brake pedal, e.g. while you are waiting in traffic.

The HOLD function is only an aid. The responsibility for the vehicle safely standing still remains with the driver.

SYSTEM LIMITS

The HOLD function is intended only to provide assistance during driving and is not a sufficient means of safeguarding the vehicle against rolling away when stationary.

- The gradient must not be greater than 30%.

ACTIVATING/DEACTIVATING THE HOLD FUNCTION



WARNING

Risk of an accident due to the HOLD function being active when you leave the vehicle

IF THE VEHICLE IS ONLY BRAKED WITH THE HOLD FUNCTION IT COULD, IN THE FOLLOWING SITUATIONS, ROLL AWAY:

- If there is a malfunction in the system or in the power supply.
- If the HOLD function is deactivated by depressing the accelerator pedal or brake pedal, e.g. by a vehicle occupant.
- ▶ Always secure the vehicle against rolling away before you leave it.

Requirements

- The vehicle is stationary.
- The driver's door is closed or the driver is correctly belted.
- The vehicle has been started.
- The electric parking brake has been released.
- The transmission position **D**, **R** or **N** is engaged.

ACTIVATING THE HOLD FUNCTION

- ▶ Depress the brake pedal, and after a short time quickly depress further until the **HOLD** display appears on the driver display.
- ▶ Release the brake pedal.

DEACTIVATING THE HOLD FUNCTION

- ▶ Depress the accelerator pedal to start off.





or

- ▶ Depress the brake pedal until **HOLD** disappears from the driver display.

THE HOLD FUNCTION IS ALSO DEACTIVATED IN THE FOLLOWING SITUATIONS:

- The parking position **P** is engaged.
- The vehicle is secured with the electric parking brake.

IN THE FOLLOWING SITUATIONS, THE VEHICLE IS HELD BY THE PARKING POSITION ¹⁴ AND/OR ELECTRIC PARKING BRAKE:

- The seat belt is unfastened and the driver's door is opened.
 - The vehicle is switched off.
 - There is a system malfunction.
 - The power supply is insufficient.
- ▶ Immediately depress the brake pedal firmly.
The HOLD function is deactivated.
- ▶ Additionally secure the vehicle against rolling away.

Function of Hill Start Assist



WARNING

Risk of accident and injury due to the vehicle rolling away

After a short time, Hill Start Assist no longer holds the vehicle.

- ▶ Swiftly move your foot from the brake pedal to the accelerator pedal. Do not leave the vehicle when it is being held by Hill Start Assist.

HILL START ASSIST HOLDS THE VEHICLE FOR A SHORT TIME WHEN YOU PULL AWAY UPHILL UNDER THE FOLLOWING CONDITIONS:

- The transmission position **D** or **R** for starting off uphill is selected.
- The electric parking brake has been released.

This gives you enough time to move your foot from the brake pedal to the accelerator pedal and depress it without the vehicle rolling away immediately.

Valet service mode

FUNCTION OF THE VALET SERVICE MODE



This function can be a Digital Extra (→ page 96).

In valet service mode, vehicle acceleration is limited to reduce the risk of damage to and improper use of the vehicle when it is handed over to third parties.





VALET SERVICE MODE IS CHARACTERIZED BY THE FOLLOWING:

- Power output is reduced.
- In principle, a maximum speed of 50 mph (80 km/h) can be reached.
- The sporty drive programs and drive program  are not available.
- ESP® cannot be deactivated.
- Profiles that are still logged in are logged out, and unprotected profiles are secured.

SWITCHING VALET SERVICE MODE ON OR OFF

Requirements:

- For activation: the vehicle is at a standstill.
- For deactivation: the park position  is selected.

Multimedia system:

   Apps  Valet service mode

 This function is a Digital Extra (→ page 96).

- ▶ Activate or deactivate the function.

If the valet service mode is activated an indicator lamp lights up in the driver display.

 Valet service mode is only protected against deactivation by third parties in conjunction with Mercedes-Benz Connect. If the vehicle is connected to Mercedes-Benz Connect, only the profile that activated the mode or the defined main user can deactivate it again.

 The valet service mode remains active in case of a profile change or if the vehicle is switched on or off and must be consciously switched off by the authorized users.

Beginner driver mode

FUNCTION OF BEGINNER DRIVER MODE

 This function can be a Digital Extra (→ page 96).

In beginner driver mode, vehicle acceleration is limited to increase safety for inexperienced drivers.

BEGINNER DRIVER MODE IS CHARACTERIZED BY THE FOLLOWING:

- Power output is reduced.
- In principle, a maximum speed of 75 mph (120 km/h) can be reached.
- The sporty drive programs and drive program  are not available.
- ESP® cannot be deactivated.

SWITCHING BEGINNER DRIVER MODE ON OR OFF

Requirements:

- For activation: the vehicle is at a standstill.
- For deactivation: the park position  is selected.





Multimedia system:

   Apps  Beginner driver mode

 This function is a Digital Extra (→ page 96).

- ▶ Activate or deactivate the function.

If the beginner driver mode is activated an indicator lamp lights up in the driver display.

 Beginner driver mode is only protected against deactivation by third parties in conjunction with Mercedes-Benz Connect. If the vehicle is connected to Mercedes-Benz Connect, only the profile that activated the mode or the defined main user can deactivate it again.

 The beginner driver mode remains active in case of a profile change or if the vehicle is switched on or off and must be consciously switched off by the authorized users.

ATTENTION ASSIST

FUNCTION OF ATTENTION ASSIST

 Depending on the respective country of use and equipment, ATTENTION ASSIST features a microsleep detection sub-function. This function is available only in conjunction with the driver camera on the driver display (→ page 516).

ATTENTION ASSIST assists you on long, monotonous journeys, e.g. on free-ways and highways. If indicators of fatigue or increasing lapses in concentration on the part of the driver are detected, the system will suggest taking a break.

ATTENTION ASSIST serves solely as an aid. It cannot always promptly detect fatigue or lapses in concentration. The system is not a substitute for a well-rested and attentive driver. On long journeys, take regular, timely breaks to allow for adequate recovery.

YOU CAN CHOOSE BETWEEN TWO SETTINGS:

- **Standard:** normal system sensitivity.
- **Sensitive:** higher system sensitivity. The driver will be warned earlier and the attention level detected by ATTENTION ASSIST will be adapted accordingly.


If fatigue or increasing lapses in concentration are detected, the driver display will show the following warning: **ATTENTION ASSIST: Take a Break!**. You can acknowledge the message and take a break if necessary. If you do not take a break and ATTENTION ASSIST continues to detect increasing lapses in concentration, you will be warned again after a minimum of 15 minutes.

If ATTENTION ASSIST is unable to calculate the attention level and therefore cannot issue a warning, a message reading **System Suspended** will appear.

If the driver display shows a warning, the multimedia system will offer to search for a rest area. You can select a rest area and start navigation to that rest area.

When you restart the vehicle, ATTENTION ASSIST will automatically be switched on. The last selected sensitivity level will remain stored.



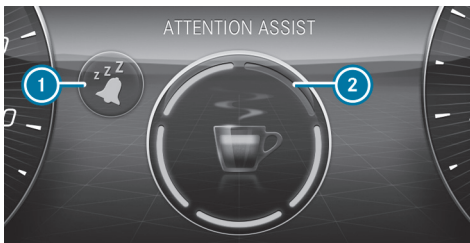

THE FOLLOWING INFORMATION WILL BE SHOWN ON THE DRIVER DISPLAY:

- Journey time since the last break
- The attention level determined by ATTENTION ASSIST:
 - The more segments ② of the circle displayed, the higher the detected attention level.
 - Fewer segments ② will be displayed in the circle as the attention level decreases.
- Microsleep detection status ① :
 - **Gray:** Switched on, but will not issue a warning.
 - **Green:** Switched on and will issue a warning.
 - **Deactivated:** Display hidden.

MICROSLEEP DETECTION

If the system detects signs of microsleep using the driver camera, a warning message reading **ATTENTION ASSIST Nodding Off Take a Break!** will appear on the driver display and a warning tone will sound simultaneously. You will need to confirm this warning message using Touch Control. It is recommended that you take a break immediately.

If the driver does not react to the microsleep warning, the system may initiate an emergency stop (→ page 390).

SYSTEM LIMITS

ATTENTION ASSIST operates in the 37 mph (60 km/h) to 124 mph (200 km/h) speed range.

The microsleep detection function is available at a speed of 12 mph (20 km/h) and above.

If the system is unavailable due to a malfunction, the  ATTENTION ASSIST warning lamp will light up continuously on the driver display.

FUNCTIONALITY OF ATTENTION ASSIST IS RESTRICTED, AND WARNINGS MAY BE DELAYED OR NOT ISSUED AT ALL IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you have been driving for less than approximately 30 minutes
- If the road condition is poor (uneven road surface or potholes)
- If there is a strong side wind
- If you adopt a sporty driving style (high cornering speeds or high rates of acceleration)
- If the Active Steering Assist function of Active Distance Assist DISTRONIC is active
- If the clock is set to the incorrect time.
- If you change lanes and vary your speed frequently in active driving situations.
- If ESP® is not available

MICROSLEEP DETECTION WILL ALSO NOT FUNCTION IF THE DRIVER CAMERA CANNOT DETECT YOUR EYES AS A RESULT OF THE FOLLOWING FACTORS, FOR EXAMPLE:

- The driver's eyes are covered due to the steering column position, for example.
- Poor ambient light.





- Certain types of spectacles or sunglasses.
- The driver's line of vision is outside the driver camera's field of vision.

Observe also the information pertaining to display messages shown on the driver display.

THE ATTENTION ASSIST DROWSINESS AND ALERTNESS ASSESSMENT WILL BE RESET AND RESTARTED WHEN YOU CONTINUE YOUR JOURNEY IN THE FOLLOWING SITUATIONS:

- You switch off the vehicle.
- If you unfasten your seat belt and open the driver's door (e.g. to change drivers or take a break).

SETTING ATTENTION ASSIST

Multimedia system:

  >> Settings >> Assistance >> Assistance
>> ATTENTION ASSIST

- ▶ Activate  or deactivate  ATTENTION ASSIST.

SETTING THE SENSITIVITY

- ▶ Select  alongside ATTENTION ASSIST.
- ▶ Select **Standard** or **Sensitive**.

Speed control cruise control

FUNCTION OF CRUISE CONTROL

Cruise control regulates the speed to the value selected by the driver.

Forexample, the stored speed is not deleted if you accelerate to overtake. If you remove your foot from the accelerator pedal after overtaking, cruise control will resume speed regulation back to the stored speed.

You can set any speed above 15 mph (20 km/h) up to the maximum design speed or up to the speed recommended by Range Assistant.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (→ page 362).

Mercedes-AMG vehicles: cruise control is available up to a maximum speed of 155 mph (250 km/h).

NOTIFICATIONS ON THE DRIVER DISPLAY



Gray: cruise control is selected but not yet active or temporarily in passive mode.



Green: cruise control is active.

A stored speed is shown below the display  and is indicated in the speedometer.


SYSTEM LIMITS

Cruise control may be unable to maintain the stored speed on uphill gradients. The stored speed is resumed when the gradient evens out.

On long and steep downhill gradients, you must increase recuperation in good time. This is particularly important when driving a laden vehicle. The electric motor's braking effect can thus be used to charge the high-voltage battery. This will take some of the strain off the brake system and prevent the brakes from overheating and wearing too quickly.

DO NOT USE CRUISE CONTROL IN THE FOLLOWING SITUATIONS:

- in traffic situations that require frequent changes of speed, e.g. in heavy traffic, on winding roads
- on slippery roads. Accelerating can cause the drive wheels to lose traction and the vehicle could then begin skidding.
- when visibility is poor





OPERATING CRUISE CONTROL

⚠ WARNING


Risk of accident due to stored speed

If you call up the stored speed and this is lower than your current speed, the vehicle decelerates.

- ▶ Take into account the traffic situation before calling up the stored speed.

Requirements:

- The transmission is in position **D**.
- The vehicle speed is at least 15 mph (20 km/h).
- ESP® must be activated, but not intervening.
- Cruise control is selected.

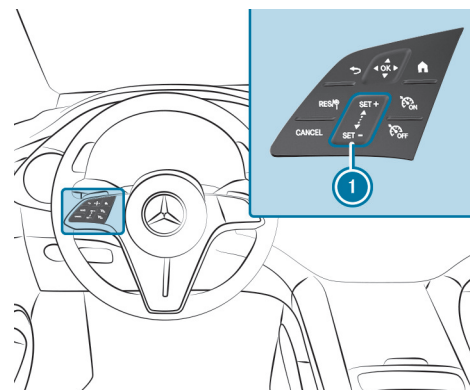

Steering wheel control panel for cruise control

	Adopts the stored/detected speed
	Deactivating cruise control
	Control panel to increase/decrease speed
	Switching on cruise control
	Switching off cruise control

Switching on cruise control:

- ▶ Press .

Activating cruise control:

- ▶ Press or on the control panel . The current vehicle speed is stored and maintained by the vehicle.

or

- ▶ Press . The last stored speed is called up and maintained by the vehicle.





If the last stored speed has previously been deleted, the current vehicle speed is stored.

 When you switch off the vehicle, the last speed stored is deleted.

Increasing/decreasing the stored speed:

- ▶ To increase the stored speed: swipe upwards from the bottom of the control panel .
 - The stored speed is increased by 1 mph (1 km/h).
- ▶ To decrease the stored speed: swipe downwards from the top of the control panel .
 - The stored speed is decreased by 1 mph (1 km/h).

or

- ▶ Briefly press  or  on the control panel .

THE STORED SPEED IS INCREASED OR DECREASED TO THE FOLLOWING VALUES DEPENDING ON THE UNIT:

- **mph:** the next value ending in 5
- **km/h:** the next value ending in 0

or

- ▶ Accelerate the vehicle to the desired speed.
- ▶ Press  on the control panel .

Adopting a detected speed:

If cruise control is activated and Traffic Sign Assist has detected a traffic sign with a maximum permissible speed and this is displayed on the driver display:

- ▶ Press .

The maximum permissible speed shown by the traffic sign is stored, and the vehicle maintains this speed.


Deactivating cruise control

- ▶ Press .

Switching off cruise control

- ▶ Press .

 If you brake, deactivate ESP® or if ESP® intervenes, cruise control is deactivated.





Active Distance Assist DISTRONIC

FUNCTION OF ACTIVE DISTANCE ASSIST DISTRONIC

WARNING

Risk of accident from acceleration or braking by Active Distance Assist DISTRONIC

ACTIVE DISTANCE ASSIST DISTRONIC MAY ACCELERATE OR BRAKE IN THE FOLLOWING CASES, FOR EXAMPLE:

- If the vehicle pulls away using Active Distance Assist DISTRONIC.
- If the stored speed is called up and is considerably faster or slower than the currently driven speed.
- If Active Distance Assist DISTRONIC no longer detects a vehicle in front or does not react to relevant objects.
- ▶ Always carefully observe the traffic conditions and be ready to brake at all times.
- ▶ Take into account the traffic situation before calling up the stored speed.

WARNING

Risk of accident due to insufficient deceleration by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC brakes your vehicle with up to 50% of the possible deceleration. If this deceleration is not sufficient, Active Distance Assist DISTRONIC alerts you with a visual and acoustic warning.

- ▶ Adjust your speed and maintain a suitable distance from the vehicle in front.
- ▶ Brake the vehicle yourself and/or take evasive action.





WARNING

Risk of accident if detection function of Active Distance Assist DISTRONIC is impaired

ACTIVE DISTANCE ASSIST DISTRONIC DOES NOT REACT OR HAS A LIMITED REACTION:

- when driving on a different lane or when changing lanes
- to pedestrians, animals, bicycles or stationary vehicles, or unexpected obstacles
- to complex traffic conditions
- to oncoming vehicles and crossing traffic

As a result, Active Distance Assist DISTRONIC may neither give warnings nor intervene in such situations.

- ▶ Always observe the traffic conditions carefully and react accordingly.

-  Active Distance Assist DISTRONIC described for vehicles without Driving Assistance Package may be a Digital Extra (depending on the respective country of use) (→ page 96).

Active Distance Assist DISTRONIC maintains the set speed on free-flowing roads. If vehicles are detected ahead the set distance is maintained, if necessary until the vehicle comes to a standstill. The vehicle accelerates or brakes depending on the distance to the vehicle in front and the set speed.

The speed and distance to the vehicle in front are set and saved using the steering wheel.

AVAILABLE SPEED RANGE:

- **Vehicles without Driving Assistance Package:** 15 mph (20 km/h) - 100 mph (160 km/h)
- **Vehicles with Driving Assistance Package:** 15 mph (20 km/h) - 130 mph (210 km/h)


-  If Active Distance Assist DISTRONIC is active and the range monitor recommends a lower driving speed, this is automatically adopted as the new set speed. If necessary, the set speed can be increased again manually.

OTHER FEATURES OF ACTIVE DISTANCE ASSIST DISTRONIC:

- Adjusts the driving style depending on the selected drive program
- Initiates acceleration to the stored speed if the turn signal indicator is switched on to change to the overtaking lane
- **Vehicles with Driving Assistance Package:**
 - Reacts to stationary vehicles detected in urban speed ranges (except bicycles and motorcycles)
 - Takes one-sided passing restrictions into account on highways or multi-lane roads with separate roadways (country-dependent)

-  In the Active Distance Assist menu, it is possible to set the driving mode of Active Distance Assist DISTRONIC. Depending on the selected drive program, the driving behavior is energy-saving, comfortable or dynamic (→ page 387).


Vehicles with Active Parking Assist and Driving Assistance Package: if Active Distance Assist DISTRONIC has braked the vehicle to a standstill, it can





automatically follow the vehicle in front when driving off again within 30 seconds if the system detects that the driver is touching the steering wheel. If a critical situation is detected in the surrounding area when driving off, such as a person in the vehicle path, a visual and acoustic warning indicates that the driver must now reassume control of the vehicle. The vehicle is not accelerated any further.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (→ page 362).

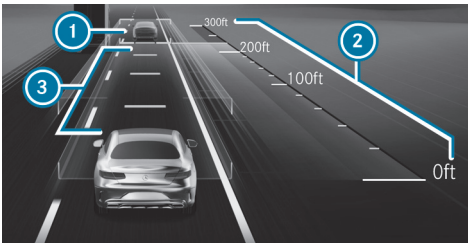

Notification on the driver display in the menu [Assistance](#)

- ① Vehicle in front
- ② Distance indicator
- ③ Set specified distance

The vehicle detected in front ① is highlighted in green. It may also be in the lane to the left of your vehicle in situations where it is not permitted to overtake on the right, for example, on highways.

PERMANENT STATUS DISPLAY



Gray: Active Distance Assist DISTRONIC selected but not yet active.



Green speedometer, gray vehicle: Active Distance Assist DISTRONIC active, speed set.



Green: Active Distance Assist DISTRONIC active and vehicle detected.

The stored speed is shown under the permanent status display and highlighted in the speedometer. Active Distance Assist DISTRONIC's status display is grayed out when in passive mode.

If the speed of the vehicle in front or the ascertained target speed due to the route event ahead is less than the stored speed, the segments in the speedometer light up.

If you increase or decrease the set specified distance ③, the display appears briefly.

❗ The green vehicle symbol is displayed cyclically when the vehicle is ready to pull away.

❗ If the accelerator pedal is depressed while Active Distance Assist DISTRONIC is operational, the system can be switched to passive mode. The **Suspended** message appears briefly on the driver display.

SYSTEM LIMITS

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING INSTANCES, FOR EXAMPLE:

- In snow, rain, fog, heavy spray, if there is glare, in direct sunlight or in greatly varying ambient light.
- If the windshield in the camera's area is dirty, fogged up, damaged or covered.
- If the radar sensors are dirty or covered.





- In parking garages or on roads with steep uphill or downhill gradients.
- If there are narrow vehicles in front, such as bicycles or motorcycles.

In addition, one or more wheels may lose grip due to braking or acceleration on smooth or slippery roads, and the vehicle may begin skidding. If ESP® intervenes, Active Distance Assist DISTRONIC is deactivated.

Do not use Active Distance Assist DISTRONIC in these situations.

You can watch an animation on this topic via the following link:

OPERATING ACTIVE DISTANCE ASSIST DISTRONIC

WARNING

Risk of accident if detection function of Active Distance Assist DISTRONIC is impaired

ACTIVE DISTANCE ASSIST DISTRONIC DOES NOT REACT OR HAS A LIMITED REACTION:

- when driving on a different lane or when changing lanes
- to pedestrians, animals, bicycles or stationary vehicles, or unexpected obstacles
- to complex traffic conditions
- to oncoming vehicles and crossing traffic

As a result, Active Distance Assist DISTRONIC may neither give warnings nor intervene in such situations.

- ▶ Always observe the traffic conditions carefully and react accordingly.

WARNING

Risk of accident from acceleration or braking by Active Distance Assist DISTRONIC

ACTIVE DISTANCE ASSIST DISTRONIC MAY ACCELERATE OR BRAKE IN THE FOLLOWING CASES, FOR EXAMPLE:

- If the vehicle pulls away using Active Distance Assist DISTRONIC.
 - If the stored speed is called up and is considerably faster or slower than the currently driven speed.
 - If Active Distance Assist DISTRONIC no longer detects a vehicle in front or does not react to relevant objects.
- ▶ Always carefully observe the traffic conditions and be ready to brake at all times.
 - ▶ Take into account the traffic situation before calling up the stored speed.





WARNING

Risk of accident due to insufficient deceleration by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC brakes your vehicle with up to 50% of the possible deceleration. If this deceleration is not sufficient, Active Distance Assist DISTRONIC alerts you with a visual and acoustic warning.

- ▶ Adjust your speed and maintain a suitable distance from the vehicle in front.
- ▶ Brake the vehicle yourself and/or take evasive action.

WARNING


Risk of accident due to speed adaptation via Active Speed Limit Assist

The speed limit adopted by Active Speed Limit Assist may be too high or otherwise erroneous in certain circumstances:

- in the case of speed limits below 12 mph (20 km/h)
- due to weather, e.g. in wet or foggy conditions
- ▶ Ensure that the vehicle speed always complies with the traffic regulations.
- ▶ Adjust the vehicle speed to the current traffic and weather conditions.

Requirements:

- The electric parking brake has been released.
- ESP® is switched on and is not intervening.
- Transmission position **D** is engaged.
- All the doors are closed.
- Check of the radar sensor system has been successfully completed.
- Snow chain mode is not active (→ page 700).

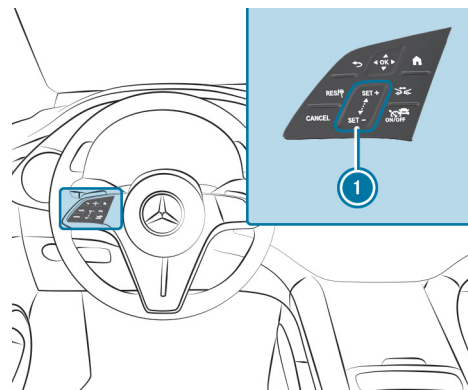

Adopts the stored/detected speed



Deactivating Active Distance Assist DISTRONIC



Control panel to increase/decrease speed



Increases/decreases the specified distance



Activates/deactivates Active Distance Assist DISTRONIC

- ▶ **To operate Active Distance Assist DISTRONIC:** press the respective button with only one finger or swipe across the control panel.

ACTIVATES/DEACTIVATES ACTIVE DISTANCE ASSIST DISTRONIC

- ▶ Press .



ACTIVATING ACTIVE DISTANCE ASSIST DISTRONIC

- ▶ **To activate without a stored speed:** press the control panel  on the top  or on the bottom  or press . Remove your foot from the accelerator pedal.

or

- ▶ **To activate with a stored speed:** press . Remove your foot from the accelerator pedal.
The last stored speed is called up and maintained by the vehicle.
If the stored speed has been deleted, the current vehicle speed is stored.

INCREASES/DECREASES THE SPEED

- ▶ To increase the stored speed: swipe upwards from the bottom of the control panel .
 - The stored speed is increased by 1 mph (1 km/h).
- ▶ To decrease the stored speed: swipe downwards from the top of the control panel .
 - The stored speed is decreased by 1 mph (1 km/h).

or

- ▶ Briefly press the top  or bottom  of the control panel .
The stored speed is increased or decreased by 5 mph (10 km/h).

or

- ▶ Accelerate the vehicle to the desired speed.
- ▶ Press the top  of the control panel .

ADOPTING THE SPEED RESTRICTION SHOWN ON THE DRIVER DISPLAY

- ▶ Activate Active Distance Assist DISTRONIC: press ,  or .
- ▶ Adopt the displayed speed restriction: press .

The speed restriction shown on the driver display is adopted as the stored speed. The vehicle adapts its speed to that of the vehicle in front, but only up to the stored speed, or restricts its speed accordingly.

 A speed restriction shown on the driver display is adopted only when the vehicle is in motion, not stationary.

PULLING AWAY WITH ACTIVE DISTANCE ASSIST DISTRONIC

- ▶ Activate Active Distance Assist DISTRONIC and remove your foot from the brake pedal.
- ▶ Press .

or

- ▶ Depress the accelerator pedal briefly and firmly.
The functions of Active Distance Assist DISTRONIC remain active.

INCREASING/DECREASING THE SPECIFIED DISTANCE TO THE VEHICLE IN FRONT

- ▶ Press .
The  display appears. The specified distance is reduced by one level.
If the lowest level is already selected, the selection jumps to the highest level.





DEACTIVATING ACTIVE DISTANCE ASSIST DISTRONIC

WARNING

Risk of an accident due to Active Distance Assist DISTRONIC being active when you leave the driver's seat

If you leave the driver's seat while the vehicle is being braked by Active Distance Assist DISTRONIC only, the vehicle can roll away.

- ▶ Always deactivate Active Distance Assist DISTRONIC and secure the vehicle to prevent it from rolling away before you leave the driver's seat.

▶ Press .

 If you brake, deactivate ESP® or if ESP® intervenes, Active Distance Assist DISTRONIC is deactivated.

FUNCTION OF ACTIVE SPEED LIMIT ASSIST

WARNING

Risk of accident due to speed adaptation via Active Speed Limit Assist

The speed limit adopted by Active Speed Limit Assist may be too high or otherwise erroneous in certain circumstances:

- in the case of speed limits below 12 mph (20 km/h)
- due to weather, e.g. in wet or foggy conditions
- ▶ Ensure that the vehicle speed always complies with the traffic regulations.
- ▶ Adjust the vehicle speed to the current traffic and weather conditions.

If a change in speed limit is detected and automatic adoption of speed limits is switched on, the new speed limit will automatically be adopted as the stored speed (→ page 387). Speed limits below 12 mph (20 km/h) will not be adopted.

The vehicle's speed will be adjusted when the vehicle is level with the traffic sign at the latest. In the case of signs indicating entry into an urban area, the speed will be adapted according to the speed permitted within the urban area. The speed limit indicator on the driver's display will always be updated when the vehicle is level with the traffic sign.

If you are driving on a German freeway with no speed limit, the system will use the speed stored for a stretch of road with no speed limit as the set speed. If you do not alter the stored speed on a stretch of road with no speed limit, the recommended speed of 80 mph (130 km/h) will be adopted.





If you have switched Active Distance Assist DISTRONIC to passive mode by pressing the accelerator pedal, only speed limits that are higher than the stored speed will be adopted.

The maximum permissible speed does not take the road condition and current weather and traffic conditions into consideration. Adjust your speed accordingly when necessary.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (→ page 362).

SYSTEM LIMITS

The system limits of Traffic Sign Assist apply to the detection of traffic signs (→ page 402).

Speed limits below 12 mph (20 km/h) will not automatically be adopted by the system as the set speed. Temporary speed restrictions (e.g. for a specific time or due to weather conditions) cannot be unequivocally detected by the system.

Adjust your speed in these situations.

FUNCTION OF ROUTE-BASED SPEED ADAPTATION



WARNING

Risk of accident in spite of route-based speed adaptation

Route-based speed adaptation can malfunction or be temporarily unavailable in the following situations:

- If the driver does not follow the calculated route
 - If map data is not up-to-date or available
 - In the event of roadworks
 - In bad weather or road conditions
 - If the accelerator pedal is depressed
 - In the event of electronically displayed speed limitations
- Adapt the speed to the traffic situation.

When Active Distance Assist DISTRONIC is activated, the vehicle speed will be adapted to the route events ahead. Depending on the drive program selected, the vehicle will negotiate a route event ahead in an energy-saving, comfortable or dynamic manner. When the route event has been passed, the vehicle will accelerate again to the stored speed. The set distance to the vehicle in front, vehicles detected ahead and speed restrictions ahead will be taken into account.

Route-based speed adaptation can be activated in the multimedia system (→ page 387).

THE FOLLOWING ROUTE EVENTS WILL BE TAKEN INTO ACCOUNT:

- Bends
- Traffic circles
- T-intersections





- Turns and exits
- Traffic jams ahead (only with Live Traffic (→ page 568))

ALSO, THE SPEED WILL BE REDUCED IF THE TURN SIGNAL INDICATOR IS SWITCHED ON AND ONE OF THE FOLLOWING SITUATIONS IS DETECTED:

- Turning off at intersections
- Driving in slowing-down lanes
- Driving in lanes adjacent to slowing-down lanes

The driver is responsible for choosing the right speed and observing other road users. This applies in particular to intersections, traffic circles and traffic lights, as route-based speed adaptation will not brake the vehicle to a standstill.

When route guidance is active, the first speed adjustment will be carried out automatically. If the turn signal indicator is switched on, the selected route will be confirmed and further speed adjustment will be activated.

SPEED ADJUSTMENT WILL BE CANCELED IN THE FOLLOWING CASES:

- If the turn signal indicator is switched off before the route event and it is presumed that the route event is not deemed relevant to the driver.
- If the driver depresses the accelerator or brake pedal during the process.

SYSTEM LIMITS

Route-based speed adaptation does not take right of way regulations into account. The driver is responsible for complying with road traffic regulations and driving at a suitable speed.

IN DIFFICULT CONDITIONS, THE SPEED SELECTION MADE BY THE SYSTEM MAY NOT ALWAYS BE SUITABLE. THIS APPLIES TO THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- The road's course is not clearly visible
- Lane narrowing
- Varying maximum permissible speeds in individual lanes, such as at toll stations
- Wet road surfaces, snow or ice

The driver will need to intervene accordingly in these situations.

SETTING THE DRIVING STYLE FOR ACTIVE DISTANCE ASSIST DISTRONIC

Requirements:

- Active Distance Assist DISTRONIC is activated.

Multimedia system:



SELECTING A DRIVING STYLE

- ▶ Select **Based on DYNAMIC SELECT**, **Dynamic** or **Comfortable**.

 Additional information on Active Distance Assist DISTRONIC (→ page 379).

SETTING SPEED ADJUSTMENT

- ▶ Select **Adapt Speed Limit** or **Route-based Speed Adaptation**.

When these functions are active, the travel speed is adapted depending on the route events ahead or in accordance with a speed restriction.



IF ONE OF THE FOLLOWING SYSTEMS IS ACTIVATED, THE DETECTED SPEED CAN BE MANUALLY ADOPTED AS THE MAXIMUM PERMISSIBLE SPEED:

- Active Distance Assist DISTRONIC
- Variable limiter

i Additional information on speed adjustment (→ page 386).

FUNCTION OF ACTIVE STOP-AND-GO ASSIST

Active Stop-and-Go Assist helps you in traffic jams on multi-lane roads with separated roadways by automatically pulling away within up to 60 seconds and with moderate steering maneuvers. It orients itself using the vehicle in front and lane markings. Active Stop-and-Go Assist automatically maintains a safe distance from the vehicle in front and vehicles cutting in.

Active Stop-and-Go Assist requires you, as the driver, to keep your hands on the steering wheel at all times so that you can intervene at any time to correct the course of the vehicle and keep it in the lane.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (→ page 362).

ACTIVE STOP-AND-GO ASSIST WILL ACTIVATE AUTOMATICALLY WHEN ALL THE FOLLOWING CONDITIONS ARE MET:

- You are in a traffic jam on a highway or major high-speed road.
- Active Distance Assist DISTRONIC is activated and active (→ page 382).
- Active Brake Assist is available (→ page 397).
- Active Steering Assist is switched on and active (→ page 390).

- You are traveling at a speed no greater than 35 mph (60 km/h).

When Active Stop-and-Go Assist is active, the  status indicator will appear on the driver display.

SYSTEM LIMITS

The system limits of Active Distance Assist DISTRONIC and Active Steering Assist apply to Active Stop-and-Go Assist.

Active Steering Assist

FUNCTION OF ACTIVE STEERING ASSIST



WARNING

Risk of accident if Active Steering Assist unexpectedly stops functioning

If the system limits of Active Steering Assist are reached there is no guarantee that the system will remain active or will keep the vehicle in lane.

- ▶ Always keep your hands on the steering wheel and observe the traffic carefully.
- ▶ Always steer the vehicle paying attention to traffic conditions.





WARNING

Risk of accident if Active Steering Assist unexpectedly intervenes. The detection of lane markings and objects may malfunction and cause unexpected steering interventions.

- ▶ Steer according to traffic conditions.

Active Steering Assist is available up to a speed of 130 mph (210 km/h).

The system helps you to stay in the center of the lane by means of moderate steering interventions. Depending on the vehicle speed, Active Steering Assist uses the vehicles ahead and lane markings as a reference.

-  Depending on the respective country of use, Active Steering Assist can use the surrounding traffic as a reference in the lower speed range. If necessary, Active Steering Assist can also assist when you are driving outside the center of the lane, for example, to form an emergency corridor.

If the detection of lane markings and vehicles ahead is impaired, Active Steering Assist switches to passive mode. The system provides no support in this case.

STATUS DISPLAY OF ACTIVE STEERING ASSIST



Gray: activated and in passive mode



Green: activated and active



Red, flashing: prompt to the driver to actively confirm or transition from active to passive mode, system limits detected



White, red hands: "hands on the steering wheel" prompt

-  During the transition from active to passive mode, the  symbol is shown as enlarged and flashing. Once the system is in passive mode, the  symbol is shown in gray on the driver display.

-  Depending on the selected vehicle settings, Active Steering Assist may be unavailable.

STEERING AND TOUCH DETECTION

The driver is required to keep their hands on the steering wheel at all times to ensure that they can intervene at any time to correct the course of the vehicle and keep it in lane. The driver must anticipate a change from active to passive mode or vice versa at any time.



If the system detects that the driver has not steered the vehicle for a considerable period of time or has removed their hands from the steering wheel, an initial visual warning is issued. The notification  appears on the driver display. If the driver still does not steer the vehicle, or gives no confirmation to the system, a repetitive warning tone sounds in addition to the visual warning message.

If the driver does not react to this warning for a considerable period, an emergency stop may be initiated (→ page 390).





The warning is not issued or stops as soon as the system detects the driver touching or steering the steering wheel.

The touch detection may be limited or inoperative if there is no direct contact between the hand and the steering wheel, e.g. when you are wearing gloves or if there is a cover on the steering wheel.

If Active Steering Assist detects that a system limit has been reached, a visual warning is issued and a warning tone sounds.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (→ page 362).

SYSTEM LIMITS

Active Steering Assist has a limited steering torque for lateral guidance. In some cases, the steering intervention is not sufficient to keep the vehicle in the lane or to drive through exits.

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING SITUATIONS:

- There is poor visibility, e.g. due to snow, rain, fog, heavy spray, greatly varying ambient light or dense shadows on the road.
- There is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- If there is insufficient road illumination.
- The windshield is dirty, fogged up, damaged or covered in the vicinity of the camera, e.g. by a sticker.
- If there are no lane markings in a given lane, or the markings are not easily discernible or change quickly, for example, in a construction area or at intersections.
- If the lane markings are worn away, dark or covered up, e.g. by dirt or snow.
- If the distance to the vehicle in front is too short and the lane markings can therefore not be detected.

- If the roadway is narrow and winding.
- If there are obstacles on the lane or projecting out into the lane, such as object markers.

THE SYSTEM DOES NOT PROVIDE ASSISTANCE IN THE FOLLOWING CONDITIONS:

- in very tight curves and when turning
- when crossing intersections
- at traffic circles or toll stations
- when actively changing lane without switching on the turn signal indicator
- when the tire pressure is too low

You can watch an animation on this topic via the following link:

ACTIVATING/DEACTIVATING ACTIVE STEERING ASSIST

Requirements:

- ESP® is activated, but is not intervening.
- Active Distance Assist DISTRONIC is activated.

Multimedia system:

- 

 Settings
  Assistance
  Driving
- ▶ Activate or deactivate [Active Steering Assist](#).

Function of Active Emergency Stop Assist

Active Emergency Stop Assist monitors the steering wheel, as well as the accelerator and brake pedals. If the system detects a lack of driver activity or



the vehicle is in danger of leaving the lane, a warning can be issued and an emergency stop initiated.

Vehicles without Driving Assistance Package: The system is available from a speed of approx. 37 mph (60 km/h).

Vehicles with Driving Assistance package: If Active Steering Assist is switched off, the system is available from a speed of approx. 37 mph (60 km/h).

IF THE SYSTEM DETECTS THAT THE VEHICLE IS IN DANGER OF LEAVING THE LANE, A WARNING CAN BE ISSUED AND AN EMERGENCY STOP INITIATED.

- The driver has not touched the steering wheel for a certain while, or no steering movement is detected for a lengthy period (depending on the respective vehicle equipment).
- Neither the accelerator nor the brake pedal is depressed.

ⓘ Vehicles with Driving Assistance package: If Active Steering Assist is switched on and active, the system monitors only the steering wheel. If the driver has not touched the steering wheel for a certain time, a warning may be issued despite pedal actuation. Observe also the instructions on the touch detection of Active Steering Assist (→ page 388).




ACTIVE EMERGENCY STOP ASSIST ISSUES THE FOLLOWING WARNINGS IN SUCCESSION:

- Display message ⓘ appears on the driver display.
- In addition to the display ⓘ, a warning tone sounds.
- The **Initiating Emergency Stop** message appears on the driver display, a continuous warning tone sounds and the vehicle will no longer accelerate. Additionally, a slight tensioning of the belt will be generated as required.
- The vehicle speed is reduced in increments until the vehicle comes to a standstill. Sharp brake impulses are also effected.

ⓘ Vehicles with Driving Assistance Package: If Active Distance Assist DISTRONIC is active and the driver unfastens the seat belt and opens the driver's door, an emergency stop can be initiated immediately.

Vehicles with Driving Assistance package: If possible, a lane change to the adjacent lane is performed (country-dependent). It is possible to change lanes across one lane and only to the outside lane, not to the hard shoulder.

When automatic braking is initiated, Active Distance Assist DISTRONIC is deactivated. Depending on the respective country of use, the hazard warning light system is also switched on.





WHEN THE VEHICLE HAS SLOWED TO A STANDSTILL:

- the vehicle is secured with the electric parking brake.
- the vehicle is unlocked.
- if possible, an emergency call is made to the Mercedes-Benz emergency call center.

Before automatic braking is initiated, you can cancel Active Emergency Stop Assist by turning the steering wheel.

YOU CAN CANCEL AN INTERVENTION BY ACTIVE EMERGENCY STOP ASSIST AFTER AUTOMATIC BRAKING IS INITIATED BY PERFORMING ONE OF THE FOLLOWING ACTIONS:

- Accelerating or braking: braking is canceled, but the warning message, warning tone and electric power steering remain active.
- Steering: electric power steering is canceled, the warning message and warning tone remain active and the vehicle continues to be braked

-  Active Emergency Stop Assist can initiate an emergency stop a maximum of three times within a driving cycle. After that, Active Steering Assist and Active Emergency Stop Assist are disabled until the vehicle has been restarted.

SYSTEM LIMITS

FOR THE DETECTION OF VEHICLES AND OTHER OBSTACLES, OBSERVE THE SYSTEM LIMITS OF THE FOLLOWING FUNCTIONS:

- Active Distance Assist DISTRONIC (→ page 379)
- Active Steering Assist (→ page 388)
- Active Lane Change Assist (→ page 392)

- Active Lane Keeping Assist (→ page 410)
- Active Brake Assist (→ page 397)

Vehicles without Driving Assistance Package:

ACTIVE EMERGENCY STOP ASSIST IS INACTIVE IN THE FOLLOWING CASES:

- Active Lane Keeping Assist has reached a system limit.
-  Active Lane Keeping Assist is switched off (white status display).
-  Active Lane Keeping Assist is not ready (gray status display).

Active Lane Change Assist

FUNCTION OF ACTIVE LANE CHANGE ASSIST



WARNING

Risk of accident when changing lanes into an occupied adjacent lane

Active Lane Change Assist cannot always clearly determine whether the adjacent lane is free, in particular if vehicles are approaching at speeds that differ greatly to that of your own vehicle, or in the case of narrow vehicles (e.g. motorcycles).

A lane change can be initiated even if the adjacent lane is occupied.

- ▶ Ensure before initiating the lane change that the adjacent lane is clear, and that the action does not pose any danger to other road users.
- ▶ Pay attention to other road users when changing lanes.



⚠ WARNING

Risk of accident due to abrupt failure of the Active Lane Change Assist function

If the system limits for Active Lane Change Assist are reached, it can not be guaranteed that the system remains active.

Active Lane Change Assist will then no longer provide any ancillary steering torque.

- ▶ Always perform and monitor the lane change with your hands on the steering wheel. Pay attention to the surrounding traffic conditions and intervene as required by steering and/or braking.

Active Lane Change Assist is activated via the turn signal indicator, and supports the driver when changing lanes by applying steering torque.

THE FOLLOWING CONDITIONS MUST BE MET FOR THIS FUNCTION:

- You are driving on a freeway or on a main road similar to a freeway.
- The travel speed is between approximately 40 mph (65 km/h) and 112 mph (180 km/h).
- A dashed boundary marking separates the adjacent lane.
- No vehicle or obstacle is detected in the adjacent lane.
- Active Lane Change Assist is switched on in the multimedia system (→ page 396).
- Active Distance Assist DISTRONIC and Active Steering Assist are switched on and are active.



Notification on the driver display in the menu [Assistance](#)

- ① Green arrow: lane change initiated
- ② Red arrow: lane change canceled

If Active Lane Change Assist is available, the notification appears with green arrows on the driver display. If the system has been activated but is not currently available, the notification appears with gray arrows on the driver display.

If no vehicle or obstacle is detected in the adjacent lane, and a lane change is permitted, the lane change is initiated as soon as the driver activates the turn signal indicator. The lane change is indicated to the driver by a green flashing arrow next to the steering wheel symbol . In the [Assistance](#) menu, a green arrow ① indicating the respective adjacent lane appears on the driver display. The message [Lane Change to the Left](#), for example, also appears.

If it is not possible to change lanes immediately after switching on the turn signal indicator because, for example, an obstacle has been detected, the arrow next to the steering wheel symbol also flashes green. The adjacent lane continues to be monitored. When the lane becomes accessible, a lane change is carried out and the [Lane Change to the Left](#) message, for example,



appears on the driver display. When the green arrows stop flashing, activate the lane change again.

ACTIVE LANE CHANGE ASSIST CAN BE CANCELED IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- The environmental conditions change (e.g. obstacle detected).
- The driver steers too vigorously or steers in the opposite direction.
- The driver switches on the turn signal indicator in the opposite direction.
- Active Distance Assist DISTRONIC or Active Steering Assist are deactivated.
- The lane change cannot be executed by the vehicle as intended.

A CANCELLATION OF ACTIVE LANE CHANGE ASSIST IS DISPLAYED AS FOLLOWS:

- The arrow in the selected direction of travel turns red.
- A corresponding message appears on the driver display.
- In certain circumstances a warning tone sounds.

AUTOMATIC LANE CHANGE



WARNING

Risk of accident due to incorrectly triggered lane change

The system cannot always clearly recognize all situations in which a lane change is appropriate.

The system can initiate a lane change even though the traffic situation is not suitable or the neighboring lane is not available, not usable or occupied.


- ▶ Always monitor the traffic situation.
- ▶ If necessary, cancel the lane change by holding the steering wheel or countersteering slightly and return the vehicle to its own lane.

The automatic lane change is a sub-function of Active Lane Change Assist. It can assist the driver in deciding when a lane change is appropriate, as well as its subsequent execution.

You can cancel a lane change initiated by the system at any time by holding the steering wheel or countersteering slightly and returning the vehicle to its lane.

THE FOLLOWING CONDITIONS MUST BE FULFILLED FOR AN AUTOMATIC LANE CHANGE:

- The conditions for activating Active Lane Change Assist are fulfilled.
- Automatic lane change is switched on in the multimedia system (→ page 396).
- You are driving on a freeway or on a main road similar to a freeway, in a country for which this function is approved.





- The road currently being traveled allows lane changes. There are no tight curves, for example.
- The travel speed is between approximately 40 mph (65 km/h) and 85 mph (140 km/h).

 If you are not in a country for which this function is approved, the menu item for automatic lane change is not available in the multimedia system.

ACTIVE LANE CHANGE ASSIST CAN INITIATE AN AUTOMATIC LANE CHANGE IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- The set desired speed for Active Distance Assist DISTRONIC cannot be reached due to a slower vehicle in front.
- There is little traffic, and the set desired speed for Active Distance Assist DISTRONIC can also be achieved in a slower lane.
- A lane change is necessary in order that the route entered in the navigation system or the road currently being navigated can be followed. The lane change can already take place before the prompt to do so appears in the navigation system.
- The system detects that the lane being traveled in is about to end.
- You are in the slowest speed lane.

IN THE FOLLOWING SITUATIONS IN PARTICULAR, ACTIVE LANE CHANGE ASSIST DOES NOT PERFORM AN AUTOMATIC LANE CHANGE:

- If the vehicle is already in a lane that should be used to follow the route entered in the navigation system.
- On some route sections, no lane change is initiated to the slowest speed lanes.

- The system detects that the adjacent lane is about to end.
- If the driver has canceled an automatic lane change, no lane change will be initiated in this direction for a certain period of time. The automatic lane change is then temporarily switched to passive mode for this direction.
- If the driver has initiated a lane change in a given direction or has changed lanes themselves, no lane change is initiated in the opposite direction for a certain period of time. The automatic lane change is then temporarily switched to passive mode for this direction.

The same cancellation conditions apply to the automatic lane change as for the lane change initiated by the driver with Active Lane Change Assist.

IN ADDITION, THE AUTOMATIC LANE CHANGE CAN BE CANCELED UNDER THE FOLLOWING CIRCUMSTANCES IN PARTICULAR:


- During the lane change, the system detects a construction site separated by traffic cones in its own or in the adjacent lane.
- The system recognizes that the reason for a lane change no longer exists.

NOTIFICATIONS ON THE DRIVER DISPLAY

If the automatic lane change is available, in place of the notification , the notification  appears in green.

If the automatic lane change is available but not all conditions for activation of the function are currently fulfilled, the **A** symbols are shown in gray. In certain countries, only one **A** can be shown in gray. The automatic lane change is then temporarily switched to passive mode for this direction. This will be implemented, for example, if the driver has canceled an automatic lane change or initiated a lane change themselves.

If the system deems a lane change appropriate and has to adjust the travel speed accordingly, the green **A** flashes on the side to which a lane change is to take place.





When the automatic lane change is initiated, the driver display shows a vehicle with an arrow pointing to the adjacent lane to which the lane change is to take place, and a warning tone sounds. In addition, the reason for a lane change (e.g. an overtaking maneuver) can be shown.

If the automatic lane change is canceled,  the **A** on the side to which a lane change was to take place is shown in red on the display. Under certain circumstances, warning messages can also be displayed and an additional warning tone sounded.

SYSTEM LIMITS

For Active Lane Change Assist, the system limits of Active Steering Assist (→ page 388) apply.

IN ADDITION, THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING SITUATIONS:

- The sensors are damaged, covered or dirty (→ page 362).
- The exterior lighting indicates a defect.
- The system does not recognize a suitable road, e.g. in tight curves.
- The vehicle is within a construction site.

AUTOMATIC LANE CHANGE MAY BE INOPERATIVE OR IMPAIRED IN THE FOLLOWING SITUATIONS IN PARTICULAR, AND MAY LEAD TO LANE CHANGES BEING INITIATED ERRONEOUSLY:

- The vehicle is before or within a construction site and/or the system has detected a construction site separated by traffic cones.
- The vehicle is within a section with temporary lane closures or lane openings.
- The system can no longer detect the lane marking correctly.
- It is raining heavily.

- Another vehicle changes to the same lane simultaneously, e.g. incoming traffic from ramps.

 Active Lane Change Assist sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered. Active Lane Change Assist is unavailable during this teach-in process, and no arrows are displayed next to the Active Steering Assist symbol .

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (→ page 362).

SETTING ACTIVE LANE CHANGE ASSIST

Multimedia system:

  >> Settings >> Assistance >> Driving
>> Active Lane Change Assist

ACTIVE LANE CHANGE ASSIST WITHOUT AUTOMATIC LANE CHANGE

- ▶ Select between the **On** or **Off** setting options.

 If **Active Steering Assist** was switched off, then **Active Lane Change Assist** cannot be operated.

ACTIVE LANE CHANGE ASSIST WITH AUTOMATIC LANE CHANGE

- ▶ **Manual Initiation** Select from the setting options **Off** or **Manual and Automatic Initiation**.

 If **Active Steering Assist** was switched off, then **Active Lane Change Assist** cannot be operated.



- i** Alternatively, Automatic Lane Change Assist can be activated or deactivated in the quick-access menu.

Active Brake Assist

FUNCTION OF ACTIVE BRAKE ASSIST

⚠ WARNING

Risk of an accident caused by limited detection performance of Active Brake Assist

Active Brake Assist cannot always clearly identify objects and complex traffic situations.

IN SUCH CASES, ACTIVE BRAKE ASSIST MIGHT:

- Give a warning or brake without reason
- Not give a warning or not brake

Active Brake Assist is only an aid. The driver is responsible for maintaining a sufficiently safe distance to the vehicle in front, vehicle speed and for braking in good time.

- ▶ Always pay careful attention to the traffic situation; do not rely on Active Brake Assist alone.
- ▶ Be prepared to brake or swerve if necessary.


ACTIVE BRAKE ASSIST CONSISTS OF THE FOLLOWING FUNCTIONS:

- Collision warning
- Autonomous braking function

- Situation-dependent brake force boosting
- **Vehicles with Driving Assistance Package and Active Steering Assist:** Evasive Steering Assist
- **Vehicles with Driving Assistance Package:** Evasive Steering Assist
- **Vehicles with Driving Assistance Package:** Intersection start-off function

Active Brake Assist can help you to minimise the risk of a collision with vehicles, cyclists or pedestrians or to reduce the effects of such a collision.

If Active Brake Assist has detected a risk of collision, a warning tone will sound and the  distance warning lamp will light up.

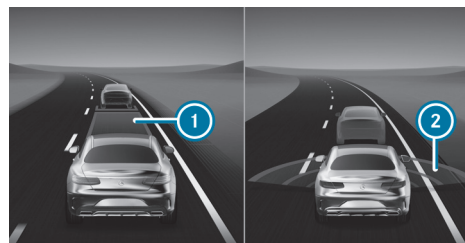

Indicator on the [Assistance](#) menu on the driver display

- ① Distance insufficient
- ② Red radar waves

An insufficient distance to vehicle in front ① will be displayed on red on the [Assistance](#) menu. If you reduce the distance further, the vehicle in front will also be highlighted in red. When the system detects a risk of collision, red radar waves ② will appear in front of your vehicle.



① Vehicles with PRE-SAFE®: depending on the country, an additional haptic warning will occur in the form of slight, repeated tensioning of the driver's seat belt.

① Vehicles with active ambient lighting: If **Warning Support** is switched on, the warning by Active Brake Assist will be reinforced by the ambient lighting (→ page 268).

If you do not react to the warning, autonomous braking may be initiated in critical situations.

In particularly critical situations, Active Brake Assist may also initiate autonomous braking directly. In this case, the warning tone and distance warning lamp  will occur at the same time as braking.

If you apply the brakes yourself in a critical situation or apply the brakes during autonomous braking, situation-dependent brake force boosting will occur. The brake pressure will increase up to maximum full-stop braking if necessary.



If autonomous braking or situation-dependent braking assistance has occurred, pop-up **①** will appear on the driver display and then automatically disappear after a short time.

If the autonomous braking function or the situation-based braking assistance is triggered, additional preventive measures for occupant protection by PRE-SAFE® may also be initiated.

If Active Brake Assist is deactivated or the functions are restricted, e.g. owing to activation of another driving system, the  Active Brake Assist warning lamp will appear on the driver display.

If the system is unavailable owing to dirty or damaged sensors or a malfunction, or if the functions are restricted, the Active Brake Assist  warning lamp will appear on the driver display.

Also observe the system limits of Active Brake Assist.

The individual subfunctions are available in the following speed ranges:

COLLISION WARNING

The collision warning function can assist you in the following situations from approximately 4 mph (7 km/h) with an intermittent warning tone and the  distance warning lamp.

VEHICLES WITHOUT DRIVING ASSISTANCE PACKAGE:

- at speeds up to approximately 155 mph (250 km/h) when approaching moving vehicles ahead.
- at speeds up to approximately 50 mph (80 km/h) when approaching stationary vehicles, pedestrians walking along the road and moving cyclists ahead.
- at speeds up to approximately 43 mph (70 km/h) when approaching crossing pedestrians and cyclists.
- at speeds up to approximately 37 mph (60 km/h) when approaching stationary pedestrians and cyclists.



**VEHICLES WITH DRIVING ASSISTANCE PACKAGE:**

- at speeds up to approximately 155 mph (250 km/h) when approaching moving vehicles ahead.
- at speeds up to approximately 75 mph (120 km/h) when approaching crossing vehicles, pedestrians and cyclists.
- at speeds up to approximately 62 mph (100 km/h) when approaching stationary vehicles.
- at speeds up to approximately 50 mph (80 km/h) when approaching moving cyclists ahead.
- at speeds up to approximately 43 mph (70 km/h) when approaching stationary pedestrians and cyclists.

AUTONOMOUS BRAKING FUNCTION

From a speed of approximately 4 mph (7 km/h), the autonomous braking function may intervene in the following situations:

VEHICLES WITHOUT DRIVING ASSISTANCE PACKAGE:

- at speeds up to approximately 155 mph (250 km/h) when approaching moving vehicles ahead.
- at speeds up to approximately 50 mph (80 km/h) when approaching moving cyclists ahead, pedestrians walking along the road and stationary vehicles.
- at speeds up to approximately 43 mph (70 km/h) when approaching crossing pedestrians and cyclists.

VEHICLES WITH DRIVING ASSISTANCE PACKAGE:

- at speeds up to approximately 155 mph (250 km/h) when approaching moving vehicles ahead.
- at speeds up to approximately 75 mph (120 km/h) when approaching crossing vehicles, pedestrians and cyclists.

- at speeds up to approximately 62 mph (100 km/h) when approaching stationary vehicles.
- at speeds up to approximately 50 mph (80 km/h) when approaching moving cyclists ahead.
- at speeds up to approximately 43 mph (70 km/h) when approaching stationary pedestrians and cyclists.

SITUATION-DEPENDENT BRAKE FORCE BOOSTING

From a speed of approximately 4 mph (7 km/h), situation-dependent brake force boosting may intervene in the following situations:

VEHICLES WITHOUT DRIVING ASSISTANCE PACKAGE:

- at speeds up to approximately 155 mph (250 km/h) when approaching moving vehicles ahead.
- at speeds up to approximately 50 mph (80 km/h) when approaching moving cyclists ahead, pedestrians walking along the road and stationary vehicles.
- at speeds up to approximately 43 mph (70 km/h) when approaching crossing pedestrians and cyclists.
- at speeds up to approximately 37 mph (60 km/h) when approaching stationary pedestrians and cyclists.

VEHICLES WITH DRIVING ASSISTANCE PACKAGE:

- at speeds up to approximately 155 mph (250 km/h) when approaching moving vehicles ahead.
- at speeds up to approximately 75 mph (120 km/h) when approaching crossing vehicles, pedestrians and cyclists.
- at speeds up to approximately 62 mph (100 km/h) when approaching stationary vehicles.





- at speeds up to approximately 50 mph (80 km/h) when approaching moving cyclists ahead.
- at speeds up to approximately 43 mph (70 km/h) when approaching stationary pedestrians and cyclists.

CANCELING BRAKE APPLICATION BY ACTIVE BRAKE ASSIST

YOU CAN CANCEL BRAKE APPLICATION BY ACTIVE BRAKE ASSIST AT ANY TIME BY:

- Fully depressing the accelerator pedal or with kickdown.
- Releasing the brake pedal.

ACTIVE BRAKE ASSIST MAY CANCEL BRAKE APPLICATION WHEN ONE OF THE FOLLOWING CONDITIONS IS FULFILLED:


- You steer to avoid an obstacle.
- There is no longer a risk of collision.
- An obstacle is no longer detected in front of your vehicle.

REACTION TO ONCOMING ROAD USERS (VEHICLES WITH DRIVING ASSISTANCE PACKAGE ONLY)

ACTIVE BRAKE ASSIST CAN ALSO REACT TO DETECTED ONCOMING ROAD USERS:

- Reaction up to a speed of approximately 62 mph (100 km/h)
- Warning of oncoming road users via warning tone and  distance warning lamp
- Autonomous braking application in order to reduce the severity of an accident


INTERSECTION START-OFF FUNCTION (VEHICLES WITH DRIVING ASSISTANCE PACKAGE ONLY)

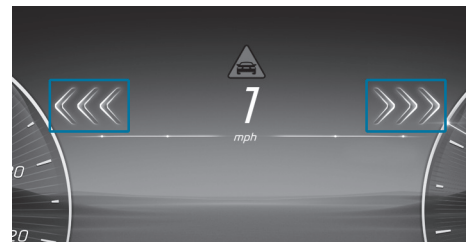

If a risk of collision with crossing traffic is detected when you are pulling away or driving at walking pace, three red arrows pointing in the direction of the crossing road user will light up one after the other on the driver display together with the distance warning lamp . If the situation is particularly critical, the arrows will begin to flash. A warning tone will also sound. If you do not react to the warning, acceleration may be restricted or autonomous braking may be initiated in critical situations. Autonomous braking can also prevent the vehicle from pulling away and hold it at a standstill. In particularly critical situations, Active Brake Assist may also initiate autonomous braking directly. In this case, the  distance warning lamp and warning tone will occur at the same time as brake application.

If autonomous braking or situation-dependent brake force boosting has occurred, a pop-up will appear on the driver display and then automatically disappear after a short time.

If Active Brake Assist is set to [Late](#), the purely visual warning level and restriction of acceleration will be deactivated. If the situation is particularly critical, it is still possible for a visual warning to be issued, a warning tone to be emitted and autonomous braking to be initiated.





EVASIVE STEERING ASSIST

WARNING

Risk of accident despite Evasive Steering Assist

Evasive Steering Assist cannot always recognize objects or complex traffic situations clearly.

Moreover, the steering support provided by Evasive Steering Assist is not sufficient to avoid a collision.

- ▶ Always pay careful attention to the traffic situation; do not rely on Evasive Steering Assist alone.
- ▶ Be prepared to brake or swerve if necessary.
- ▶ End the support by actively steering in non-critical situations.
- ▶ Drive at an appropriate speed if there are pedestrians close to the path of your vehicle.

EVASIVE STEERING ASSIST HAS THE FOLLOWING FEATURES:

- Detection of pedestrians, cyclists and vehicles.
- Help through additional steering assistance if it detects an evasive maneuver.
- Activation by an abrupt steering movement during an evasive maneuver.
- Assistance in taking evasive action and straightening the vehicle.
- Reaction from a speed of approximately 12 mph (20 km/h) up to a speed of approximately 68 mph (110 km/h).


You can cancel steering support by Evasive Steering Assist at any time by countersteering.

SYSTEM LIMITS

Full system performance will not be available for a short time after you switch on the vehicle or drive off. As long as the functions are restricted, the  Active Brake Assist warning lamp may also be shown on the driver display. Depending on the environmental conditions, it may take a few minutes before full system performance is available.

THE SYSTEM MAY BE IMPAIRED OR MAY NOT FUNCTION, PARTICULARLY IN THE FOLLOWING SITUATIONS:

- in snow, rain, fog, heavy spray, glare, in direct sunlight or in varying light conditions
- if the sensors are dirty, fogged up, damaged or obscured (→ page 362)
- if the sensors are impaired owing to interference from other radar sources, e.g. intense radar reflections in parking garages
- if tire pressure loss or a defective tire has been detected and displayed
- in complex traffic situations in which objects cannot always be clearly identified
- if pedestrians, cyclists or vehicles move quickly into the sensor detection range
- if road users are hidden by other objects or are located close to other objects
- if the typical outline of a pedestrian or cyclist cannot be distinguished from the background
- if a pedestrian or cyclist is not detected as such, e.g. owing to particular clothing or other objects
- if the driver's seat belt is not fastened
- on tight bends





SETTING ACTIVE BRAKE ASSIST

Requirements:

- The vehicle is switched on.

Multimedia system:

   Settings  Assistance  Collision Avoidance

- ▶ Activate or deactivate the function.

 It is recommended that you always leave Active Brake Assist activated.

Switching off Active Brake Assist also switches off the distance warning function, the collision warning, the autonomous braking function and Active Evasive Steering Assist (with Driving Assistance Package - country-dependent).

 If Active Brake Assist is deactivated, the  symbol appears in the status bar of the driver display and when the vehicle is next started the system is activated again.

 The setting after starting the vehicle depends on the country.

SETTING WARNING TIMING

- ▶ Select  alongside **Active Brake Assist**.
- ▶ Select **Early**, **Medium** or **Late**.

Traffic Sign Assist

FUNCTION OF TRAFFIC SIGN ASSIST

 This function can be a Digital Extra (→ page 96).

Traffic Sign Assist detects the traffic signs with the multifunction camera and compares them with the information from the digital road map of the navigation system. It supports you by showing detected speed restrictions and no-overtaking zones on the driver display.

Maximum permissible speeds can also be shown on the head-up display.

The system can issue a warning when you exceed the maximum permissible speed.

In some countries, the system can provide you with further functions and can warn you when you are approaching pedestrian crossings or when you are about to drive past stop signs or red lights unintentionally.

The camera also detects and analyzes traffic signs with a restriction indicated by an additional sign (e.g. in wet conditions).

Traffic Sign Assist shows only selected signs on the driver display. Actual traffic signs and speed restrictions are always prioritized over traffic signs and speed restrictions shown on the driver display.

THE FOLLOWING SHOULD ALSO BE OBSERVED WHEN USING TRAFFIC SIGN ASSIST:

- Select a speed adapted to the traffic, surroundings and weather conditions.
- Observe actual traffic signs.






- Observe applicable traffic rules and regulations.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (→ page 362).

NOTIFICATIONS ON THE DRIVER DISPLAY

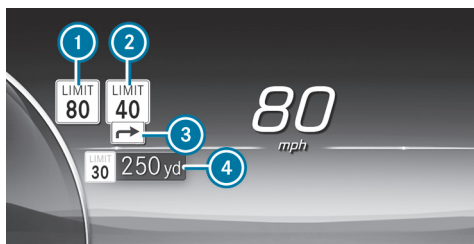

Example


- ① Permissible speed
- ② Permissible speed when there is a restriction
- ③ Additional sign with restriction
- ④ Maximum permissible speeds up ahead

Maximum permissible speeds are always shown as a priority over other traffic signs, such as no-overtaking zones, for example. The head-up display shows only one traffic sign with a maximum permissible speed. If two speed signs are shown on the driver display, for example, when speed limits are detected, the value of the left-hand speed restriction ① is always transmitted to the cruise control or Active Distance Assist DISTRONIC for acceptance and shown on the head-up display.

Important information from other systems can cause traffic signs to be hidden for a short time.

DEPENDING ON THE RESPECTIVE COUNTRY OF USE, TRAFFIC SIGN ASSIST CAN ALSO DETECT AND DISPLAY OTHER TRAFFIC SIGNS ①, INCLUDING:

- speed restrictions
- end of the speed restriction
- overtaking restrictions
- play streets
- recommended speeds

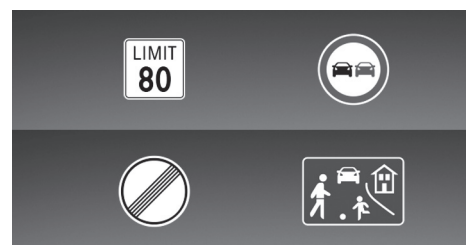

Detected traffic signs (examples)

TRAFFIC SIGN ASSIST CAN ALSO DETECT THE FOLLOWING ADDITIONAL SIGNS ③, FOR EXAMPLE, AND EVALUATE RELEVANCE OF THE RESTRICTIONS WHERE NECESSARY USING AUXILIARY VEHICLE SENSORS:

- in wet conditions
- slippery road surfaces
- in fog
- temporary restrictions
- exits

Traffic Sign Assist also uses data from the digital street map in the navigation system. When you leave or enter a municipality or change roads, on a highway





exit or slip road for example, or after you turn at an intersection, the display on the driver display can thus be updated without a traffic sign having been detected.

-  Regularly update the digital road map of the navigation system to ensure optimum functioning of Traffic Sign Assist (→ page 39).

Depending on the respective vehicle equipment and country of use, the system may also display upcoming speed restrictions on the driver display and head-up display. The driver display can also show the distance to an upcoming lower limit speed. Information from the digital road map of the navigation system is used for this purpose. The **Assistance** menu can also display a dynamic visualization of the speed restrictions ahead.

If Traffic Sign Assist cannot determine the current maximum permissible speed, e.g. due to a lack of signage, the following display appears on the driver display:




Traffic Sign Assist is not available in all countries. This display is shown permanently in the vehicle when you are traveling in countries that do not support Traffic Sign Assist.

If the system is temporarily or permanently unavailable due to a technical malfunction or dirt on the windshield, a corresponding display message appears in the driver display. The Traffic Sign Assist  warning lamp also lights up on the driver display in certain countries.

-  Please also note the information on the display messages from Traffic Sign Assist (→ page 812).

WARNING WHEN THE MAXIMUM PERMISSIBLE SPEED IS EXCEEDED

The system can warn you if you are about to exceed the maximum permissible speed. Depending on the respective country of use, you can set how much the maximum permissible speed may be exceeded on the multimedia system before a warning is issued. You can switch off the warning, or select in the settings whether the warning should be issued visually, with the traffic sign flashing in the driver display, or as a combination of visual and audible warning. Selection of the type of warning is confirmed via a notification on the driver display, depending on the respective country of use.

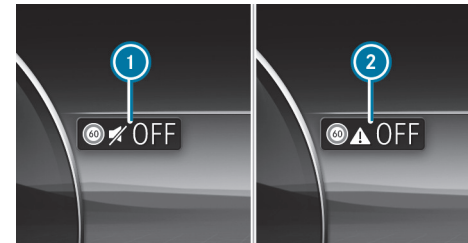

Example

-  Visual warning only
-  Warning off

-  The type, duration and deployment stages of the speed limit warning as well as the option of setting the timing of the deployment stages upon which the warning is issued are subject to legislation valid for the respective country in which the vehicle is delivered.

ADDITIONAL WARNING FUNCTIONS

Warning for no-entry signs: Traffic Sign Assist can warn you if you drive the wrong way down a section of road, for example, on highway slip roads or one-way streets.



Warning at pedestrian crossings: if you approach pedestrian crossings, provided that pedestrians are in the danger zone or are moving towards it, Traffic Sign Assist can warn you up to a speed of approximately 44 mph (70 km/h).

Warning at stop signs: Traffic Sign Assist can warn you up to a speed of approximately 44 mph (70 km/h) if you are about to drive past a stop sign unintentionally. In this case, the sign must be unambiguous, for example, if the system detects more than one stop sign, or if a stop sign is confirmed using the digital navigation map. No warning can be issued if several different signs are detected.

Warning at red lights: Traffic Sign Assist can warn you up to a speed of approximately 44 mph (70 km/h) if you are about to drive through a red light unintentionally.

THE FOLLOWING CONDITIONS MUST BE FULFILLED:

- Several traffic lights have been detected.
- All traffic lights detected are red.
- At least one of the red traffic lights detected is on the front passenger side beside the vehicle's lane.
- The traffic lights are in the following sequence (from top to bottom): red, yellow, and green.

 Where available, you can turn the warnings on and off in the Traffic Sign Assist menu under [Further Warnings](#) (→ page 406).

SYSTEM LIMITS

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If visibility is poor (e.g. due to insufficient illumination of the road), highly variable shade conditions, rain, snow, fog, swirling dust or heavy spray.
- if there is glare, e.g. from oncoming traffic, direct sunlight or reflections
- If there is soiling on the windshield in the vicinity of the multifunction camera, or if the camera is fogged up, damaged or obscured.
- If the traffic signs are difficult to see because, for example, they are dirty, obscured, faded, iced over, damaged, inconveniently positioned, insufficiently illuminated or askew.
- Active traffic signs with LED displays may not be detected correctly, or even at all due to technical factors such as transmission frequency.
- If the information on the navigation system's digital map is incorrect, incomplete or out of date.
- If the signs, road markings or road layout are ambiguous, e.g. traffic signs at road works, at exits and slip roads, adjacent lanes or parallel roads, and pedestrian crossing markings at traffic lights.
- If the signage or road markings do not comply with the standard.
- If the signage, road markings or road guidance is country-specific and deviates from the navigation system's route guidance, e.g. at or after road works.
- After sharp turns and in tight bends, if traffic signs are outside the camera's field of vision.
- If you overtake vehicles with traffic signs affixed or attached to them.





SETTING TRAFFIC SIGN ASSIST

Multimedia system:



ACTIVATING OR DEACTIVATING THE SPEED LIMIT WARNING

- ▶ Switch off [Speed Limit Warning](#) .
Following country-specific legislation, the speed limit warning remains deactivated until the next time the vehicle is switched on or off and the driver's door is opened (depending on the respective equipment).

CHANGE THE TYPE OF SPEED LIMIT WARNING

- ▶ Change the warning to [Visual](#) or [Visual & Audible](#).

SETTING THE WARNING THRESHOLD

This value determines the speed at which a warning is issued when exceeded.

- ▶ Set the desired speed under Warning Threshold.

ACTIVATING OR DEACTIVATING ADDITIONAL FUNCTIONS OF TRAFFIC SIGN ASSIST

- ▶ Activate or deactivate [Further Warnings](#).
The available functions are switched on or off.

SET THE TYPE OF WARNING FOR OTHER FUNCTIONS

- ▶ Select [Visual](#) or [Visual & Audible](#).

Blind Spot Assist and Active Blind Spot Assist

FUNCTION OF BLIND SPOT ASSIST AND ACTIVE BLIND SPOT ASSIST WITH EXIT WARNING



WARNING

Risk of accident despite Blind Spot Assist

Blind Spot Assist does not react to vehicles approaching and overtaking you at a greatly different speed.

Blind Spot Assist cannot warn drivers in this situation.

- ▶ Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.



WARNING

Risk of accident despite Active Blind Spot Assist

ACTIVE BLIND SPOT ASSIST DOES NOT REACT TO THE FOLLOWING:

- if you overtake a vehicle too closely so that it is in the blind spot area
- if vehicles traveling at a much faster speed approach and then overtake

Active Blind Spot Assist may not give warnings or intervene in such situations.

- ▶ Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.



Blind Spot Assist and Active Blind Spot Assist use radar sensors to monitor the area up to 130 ft (40 m) behind and 10 ft (3 m) next to your vehicle.

The systems can detect vehicles traveling from speeds of approximately 8 mph (12 km/h) and issue a warning if they move into the monitoring range. They are only an aid and are not a substitute for the driver paying attention.


STATUS DISPLAY ON THE DRIVER DISPLAY



Gray: the system is activated but inoperative.



Green: the system is activated and operational.

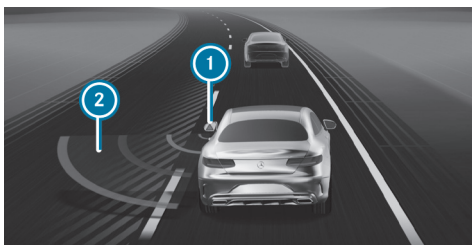

Notification on the driver display in the menu [Assistance](#)

- ① Warning lamp in the outside mirror
- ② Red radar waves

If a vehicle is detected from approximately 8 mph (12 km/h) and immediately moves into the monitoring range, the warning lamp in the relevant outside mirror lights up in red. In the [Assistance](#) menu, the lamp in outside mirror ① also lights up red, and the lane in which the vehicle is detected is hatched out.

If a vehicle is detected in the monitoring range and you activate the turn signal indicators in the corresponding direction, a double warning tone sounds once and the warning lamp flashes red in the corresponding outside mirror. Red radar waves ② are displayed next to your vehicle in the assistance graphic.

If the turn signal indicator remains on, the display in the outside mirror flashes for all other detected vehicles, but no further warning tone sounds. If you overtake a vehicle quickly, no warning is given.



Vehicles with active ambient lighting : If [Warning Support](#) is switched on, the warning is reinforced by the ambient lighting (→ page 268).

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (→ page 362).

EXIT WARNING



WARNING

Risk of accident despite exit warning

The exit warning neither reacts to stationary objects nor to persons or road users approaching you at a greatly differing speed.

The exit warning cannot warn drivers in these situations.

- Always pay particular attention to the traffic situation when opening the doors and make sure there is sufficient clearance.

The exit warning is an additional function of Blind Spot Assist and Active Blind Spot Assist and can warn vehicle occupants attempting to leave a stationary vehicle about approaching vehicles.

If a vehicle is detected in the monitoring range, the red warning lamp lights up in the corresponding outside mirror.

If a vehicle occupant pulls the door handle on the side of the warning, a warning tone sounds twice and the ambient lighting in the respective door and the warning lamps in the corresponding outside mirror flash red.





i Vehicles with ambient lighting or active ambient lighting: the [Warning Support](#) of the ambient lighting can be activated and deactivated (→ page 268).

i The warning assistance can differ depending on the equipment and may vary according to the setting.

The exit warning is only available when Blind Spot Assist or Active Blind Spot Assist is active.

After the vehicle is switched off, the exit warning continues to function for a few minutes. If a door is opened when the vehicle is switched off, the exit warning is active again for a few minutes. When the outside mirror warning lamp flashes three times, the exit warning is no longer available.

The exit warning is only an aid and not a substitute for the attention of vehicle occupants. The responsibility for opening the doors and exiting the vehicle remains with the vehicle occupants at all times.

SYSTEM LIMITS

BLIND SPOT ASSIST AND ACTIVE BLIND SPOT ASSIST MAY BE LIMITED IN THE FOLLOWING SITUATIONS, IN PARTICULAR:

- if there is dirt on the sensors or the sensors are obscured.
- if there is poor visibility, e.g. owing to fog, heavy rain or snow.
- if there are narrow vehicles, e.g. bicycles or motorcycles.
- if the road has very wide or narrow lanes.
- if vehicles are not driving in the middle of their lane.

Warnings may be issued in error when driving close to crash barriers or similar continuous lane borders. Always make sure that there is sufficient distance to the side for other traffic or obstacles.

Warnings may be interrupted when driving alongside long vehicles, e.g. trucks, for a prolonged period.

Blind Spot Assist and Active Blind Spot Assist are not operational when reverse gear is engaged.

ADDITIONALLY, THE EXIT WARNING MAY BE LIMITED IN THE FOLLOWING SITUATIONS:

- when the sensors are covered by adjacent vehicles in narrow parking spaces.
- when people approach the vehicle.
- when there are stationary or slowly moving objects.

BRAKE APPLICATION FUNCTION IN ACTIVE BLIND SPOT ASSIST

i The brake application function is only available for vehicles with Driving Assistance Package.

If Active Blind Spot Assist detects a risk of a side impact in the monitored range, a course-correcting brake application is carried out. Course-correcting brake application helps in this case to avoid collision with another vehicle.

The course-correcting brake application is available to you from a speed of approximately 20 mph (30 km/h) - 37 mph (60 km/h) (depending on the country) up to a speed of approximately 125 mph (200 km/h).





WARNING

Risk of accident despite brake application of Active Blind Spot Assist

A course-correcting brake application cannot always prevent a collision.

- ▶ Always steer, brake or accelerate yourself, especially if Active Blind Spot Assist warns you or makes a course-correcting brake application.
- ▶ Always maintain a safe distance at the sides.

WARNING

Risk of accident despite Active Blind Spot Assist

ACTIVE BLIND SPOT ASSIST DOES NOT REACT IN THE FOLLOWING SITUATIONS:

- If you overtake vehicles at a high speed.
- If vehicles approach and overtake you at a greatly different speed.

Active Blind Spot Assist may not give warnings or intervene in such situations.

- ▶ Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.



If a course-correcting brake application occurs, the red warning lamp flashes in the outside mirror and a warning tone sounds. In addition, a display  indicating the danger of a side collision appears on the driver display.

In rare cases, the system may make an inappropriate brake application. This brake application may be interrupted at any time if you steer slightly in the opposite direction or accelerate.

SYSTEM LIMITS

Note the system limitations of Active Blind Spot Assist; you may otherwise not recognize the dangers (→ page 406).

EITHER A COURSE-CORRECTING BRAKE APPLICATION WHICH IS NOT APPROPRIATE TO THE DRIVING SITUATION, OR NONE AT ALL, MAY OCCUR IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- Vehicles or obstacles, e.g. crash barriers, are located on both sides of your vehicle.
- An approaching vehicle leaves too little lateral distance between you.
- You have adopted a sporty driving style with high cornering speeds.
- You brake or accelerate significantly.
- A driving safety system intervenes, e.g. ESP® or Active Brake Assist.
- ESP® is deactivated.
- Tire pressure loss or a defective tire is detected.





SWITCHING BLIND SPOT ASSIST OR ACTIVE BLIND SPOT ASSIST ON OR OFF

Multimedia system:

Settings Assistance Collision Avoidance

▶ Activate or deactivate [Active Blind Spot Assist](#).

Active Lane Keeping Assist

FUNCTION OF ACTIVE LANE KEEPING ASSIST

Active Lane Keeping Assist monitors the area in front of your vehicle using the multifunction camera (→ page 362).

It can protect you against unintentionally departing your lane. The system can guide you back into your lane with a course-correcting steering intervention, and warn you with tangible steering wheel feedback.

Active Lane Keeping Assist is available in the speed range between approximately 37 mph (60 km/h) and 124 mph (200 km/h).


THE SYSTEM CAN INTERVENE IF THE FOLLOWING CONDITIONS ARE MET:

- Active Lane Keeping Assist detects a lane marking.
- You touch this lane marking with one of your front wheels.

If you activate the turn signal indicators, there is no steering intervention on that side.

There is no steering intervention if you leave your lane without activating the turn signal indicators, but there is a risk of collision with a moving obstacle in your own lane.

Vehicles with Blind Spot Assist or Driving Assistance Package: If the system detects an obstacle, e.g. another vehicle, in the adjacent lane, there is steering intervention despite the turn signal indicators.

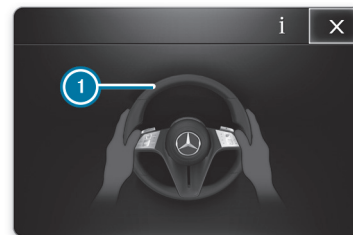

IN THE FOLLOWING CASES, THE WARNING ① APPEARS ON THE DRIVER DISPLAY AND A WARNING TONE SOUNDS:

- A steering intervention by Active Lane Keeping Assist lasts more than approximately ten seconds.
- There are two or more steering interventions by the systems within approximately three minutes, without steering action by the driver.

You can set the sensitivity of the system in the Active Lane Keeping Assist settings in order to determine the level of assistance. You can also determine whether the system is to react to broken lane marking or only to continuous lane markings (→ page 412).

If ATTENTION ASSIST has detected signs of drowsiness or microsleep, the most sensitive setting is automatically selected (→ page 374).

STATUS DISPLAYS OF ACTIVE LANE KEEPING ASSIST



White: Active Lane Keeping Assist is switched off.

If ESP® is switched off or a tire pressure loss warning is indicated, Active Lane Keeping Assist is automatically switched off.





Yellow: There is a malfunction. Also note any display messages.



Gray: Active Lane Keeping Assist is switched on but not ready.



Green: Active Lane Keeping Assist is switched on and ready. If the system is only ready on one side, only the lane marking on that side is shown in green.



Red: Active Lane Keeping Assist has guided you back into your lane by a course-correcting steering intervention. If a tangible warning is also given in the steering wheel, the status display flashes. The lane marking of the affected side is shown in red.

Vehicles without Driving Assistance Package: If both lane markings are shown in red on the status display at the same time, Active Lane Keeping Assist has initiated an emergency stop (→ page 390).



Notification on the driver display in the [Assistance](#) menu

If one of your front wheels moves onto a detected lane marking, this is highlighted in red in the [Assistance](#) menu on the driver display.



Vehicles with active ambient lighting: If [Warning Support](#) is switched on, the warning by Active Lane Keeping Assist is reinforced by the ambient lighting (→ page 268).

Depending on the equipment, different operating feedback and warning assistance effects are available.

SYSTEM LIMITS

IN THE FOLLOWING SITUATIONS, THERE MAY BE NO COURSE-CORRECTING STEERING INTERVENTION, BUT A WARNING MAY BE GIVEN IN THE STEERING WHEEL DEPENDING ON THE SITUATION:

- if you clearly and actively steer, brake or accelerate.
- if a driving safety system is intervening, e.g. ESP® or Active Brake Assist.
- if you have adopted a sporty driving style with high cornering speeds or high rates of acceleration.

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- if there is poor visibility, e.g. owing to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog or heavy spray.
- if there is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- if there is soiling on the windshield in the vicinity of the multifunction camera, or if the camera is fogged up, damaged or obscured.
- if the bumper is soiled in the area of the radar sensors, or if these are damaged or obscured.
- if there are no lane markings, or several unclear lane markings are present for one lane, e.g. around roadworks.
- if the lane markings are worn, dark or covered.
- if the distance to the vehicle in front is too short and the lane markings can therefore not be detected.
- if the lane markings change quickly, e.g. lanes branch off, cross one another or merge.





- if the roads are very narrow and winding.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (→ page 362).

ACTIVATING/DEACTIVATING ACTIVE LANE KEEPING ASSIST

Multimedia system:







 Active Lane Keeping Assist

- ▶ Activate or deactivate the function.

Alternatively, Active Lane Keeping Assist can be activated and deactivated via vehicle quick-access .

 The setting after starting the vehicle depends on the country.

SETTING ACTIVE LANE KEEPING ASSIST

Multimedia system:







 Active Lane Keeping Assist

SETTING THE SENSITIVITY

- ▶ Select .
- ▶ Select [Early](#), [Med.](#) or [Late](#).

The last setting selected will be applied the next time the vehicle is started.

 The standard setting of this function is country-dependent.

ACTIVATING/DEACTIVATING ASSISTANCE WHEN LANE MARKINGS ARE INTERRUPTED

- ▶ Select [Advanced Support](#).

The last setting selected will be applied the next time the vehicle is started.

 The standard setting of this function is country-dependent.

 This function must be activated for vehicles without Driving Assistance Package for Emergency Stop Assist to be available in full measure.
Further information on Emergency Stop Assist (→ page 390).

DYNAMIC BODY CONTROL function

DYNAMIC BODY CONTROL continuously adjusts the characteristics of the suspension dampers to the current operating and driving conditions.

THE DAMPING IS SET INDIVIDUALLY FOR EACH WHEEL AND IS AFFECTED BY THE FOLLOWING FACTORS:

- the road surface conditions
- the vehicle load
- the drive program selected
- the driving style

The drive program can be adjusted using DYNAMIC SELECT.





AIRMATIC

FUNCTION OF AIRMATIC

AIRMATIC is an air suspension system with variable damping for improved driving comfort. The all-round level control system ensures the best possible suspension and a consistent level of ground clearance, even with a loaded vehicle. When driving at speed, the vehicle is lowered automatically to improve driving safety and reduce energy consumption.

AIRMATIC INCLUDES THE FOLLOWING COMPONENTS AND FUNCTIONS:

- Air suspension with automatic all-round level control
- ADS PLUS (adaptive damping system with constant adjustment of damping characteristics)
- Speed-dependent lowering of the vehicle level
- Comfortable suspension tuning in drive programs **C** and **E**
- Firmer, sporty suspension tuning in drive program **S**
- From a speed of 75 mph (120 km/h) the vehicle is lowered to save energy

When driving at speeds below 50 mph (80 km/h), the vehicle is returned to normal level.

AMG RIDE CONTROL +

FUNCTION OF AMG RIDE CONTROL +

AMG RIDE CONTROL + is an air suspension system with variable damping for improved driving characteristics. The all-round level control system ensures the best possible suspension and constant ground clearance, even with a laden vehicle. When driving at speed, the vehicle is lowered automatically to improve driving safety and to reduce energy consumption. You also have the option of manually adjusting the vehicle level.

THE DAMPING IS SET INDIVIDUALLY FOR EACH WHEEL AND IS AFFECTED BY THE FOLLOWING FACTORS:

- The drive program selected
- Driving style, e.g. sporty
- Road condition, e.g. bumps
- The individual selection of **SPORT**, **SPORT +** or **COMFORT**

AMG RIDE CONTROL + INCLUDES THE FOLLOWING COMPONENTS AND FUNCTIONS:

- Air suspension with variable spring rate and automatic level control
- Speed-dependent lowering to reduce energy consumption
- Adaptive Damping System with constant damping force adjustment

SUSPENSION SETTING AND VEHICLE LEVEL PER DRIVE PROGRAM

DRIVE PROGRAMS AND **C**:

- The suspension setting is comfortable.
- The vehicle is set to the normal level.
- The vehicle is lowered while you are driving in the following cases:
 - You are driving faster than 75 mph (120 km/h) for at least 20 seconds.
 - When driving faster than 99 mph (160 km/h).
- The vehicle is raised to the normal level again in the following cases:
 - You are driving slower than 62 mph (100 km/h) for at least one minute.
 - You are driving slower than 50 mph (80 km/h).





DRIVE PROGRAMS AND .

- The suspension setting is firm (.
- The suspension setting is even firmer (.
- The vehicle is set to the low level.
- The vehicle is not lowered any further if you are traveling at higher speeds.


When the vehicle is started again, the **COMFORT** setting is activated automatically.

SELECTING SUSPENSION TUNING WITH THE AMG STEERING WHEEL BUTTON

-  You can also adjust the suspension setting via the multimedia system (→ page 322).

YOU CAN SELECT FROM THREE DIFFERENT SUSPENSION TUNINGS:

- **COMFORT** ensures comfortable suspension tuning. Select this suspension tuning if you prefer a comfortable driving style.
- **SPORT** lowers the vehicle to the lowest level and ensures firmer suspension tuning. Select this suspension tuning when employing a sporty driving style, e.g. on winding country roads.
- **SPORT +** lowers the vehicle to the lowest level and ensures very firm suspension tuning.

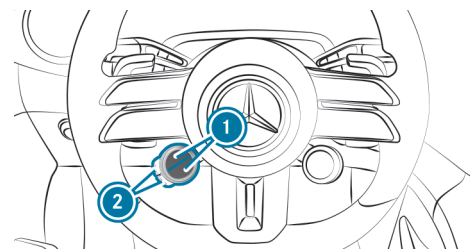

- ▶ Press the upper or lower  display button repeatedly, until it displays the  symbol.

-  If the display button does not show the symbol, then it is hidden. How functions are displayed and the order in which they are displayed can be set in the multimedia system (→ page 316).

- ▶ Press the corresponding button .

The selected suspension tuning is shown on the driver display as a message.

THE SYMBOL INDICATES THE CURRENTLY SELECTED MODE:

-  (blue): COMFORT
-  (yellow): SPORT
-  (red): SPORT +





SETTING THE VEHICLE LEVEL

WARNING

Risk of accident because vehicle level is too high

Driving characteristics may be impaired.

The vehicle can drift outwards, for example, when steering or cornering.

- Choose a vehicle level which is suited to the driving style and the road surface conditions.

WARNING

Risk of becoming trapped due to the vehicle lowering

When lowering the vehicle, other people could become trapped if their limbs are between the vehicle body and the wheels or underneath the vehicle.

- Make sure nobody is underneath the vehicle or in the immediate vicinity of the wheel arches when you lower the vehicle.

WARNING

Risk of becoming trapped due to the vehicle lowering

Vehicles with AMG adaptive sport suspension system+ or level control system: when you unload luggage or leave the vehicle, the vehicle first rises slightly and then returns to the set level shortly afterwards.

You or anyone else in the vicinity of the wheel arches or the underbody could thus become trapped.

The vehicle can also be lowered after being locked.

- When leaving the vehicle, make sure that nobody is in the vicinity of the wheel arches or the underbody.

Multimedia system:



RAISING THE VEHICLE

REQUIREMENTS FOR RAISING THE VEHICLE:

- The vehicle has been started.
- The vehicle is not moving faster than 25 mph (40 km/h).

- Select .

The indicator lamp lights up continuously.

The vehicle is set to high level +1.

Your selection is saved. The selected high level +1 remains active after the vehicle is switched off.





THE VEHICLE IS LOWERED AGAIN IN THE FOLLOWING SITUATIONS:

- When driving faster than 44 mph (70 km/h).

SETTING GPS-BASED RAISING OF THE VEHICLE

If the function is activated it is possible to save the vehicle position when raising the vehicle level.

- ▶ Confirm the prompt.
The position of the vehicle is saved. When the previously saved position is reached again, the zero-layer shows a query whether the vehicle level should be raised again.

 Settings for GPS-based raising

 Function of the zero-layer (→ page 490)

LOWERING THE VEHICLE

- ▶ Select .
- The indicator lamp disappears.
- The vehicle returns to normal level.

 Use normal level when towing a trailer. High-level driving is not permitted in trailer operation on public roads.

RACE START

INFORMATION ON RACE START

 RACE START is available only for Mercedes-AMG vehicles.

RACE START enables optimal vehicle acceleration from a standstill. A suitably high-grip road surface is required for this, and the tires and vehicle must also be in good condition.

 RACE START must not be used in normal road operation. RACE START may be activated and used only on dedicated race circuits, not on public roads.
Read the safety notes and information on ESP® (→ page 367).



WARNING

Risk of skidding and having an accident from wheels spinning

If you use RACE START, depending on the ESP® mode selected, there is an increased risk of skidding and having an accident.

- ▶ Make sure that no persons or obstacles are in the close vicinity of your vehicle.

RACE START WITH BOOST FUNCTION

The boost function for RACE START is available only for vehicles with the **AMG DYNAMIC PLUS package** (→ page 364).

If the activation conditions are fulfilled, the additional engine output will be enabled automatically during RACE START. In this case, vehicle acceleration from a standstill will be even more dynamic.





ACTIVATING RACE START

⚠ WARNING

Risk of skidding and having an accident from wheels spinning

If you use RACE START, depending on the ESP® mode selected, there is an increased risk of skidding and having an accident.

- ▶ Make sure that no persons or obstacles are in the close vicinity of your vehicle.

Requirements:

- The vehicle is switched on and at normal operating temperature. The temperature indicators on the driver display are white instead of blue.
- The state of charge of the high-voltage battery is sufficient.
- The driver's door is closed.
- All vehicle occupants have their seat belts fastened properly and are seated correctly.
- The front wheels are in the straight-ahead position.
- The vehicle is on level ground.
- The vehicle is stationary, the brake pedal is depressed (left foot) and the parking brake is released.
- The transmission is in position **D**.
- One of the **S** or **S+** drive programs is selected (→ page 319).


- ⓘ RACE START must not be used in normal road operation. RACE START may be activated and used only on dedicated race circuits, not on public roads. Read the safety notes and information on ESP® (→ page 367).

- ▶ Rapidly depress the accelerator pedal fully.

In vehicles with active ambient lighting, a special animation of the ambient light will play.

The drive noise will become louder and the vehicle will vibrate. The seat belts on the driver's and front passenger seats will be pre-tensioned.

- ⓘ If the activation conditions are not fulfilled, RACE START cannot be used. The **RACE START Not Possible** See Operator's Manual message will appear on the driver display.

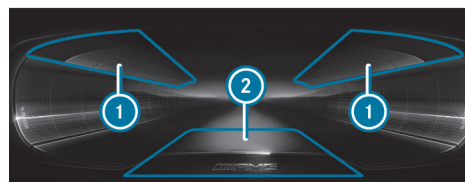

- ① RACE START display area activated
- ② Boost function display area available

- ⓘ What is shown in display area ① will vary according to the menu selected for the driver display.

- ▶ Display areas ① will flash red on the driver's display and the **RACE START Release Brake to Start** message will appear.

RACE START with boost function: if RACE START with boost function is activated, the race start messages will be supplemented with the **Boost Active** message. In addition, the lower center display area ② will flash red (vehicles with AMG DYNAMIC PLUS Package).



i If the brake pedal is not released after a short while, RACE START is canceled. The **RACE START Canceled** message will appear on the driver display.

- ▶ Take your foot off the brake, but keep the accelerator pedal depressed. The vehicle will pull away at maximum acceleration. The **RACE START Active** message will appear on the driver display.

RACE START will be deactivated immediately if you release the accelerator pedal during RACE START or if any of the activation conditions is no longer fulfilled. The **RACE START Canceled** message will appear on the driver display.

i After being used several times in short succession, RACE START will be unavailable until a certain distance has been driven.


Rear view camera

FUNCTION OF THE REVERSING CAMERA

The reversing camera serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering and parking remains with you. Ensure that no persons, animals, objects, etc. are in the maneuvering area while maneuvering and parking.


i The area behind the vehicle is displayed as a mirror image, as it would appear in the inside mirror.

CAMERA PERSPECTIVE ON THE CENTRAL DISPLAY

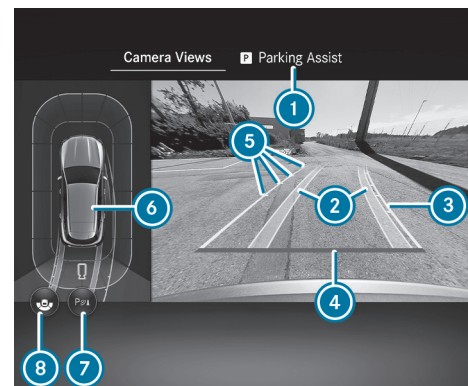


Example

- ① Menu **Parking Assistance**
- ② Path indicating the route the wheels will take at the current steering angle (dynamic)
- ③ Driven surface depending on the current steering angle (dynamic)
- ④ Guide line at a distance of approximately 1.0 ft (0.3 m) from the rear area
- ⑤ Guide lines at a distance of approximately 1.6 ft (0.5 m), 3.3 ft (1.0 m), 5 ft (1.5 m) and 9.9 ft (3.0 m) from the rear area
- ⑥ Warning display of Parking Assist PARKTRONIC (→ page 425)
- ⑦ Activate/deactivate Parking Assist PARKTRONIC (→ page 428)
- ⑧ Switching between wide-angle view and reversing camera with top view





WIDE-ANGLE VIEW

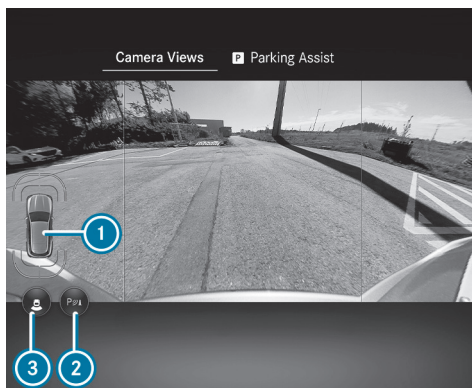

Example

- ① Warning display of Parking Assist PARKTRONIC (→ page 425)
- ② Activate/deactivate Parking Assist PARKTRONIC (→ page 428)
- ③ Switching between standard view and wide-angle view

SYSTEM LIMITS

If the system is not ready for operation, the message **System Inoperative** appears on the driver display and/or on the central display.

If a camera perspective is selected and the central display is temporarily black or does not show a camera image, the camera system is also faulty or is not ready for operation.

The field of vision and other functions of the camera system may be restricted due to additional vehicle attachments (e.g. license plate bracket or bicycle rack).



WARNING

Risk of accident due to functional limitations of the rear-view camera

Functional limitations of the rear-view camera could lead to a risk of collision with persons or objects.

- Do not use the rear-view camera if its functions are limited.
- Ensure that no persons, animals, objects, etc. are in the maneuvering area while maneuvering and parking.

THE REVERSING CAMERA WILL NOT FUNCTION OR WILL FUNCTION ONLY PARTIALLY IN THE FOLLOWING SITUATIONS:

- You are driving forwards at a speed greater than approximately 10 mph (16 km/h).
- The trunk lid is open.
- The weather conditions are poor, e.g.:
 - heavy rain, snow, fog, storm or spray.
- The ambient light is poor, e.g.:
 - at night or if a light is shining into the camera.
- The camera lens is obstructed, dirty or fogged up. Observe the notes on cleaning the reversing camera (→ page 667).
- The camera or rear of your vehicle is damaged. In this case, have the camera, its position and setting checked at a qualified specialist workshop.





The field of vision and other functions of the camera system may be restricted due to additional vehicle attachments (e.g. license plate bracket or bicycle rack).

i The contrast of the display can be impaired by incidental light or other light sources, e.g., when driving out of a garage. Particular attention must be afforded in this case.

i Have the display repaired or replaced if, for example, its use is considerably restricted due to pixel errors.

Observe also the information on vehicle sensors and cameras (→ page 362).

360° camera

FUNCTION OF THE 360° CAMERA


THE 360° CAMERA IS A SYSTEM COMPRISING FOUR CAMERAS:

- Front camera
- Reversing camera
- Two outside mirror cameras

The cameras record the immediate surroundings of the vehicle and provide assistance, e.g. during parking or at exits that are difficult to see.

The cameras serve solely as aids and may show a distorted view of obstacles, show them incorrectly or even omit them altogether. They are not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering and parking remains with you. Ensure that no persons, animals, objects, etc. are in the maneuvering area while maneuvering and parking.

CAMERA PERSPECTIVES ON THE CENTRAL DISPLAY

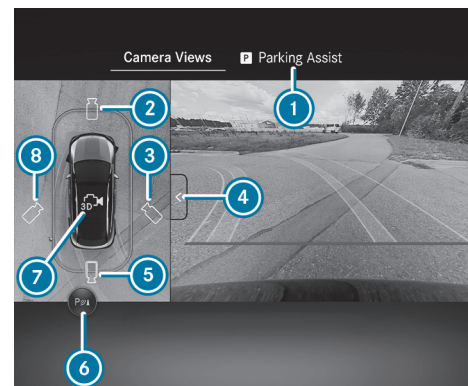

Example


- ① Menu [Parking Assistance](#)
- ② Image from the front camera
- ③ 3D view right side of the vehicle
- ④ Switching between standard view and wide-angle view
- ⑤ Reversing camera
- ⑥ Activate/deactivate Parking Assist PARKTRONIC (→ page 428)
- ⑦ 3D auto view
- ⑧ 3D view left side of the vehicle

i The warning display of Parking Assist PARKTRONIC is shown in all views (→ page 425).

i Availability of the 3D view ③, ⑧ and 3D auto view ⑦ functions is dependent upon the respective equipment.



FUNCTION OF THE GUIDE LINES

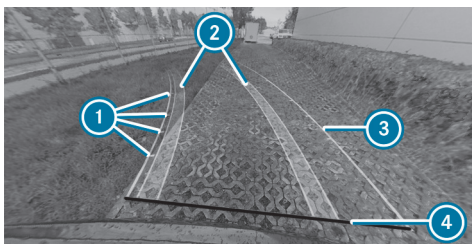


Example

- ① Guide lines at a distance of approximately 1.6 ft (0.5 m), 3.3 ft (1.0 m), 5 ft (1.5 m) and 9.9 ft (3.0 m) from the rear area
- ② Path indicating the route the wheels will take at the current steering angle (dynamic)
- ③ Driven surface depending on the current steering angle (dynamic)
- ④ Guide line at a distance of approximately 1.0 ft (0.3 m) from the rear area

i When Active Parking Assist is active, paths and guide lines are displayed in green instead of yellow (→ page 429).

TOP VIEW WITH THE IMAGE FROM THE FRONT OR REVERSING CAMERA

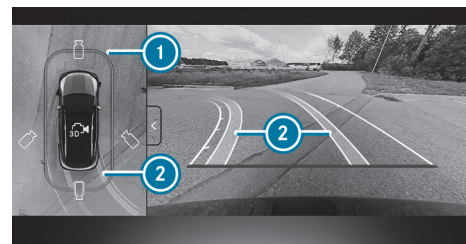

Example

- ① Warning display of Parking Assist PARKTRONIC (→ page 425)
- ② Path indicating the current steering angle

3D VIEW, LEFT/RIGHT SIDE OF THE VEHICLE




WARNING

Risk of accidents due to objects not being displayed or being displayed in a distorted manner

Due to the projection of the cameras, objects in the 3D views may be strongly distorted or not displayed at all.

- Make sure that there are no persons, animals or objects etc., in the maneuvering area while maneuvering and parking.





Example


- ① Warning display of Parking Assist PARKTRONIC (→ page 425)
- ② Switching between 3D view and 2D view

The virtual camera moves to the respective side of the vehicle. When you change the transmission position, the view is automatically adapted.

- ⓘ Display of the area beneath the vehicle may deviate from the actual circumstances.

3D AUTO VIEW

- ⓘ The area behind the vehicle is **not** displayed as a conventional mirror image in the 3D views.

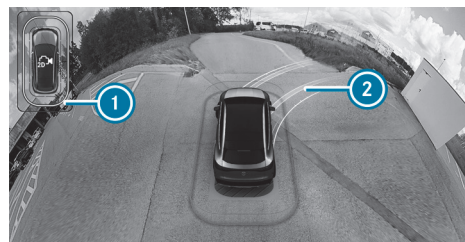


Example

- ① Display of Parking Assist PARKTRONIC (→ page 425)
- ② Guide lines

The virtual camera moves to the standard view, facing forward from the rear above the roof. The view changes automatically when approaching obstacles.


If you touch the touchscreen, the view changes to a 3D view with free rotation. You can turn, tilt and zoom the views by touch.

WIDE-ANGLE VIEW

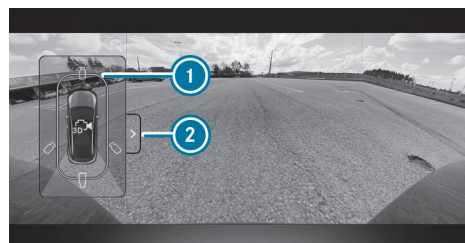

Example

- ① Display of Parking Assist PARKTRONIC (→ page 425)
- ② Switching between standard view and wide-angle view





SYSTEM LIMITS

If the system is not ready for operation, the message **System Inoperative** appears on the driver display and/or on the central display.

If a camera perspective is selected and the central display is temporarily black or does not show a camera image, the camera system is also faulty or is not ready for operation.

WARNING

Risk of accident due to restrictions in the function of the 360° camera

If the function of the 360° camera is restricted, there is a risk of collision with people or objects.

- ▶ Do not use the 360° camera in the event of function restrictions.
- ▶ Make sure that there are no persons, animals or objects etc., in the maneuvering area while maneuvering and parking.

THE 360° CAMERA WILL NOT FUNCTION OR WILL FUNCTION ONLY PARTIALLY IN THE FOLLOWING SITUATIONS:

- You are driving forwards at a speed greater than approximately 10 mph (16 km/h).
- The doors are open.
- An outside mirror is not completely extended.
- The trunk lid is open.
- The weather conditions are poor, e.g.:
 - heavy rain, snow, fog, storm or spray.
- The ambient light is poor, e.g.:

- at night or if a light is shining into the camera.

- The camera lens is obstructed, dirty or fogged up. Refer to the notes on cleaning the 360° camera (→ page 667).
- If cameras or vehicle components in which the cameras are installed are damaged. In this event, have the cameras, their positions and their setting checked at a qualified specialist workshop.


For technical reasons, the standard height of the vehicle may be altered if the vehicle is carrying a heavy load and this can result in inaccuracies in the guide lines and in the display of generated images.

The field of vision and other functions of the camera system may be restricted due to additional vehicle attachments (e.g. license plate bracket or bicycle rack).

 Contrast of the display may be impaired by abrupt direct sunlight or other light sources, e.g. when driving out of a garage. Particular attention must be afforded in this case.


 Have the display repaired or replaced if, for example, its use is considerably restricted due to pixel errors.

Observe also the information on vehicle sensors and cameras (→ page 362).





CALLING UP THE 360° CAMERA VIEWS USING THE BUTTON

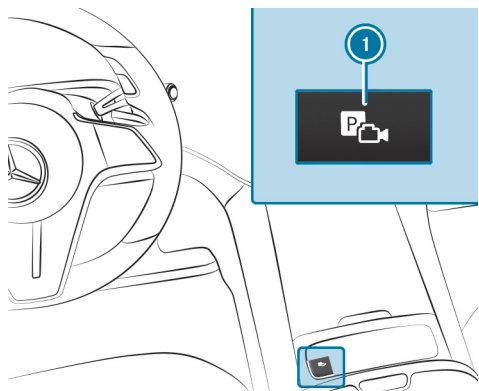

i Depending on the vehicle's equipment, button **1** may also be located in a different position on the center console.

- ▶ Press button **1**.
- ▶ Select **Camera Views** menu.
- ▶ Select the desired view in the multimedia system (→ page 420).

SELECTING A VIEW FOR THE 360° CAMERA (REVERSE GEAR)

- ▶ Engage reverse gear.
- ▶ Select the desired view in the multimedia system (→ page 420).

MANAGING 360° CAMERA WITH GPS-ACTIVATION POSITIONS

Multimedia system:

  >> **Settings** >> **Assistance** >> **Camera**

RENAMING AN ACTIVATION POSITION

i You can determine activation positions in the **Camera Views** menu (→ page 420).

- ▶ Select  for the desired activation position.
- ▶ Select **Edit**.
- ▶ Enter a name and confirm.
The activation position is stored under the new name.

DELETING AN ACTIVATION POSITION

- ▶ Select  for the desired activation position.
- ▶ Select **Delete Entry**.
- ▶ Confirm the prompt.
The activation position is deleted.


OPENING THE CAMERA COVER

Multimedia system:

  >> **Settings** >> **Assistance** >> **Camera**

- ▶ Select **Open Camera Cover**.

i The camera cover closes automatically after some time, or after the vehicle is switched on or off.





Parking Assist PARKTRONIC

FUNCTION OF PARKING ASSIST PARKTRONIC

Parking Assist PARKTRONIC is an electronic parking assistance system that monitors the area surrounding your vehicle. The distance between your vehicle and a detected obstacle is displayed visually and acoustically.


The passive side impact protection also warns you of obstacles to the side. These must be detected beforehand by the sensors in the front or rear bumper while the vehicle is driving by them. If you steer in the direction of a detected obstacle and there is a risk of a lateral collision, a warning is issued.

Passive side impact protection can be activated and deactivated via the multimedia system (→ page 428).

In order that front or rear obstacles to the side can be displayed, the vehicle must first travel a distance of at least half a vehicle length. Once the vehicle has traveled a distance of one vehicle length, obstacles on all sides can be shown.


Parking Assist PARKTRONIC serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and exiting parking spaces remains with you. Ensure that no persons, animals, objects, etc. are in the maneuvering area while maneuvering and parking in/exiting parking spaces.

DISPLAYS ON THE CENTRAL DISPLAY

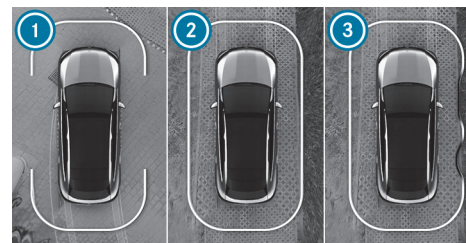

Example: vehicles with 360° camera


- ① Ready for display on the front and rear
- ② Ready for display all around
- ③ Ready for display all around and obstacles detected

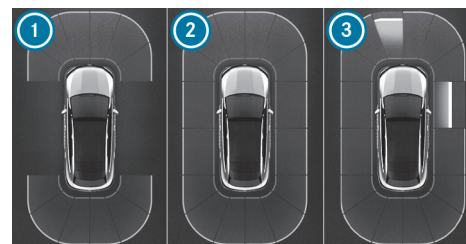

Example: vehicles with reversing camera

- ① Ready for display on the front and rear
- ② Ready for display all around
- ③ Ready for display all around and obstacles detected

As soon as Parking Assist PARKTRONIC is ready for display, the respective areas ① to ③ of the display are shown in blue.





THE COLOR OF THE DISPLAY CHANGES DEPENDING ON THE DISTANCE TO THE DETECTED OBSTACLE:

- **Blue:** > 3.3 ft (1 m) (no obstacles detected)
- **Yellow:** approximately 3.3 ft (1 m) - 2.3 ft (0.7 m)
- **Orange:** approx. 2.3 ft (0.7 m) - 1.3 ft (0.4 m)
- **Red:** < 1.3 ft (0.4 m)

Vehicles with 360° camera: the boundary line shifts dynamically depending on the position and distance of the obstacles detected.


An intermittent warning tone also sounds depending on the distance to the obstacle detected. You can set the timing of the warnings in the multimedia system. In the **Warn Early** setting, the system warns you from a distance of 3.3 ft (1 m). In the standard setting, from a shorter distance of 1.3 ft (0.4 m).



Example: vehicles with reversing camera

IF YOU ARE NOT IN THE CAMERA & PARKING MENU AND AN OBSTACLE IN THE VEHICLE'S PATH IS DETECTED, A POP-UP WINDOW ① APPEARS ON THE CENTRAL DISPLAY IF THE FOLLOWING REQUIREMENTS ARE MET:


- **Vehicles without Active Parking Assist:** when driving no faster than 8 mph (12 km/h).
- **Vehicles with Active Parking Assist:** when driving no faster than 11 mph (18 km/h).

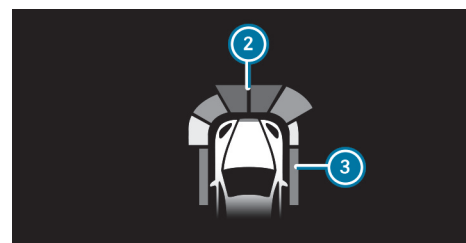

Head-up display (example)



Example: vehicles with 360° camera





Optionally, obstacles detected by Parking Assist PARKTRONIC from a distance of approximately 3.3 ft (1.0 m) in front  and 2.3 ft (0.7 m) at the sides  can also be displayed on the head-up display.

VEHICLES WITH ACTIVE AMBIENT LIGHTING AND PARKING PACKAGE WITH REMOTE PARKING FUNCTIONS

When **Warning Support** is activated, the Parking Assist PARKTRONIC display is also accompanied by ambient lighting. If an obstacle is detected, the ambient lighting lights up in the same color as the central display.

The active ambient lighting that accompanies the Parking Assist PARKTRONIC display is intended only to accentuate the display on the central display, and not to replace it.

More information on ambient lighting: (→ page 268)

 The ambient lighting does not respond in the vicinity of the driver display or behind the rear doors.

 Depending on the selected setting, other functions may supersede the ambient lighting effects of Parking Assist PARKTRONIC. In this case, the ambient lighting effects of Parking Assist PARKTRONIC do not occur.

SYSTEM LIMITS

PARKING ASSIST PARKTRONIC DOES NOT NECESSARILY TAKE INTO ACCOUNT THE FOLLOWING OBSTACLES:

- Obstacles below the detection range, e.g. persons, animals or objects
- Obstacles above the detection range, e.g. protruding loads, overhangs or loading ramps of truck
- Pedestrians or animals approaching the vehicle from the side

- Objects placed next to the vehicle

OBSTACLES ON THE SIDES ARE NOT SHOWN IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- You park the vehicle and switch it off.
- You open the doors.

After the vehicle is restarted, obstacles must be detected again by driving past them before a new warning can be issued.

OBSERVE ALSO THE SYSTEM LIMITS OF THE FOLLOWING SYSTEMS:

- Reversing camera (→ page 418)
- 360° camera (→ page 420)

Observe the information on vehicle sensors and cameras; otherwise the system cannot function properly (→ page 362).

PROBLEMS WITH PARKING ASSIST PARKTRONIC

If the Parking Assist PARKTRONIC display lights up red for approximately three seconds and then goes out, and the  symbol appears on the driver display, the system may have been deactivated due to signal interference. Start the vehicle again and check whether Parking Assist PARKTRONIC works in a different location.

IF A WARNING TONE ALSO SOUNDS, THE CAUSES MAY BE AS FOLLOWS:

- **The sensors are dirty:** clean the sensors (→ page 667).
- **Parking Assist PARKTRONIC has been deactivated due to a malfunction:** restart the vehicle. If the problem persists, consult a qualified specialist workshop.





ACTIVATING/DEACTIVATING PARKING ASSIST PARKTRONIC

NOTE

Vehicle damage during parking or maneuvering due to objects at close range

Parking Assist PARKTRONIC may not detect certain objects close to the vehicle.

- ▶ When parking or maneuvering, look out in particular for objects that are underneath or above the sensors, e.g. flower pots or drawbars. Otherwise, the vehicle or other objects could be damaged.

Requirements:

- The camera menu is open.
 - Or: the Parking Assist PARKTRONIC pop-up window is displayed.
- ▶ Tap  on the central display.

If the indicator lamp is lit, Parking Assist PARKTRONIC is active. If the indicator lamp does not light up or the symbol  is displayed, Parking Assist PARKTRONIC is not active.

-  Parking Assist PARKTRONIC is automatically activated when the vehicle is started.

Alternatively, Parking Assist PARKTRONIC can be activated or deactivated in the quick-access menu.

SETTING THE WARNING TONES OF PARKING ASSIST PARKTRONIC

Multimedia system:

  >> Settings >> Assistance >> Parking >> PARKTRONIC

SETTING WARNING TONES

- ▶ Select [Set Warning Tones](#).
- ▶ Set the desired level under [Volume](#) or [Tone Pitch](#).

ACTIVATING/DEACTIVATING AUDIO FADEOUT

- ▶ Select [Audio Fadeout](#) and activate or deactivate [Audio Fade for Warnings](#).
The volume of the media source currently playing is reduced when a warning tone sounds in Parking Assist PARKTRONIC.

or

- ▶ Select [Audio Fadeout](#) and switch [Audio Fadeout When in R](#) on or off.
The volume of the media source currently playing is reduced when reverse gear is engaged.

SETTING WARNING TIMING

- ▶ Select [Time of Warning](#).
- ▶ Set the desired warning time for [Front](#) or [Rear](#).
- ▶ Activate or deactivate [Side Warning](#).





Active Parking Assist

FUNCTION OF ACTIVE PARKING ASSIST

WARNING

Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

- ▶ In these situations, do not use Active Parking Assist.

Active Parking Assist is an electronic parking assistance system that uses ultrasound with the assistance of the reversing camera or 360° camera. When you are driving forwards up to approximately 22 mph (35 km/h), the system automatically measures parking spaces on both sides of the vehicle.

Active Parking Assist serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and exiting parking spaces remains with you. Ensure that no persons, animals, objects, etc. are in the vehicle's path.

Active Parking Assist offers the following functions:

VEHICLES WITH REVERSING CAMERA

- Parking in parking spaces parallel to the roadway
- Backing up into parking spaces perpendicular to the roadway

The parking space is freely selectable. The parking procedure is executed with the vehicle backing up.

VEHICLES WITH 360° CAMERA

- Parking in parking spaces parallel to the roadway
- Parking in parking spaces perpendicular to the roadway (either forwards or backwards as desired)
- Parking in parking spaces that can be detected as such only from markings (for example at the roadside)
- Exiting parking spaces if you have parked using Active Parking Assist

The parking space is freely selectable. The parking direction (forwards or backwards) can also be freely selected, depending on the orientation of the parking space.


If Active Parking Assist is available, the notification  appears on the driver display. When the system detects parking spaces, the notification  appears. The arrows show the side of the roadway on which free parking spaces are located. These are then shown on the central display.

When Active Parking Assist is activated, the turn signal indicators are activated based on the calculated path of your vehicle. The parking and unparking procedures are assisted by acceleration, braking, steering and gear changes.

To start the parking procedure, press the button  (→ page 430) or go to the navigation view (e.g. when near the destination) and select [Active Parking Assist](#) (→ page 491).

ACTIVE PARKING ASSIST WILL BE CANCELED IN THE FOLLOWING SITUATIONS:

- You press the button  again.
- You begin steering.





- You select the park position **P**.
- You engage the electric parking brake.
- ESP® intervenes.
- You open the driver's door.

SYSTEM LIMITS

If the exterior lighting is malfunctioning, Active Parking Assist is not available.

OBSERVE ALSO THE SYSTEM LIMITS OF THE FOLLOWING SYSTEMS:

- Reversing camera (→ page 418)
- 360° camera (→ page 420)

Objects above or below the detection range of Active Parking Assist, e.g. protruding loads, overhangs or loading ramps of trucks or parking space boundaries are not detected when measuring the parking space. These are also not subsequently taken into account when calculating the parking procedure. In some circumstances, Active Parking Assist may therefore prematurely guide you into the parking space or brake too late.

Certain environmental conditions, such as snowfall or heavy rain, may lead to a parking space being mismeasured. Parking spaces that are partially occupied by trailer drawbars might not be identified as such or may be measured incorrectly. Use Active Parking Assist only on level road surfaces with adequate grip.

Active Parking Assist can also display unsuitable parking spaces, e.g. parking spaces in which parking is not permitted or on unsuitable surfaces.

DO NOT USE ACTIVE PARKING ASSIST IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- In extreme weather conditions, such as ice, packed snow or in heavy rain.
- When transporting a load that protrudes beyond the vehicle.

- If the parking space is on a steep downhill or uphill gradient.
- When snow chains are installed.
- Directly after a tire change or when spare tires are installed.
- If the tire pressure is too low or too high.
- On steep downhill gradients of more than approximately 15%.
- If the vehicle level has been offset, e.g. mounting the curb on one side (vehicles with level control).

PARKING WITH ACTIVE PARKING ASSIST



WARNING

Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

- In these situations, do not use Active Parking Assist.






WARNING

Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or exiting a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.


This could cause you to collide with objects or other road users.

- ▶ Pay attention to objects and other road users.
- ▶ Where necessary, stop the vehicle or cancel the parking procedure with Active Parking Assist.

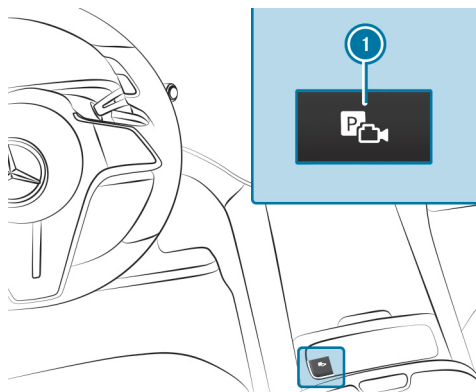

 Depending on the vehicle's equipment, button  may also be located at a different position on the center console.


- ▶ Press the button .

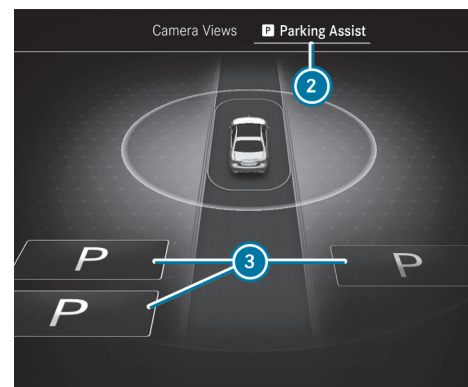

Parking Assist menu (example for left side of the screen)

- ▶ Select the menu **Parking Assistance** .
- Parking spaces  detected by the system are shown on the central display.

At speeds greater than approximately 10 mph (16 km/h), the camera perspective on the right side of the screen switches off.

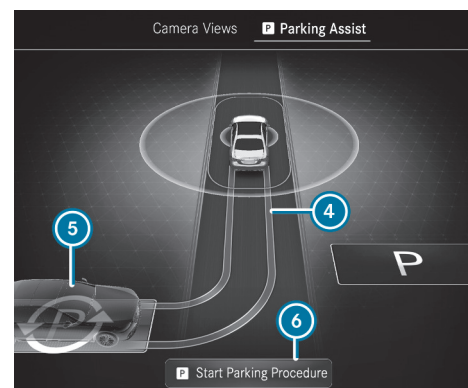

Parking Assist menu (example)



When the vehicle is at a standstill, the indicated vehicle path ④ into the currently selected parking space ⑤ also appears.

- ▶ When a parking space is displayed: stop the vehicle.
- ▶ If necessary, select another parking space.
- ▶ **Vehicles with 360° camera:** to change the parking direction, tap the selected parking space again.
- ▶ **To start the parking procedure:** press the button ① again.

or

- ▶ Depress the brake pedal and select **Start Parking Procedure** ⑥ (depending on the respective vehicle equipment).
- ▶ Take your hands off the steering wheel and release the brake pedal.
The vehicle drives into the selected parking space.

The duration of the parking procedure is indicated by a progress bar. The turn signal indicator is switched on automatically when the parking procedure begins. You are responsible for selecting the turn signal indicator in accordance with the traffic conditions. If necessary, select the turn signal indicator accordingly.

Following completion of the parking procedure, the **Active Parking Assist Finished** message appears.

- ▶ Secure the vehicle against rolling away. When necessitated by legal requirements or local conditions: turn the wheels towards the curb.

① You can stop the vehicle and change the transmission position during the parking procedure. The system then calculates a new

vehicle path. If no new vehicle path is available, the transmission position can be changed again, or the process can be canceled.




Immediate parking from the menu [Camera Views](#)

- ▶ Select the [Camera Views](#) menu.
- ▶ When the vehicle is stationary and in transmission position **R**, and the symbol ⑦ appears in the camera image: press the button ① again.

or

- ▶ Depress the brake pedal and select **Start Parking Procedure** ⑥ (depending on the respective vehicle equipment).
The parking procedure is initiated for the detected parking space.

① The parking space and parking direction cannot be changed in immediate parking.





EXITING A PARKING SPACE WITH ACTIVE PARKING ASSIST

⚠ WARNING

Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

- ▶ In these situations, do not use Active Parking Assist.

⚠ WARNING

Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or exiting a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.

This could cause you to collide with objects or other road users.


- ▶ Pay attention to objects and other road users.
- ▶ Where necessary, stop the vehicle or cancel the parking procedure with Active Parking Assist.

Requirements:

- The vehicle is equipped with a 360° camera.

- The vehicle has been parked with Active Parking Assist.


- ▶ Start the vehicle.

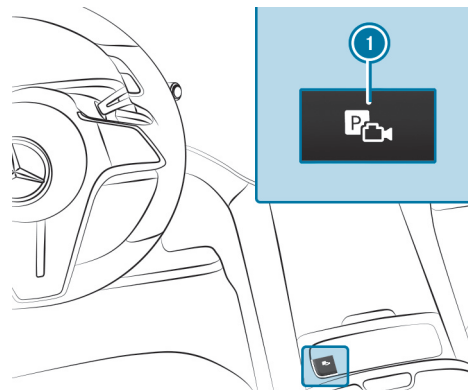

ⓘ Depending on the vehicle's equipment, button ① may also be located in a different position on the center console.

- ▶ Press button ①.



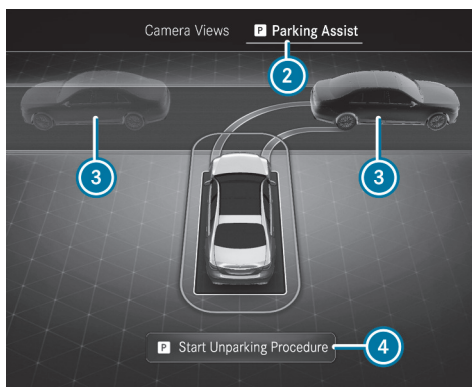

Parking Assist menu (example for left-hand side of the screen)

- ▶ Select the **Parking Assistance** menu ②.
- ▶ If necessary, change the direction of exit ③.
- ▶ **To initiate the unparking procedure:** press button ① again.

or

- ▶ Depress the brake pedal and select **Start Unparking Procedure** ④ (depending on the respective vehicle equipment).
- ▶ If necessary, change the transmission position. Observe any messages shown on the driver display and central display.
The vehicle will move out of the parking space.
The duration of the unparking procedure will be indicated by a progress bar.

The turn signal indicator will automatically be switched on when the unparking procedure is initiated, and automatically switched off again when it is completed. You are responsible for selecting the turn signal indicator in accordance with the traffic conditions. If necessary, select the turn signal indicator accordingly.

After the vehicle has exited the parking space, a warning tone and the  **Active Parking Assist Finished: Take Control of Vehicle** message will prompt you to take control of the vehicle. You will have to accelerate, brake, steer and change gear yourself again.

If you do not react to the prompt to reassume control of the vehicle, the system will apply the brakes to bring the vehicle to a standstill.

PAUSING ACTIVE PARKING ASSIST



WARNING

Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

- ▶ In these situations, do not use Active Parking Assist.

You can interrupt the parking or unparking procedure of Active Parking Assist by performing one of the following actions, foreexample:

- ▶ Depress the brake pedal.
- ▶ Open the front passenger door, a rear door or the trunk.
- ▶ Apply the electric parking brake or activate the HOLD function.
- ▶ **To resume the parking or unparking procedure:** gently depress the accelerator pedal.



-  If the electric parking brake was applied before Active Parking Assist was activated, depress the accelerator pedal gently to start the parking or unparking procedure.

Check the area around your vehicle again before resuming a paused parking procedure. Ensure that persons, animals or objects are no longer in the maneuvering range. Observe also the system limits of Active Parking Assist.

AUTOMATIC BRAKING FUNCTION OF ACTIVE PARKING ASSIST

WARNING

Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

- In these situations, do not use Active Parking Assist.

Persons or objects detected in the vehicle's path may trigger a sudden braking action, which will in turn halt the parking or unparking procedure. The vehicle will then remain at a standstill. The parking or unparking procedure is resumed if you depress the accelerator pedal.

Check the area around your vehicle again before resuming the parking or unparking procedure. Ensure once again that no persons, animals or objects are in the vehicle's path. Observe also the system limits of Active Parking Assist.

Remote Parking Assist

FUNCTION OF REMOTE PARKING ASSIST

-  Remote Parking Assist is an additional function of Active Parking Assist. Comply with local traffic laws and regulations when using Remote Parking Assist on public roads. If you are required to steer the wheels in the direction of the curb, you must not use Remote Parking Assist. Please note that you can use Remote Parking Assist only if you have a valid driving license and are in a fit state to drive.

Remote Park Assist parks or unparks your vehicle while you are outside your vehicle. You can control the maneuvering and parking process on your mobile phone.

With Remote Parking Assist, you can perform all parking and unparking procedures offered by Active Parking Assist. In addition, you can position the vehicle directly in front of a garage or driveway and then initiate the parking or unparking procedure with Remote Parking Assist.

Remote Parking Assist will assume control of starting, braking and steering. While Remote Parking Assist is active, the vehicle will be locked.

Remote Parking Assist serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and exiting parking spaces remains with you. Pause or terminate the parking procedure as necessary. Ensure that no persons, animals, objects etc. are in the vehicle's path. Ensure that you also pay attention to other vehicles.





SYSTEM LIMITS

IF THE SYSTEM DETECTS A MALFUNCTION OR SYSTEM LIMIT DURING THE MANEUVERING OR PARKING PROCESS, THE PROCESS WILL BE CANCELED:

- The vehicle will be brought to a standstill.
- Transmission position **P** will be selected and the electric parking brake will be applied automatically.
- The vehicle will be switched off.
- The vehicle will remain locked.

A corresponding message will be displayed on your mobile phone if the parking process is canceled.

Depending on the situation, you can take control of the procedure, maneuver the vehicle back to the starting position or manually take control of the vehicle.

The system limits of Active Parking Assist apply (→ page 429).

Certain environmental conditions, such as snowfall or heavy rain, may lead to a parking space being mismeasured or to connection problems with your mobile phone. Use Remote Parking Assist only on level ground with adequate grip.

During parking, your distance from the vehicle should not exceed approximately 10 ft. (3.0 m). At greater distances, the procedure will be canceled and a corresponding message will be displayed on your mobile phone. If you move closer to the vehicle, you will be able to continue the procedure.

You can watch an animation on this topic via the following link:

OPERATING REMOTE PARKING ASSIST



WARNING

Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

- In these situations, do not use Active Parking Assist.

Objects located above the detection range of Active Parking Assist will not be detected when the parking space is measured. They are therefore not taken into account when the parking procedure is calculated, e.g. protruding loads, overhangs or loading ramps of truck. In some circumstances, Active Parking Assist may therefore guide you into the parking space prematurely.



**⚠ WARNING**

Danger due to insufficient view of the vehicle surroundings

If you maneuver, park or exit a parking space with the vehicle using Remote Parking Assist, observe the following:

- ▶ Make sure that you have the best view possible of the vehicle and the vehicle's surroundings.
- ▶ Make sure that no persons, animals or objects are in the path of your vehicle.
- ▶ Make sure that you maintain a suitable distance to the vehicle and that neither you nor other road users could be endangered.
- ▶ Be aware of the vehicle's surroundings at all times and identify possible dangers.
- ▶ If necessary, cancel the parking procedure.

No persons or pets are permitted to remain in the vehicle during the parking procedure. Observe the system limits at all times. If necessary, cancel the parking procedure. Always ensure that vehicle access is guaranteed for other road users.

⚠ WARNING

Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or pulling out of a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.

This could cause you to collide with objects or other road users.

- ▶ Pay attention to objects and other road users.
- ▶ Where necessary, stop the vehicle or cancel the parking procedure with Remote Parking Assist.

Requirements:**FOR THE REMOTE PARKING ASSIST FUNCTION, YOU WILL REQUIRE:**

- a user account with Mercedes me
- the current Remote Parking Assist app for your vehicle model
- a mobile phone

 A list of compatible mobile phones can be obtained at: <https://www.mercedes-benz-mobile.com/>

THE FOLLOWING OPERATING SYSTEMS ARE SUPPORTED:

- Android™
- Apple® iOS






- ▶ Activate the "Remote Parking Assist" service, e.g. via the Mercedes me homepage.
- ▶ Authorize the mobile phone with the Remote Parking Assist app in the vehicle (→ page 439).


SELECTING THE PARKING MANEUVER IN ADVANCE WHILE INSIDE THE VEHICLE

- ▶ Stop the vehicle and engage transmission position **P**.

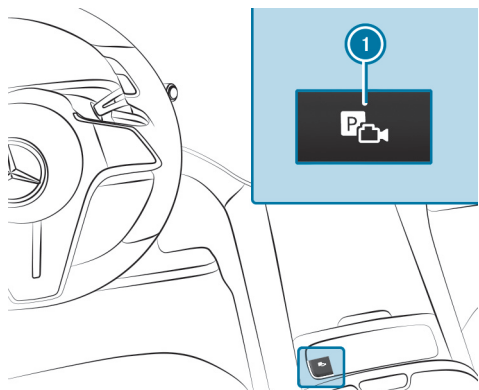

-  Depending on the vehicle's equipment, the button  may also be located in a different position on the center console.

- ▶ Press the button .

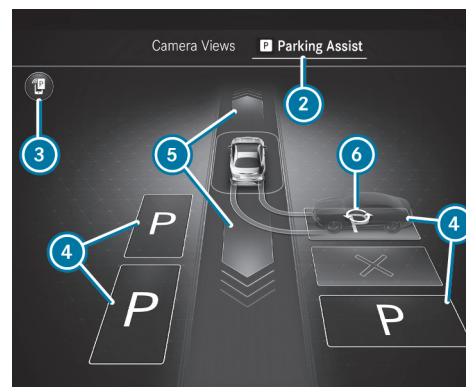


- ▶ Select the menu **Parking Assistance** .
- ▶ For further information on Remote Parking Assist: select .
- ▶ If necessary, select another parking space  or select  to drive straight ahead into a garage, for example.
- ▶ If necessary, change the parking direction .

-  Alternatively, you can begin parking with Active Parking Assist (→ page 430) and continue with Remote Parking Assist from any vehicle position. To do this, stop the parking process and engage transmission position **P**.

- ▶ Switch off and exit the vehicle taking the key with you.

STARTING THE PARKING PROCEDURE WITHOUT SELECTING IN ADVANCE

- ▶ Stop the vehicle and engage transmission position **P**.
- ▶ Switch off and exit the vehicle taking the key with you.





STARTING THE PARKING PROCEDURE WHILE OUTSIDE THE VEHICLE

- ▶ Unlock the vehicle.

CARRYING OUT A PARKING PROCEDURE WITH REMOTE PARKING ASSIST

- ① Keep the vehicle key with you during the parking procedure. Pressing a button on the vehicle key will cancel the parking procedure and bring the vehicle to a standstill.

- ① Following completion of the parking procedure, the vehicle is locked.

If you have started the parking procedure as described above, the vehicle is ready to connect to your mobile phone for a limited period of time.

- ▶ Start the Remote Parking Assist app on the mobile phone and connect to the vehicle.
- ▶ Follow the instructions of the Remote Parking Assist app.

- ① The turn signal indicator is automatically switched on when starting the parking procedure, and switched off again upon completion.

- ① If the connection between the vehicle and the mobile phone is interrupted while a parking maneuver is being performed, the maneuver can be continued if the connection is re-established within a short period of time.

- ▶ Once the parking procedure has been concluded, ensure that all doors and windows, the sliding sunroof and the trunk of the vehicle are closed. Secure the vehicle against rolling away.

CANCELING THE PARKING PROCEDURE

You can cancel the parking procedure of Remote Parking Assist at any time and slow the vehicle to a standstill.

- ▶ Cancel the parking procedure in the Remote Parking Assist app.

or

- ▶ Press a button on the vehicle key.

or

- ▶ Pull a door handle.

AUTHORISING/DEAUTHORISING A MOBILE PHONE FOR REMOTE PARKING ASSIST

Multimedia system:



 Settings
  Assistance
  Parking
  Remote Parking Assist

AUTHORISING A NEW MOBILE PHONE

To be able to use the Remote Parking Assist function, you must authorise your mobile phone. You can authorise up to ten mobile phones.

- ▶ Select [Remote Parking Assist](#).
- ▶ In the opened window, select [Authorize a New Device](#).
Remote Parking Assist is ready to connect.





- ▶ Start the Remote Parking Assist app and then start the authorization process.
A connection prompt is displayed.
- ▶ Scan the QR code on the central display.
The mobile phone is authorised.

DEAUTHORISING MOBILE PHONES

- ▶ Select [Remote Parking Assist](#).
- ▶ In the opened window, select the device to be deauthorised.
- ▶ **To deauthorise a mobile phone:** Select a mobile phone and confirm with [Yes](#).
The mobile phone is deleted from the device list.
- ▶ **To deauthorise all mobile phones:** Select [Deauthorize All Devices](#) and confirm with [Yes](#).
All mobile phones are deleted from the device list.

Maneuvering assistance

FUNCTION OF DRIVE AWAY ASSIST



WARNING

Risk of accident caused by limited detection performance of Drive Away Assist

Drive Away Assist cannot always clearly identify objects and traffic situations.

- ▶ Always pay careful attention to the traffic situation; do not rely on Drive Away Assist alone.
- ▶ Be prepared to brake or swerve as necessary, provided the traffic situation permits and that it is safe to take evasive action.

Drive Away Assist can reduce the severity of an impact when the vehicle is pulling away. If the system detects an obstacle in the direction of travel, the vehicle's speed will briefly be restricted to approximately 1 mph (2 km/h).

A RISK OF A COLLISION MAY ARISE IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- If the driver mixes up the accelerator and brake pedals.
- If the driver engages an incorrect gear.
- If the driver depresses the accelerator pedal with too much force.





DRIVE AWAY ASSIST WILL BE ACTIVE IN THE FOLLOWING CIRCUMSTANCES:

- If the vehicle was stationary and the transmission position was changed to **R** or **D**.
- If the vehicle has rolled less than approximately 3.3 ft (1.0 m) since coming to a standstill.
- If the detected obstacle is less than approximately 3.3 ft (1.0 m) away.

Drive-away Assist can be deactivated or activated on the [Maneuvering Assistance](#) menu (→ page 443).

If a critical situation is detected, the  symbol will appear in red in the selected view on the [Camera & Parking](#) menu.

-  If Drive Away Assist is not available, the  will symbol appear in gray. If the [Camera & Parking](#) menu is not open on the central display, the symbol will appear together with the Parking Assist PARKTRONIC pop-up.

Drive Away Assist serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and exiting parking spaces remains with you. Ensure that no persons, animals or objects etc. are in the vehicle's path.

SYSTEM LIMITS

The system limits of Active Parking Assist apply (→ page 429).

The performance of Drive Away Assist will be restricted on uphill gradients.

FUNCTION OF CROSS TRAFFIC WARNING



WARNING

Risk of accident caused by limited detection performance of the cross traffic warning

The cross traffic warning cannot always clearly identify objects and traffic situations.

- ▶ Always pay careful attention to the traffic situation; do not rely on the cross traffic warning alone.
- ▶ Be prepared to brake or swerve as necessary, provided the traffic situation permits and that it is safe to take evasive action.

The cross traffic warning can warn you of crossing traffic when you are exiting a parking space. The radar sensors in the bumper also monitor the area adjacent to the vehicle.

THE CROSS TRAFFIC WARNING WILL BE ACTIVE IN THE FOLLOWING CIRCUMSTANCES:

- [Warning for Cross Traffic, Rear](#): the vehicle is driving in reverse at less than approximately 6 mph (10 km/h).
- [Warning for Cross Traffic, Front](#): the vehicle is driving forwards at less than approximately 6 mph (10 km/h) and the camera image is shown on the central display (→ page 424).

The [Warning for Cross Traffic, Front](#) can be deactivated or activated on the [Maneuvering Assistance](#) menu (→ page 443).

If a critical situation is detected, the  symbol will appear in red in the selected view on the [Camera & Parking](#) menu.





WARNING FOR CROSS TRAFFIC, REAR

- The vehicle brakes can be applied automatically when crossing traffic is detected.
- If the [Camera & Parking](#) menu is not opened and a critical situation is detected, a warning will appear on the central display together with the Parking Assist PARKTRONIC pop-up.

WARNING FOR CROSS TRAFFIC, FRONT

- If Active Parking Assist is active, the vehicle brakes can be applied automatically when crossing traffic is detected.
- A warning will appear if Active Parking Assist is not active but the [Camera & Parking](#) menu is open.
- If the [Camera & Parking](#) menu is not open, the system will not be able to react to crossing traffic.

The cross traffic warning serves solely as an aid, and is not a substitute for you paying attention to your surroundings. The responsibility for safe maneuvering, parking and exiting parking spaces remains with you. Ensure that no persons, animals or objects etc. are in the vehicle's path.

SYSTEM LIMITS

-  If the cross traffic warning is not available, the  symbol will appear in gray.

The system limits of Active Parking Assist apply (→ page 429).

If the radar sensors are obstructed by vehicles or other objects, detection will not be possible.

THE CROSS TRAFFIC WARNING WILL NOT BE AVAILABLE IN THE FOLLOWING SITUATIONS:

- on uphill gradients

FUNCTION OF CLOSE-RANGE BRAKING



WARNING

Risk of accident caused by limited detection by the maneuvering brake function

The maneuvering brake function cannot always clearly detect people. Other obstacles are not detected by the function.

In these cases, the function may brake unnecessarily or not brake at all.

- ▶ Always pay careful attention to the traffic situation; do not rely on the maneuvering brake function alone.
- ▶ Be ready to brake.

Close-range braking can prevent collisions with pedestrians when the vehicle is reversing at slow speeds. If the reversing camera detects a person in the vehicle's path, the vehicle can be braked to a standstill.

THE CLOSE-RANGE BRAKING FUNCTION MAY INTERVENE IN THE FOLLOWING CIRCUMSTANCES:

- The vehicle is backing up at a speed slower than 6 mph (10 km/h).
- The camera image is shown on the central display (→ page 424).

Depending on the respective country, close-range braking can be deactivated or activated on the [Maneuvering Assistance](#) menu (→ page 443).





When close-range braking is triggered, the  symbol will appear in red in the selected view on the [Camera & Parking](#) menu.

-  If close-range braking is not available, the  symbol will appear in gray.

Close-range braking serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and exiting parking spaces remains with you. Ensure that no persons, animals or objects etc. are in the vehicle's path.

SYSTEM LIMITS

OBSERVE THE SYSTEM LIMITS OF THE FOLLOWING FUNCTIONS:

- Active Parking Assist (→ page 429)
- 360° camera (→ page 420)
- Reversing camera (→ page 418)

THE CLOSE-RANGE BRAKING FUNCTION WILL NOT BE AVAILABLE IN THE FOLLOWING SITUATIONS:

- on uphill gradients

ACTIVATING/DEACTIVATING THE MANEUVERING ASSISTANT

Multimedia system:

   [Settings](#)  [Assistance](#)  [Parking](#)

-  This function is a Digital Extra (→ page 96).

-  The "Activating/deactivating maneuvering assistant function" is not available in all countries.

- ▶ Select [Maneuvering Assistance](#).
- ▶ Activate or deactivate the desired maneuvering assistant.

Memory Parking Assist

FUNCTION OF MEMORY PARKING ASSIST



WARNING

Risk of accident due to objects located above or below the detection range of Memory Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Memory Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

This result in a collision.

- ▶ In these situations, do not use Memory Parking Assist.

Memory Parking Assist can park your vehicle using a previously stored parking space. You can store parking procedures with a total distance of up to 550 yds (500 m) (110 yds (100 m) per parking or unparking procedure.

During parking or unparking, the system can travel a previously stored distance of up to approximately 110 yds (100 m) to or out of the desired parking space; for example, from the driveway entrance into the garage.



Only one parking or unparking procedure can be recorded within a radius of approximately 165 yds (150 m).

Use Memory Parking Assist only on private property. Use on public roads, e.g. in public parking spaces, is not permitted.

Memory Parking Assist serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and exiting parking spaces remains with you. Ensure that no persons, animals or objects etc. are in the vehicle's path.

SYSTEM LIMITS

Observe the system limits of Active Parking Assist (→ page 429).

Objects located above or below the detection range of Memory Parking Assist may not be detected during the parking procedure.

Drawbars of parked trailers that protrude into the parking space, for example, may not be detected.

DO NOT USE MEMORY PARKING ASSIST IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:


- In extreme weather conditions, such as ice, packed snow or in heavy rain.
- When you are transporting a load that protrudes beyond the vehicle.
- If the parking space is on a steep incline.
- When snow chains are installed.

You can watch an animation on this topic via the following link:

RECORDING A PARKING PROCEDURE USING MEMORY PARKING ASSIST

Requirements:


- There are no public roads included within the travel route, e.g. entirely within your own property.
- The system needs reference points in the surroundings to orient itself, such as fences, walls or trees. A certain distance must therefore be driven after starting the vehicle. If insufficient reference points are detected in the surrounding area, no new route can be recorded.
- Sufficient distance is maintained between the vehicle and surrounding objects as the parking procedure is being recorded.

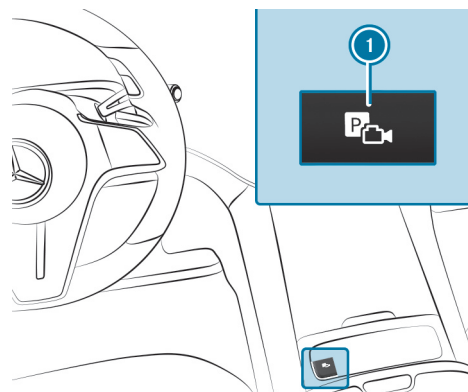


i Depending on the vehicle's equipment, the button **1** may also be located in a different position on the center console.

- ▶ Press the button **1**.

The [Camera & Parking](#) view opens on the central display.



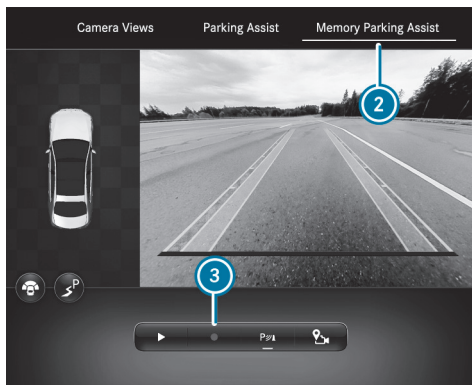

- ▶ Select the menu **Memory Parking Assist** ②.
- ▶ Brake the vehicle to a standstill at the desired starting point of the assisted parking procedure, e.g. a driveway entrance.
- ▶ **To start recording:** tap ③.

① If not all conditions for a recording are met, the symbol ③ is grayed out.

- ▶ To start the recording, press the button ①.
- ▶ Park the vehicle in the desired parking space. Do not exceed a speed of 5 mph (8 km/h).
- ▶ **To stop recording:** stop the vehicle and tap ③ again.
The recording is stored.


It is also possible to record the unparking procedure using the same method with Memory Parking Assist. Refer to the information on the central display.

① In the Memory Parking Assist settings you can delete and rename stored parking procedures.

PARKING WITH MEMORY PARKING ASSIST


Requirements:

- A parking procedure has been recorded.

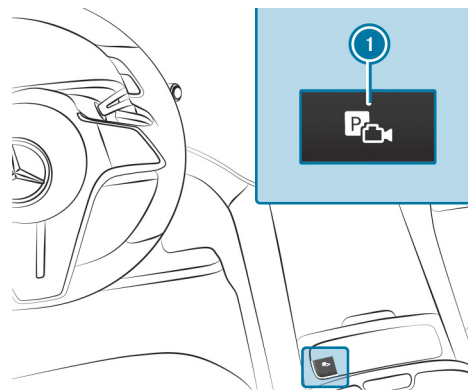

① Depending on the vehicle's equipment, the button ① may also be located in a different position on the center console.

- ▶ Press the button ①.
The **Camera & Parking** view opens on the central display.





- ▶ Select the **Memory Parking Assist** ② menu.
- ▶ Brake the vehicle to a standstill at the starting point of the stored parking procedure.
- ▶ **To start the parking procedure:** press .
- ▶ Select the stored parking procedure from the list.
- ▶ Follow the instructions on the central display.
The vehicle drives into the selected parking space.


 The turn signal indicator is not switched on automatically. You are responsible for selecting the turn signal indicator in accordance with the traffic conditions.

- ▶ Following completion of the parking procedure, secure the vehicle against rolling away.

EXITING A PARKING SPACE WITH MEMORY PARKING ASSIST


Requirements:

- The unparking procedure was recorded together with the corresponding parking procedure and stored separately, without switching off the vehicle in between.
- The vehicle was parked using Memory Parking Assist.
Alternatively, manually position the vehicle at the starting point of the recorded unparking procedure.

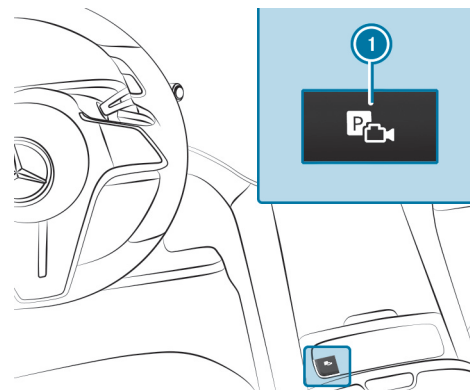

 Depending on the vehicle's equipment, the button ① may also be located in a different position on the center console.

- ▶ Press the button ①.
The **Camera & Parking** view opens on the central display.





- ▶ Select the menu **Memory Parking Assist** ②.

STARTING THE UNPARKING PROCEDURE

- ▶ Press .
- ▶ Confirm the saved unparking procedure.
- ▶ Follow the instructions on the central display.
The vehicle drives the recorded route.

① The turn signal indicator is not switched on automatically. You are responsible for selecting the turn signal indicator in accordance with the traffic conditions.

- ▶ Take control of the vehicle after the unparking procedure has been completed.

SETTING MEMORY PARKING ASSIST

Multimedia system:

- ▶  ▶ Settings ▶ Assistance ▶ Parking ▶ Memory Parking Assist

RENAMING A RECORDING

- ▶ Select **Memory Parking Assist**.
- ▶ Select  next to the desired recording.
- ▶ Enter a name and confirm with **OK**.


DELETING A RECORDING

- ▶ Select **Memory Parking Assist**.
- ▶ Select  next to the desired recording.
The selected recording will be deleted.

DELETING ALL RECORDINGS

- ▶ Select **Memory Parking Assist**.
- ▶ Select **Delete All Tracks**.

① Alternatively, you can delete all data in Memory Parking Assist by resetting the multimedia system (→ page 527).





< Vehicle towing instructions

The vehicle is not suitable for the use of tow bar systems that are used for flat towing or dinghy towing, for example. Attaching and using tow bar systems may result in damage to the vehicle. When you are towing a vehicle with tow bar systems, safe driving characteristics cannot be guaranteed for the towing vehicle or the towed vehicle. The vehicle-trailer combination may swerve from side to side.

OBSERVE THE FOLLOWING INFORMATION:

- Permitted towing methods (→ page 685)
- The notes on towing the vehicle with both axles on the ground (→ page 62)





< Driver display

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Notes on the driver display	>	Overview of status indicators on the driver display	>
Notes on the range	>	Overview of status indicators on the driver display (Mercedes-AMG vehicles)	>
Driver display malfunction	>		
Operating the driver display	>		
Driver display menus	>		
Head-up Display	>		
Function of the power availability display	>		



< Notes on the driver display

WARNING

Risk of accident if the driver display malfunctions

if the driver display is inoperative or its functions are restricted, you will not receive information about such issues as other function restrictions, speed, current drive range and the status of the electric parking brake.

This will impair operating safety.

- ▶ Stop the vehicle immediately in accordance with the traffic conditions and switch it off. Do not continue driving.
- ▶ Consult a qualified specialist workshop.
- ▶ Have the vehicle transported rather than towed.

If the operating safety of your vehicle is impaired, park the vehicle immediately and safely. Contact a qualified specialist workshop.


THE DRIVER DISPLAY SHOWS THE FOLLOWING BASIC INFORMATION:

- Speed and power meter level
- Range according to average consumption, personal driving style or high-consumption driving style
- State of charge of the high-voltage battery
- Indicator and warning lamps

ADDITIONAL FUNCTIONS AVAILABLE INCLUDE THE FOLLOWING:

- Various menus, such as [Assistance](#) and [Navigation](#)
- Status indicators for the driving systems
- Display messages

Some menu content and settings can be changed (→ page 456).





< Notes on the range

THE RANGE IN GENERAL

- All ranges shown are assumptions based on various calculation bases. The actual range achieved may differ from the range displayed.
- Outside temperatures, climate control settings, vehicle interior temperatures, road conditions, driving style etc. directly influence the achievable range.
- Pay attention to the charging prompts at all times.

RANGE ACCORDING TO PERSONAL DRIVING STYLE

- Your previous personal consumption will be taken into account when the range is being calculated.
- While the navigation system or commuter route is active, additional information about the route ahead can be included in the range calculation.

RANGE WITH LOW CONSUMPTION

- The maximum range shows the potential range when consumption is low, e.g. as a result of economical driving or having the air conditioning system turned off.


RANGE WITH HIGH CONSUMPTION

- The minimum range shows the range when consumption is high, e.g. as a result of a sporty driving style or having the air conditioning system turned on.
- This range is determined based on past and current consumption figures.

ELECTRICAL CONSUMPTION

- The [From Start](#) and [From Reset](#) consumption figures take into account all active consumer equipment when it comes to the drive system's operational readiness READY.

 If the range maximization function is switched on, the range on the speedometer may increase depending on the potential range (→ page 314).





< Driver display malfunction

WARNING

Risk of accident if the driver display malfunctions

if the driver display is inoperative or its functions are restricted, you will not receive information about such issues as other function restrictions, speed, current drive range and the status of the electric parking brake.

This will impair operating safety.

- ▶ Stop the vehicle immediately in accordance with the traffic conditions and switch it off. Do not continue driving.
- ▶ Consult a qualified specialist workshop.
- ▶ Have the vehicle transported rather than towed.

Identifying a driver display malfunction

A DRIVER DISPLAY MALFUNCTION CAN BE IDENTIFIED BY CHARACTERISTICS SUCH AS THE FOLLOWING:

- When the vehicle is switched on, the driver display continues to show nothing but a black screen.
- The driver display restarts.
- The content freezes.
- The display stops showing data such as speed. Various indicator and warning lamps are also displayed.

What to do in the event of a driver display malfunction

If the driver display is inoperative or its functions are restricted, stop the vehicle immediately in accordance with the traffic conditions and switch it off. The following procedure is recommended in this eventuality:

- ▶ Stop the vehicle in accordance with the traffic conditions.
- ▶ While the vehicle is stationary, continue to hold the brake pedal down.
- ▶ Press the  button on the DIRECT SELECT lever.
- ▶ Apply the parking brake.
- ▶ Slowly release the brake pedal and make sure that the vehicle is secured against rolling away.
- ▶ Press and hold the start/stop button (→ page 350) once for roughly three seconds to switch off the drive system.
- ▶ Contact a qualified specialist workshop immediately.
- ▶ Have the vehicle transported rather than towed.

 In addition, note the additional information about switching off the vehicle (→ page 350) and the notes on transporting the vehicle (→ page 688).



< Operating the driver display

⚠️ WARNING


Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.


Observe the legal requirements for the country in which you are currently driving when operating the driver display.

SCROLLING ON THE MENU BAR

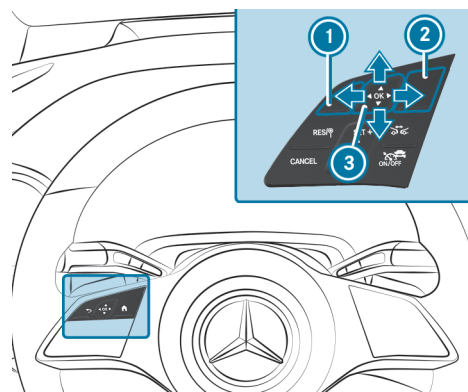

- ① Back button
- ② Main menu button
- ③ Touch Control



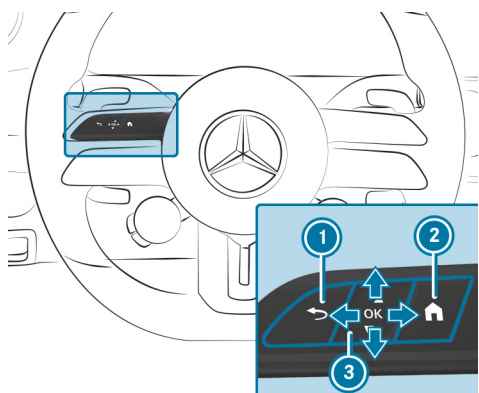

Mercedes-AMG vehicles


- ① Back button
- ② Main menu button
- ③ Touch Control

The controls on the left of the steering wheel manage the content of the driver display. Swipe with your finger on Touch Control ③ to navigate vertically or horizontally through the content. Press the Touch Control to confirm your selection.

❗ Use the tip of your thumb to operate Touch Control ③ in the most effective way. Set the sensitivity of the Touch Control on the central display (→ page 497).

- ▶ Briefly press main menu button ②.
- ▶ Select a menu by swiping to the left or right on Touch Control ③.
- ▶ **To confirm:** press Touch Control ③.

You can watch an animation on this topic via the following link:





< Driver display menus

Notes on menus on the driver display

WARNING

Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the driver display.

THE FOLLOWING MENUS CAN BE CALLED UP VIA THE MENU BAR ON THE DRIVER DISPLAY:


- [Understated](#)
- [Sport](#)
- [Classic](#)
- [Navigation](#)
- [Assistance](#)

- [Service](#)
- Mercedes-AMG vehicles: [Supersport](#)
- Mercedes-AMG vehicles: [TRACK PACE](#)

On some of the menus, you can choose between different display content in the center display area.

On most of the menus, you can use [Options](#) to configure further settings for the menu-specific display content.


You can watch an animation on this topic via the following link:





Calling up and operating menus on the driver display

CALLING UP A MENU ON THE DRIVER DISPLAY

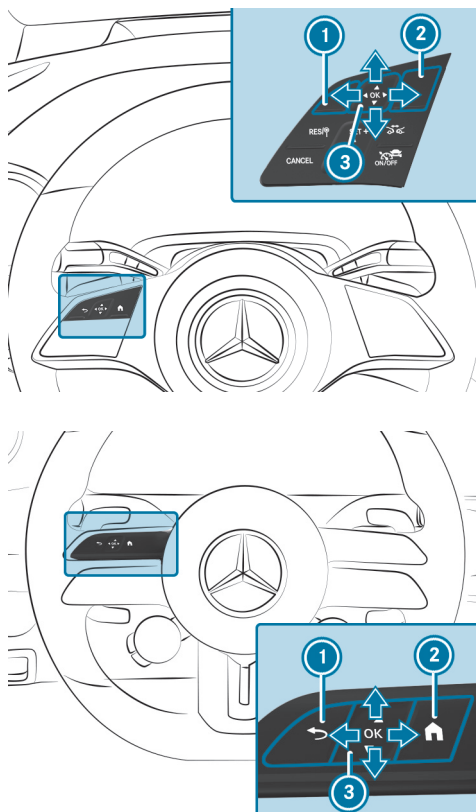

Mercedes-AMG vehicles

① Back button

② Main menu button

③ Touch Control

▶ Press main menu button ② on the steering wheel.

The menu bar will be shown in the lower area of the driver display.




Mercedes-AMG vehicles

▶ Swipe to the left or right on Touch Control ③ and select a menu (e.g. the **Classic** menu) on the menu bar.

▶ **To confirm:** press Touch Control ③.

BROWSING THROUGH DISPLAY CONTENT OR LISTS

▶ Swipe vertically or horizontally on Touch Control ③.





- i** On some menus, an index character will be displayed at the right edge of the center display content to indicate how the information has been sorted.

PRESETTING DISPLAYS

You can preset individually configured information of a menu and thus determine the standard display.

- ▶ Press Touch Control **3** until the bar is completely filled.
Answer the [Set Shortcut?](#) query as follows.
- ▶ Swipe to the left on Touch Control **3** and select [Yes](#).
- ▶ **To confirm:** press Touch Control **3**.
- ▶ **To call up presets:** press the back button **1** on the upper level of a menu.

- i** Pressing back button **1** on the standard display will open the previous menu.

CALLING UP OR EXITING THE OPTIONS SUBMENU

Depending on the information in the center display content, you can configure various settings on the [Options](#) submenu.

- ▶ **To call up the Options submenu and confirm a selection:** press Touch Control **3**.
- ▶ **To leave the Options submenu:** press Touch Control **1**.

THE FOLLOWING FUNCTIONS MAY BE AVAILABLE ON THE [OPTIONS](#) SUBMENU, FOR EXAMPLE:

- Navigation: selecting and adjusting zoom, route guidance and map settings
- Understated: selecting the color selection
- Classic: resetting the trip odometer
- Classic: resetting the trip computer [From Start](#)
- Classic: resetting the trip computer [From Reset](#)
- Classic: resetting the ECO display values


Calling up the Classic or Understated menu

Driver display:



INFORMATION FOR SELECTING THE CENTER DISPLAY CONTENT

The [Classic](#) menu shows the driver display separated into speedometer and power availability display. The area in between can be filled with various types of information.

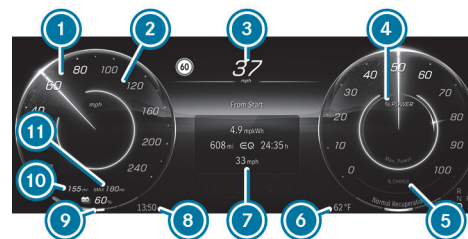

- 1** Speedometer
- 2** Recommended maximum speed when range monitoring and route guidance are active
- 3** Digital speedometer



- ④ Display area for output
- ⑤ Display area for recuperated power (recuperation)
- ⑥ Outside temperature
- ⑦ Center display content (example: trip computer)
- ⑧ Time
- ⑨ State of charge indicator
- ⑩ Range according to personal driving style (→ page 451)
- ⑪ Range when consumption is low (→ page 451)

THE FOLLOWING INFORMATION CAN BE SHOWN IN THE CENTER DISPLAY CONTENT ⑦:

- Trip and total distance
- Distance [From Start](#) and [From Reset](#)
- ECO display
- Range trend display
- Current consumption
- ATTENTION ASSIST
- Audio
- Navigation (with changing navigation instructions)

THE FOLLOWING VALUES WILL BE DISPLAYED FOR TRIP COMPUTER ⑦:

- Distance covered in electric mode
 - Electric energy consumption
 - Driving time
 - Average speed
- Swipe upwards or downwards on the Touch Control and select the display content.

OBSERVE THE FOLLOWING NOTES ON THE [CLASSIC](#) MENU:

- Recommended maximum speed ② ensures that the destination is reached with active route guidance. The state of charge that is desired and entered will be taken into account. If it becomes necessary to limit the vehicle's speed to reach the destination safely with the specified state of charge, the recommended maximum speed will be displayed on the speedometer. A message will also appear on the driver display. Please note that despite recommended maximum speed ②, the maximum permissible speed must not be exceeded.
- Display ⑤ will change when intelligent recuperation is activated (→ page 311).

CHANGING THE RADIO STATION OR TRACK ON THE STATION OR TRACK LIST

You can change radio stations or tracks on the station or track list in the center display content with audio information.

THE FOLLOWING WILL BE ADJUSTED IN THE MBUX MULTIMEDIA SYSTEM:

- Configuring the radio station and track lists.
- Switching between tracks
- Setting the frequency band



① Track list in the center display content (example)



- ▶ **To change radio stations or tracks:** swipe left or right on the Touch Control and select a radio station or track on the station or track list .

 The radio station or track displayed when the vehicle is restarted depends on the user profile used for the previous trip.

THE FOLLOWING FUNCTIONS MAY BE AVAILABLE ON THE **OPTIONS** SUB-MENU, FOR EXAMPLE:

- Navigation: selecting and adjusting zoom, route guidance and map settings
- Resetting the trip odometer
- Resetting the trip computer [From Start](#)
- Resetting the trip computer [From Reset](#)
- Resetting the ECO display values

CHANGING COLOR SETTINGS ON THE **UNDERSTATED** MENU

- ▶ Call up the [Understated](#) menu via the driver display menu bar.
- ▶ **To call up the color list:** press the Touch Control.
- ▶ **To select color settings:** swipe upwards or downwards on the left-hand Touch Control and select the color setting.
- ▶ Press the Touch Control to confirm.
- ▶ **To exit the color list:** press the back button .

 Depending on the equipment, the selected color adjustment will be adopted for the ambient lighting and the MBUX multimedia system. When you select the [Understated](#) menu on the driver

display, the content in the MBUX multimedia system will also be reduced.

Calling up the Service menu

Driver display:



The current status of the vehicle is shown on the [Service](#) menu.

- ▶ **To call up the menu:** press the Touch Control.

THE FOLLOWING DISPLAY CONTENT IS AVAILABLE ON THE **SERVICE** MENU (EQUIPMENT-DEPENDENT):

- Information about how many messages are in the message memory
- [Tire Pressure](#):
 - Checking the tire pressure with the tire pressure monitoring system (→ page 706)
 - Restarting the tire pressure monitoring system (→ page 707)
- [ASSYST PLUS](#): calling up the service due date (→ page 653)
- **Mercedes-AMG vehicles:** temperature display (high-voltage battery, front and rear high-voltage motors)

THE FOLLOWING FUNCTIONS ARE AVAILABLE ON THE **OPTIONS** SUBMENU:

- Tire pressure (→ page 706)
- Message memory (→ page 812)





Calling up the Assistance menu

Driver display:



The Assistance menu displays various driver assistance systems and navigation instructions.

- ▶ **To call up the display:** select [Assistance](#) on the driver display.
- ▶ Press the Touch Control.



Active Distance Assist DISTRONIC indicator on the assistant display (example)

THE FOLLOWING DISPLAYS MAY VARY DEPENDING ON THE DRIVING SITUATION:

- The navigation instructions in the left-hand display section
- The traffic light view in the right-hand display section
- The display of the driver assistance systems
- The level of detail on the assistant display

THE FOLLOWING STATUS DISPLAYS ARE AVAILABLE ON THE ASSISTANT DISPLAY:

- Green: pedestrian detection active

- Gray: pedestrian detection enabled but no pedestrians detected
- Green radar waves next to vehicle: Active Blind Spot Assist is enabled and ready for operation
- Gray radar waves next to vehicle: Active Blind Spot Assist is enabled but not ready for operation

THE CONTENT ON THE ASSISTANT DISPLAY WILL ADAPT TO THE FOLLOWING SITUATIONS:

- Number of lanes detected
- Change of direction, e.g. lane change
- Current road conditions
- Road users detected

The assistant display will not show other detected obstacles with the exception of road users.

THE FOLLOWING FUNCTIONS ARE AVAILABLE ON THE [OPTIONS](#) SUBMENU:

- Starting route guidance
- With active route guidance: end route guidance
- Call up previous destinations and favourites
- Start new route guidance to a recent destination
- Start new route guidance to a favourite





Calling up the Supersport menu

Requirements:

- For Mercedes-AMG vehicles only.

Driver display:



- ▶ **To call up the menu:** press the Touch Control.
- ▶ **To select:** Swipe upwards or downwards on the Touch Control and select the display content.



- ① Display area for output
- ② Center display content (example: power display)
- ③ Display area for recuperated power (recuperation)

i The displays for output ① and recuperated power ③ are given either as percentages or as absolute values.

CENTER DISPLAY CONTENT ② OF THE SUPERSPORT MENU SHOWS THE FOLLOWING CONTENT:

- Power display (electric drive support)

- Temperature display (high-voltage battery and front and rear high-voltage motors)
- Set-up (drive, AMG DYNAMICS, suspension and sound)
- G-force
- Trip and total distance
- Distance [From Start](#) and [From Reset](#)
- Current consumption
- Audio
- Navigation

i The AMG-specific content for temperature, engine data and set-up depends on the vehicle equipment. You can configure the set-up display content either using the buttons on the multifunction steering wheel or via the MBUX multimedia system (→ page 322).

DEPENDING ON THE SELECTED CENTER DISPLAY CONTENT ②, THE FOLLOWING WILL BE DISPLAYED IN THE OUTER AREA OF THE MENU:

- Power display as a percentage
- Current engine output and current torque

Calling up the Track Pace menu

Requirements:

- For Mercedes-AMG vehicles only.






Driver display:



The Track Pace function is intended only for closed race tracks. Do not use this function on public roads, and adapt your driving style to your personal capabilities and the ambient conditions.

THE FOLLOWING OPTIONS WILL BE DISPLAYED ON THE TRACK PACE MENU:

- G-meter
- Race track selected
- Braking and acceleration procedure
- Gear currently selected

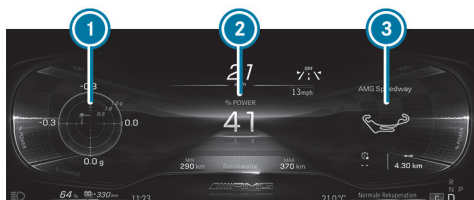

Indicators on the Track Pace menu (example)

- ① G-meter
- ② Center display content (example: electric drive support display)
- ③ Telemetry display (example: selected race track)

► **To call up the menu:** press the Touch Control.

THE DISPLAY CONTENT OF THE TRACK PACE MENU WILL ADAPT TO THE SELECTED SETTINGS ON THE CENTRAL DISPLAY:

- Gear display
- Electric drive support display

- Recuperated power display
- G-meter
- Braking points
- Acceleration
- Quarter-miles
- Race track selected on the central display
- Current race
- Record route

While the vehicle is in motion, the G-meter will show the forces that are exerted on the vehicle occupants both laterally and in the direction of travel. The maximum values will appear in red in the coordinate system.


Calling up the Sport menu

Driver display:



The Sport menu shows information about electric mode.

► **To call up the menu:** press the Touch Control.

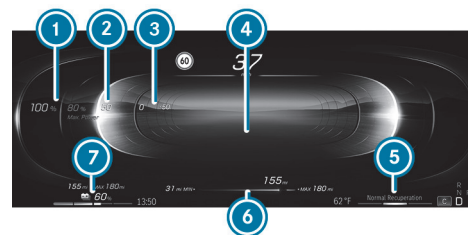


- ① Maximum available output
- ② Current output



- ③ Recuperative braking
- ④ G-force display
- ⑤ Selected recuperation level
- ⑥ Range trend display
- ⑦ State of charge of the high-voltage battery

The range indicator on the driver display will vary depending on the menu selected.

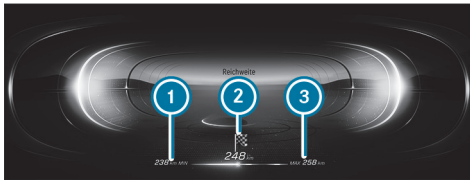

Display content for range

- ① Range when consumption is high (→ page 451)
- ② Range according to personal driving style (→ page 451)
- ③ Range when consumption is low (→ page 451)

Calling up the Navigation menu

Driver display:



The [Navigation](#) menu shows the relevant map with navigation instructions.

- **To call up the menu:** press the Touch Control.

CHANGING THE SCALE OF THE SELECTED MAP VIEW



- ① Distance to the change of direction
- ② Road to which the change of direction leads
- ③ Traffic incident indicator
- ④ Currently selected route
- ⑤ Indicator showing vehicle's current position
- ⑥ Change-of-direction symbol
- ⑦ Recommended lane (white)
- ⑧ Lane not recommended (gray)
- ⑨ Current lane

i The level of detail in the navigation instructions in the left-hand display section may vary.

- **To zoom in and out on the map directly:** swipe upwards or downwards on the Touch Control.

i If you do not operate anything in Autozoom, the system will reset the scale of the map view already selected after a short time. You can set the map scale permanently in the MBUX multimedia system (→ page 575).

**THE FOLLOWING FUNCTIONS ARE AVAILABLE ON THE [OPTIONS](#) SUBMENU:**

- With active route guidance: end route guidance
- Select route guidance
- [Map Settings](#)

 If the current route guidance is ended on the [Navigation](#) menu of the driver display, it will also be ended in the MBUX multimedia system.

On the [Options](#) submenu, you can use other functions in the [Destinations](#) and [Map Settings](#) categories.

YOU CAN USE THE FOLLOWING FUNCTIONS IN THE [DESTINATIONS](#) CATEGORY:

- Call up previous destinations and favourites
- Start new route guidance to a favourite

 The two options [Work](#) and [Home](#) will be displayed in [Favorites](#) even if no address is stored.

YOU CAN USE THE FOLLOWING FUNCTIONS IN THE [MAP SETTINGS](#) CATEGORY:

- Activate auto zoom
- Set the map view, satellite view and route overview.

THE FOLLOWING MAP VIEWS ARE AVAILABLE ON THE [NAVIGATION](#) MENU:

- Entire route
- 2D direction of travel
- 2D north-up
- 3D map

 There is an additional navigation view on the front passenger display. The front passenger can thus assist the driver with route guidance (→ page 563).





< Head-up Display


Function of the head-up display

The head-up display projects various content into the driver's field of vision, for example.

YOU CAN USE THE HEAD-UP DISPLAY MENU BAR TO SELECT DIFFERENT CONTEXTS, E.G.:


- **Mercedes-AMG vehicles:** [Supersport](#)
- **Mercedes-AMG vehicles:** [TRACK PACE](#)
- **Mercedes-AMG vehicles:** Race
- Minimal
- [Sport](#)
- [Standard](#)
- Settings
- Head-up display on/off

HEAD-UP DISPLAY CONTENT WITH NAVIGATION (9X3°)

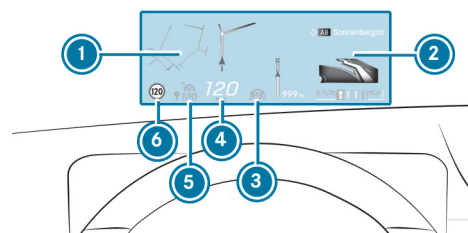


- ① Navigation instructions
- ② Navigation instructions (distance to the next route event)
- ③ Status of Active Steering Assist
- ④ Current speed
- ⑤ Set speed in the driving system (e.g. cruise control)
- ⑥ Detected traffic signs (Traffic Sign Assist)

When you receive a call, the  [Call Waiting](#) message will appear on the head-up display and the driver display.





HEAD-UP DISPLAY ON THE SUPERSPORT MENU (AMG VEHICLES)

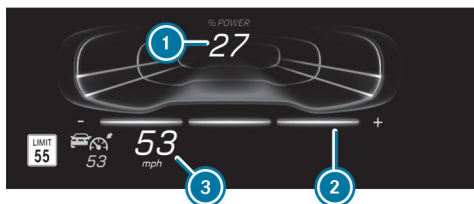

- ① Output obtained as a percentage
- ② Recuperation setting
- ③ Current speed, set speed in the driving system (e.g. cruise control), detected traffic signs (Traffic Sign Assist)

When you receive a call, the  **Call Waiting** message will appear on the head-up display and the driver display.

SYSTEM LIMITS

VISIBILITY IS INFLUENCED BY THE FOLLOWING CONDITIONS IN PARTICULAR:

- Seat position
- Image position setting
- Ambient light
- Wet road surfaces
- Objects on the display cover
- Polarisation in sunglasses

Operating the head-up display

SELECTING DISPLAY CONTENT OF THE HEAD-UP DISPLAY VIA THE MENU BAR OF THE DRIVER DISPLAY

- ▶ Press the main menu button .
- ▶ **To select the menu bar of the head-up display:** swipe upwards on the Touch Control.



SWITCHING BETWEEN DISPLAY CONTENT ON THE HEAD-UP DISPLAY

- ▶ Swipe to the left or right on the Touch Control.
A preview of the selected display content will appear on the head-up display.

- ▶ **To confirm:** press the  button.

SWITCHING BACK TO THE DRIVER DISPLAY

- ▶ Press the  or  button.

SETTING THE POSITION AND BRIGHTNESS

- ▶ Swipe to the left or right on the Touch Control and select **Settings** on the menu bar of the head-up display.
- ▶ Press the Touch Control.
The current position and brightness settings will be displayed as graphics on the head-up display as well as on the driver display.





- ▶ **To adjust the position:** swipe upwards or downwards on the Touch Control.
- ▶ **To adjust the brightness:** swipe to the left or right on the Touch Control.
The settings configured for position and brightness will be saved automatically.
- ▶ Press the  or  button to exit the settings.

Switching the head-up display on/off

Driver display:



SWITCHING ON

- ▶ Swipe upwards on the Touch Control.
- ▶ Press Touch Control .

SWITCHING OFF

- ▶ Swipe upwards on the Touch Control.
- ▶ Swipe on the Touch Control and select [Head-up Display](#).
- ▶ Press Touch Control .

Setting the head-up display in the multimedia system

Multimedia system:




SWITCHING THE HEAD-UP DISPLAY ON/OFF

- ▶ Select [Head-up Display](#).
The head-up display is activated or deactivated.





< Function of the power availability display

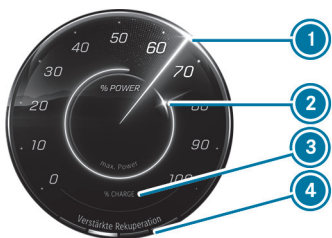

When the maximum regenerated power ③ has been reached, the additionally desired deceleration is set via the brake control system. Use the service brake for additional braking, if necessary.

- ① Current output
- ② Available power
- ③ Recovered energy (regeneration)
- ④ Set regeneration level

Maximum output is available in normal operating condition.

IN THE FOLLOWING CASES, THE AVAILABLE OUTPUT MAY DEVIATE FROM THE MAXIMUM VALUE:

- When the ambient temperatures are very high or low
- When there are very high output requests over an extended period of time
- When the state of charge of the high-voltage battery is very low
- When the drive system is malfunctioning


The values displayed serve only as orientation. The displayed output value may differ from the actual value.





< Overview of status indicators on the driver display

The status indicators for the driving and driving safety systems can be found in display sections ① to ④.

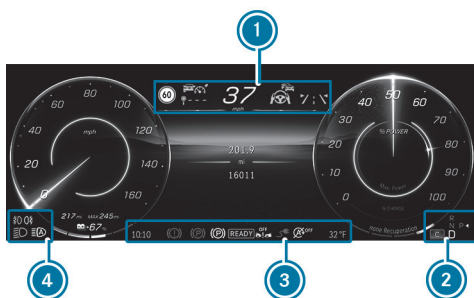

i The number, position and presentation of the status indicators on the driver display depend on which systems are activated or deactivated.

-  Cruise control (→ page 376)
-  Active Distance Assist DISTRONIC (→ page 379)
-  Specified distance for Active Distance Assist DISTRONIC (→ page 379)
-  Active Brake Assist switched off (→ page 402)
-  Active Brake Assist impaired or not functioning (→ page 402)
-  Active Steering Assist (→ page 388)
-  Active Lane Change Assist (→ page 392)
-  Active Lane Keeping Assist (→ page 410)
-  Active Blind Spot Assist (on assistant display only) (→ page 408)
-  Haptic accelerator pedal (→ page 314)
-  HOLD function (→ page 371)
-  Adaptive Highbeam Assist (→ page 263)
-  Adaptive Highbeam Assist Plus (→ page 265)
-  Active Stop-and-Go Assist (→ page 388)
-  Slippery road surface warning

-  Pedestrian detection (on assistant display only) (→ page 261)
-  Active Parking Assist is available (→ page 430)
-  Active Parking Assist has detected a parking space (→ page 430)
-  Parking Assist PARKTRONIC deactivated (→ page 428)



Vehicles with Traffic Sign Assist: detected instructions and traffic signs

(→ page 402)


Important information from other driving systems may briefly appear in front of the displayed traffic signs.





< Overview of status indicators on the driver display (Mercedes-AMG vehicles)

The status displays for the driving and driving safety systems in Mercedes-AMG vehicles can be found in display sections ① to ⑤.

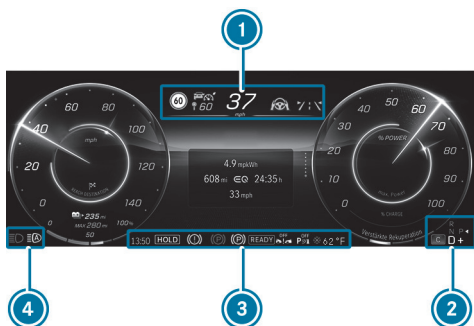

i The number, position and presentation of the status indicators on the driver display depend on which systems are activated or deactivated.

-  Cruise control (→ page 376)
-  Active Distance Assist DISTRONIC (→ page 379)
-  Specified distance for Active Distance Assist DISTRONIC (→ page 379)
-  Active Brake Assist switched off (→ page 402)
-  Active Brake Assist impaired or not functioning (→ page 402)
-  Active Steering Assist (→ page 388)
-  Active Lane Change Assist (→ page 392)
-  Active Lane Keeping Assist (→ page 410)
-  Active Blind Spot Assist (on assistant display only) (→ page 408)
-  HOLD function (→ page 371)
-  Adaptive Highbeam Assist (→ page 263)
-  Adaptive Highbeam Assist Plus (→ page 265)
-  Active Stop-and-Go Assist (→ page 388)
-  Slippery road surface warning
-  AMG RIDE CONTROL + (→ page 413)

-  Pedestrian detection (on assistant display only) (→ page 261)
-  Active Parking Assist is available (→ page 430)
-  Active Parking Assist has detected a parking space (→ page 430)
-  Parking Assist PARKTRONIC deactivated (→ page 428)



AMG Active Sound (→ page 315)



AMG DYNAMICS (→ page 319)

Vehicles with Traffic Sign Assist: detected instructions and traffic signs
(→ page 402)





◀ MBUX Voice Assistant

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Notes on operating safety >

Operation >

Using MBUX Voice Assistant effectively >

Essential voice commands >



< Notes on operating safety

FOR YOUR OWN SAFETY, ALWAYS OBSERVE THE FOLLOWING POINTS WHEN OPERATING MOBILE COMMUNICATIONS EQUIPMENT AND ESPECIALLY YOUR VOICE CONTROL SYSTEM:

- Observe the legal requirements for the country in which you are driving.
- If you use the voice control system in an emergency your voice can change and your telephone call, e.g. an emergency call, can thereby be delayed.
- Familiarize yourself with the voice control system functions before starting the journey.

 The voice control system does not replace the Operator's Manual.

The answers from the voice control system do not provide the complete scope of information contained in the Operator's Manual. The voice control system also does not give detailed warning or damage information. Therefore read the Operator's Manual so that you are fully informed about the functions and the safe operation of the vehicle.





< Operation

Function of the MBUX Voice Assistant

You can watch an animation on this topic via the following link:

Using the MBUX Voice Assistant, vehicle functions and various areas of the MBUX multimedia system can be operated by voice input, e.g. Navigation or Telephone. The MBUX Voice Assistant is operational about half a minute after switching on the vehicle and can be operated from all seats (depending on the special equipment).

Conducting a dialog

Requirements:

- Voice activation is activated in the multimedia system (→ page 476).
- For corrections during output, the [Speak During Voice Output](#) option must be activated in the multimedia system (→ page 476).

STARTING A DIALOG

- ▶ Say Hey Mercedes to activate the MBUX Voice Assistant.

or

- ▶ Press the  button on the multifunction steering wheel.
A wave appears in the MBUX multimedia system. The dialog can be started.

For the dialog with the MBUX Voice Assistant, you can use complete sentences of colloquial language as voice commands. Voice activation can also be combined directly with a voice command, e.g. Hey Mercedes, how warm is it outside?

INTERRUPTING THE DIALOG

- ▶ During the dialog say Pause.
The dialog is interrupted.
- ▶ Say Hey Mercedes to continue the dialog.

CORRECTING AN ENTRY

- ▶ During the dialog say Correction.

or

- ▶ Interrupt the system's voice output.

CHANGING DIALOG LEVEL

- ▶ During the dialog, say Back.
The MBUX Voice Assistant jumps back to the previous dialog step.
- ▶ During the dialog, say From the beginning again.
The MBUX Voice Assistant jumps to the highest dialog level.

NAVIGATING IN THE SELECTION LIST

If a voice command does not achieve a clear result, a selection list is shown.

- ▶ Say the line number or the content to select an entry or to have further details shown.





- ▶ Say Next page or Previous page to browse the selection list.

CALLING UP HELP

- ▶ **For information about the MBUX voice assistant:** say Hey Mercedes, what can you do? .
- ▶ **Current application:** say Help.
You will receive suggestions and information about operation of MBUX Voice Assistant for the current application.
- ▶ **Specific function:** call up the voice command for the required function, for example with Hey Mercedes, I need help with the radio.
- ▶ **Digital Operator's Manual:** say Show me the Operator's Manual.
The full extent of the Digital Operator's Manual is available on the central display when the vehicle is stationary.

Overview of the operable functions of the MBUX Voice Assistant

YOU CAN USE THE MBUX VOICE ASSISTANT TO OPERATE THE FOLLOWING FUNCTIONS DEPENDING ON THE VEHICLE EQUIPMENT:

- Telephone
- Text messages and e-mails
- Navigation
- Radio and media
- Vehicle functions
- Online functions

Full functionality of the voice control system is only available for you with activation of online voice control (→ page 476).

Information on the language setting

You can change the language of the MBUX Voice Assistant via the system language settings (→ page 522). If the set system language is not supported by the MBUX Voice Assistant, English will be selected.

Setting functions of MBUX Voice Assistant using the multimedia system

Multimedia system:



SWITCHING VOICE ACTIVATION OF MBUX VOICE ASSISTANT ON OR OFF

- ▶ Select [Hey Mercedes](#).
When the function is active, the Hey Mercedes voice command can activate the dialog.

SWITCHING DIRECT COMMANDS ON OR OFF

- ▶ Select .
- ▶ Activate or deactivate the function.
If the function is active, some commands can be used without Hey Mercedes, for example Next track.

SWITCHING VOICE ACTIVATION FOR INDIVIDUAL SEATS ON OR OFF

- ▶ Select .
- ▶ Switch the function for the desired seats on or off.

SWITCHING VOICE INTERRUPTION ON OR OFF

- ▶ Select [More Settings](#).





- ▶ Select [Speak During Voice Output](#).

If the function is active, a command can be interjected during voice output of the system.

SWITCHING PROACTIVITY ON OR OFF

- ▶ Select [More Settings](#).
- ▶ Select the desired situation, e.g. [Profile Activation](#) or [Don't Forget Your Phone](#).

When the function is active, the voice assistant proactively provides information in specific situations.

ACTIVATING OR DEACTIVATING ONLINE VOICE CONTROL

 Online voice control is activated at the factory.

- ▶ Select [Online Voice Control](#).
- ▶ Activate or deactivate the function.

If the function is activated and a Mercedes me user account is linked to the vehicle, additional results are available through the provision of external information, e.g. information on POIs. By clicking the symbol in the wave, more information about the online voice control can be displayed.

ACTIVATING OR DEACTIVATING CONTACTS FOR ONLINE USE

- ▶ Select [Contacts for Online Use](#).

When the function is active, contacts will be found more easily and accurately using voice input.





< Using MBUX Voice Assistant effectively

Notes on optimum use of MBUX Voice Assistant

- The MBUX Voice Assistant is operational half a minute after switching on the vehicle and can be operated from all seats, depending on the equipment installed. The system recognizes from which seat the command was spoken and performs actions according to the seat position.
- When a dialog is ended, the MBUX Voice Assistant continues to be active for as long as the wave is displayed in the multimedia system. You can say another voice command without saying **Hey Mercedes**.
- Using the direct command **Change language to English**, the system language can be changed to English without **Hey Mercedes**. Direct commands must be activated for this.
- If a user profile has been stored and is active, the MBUX Voice Assistant can make suggestions based on the habits of the user. If the voice commands are not clear, the system selects an action. The action can be corrected with a new voice command.

Say **Hey Mercedes**, load my personal profile, to activate the profile. The user's voice must first be learned by the system and assigned to a profile.

Further information on user profiles (→ page 501).

- With the MBUX Voice Assistant, incoming calls can be accepted or rejected without the keyword **Hey Mercedes**.

Information on the MBUX online voice assistant

The online voice control facilitates recognition and thanks to external information makes additional results available.

Therefore, Mercedes-Benz recommends that you activate online voice control (→ page 476).

You will need a Mercedes me user account for this. If you do not yet have a user account you have to create one and connect it with your vehicle (→ page 501).

Then call up your Mercedes me user account. The Mercedes me services are shown and can be activated (→ page 503).

By clicking on the symbols displayed in the wave, further information on the online status is displayed.

WHEN ONLINE VOICE CONTROL IS ACTIVE, ADDITIONAL FUNCTIONS ARE AVAILABLE SUCH AS:

- Weather
- General knowledge
- Public holidays and school holidays
- Smarthome
- Messages
- Time, date and time zones





- Pocket and currency calculator
- Football results and fixture lists
- Share prices
- Calendar
- ChitChat
- Horoscope
- Geo Quiz

ⓘ The availability of these functions is country and equipment-dependent.

ⓘ Text content is taken from Wikipedia in accordance with the CC BY-SA 3.0 license.





< Essential voice commands

Notes on voice commands

It is not necessary to use exact voice commands to call up a specific function. The MBUX Voice Assistant also understands you when you use your colloquial speech. Some examples are listed below. For some languages however these examples are only available to a limited extent.

EXAMPLES OF VOICE COMMANDS:

- Navigation (→ page 480)
- Telephone (→ page 480)
- Radio and TV (→ page 481)
- Media player (→ page 481)
- Messages (→ page 481)
- Vehicle functions (→ page 481)
- Online functions (→ page 482)

Examples of navigation voice commands

You can operate the navigation system using the MBUX Voice Assistant. The following list offers just a small selection of the possible navigation commands. You will receive additional suggestions if you say **Help** for navigation.

- Drive me home.
- Where is the nearest service station?
- Is there a service area along the route?

- Set Covent Garden as intermediate destination.
- Cancel the route guidance.
- Show my last destination.
- I want to buy juice.
- Search for an Asian restaurant, but not Japanese, in South London.

Examples of telephone voice commands

You can operate phones connected with MBUX multimedia system the using the MBUX Voice Assistant. The following list offers just a small selection of the possible telephone commands. You will receive additional suggestions if you say **Help** for phone.

- Call Peter Miller on the mobile phone.
- Dial 0711 17 0.
- Call my father.
- Accept call
- Reject call
- Search for the contact Peter Miller.
- Switch to address book
- Show me the incoming calls.
- Switch the phone





Examples of radio and TV voice commands

Depending on the vehicle equipment, you can operate the radio and TV using the MBUX Voice Assistant. The following list offers just a small selection of the possible radio or TV voice commands. You will receive additional suggestions if you say **Help** for radio or **Help** for TV.

- Play the radio station Heart FM.
- Next station.
- Previous station.
- Show me the list of radio stations
- Save the station
- What am I listening to?

Examples of media voice commands

You can operate connected media sources and online music using the MBUX Voice Assistant. The following list offers just a small selection of the possible media voice commands. You will receive additional suggestions if you say **Help** for media or **Help** for player.

- Play Michael Jackson.
- Play "Yellow Submarine" by the Beatles.
- Next track.
- Previous track.
- Play similar track.
- Repeat this track.
- Switch on random playback.
- Mute the music.
- Switch to USB.

Examples of message voice commands

Messages can be created, edited and listened to using the MBUX Voice Assistant. The following list offers just a small selection of the possible message commands. You will receive additional suggestions if you say **Help** for messaging.

- Write a text message to Jane Doe: When will the next meeting take place?
- Show me my new e-mails.
- Write an e-mail to Jane Doe.
- Read me my new text messages.
- Show all new text messages.
- Write an e-mail to John Doe in English

Examples of vehicle voice commands

You can operate vehicle settings and vehicle functions using the MBUX Voice Assistant. The following list offers just a small selection of the possible vehicle voice commands.

 If no seat is mentioned for commands, the action is carried out automatically for the seat from which the command was spoken or for the function which is closest to that seat.

- Switch the seat heating to level 2.
- My feet are cold.
- Start the Refresh program.
- Switch the massage function on.
- I would like to set the ambient light to blue
- Switch on the reading lamp.





- Open all the windows.
- Tell me my next service appointment
- How warm is it outside?
- Show me the charging options
- Select the Home charging program.
- Set the charging limit to 80%.
- To what percentage will the battery be charged?
- Set my weekend departure time for 10 a.m..
- With how many kilowatts will the battery be charged?
- How much longer do I have to charge?

INFORMATION ABOUT THE VEHICLE CAN ALSO BE REQUESTED:

- Information about individual items of the vehicle equipment
 - Hey Mercedes, which massage programs do you have?
 - Hey Mercedes, do I have Blind Spot Assist?
 - Hey Mercedes, where is the warning triangle?
- Information about functioning of the systems and components installed in the vehicle
 - Hey Mercedes, what is DISTRONIC?
 - Hey Mercedes, what do I need ESP for?
 - Hey Mercedes, what is MBUX?
- Information about operating the systems and components installed in the vehicle
 - Hey Mercedes, how do I connect my smartphone?
 - Hey Mercedes, how can I turn on the high beam headlights?
 - Hey Mercedes, how do I stop the ionization function?

Examples of online functions

Depending on the country, language and vehicle equipment, additional functions are available when online voice control is active. The system accesses external information and can, as a result, answer general knowledge questions and make calculations, for example.

- Is the sun shining in Manchester?
- Is it raining at my destination?
- What are the skiing conditions on the Zugspitze?
- What's the time in Sydney now?
- In which country do you pay with dollars?
- How many Swiss francs make 25 euros?
- How long now until the holidays?
- What day is it tomorrow?
- What is 20 % of 29?
- What does my horoscope say?
- What is the price of Mercedes-Benz Group shares?
- Let's play Geo Quiz.
- I'm bored.
- Who is the current President?
- What do you know about the Globe Theatre in London?
- Who painted the picture "The Scream"?
- What's the status in the Premier League?
- Create a calendar entry tomorrow at 9 am.
- What's my next task?
- Tell me a joke.
- How many languages do you speak?
- What is your favorite animal?





- Are there any updates?
- Is the light still on in the kitchen?
- Switch off all the devices in my house.
- Please set the temperature in the living room to 24 degrees.
- Navigate home
- Listen to guidance instructions
- Cancel route guidance
- Change language to English

Direct command examples

With direct commands, some functions can be operated without first saying the voice command Hey Mercedes. To use direct commands, the function must be activated in the multimedia system (→ page 476).

- Next TV channel
- Previous TV channel
- Next radio station
- Previous radio station
- Next station
- Previous station
- Next track
- Previous track
- Start dashcam recording
- Stop dashcam recording
- Show the map
- Map 3D view
- Map 2D view
- Align map to north
- Align map in direction of travel
- Show all routes
- Show traffic
- Navigate to work





< MBUX multimedia system

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Overview and operation	>	Telephone	>
Driver camera	>	Online and Internet functions	>
System settings	>	Media	>
AMG TRACK PACE	>	Radio	>
Drive system settings	>	Sound	>
Fit & Healthy	>		
Navigation and traffic	>		



< Overview and operation

Overview of the MBUX multimedia system (Mercedes-AMG vehicles)

⚠ WARNING

Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.


! NOTE

Increased surface temperature due to direct sunlight on the central display/front passenger display

The surface of the display is very dark.

If the display is exposed to direct sunlight, the surface may heat up considerably.

- ▶ If the display has been exposed to direct sunlight, allow it to cool down before touching it for a longer period of time.

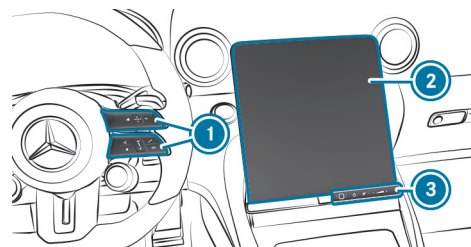

Example: Vehicles with central display


- ① Touch Control and control panel for the MBUX multimedia system
MBUX stands for Mercedes-Benz User Experience.
 - Operating Touch Control (→ page 496)
- ② Central display with touch functionality
 - Overview of the Zero Layer (→ page 491)
 - Calling up and operating the Zero Layer (→ page 493)



- Home screen overview (→ page 495)
- Operating the touchscreen (→ page 497)

③ Switch panel with:

-  Fingerprint sensor
-  Switches the MBUX multimedia system on or off, switches the central display off
-  Switches sound on or off
-  Adjusts the volume

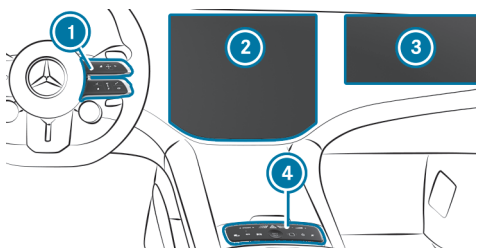

Example: Vehicles with MBUX Hyperscreen

① Touch Control and control panel for the MBUX multimedia system

- Operating Touch Control (→ page 496)

② Central display with touch functionality for the driver

- Overview of the Zero Layer (→ page 491)
- Calling up and operating the Zero Layer (→ page 493)
- Home screen overview (→ page 495)
- Operating the touchscreen (→ page 497)

③ Front passenger display with touch functionality

④ Switch panel with:

-  Fingerprint sensor
-  Switches the MBUX multimedia system on or off
-  Switches sound on or off
-  Adjusts the volume

 To connect the passenger's mobile phone to the MBUX multimedia system, a QR code is shown in front passenger display ③. If possible, the QR code should be scanned with the mobile phone when the vehicle is stationary, e.g. after entering the vehicle.


 Alternatively, the MBUX voice assistant allows voice dialog. Operation with natural speech starts after the wake-up call "Hey Mercedes" (→ page 475). You can start a voice navigation, for example, with the input of a 3 word address from what3words.

Numerous application, online services, services and apps are available for you.

In the zero layer, entertainment sources as well as telephone, active applications and suggestions are directly available to you. You can conveniently call up and add your favorites using the  button on the steering wheel. Quick-access in the home screen and in the applications serve to select functions more quickly.

If you use the learning function of the multimedia system, phone numbers dialed during operation, active massage program or vehicle functions are suggested to you. Suggestions are displayed on the zero layer based on context and your user behavior. The configuration of the suggestions is completed in the system settings. You can compile your user profile from various vehicle settings and settings of the multimedia system. Some functions and services are protected by a PIN. You can teach in biometric procedures to identify yourself with these instead of the four-digit Mercedes me PIN.

The Notifications Center collects incoming notifications, e.g. about an available software update. Depending on the type of notification it offers various actions. The call is made via the Control Center.





With the global search, you can search on the home screen via categories, e.g. in the navigation, and on the Internet.

ANTI-THEFT PROTECTION

This device is equipped with technical provisions to protect it against theft. Further information on anti-theft protection can be obtained at an authorized Mercedes-Benz Center.

FRONT PASSENGER DISPLAY (ONLY VEHICLES WITH MBUX HYPER-SCREEN)

WARNING

Risk of accident and injury due to distraction when the driver is looking at the front passenger display

If you look at the front passenger display while driving, you may be distracted from the traffic. This could also cause you to lose control of the vehicle. The front passenger display is intended exclusively for the front passenger.

- ▶ Keep the actual traffic situation constantly in view.
- ▶ Avoid looking at the front passenger display while driving.

The front passenger display is an additional touchscreen specifically for the front passenger.

REQUIREMENTS FOR DISPLAYING CONTENT ON THE FRONT PASSENGER DISPLAY WHILE DRIVING:

- The passenger is sitting on the passenger seat.
- The driver camera is switched on (→ page 517).

In the status line of the central display is shown as a  white symbol.

- The driver camera detects the driver's head and line of sight.

It displays content from the MBUX multimedia system independently of the central display. Depending on the application, operation is independent of the driver. Depending on the market, extended content, e.g. playback of media content, is also available while driving.

For the playback of certain content on the front passenger display, e.g. moving images, the pairing of Bluetooth® headphones is necessary.

If the driver keeps their eyes on the front passenger display for too long, content, e.g. moving images, will be hidden. An intelligent, camera-based blocking concept is used for this purpose.

WHEN THE VEHICLE IS PARKED, THE FRONT PASSENGER CAN USE THE FRONT PASSENGER DISPLAY UNDER THE FOLLOWING CONDITIONS:

- The passenger is sitting on the passenger seat.
- There is interaction with the MBUX multimedia system.

If the driver has left the vehicle briefly, e.g. to go shopping, the front passenger display can also be operated.

-  If no front passenger is present, a digital decorative image can be shown on the front passenger display (→ page 518).





Overview of the MBUX multimedia system

⚠ WARNING

Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.


! NOTE

Increased surface temperature due to direct sunlight on the central display/front passenger display

The surface of the display is very dark.

If the display is exposed to direct sunlight, the surface may heat up considerably.


- ▶ If the display has been exposed to direct sunlight, allow it to cool down before touching it for a longer period of time.

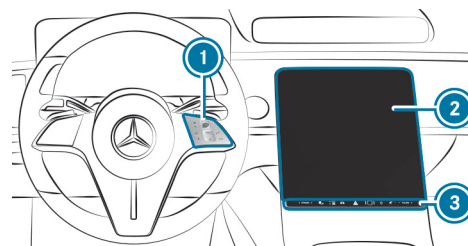

Vehicles with central display

- ① Touch Control and control panel for the MBUX multimedia system
MBUX stands for Mercedes-Benz User Experience.
 - Operating touch Control (→ page 496)
- ② Central display with touch functionality
 - Overview of the zero layer (→ page 491)
 - Calling up and operating the zero layer (→ page 493)
 - Home screen overview (→ page 495)
 - Operating the touchscreen (→ page 497)
- ③ Control panel for:
 - Fingerprint sensor
 - Switches the MBUX multimedia system on or off, switches the central display off
 - Switches sound on or off
 - Adjusts the volume



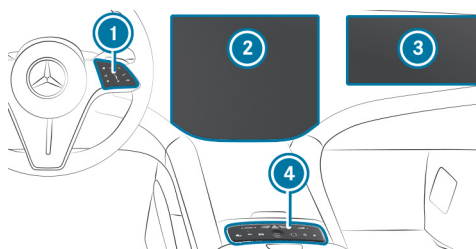

Vehicles with MBUX Hyperscreen

- ① Touch Control and control panel for the MBUX multimedia system
 - Operating Touch Control (→ page 496)
- ② Central display with touch functionality for the driver
 - Overview of the zero layer (→ page 491)
 - Calling up and operating the zero layer (→ page 493)
 - Home screen overview (→ page 495)
 - Operating the touchscreen (→ page 497)
- ③ Front passenger display with touch functionality
- ④ Control panel for:
 -  Fingerprint sensor
 -  Switches the MBUX multimedia system on or off, switches the central and front passenger displays on or off
 -  Switches sound on or off
 -  Adjusts the volume

 Various MBUX multimedia system apps offer the option of linking via QR code. Scan this QR code with your mobile phone before starting the journey.

 Alternatively, the MBUX Voice Assistant allows voice dialog. Operation with natural speech starts after the wake-up call "Hey

Mercedes" (→ page 475). You can start a voice navigation, for example.


Numerous application, online services, services and apps are available for you. These can be called up via the home screen.

In the zero layer, entertainment sources as well as telephone, active applications and suggestions are directly available to you. You can conveniently call up your favourites using the  button on the steering wheel. Quick-access in the home screen and in the applications serve to select functions more quickly.

If you use the learning function of the multimedia system, phone numbers dialled during operation, active massage program or vehicle functions are suggested to you, for example. Suggestions are displayed on the zero layer based on context and your user behaviour. The configuration of the suggestions is completed in the system settings. You can compile your user profile from various vehicle settings and settings of the multimedia system. Some functions and services are protected by a PIN. You can teach in biometric procedures to identify yourself with these instead of the four-digit Mercedes me PIN.

The Notification Center collects incoming notifications, e.g. about an available software update. Depending on the type of notification it offers various actions. The call is made via the Control Center.

With the global search, you can search on the home screen via categories, e.g. in the navigation, and on the internet.





FRONT PASSENGER DISPLAY (ONLY VEHICLES WITH MBUX HYPER-SCREEN)

WARNING

Risk of accident and injury due to distraction when the driver is looking at the front passenger display

If you look at the front passenger display while driving, you may be distracted from the traffic. This could also cause you to lose control of the vehicle. The front passenger display is intended exclusively for the front passenger.

- ▶ Keep the actual traffic situation constantly in view.
- ▶ Avoid looking at the front passenger display while driving.

The front passenger display is an additional touchscreen specifically for the front passenger.

REQUIREMENTS FOR DISPLAYING CONTENT ON THE FRONT PASSENGER DISPLAY WHILE DRIVING:

- The front passenger is sitting on the front passenger seat.
- The driver camera is switched on (→ page 517).
In the status line of the central display is shown as a  white symbol.
- The driver camera detects the driver's head and line of sight.

It displays content from the MBUX multimedia system independently of the central display. Depending on the application, operation is independent of the driver. Depending on the market, extended content, e.g. playback of media content, is also available while driving.

If the driver keeps their eyes on the front passenger display for too long, content, e.g. moving images, will be hidden. An intelligent, camera-based blocking concept is used for this purpose.



WHEN THE VEHICLE IS PARKED, THE FRONT PASSENGER CAN USE THE FRONT PASSENGER DISPLAY UNDER THE FOLLOWING CONDITIONS:

- The front passenger is sitting on the front passenger seat.
- There is interaction with the MBUX multimedia system.

If the driver has left the vehicle briefly, e.g. to go shopping, the front passenger display can also be operated.



If no front passenger is present, a digital decorative image can be shown on the front passenger display (→ page 518).


ANTI-THEFT PROTECTION

This device is equipped with technical provisions to protect it against theft. Further information on anti-theft protection can be obtained at an authorized Mercedes-Benz Center.

Zero layer

FUNCTION OF THE ZERO LAYER

The zero layer provides you with dynamic content from the MBUX multimedia system and is used to quickly access and control the applications you use. When you select  on the central display, the digital map with the applications appears in the lower display area. Compared to the home screen with a





classic menu, the steps required to call up the applications are reduced. You can switch between the zero layer and the home screen with a classic menu.

The applications can be hidden from the display area and shown again.

THE ZERO LAYER PROVIDES THE FOLLOWING MODULES AND APPLICATIONS:

- EQ module and navigation module
The EQ module is always shown on the digital map. In the expanded view, charging settings and navigation functions are offered.
- Entertainment (media, radio) and telephone
When the lower display area is shown, the entertainment sources are always displayed.
A mobile phone must be connected to the MBUX multimedia system for the phone to be displayed.
- Active applications
The lower display area shows an active message program, for example.
- Suggestions
Suggestions are displayed on the lower display area based on context and your user behavior. Here are a few examples:
 - Latest calls
 - Active message programs
 - Vehicle functions
 - Online voice applications
- Online voice applications
In the lower display area, context-dependent services that can be executed via voice are available for direct access.


The applications are first displayed in a reduced view. By tapping on them, you can operate them or open the associated menu (expanded view).

A long press on a suggestion opens a context menu in which further functions are available.

The learning function can be switched on and off for the options (→ page 523).

OVERVIEW OF THE ZERO LAYER

DIGITAL MAP AND USER-SPECIFIC APPLICATIONS (EXAMPLE)

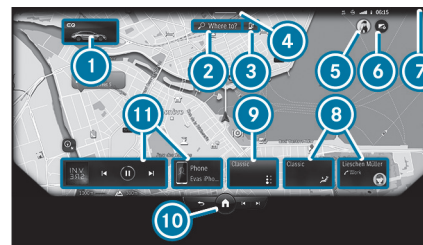

- ① EQ module (reduced view)
- ② Enters a destination (→ page 40)
- ③ Searches for a charging station
- ④ Calls up the Control Center: pull the bar down
- ⑤ Calls up user profile settings
- ⑥ Content sharing menu (→ page 509)
- ⑦ Status line
- ⑧ Suggestions
Requirement: suggestions are activated (→ page 523).
- ⑨ Active application, e.g. message program
- ⑩ 

Press briefly: displays all applications and the global search (→ page 493)
Press and hold: calls up the home screen with classic menu (→ page 495)



⑪ Entertainment sources (media, radio) and telephone

Requirement for phone: the mobile phone is connected to the MBUX multimedia system.

The zero layer shows the digital map and the user-specific applications.

THE FOLLOWING USER-SPECIFIC APPLICATIONS ARE DISPLAYED IN THE LOWER DISPLAY AREA:

- Suggestions ⑧
- Active applications ⑨
- Entertainment sources and telephone ⑪
- Online voice applications

The lower display area can be hidden and shown (→ page 493).

INFORMATION ABOUT ENTERTAINMENT SOURCES

You can operate the applications in the reduced view or in the menu (expanded view) (→ page 493).

EXAMPLES:

- Control a media source, e.g. pause/play, next track, set a station
- Select tracks from the current playlist or stations from the station list
- Select a media source

The media source must be connected to the MBUX multimedia system.

INFORMATION ABOUT THE TELEPHONE

To use the functions, your mobile phone must be connected with the MBUX multimedia system.

Requirement for suggestions: the [Calls & Messages](#) option is activated in the suggestions.

EXAMPLES:

- Answer a call and call a missed call
The missed calls are displayed for the mobile phone currently connected to the MBUX multimedia system.
- Display contacts and call list and call a contact
- Use voice functions
- Suggest contacts
The contacts are suggested for the mobile phone connected to the MBUX multimedia system. No contacts are suggested for a mobile phone that is linked to another user profile.
- Write messages to contacts (suggestion)
- Connect a device via the device manager (suggestion)

INFORMATION ABOUT ACTIVE APPLICATIONS

THE FOLLOWING FUNCTIONS ARE AVAILABLE:

- Operating a massage program
- Operating Active Parking Assist
- Operating an ENERGIZING COMFORT program
- Raising or lowering the vehicle level

SUGGESTIONS FOR COMFORT AND VEHICLE FUNCTIONS AS WELL AS NAVIGATION

Requirement: the [Comfort](#), [Vehicle](#) and [Navigation](#) options are activated in the suggestions.

- Operating a massage program
For example, the multimedia system suggests a program at a certain time.
- Operating an ENERGIZING COMFORT program
- Opening the tailgate





Requirement: the vehicle is equipped with trunk lid convenience closing.

- Opening and closing the comfort doors

Requirement: the vehicle is equipped with comfort doors.

- Setting the vehicle level
- Making heating settings
- Activating/deactivating Parking Assist PARKTRONIC
- Selecting previous destinations and destinations from favorites

SUGGESTIONS FOR ONLINE VOICE APPLICATIONS

Requirement: the [Online Voice Services](#) option is activated in the suggestions.

The suggested voice applications are made available online and are based on your previous voice inputs.

EXAMPLES:

- What will the weather be like tomorrow?
- Play the messages.
- Start geoquiz.
- Open the garage door.

CALLING UP AND OPERATING THE ZERO LAYER

CALLING UP THE ZERO LAYER

When the vehicle has been switched on, the zero layer is displayed with the digital map. Navigation is active.

- ▶ **From another application:** press the  button on the right side of the steering wheel.

or

- ▶ Tap on .

OPERATING APPLICATIONS IN THE REDUCED VIEW (EXAMPLES)

- ▶ **Media:** to play the previous or next track, tap  or .
- ▶ **To answer a call or call a missed call:** tap on the contact.
After the connection has been established, the call functions are available.
- ▶ **To end a call:** tap on the contact again.
- ▶ **To reply to a message:** tap on a message and dictate the message via the MBUX Voice Assistant.
- ▶ **To start a message program:** tap on the application and start the message program.
- ▶ **To select a previous destination:** tap on the application and select one of the previous destinations.
- ▶ **To select a destination from the favorites:** tap on the application and select the destination.

HIDING AND SHOWING THE DISPLAY AREA WITH APPLICATIONS

- ▶ **To hide:** pull the applications down.
- ▶ **To show:** pull the bar above  upwards.

or

- ▶ Select .


or

- ▶ Press the  button on the steering wheel on the right.





EQ MODULE (EXPANDED VIEW)

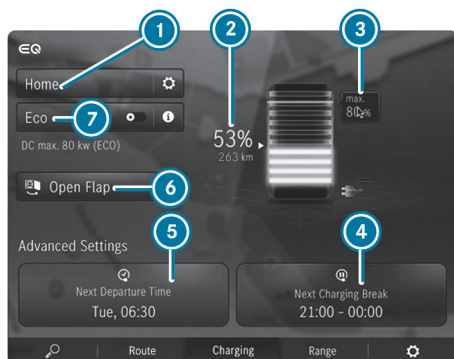

- ① Sets the charging program (→ page 347)
- ② Current state of charge of the high-voltage battery
- ③ Maximum state of charge (as per the setting)
- ④ Sets the next charging break (to use a less expensive tariff)
- ⑤ Setting the departure time
- ⑥ Open the socket flap
- ⑦ Activating or deactivating ECO charging

► Tap on the EQ module (→ page 491).

The charging settings are displayed.

ADDITIONAL EQ AND NAVIGATION FUNCTIONS ARE AVAILABLE IN THE LOWER MENU BAR:

- Symbol 

Enters a destination (→ page 40)
- [Route](#)

The route shows charging stops and the destination.
- [Range](#)

Switches range maximization on or off (→ page 315).

- [Consumption](#)


The current and average fuel consumption will be displayed.

- Symbol

Makes settings for [View](#), [Messages & Acoustic Signals](#) and [Route](#).

► **To close the menu:** select .

NAVIGATION MODULE (EXPANDED VIEW)

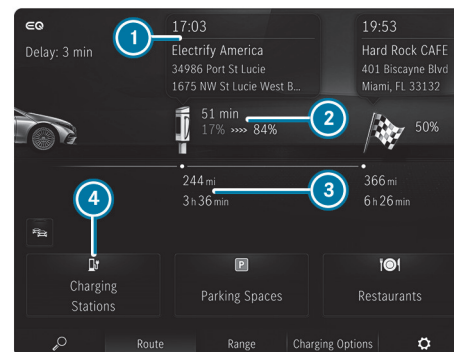

Example: navigation module with active route guidance


- ① Arrival time at charging stop, type of charging station
- ② Charging stop shows the charging time recommended by the Navigation with Electric Intelligence as well as states of charge on arrival and onward journey for an optimal travel time
- ③ Distance from current vehicle position and remaining driving time
- ④ Searches for an additional charging station

► Tap on the EQ module (→ page 491).

► Select [Route](#) in the lower menu bar.



OPERATING A MENU IN THE LOWER DISPLAY AREA (EXAMPLE: ACTIVE MESSAGE PROGRAM)

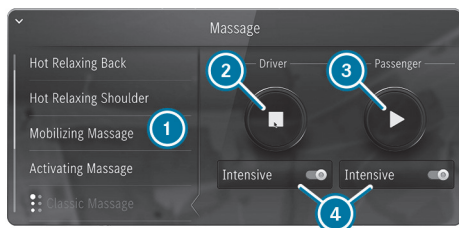

- ① Selects a message program
- ② Starts/stops a message program for the driver
- ③ Starts/stops a message program for the front passenger
- ④ Sets the message intensity for the driver's or front passenger seat

- ▶ Tap on the application.
The expanded view of the application is displayed.

- ▶ **To close the menu:** select .

OPENING AND CLOSING THE CONTEXT MENU FOR A SUGGESTION

- ▶ Press and hold on a suggestion.
The context menu opens and shows the **No Longer Suggest** option, for example.

- ▶ **To close:** swipe downwards.

REMOVING A SUGGESTION FROM THE DISPLAY AREA

- ▶ Swipe the suggestion upwards.

SHOWING ALL APPLICATIONS

- ▶ Briefly press .
- Available applications are displayed. The global search is available.

- ▶ **To hide applications:** briefly press  again.

SWITCHING BETWEEN THE ZERO LAYER AND HOME SCREEN WITH CLASSIC MENU

- ▶ Press and hold on .

The home screen with classic menu is shown.

- ▶ **To return to the zero layer:** press and hold on .

Home screen overview



- ① Displays in the status line
 - ② Calls up user profile settings and switches user
 - ③ Calls up the Control Center: pull the bar down
 - ④ Calls up favorites
 - ⑤ Displays in the status line
 - ⑥ Shows additional applications
 - ⑦ Calls up applications
 - ⑧ Quick-access to application
 - ⑨ Global menu
-  Calls up previous menu
 -  Press and hold: switches between home screen and zero layer
 -  Previous track or previous radio station
 -  Next track or next radio station



 During a telephone call, the call duration is displayed in global menu .


Alternatively, to switch between the home screen and the zero layer, press and hold the  button on the right-hand side of the steering wheel.

THE FOLLOWING FUNCTIONS ARE CALLED UP IN THE CONTROL CENTER:

- Notifications Center
- Content sharing menu
- Favorites
- Vehicle quick-access

Touch Control

OPERATING TOUCH CONTROL (MBUX MULTIMEDIA SYSTEM)

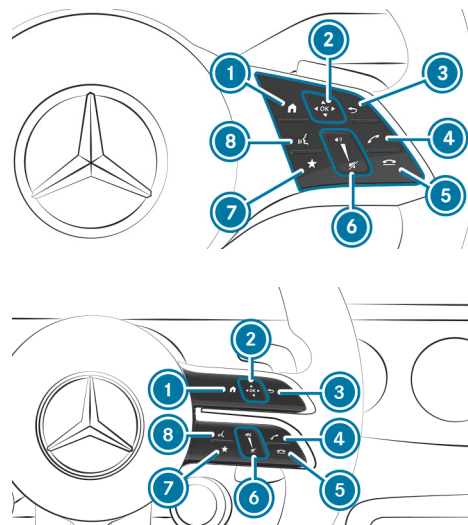

Mercedes-AMG vehicles

  Shows zero layer/home screen

 Touch Control

 Swipe in the direction of the arrow (navigate)

 Press (confirm)

  Returns to the previous display

  Makes or accepts a call

  Rejects or ends a call

 To increase volume: swipe upwards

To reduce volume: swipe down

 To switch off the sound: press

  Calls up favorites

  Starts the MBUX Voice Assistant



 To operate Touch Control  in the most effective way, use the tip of your thumb if possible.

You can navigate through menus and lists via the touch-sensitive surface of Touch Control  using **a single-finger swipe**, e.g.:

- ▶ **To enter a character:** select a character using the keyboard and press on Touch Control .
- ▶ **To select a menu option:** scroll in a list and press Touch Control .
- ▶ **To move the digital map:** swipe in any direction.

SETTING THE SENSITIVITY FOR TOUCH CONTROL

Multimedia system:

- ▶  ▶ Settings ▶ System ▶ Control Elements
- ▶ Touch Control Sensitivity
- ▶ Select **Fast**, **Medium** or **Slow**.

SETTING ACOUSTIC OPERATIONAL FEEDBACK FOR ALL CONTROL ELEMENTS

Multimedia system:

- ▶  ▶ Settings ▶ System ▶ Control Elements
- ▶ Acoustic Feedback

The function is supported by the selection in a list.

- ▶ Set **Off**, **Regular** or **Loud**.
If the function is activated you will hear a clicking sound when selecting control elements or when scrolling in a list. When the beginning or end of the list is reached you will hear another clicking sound.

Touchscreen

OPERATING THE TOUCHSCREEN

TAPPING

- ▶ **To select a menu item or entry:** tap on a symbol or an entry.
- ▶ **To increase the map scale:** tap twice quickly with one finger.
- ▶ **To reduce the map scale:** tap with two fingers.
- ▶ **To enter characters with the keypad:** tap on a button.

SINGLE-FINGER SWIPE

- ▶ **To navigate in menus:** swipe up, down, left or right.
- ▶ **To move the digital map:** swipe in any direction.
- ▶ **To use handwriting to enter characters:** write the character with one finger on the touchscreen.

TWO-FINGER SWIPE

- ▶ **To zoom in and out of the map:** move two fingers together or apart.
- ▶ **To enlarge or reduce the size of a section of a website:** move two fingers together or apart.
- ▶ **To turn the map:** turn counter-clockwise or clockwise using two fingers.

THREE-FINGER SWIPE

- ▶ **To call up the home screen:** swipe up with three fingers in an application.

TOUCHING, HOLDING AND MOVING

- ▶ **To move the map:** touch the touchscreen and move your finger in any direction.



- ▶ **To set the volume on a scale:** touch the touchscreen and move your finger to the left or right.

TOUCHING AND HOLDING

- ▶ **To save the destination in the map:** touch the touchscreen and hold until a message is shown.
- ▶ **To call up a global menu in the applications:** touch the touchscreen and hold until the **Options** menu appears.

SETTING HAPTIC OPERATION FOR THE TOUCHSCREEN

Multimedia system:









- ▶ Set **Off**, **Regular** or **High**.

If the function is switched off, all you need to do is tap the display to make an entry.


If the function is switched on, the entry is made by pressing the display. The system supports you with discreet tactile aids and pressure resistances.

 You can use this function for the central display and the front passenger display.

Overview of the fingerprint sensor

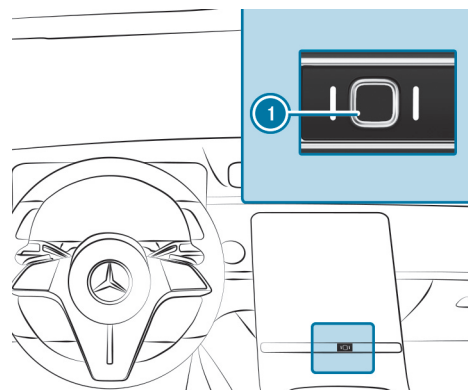

Equipment with central display

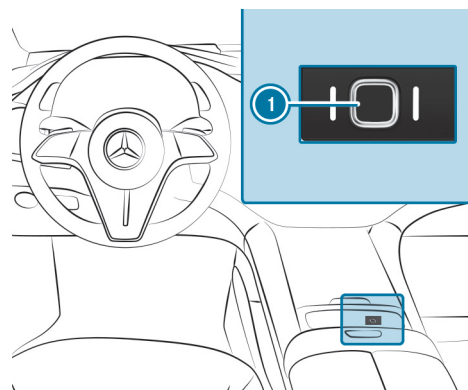

Equipment with MBUX Hyperscreen

Fingerprint sensor  allows you to conveniently access protected MBUX multimedia system functions and services. Compared to protection provided by the Mercedes me PIN, the entry of a four-digit number is not required to activate services and functions with personal content.

The fingerprint sensor must be set up before use (→ page 501).



If equipped with a front passenger display, one fingerprint can be scanned in for the driver's seat and one for the front passenger seat. These fingerprints are then assigned to the respective seat. They can be used for authentication or to activate your own user profile on the assigned display.

- ❗ The fingerprint sensor stores only a data model and no image of the fingerprint. The data model is only processed in the vehicle and is not transmitted from the vehicle.

User profiles

NOTES ON USER PROFILES



WARNING

Risk of becoming trapped during adjustment of the driver's seat after calling up a driver profile

Selecting a user profile may trigger an adjustment of the driver's seat to the position saved under the user profile. You or other vehicle occupants could be injured in the process.

- ▶ Make sure that when the position of driver's seat is being adjusted using the multimedia system, no people or body parts are in the seat's range of movement.

If there is a risk of someone becoming trapped, immediately stop the adjustment process by:

- ▶ a) Tapping the warning message on the central display.

or

- ▶ b) Pressing a position button of the memory function or a seat adjustment switch in the driver's door.

The adjustment process is stopped.

The electrically adjustable driver's seat is equipped with an automatic reversing function.

If the driver's door is open, the driver's seat will **not** be set after calling up the driver's profile.





OVERVIEW OF USER PROFILES

REQUIREMENTS FOR USE

- You have a Mercedes me user account.
- You have a Mercedes me PIN.
- You have agreed to the terms of use.
- The vehicle is linked to a Mercedes me user account.

 If one of the pre-requisites listed is missing or if no user profile has been selected, the data described in the following section will be saved in the vehicle as the standard setting. Standard settings can be changed by all vehicle users.

User profiles save personal settings. If the vehicle is used by several people, a person can change their profile settings without changing the settings of other users.

You can individualize a user profile in the vehicle using the set-up assistant or using the settings in your user profile. Some settings, e.g. the Mercedes me PIN and a profile photo are made in the Mercedes me App or in the Mercedes me Portal.

 If the user profile is downloaded while traveling, user profiles are not set up using the set-up assistant.

User-specific content and applications with personal data are protected by different levels of security (→ page 501).

To access protected content, the Mercedes me PIN and, depending on the vehicle equipment, biometric sensors are used.

 The security level is set by the multimedia system and calculated from the combination of all sensor inputs. Some security levels cannot be turned off.

 **WHEN A USER PROFILE IS ACTIVATED, THE FOLLOWING PERSONALIZED COMFORT SYSTEMS, FOR EXAMPLE, CAN BE ADJUSTED OR THEIR SETTINGS LOADED:**

- Seat
- Ambient light
- Outside mirrors
- Roller blinds
- Air conditioning settings

If the user profile is activated when driving then the driver's seat position will not be adjusted.

USER-SPECIFIC CONTENT

DEPENDING ON THE VEHICLE EQUIPMENT YOU CAN, AS A USER, SAVE THE FOLLOWING SETTINGS, FOR EXAMPLE:

- Driver's seat, steering wheel and mirror settings
- Climate control
- Ambient light
- Radio (including station list)
- Suggestions and favorites

You can watch an animation on this topic via the following link:





ADDING A USER

Requirements:

- The vehicle is stationary.

Multimedia system:



- ▶ Select  **Add User**.

A QR code is loaded.

- ▶ Scan the displayed QR code with the Mercedes me App or any QR code scanner on a mobile device. If the Mercedes me App is not yet installed on your mobile device, you will be directed to the store of your mobile device.
- ▶ Follow the steps in the Mercedes me App.
The vehicle is connected with your Mercedes me user account. This automatically creates your user profile in the vehicle.
You will be informed when your user profile is available.
When the vehicle is stationary, the set-up assistant starts automatically after user selection.

 When the user has been added, they can be selected
(→ page 503).

SELECTING USER OPTIONS

Multimedia system:



PROTECTING USER-SPECIFIC CONTENT AND APPLICATIONS

If you add a new user, access protection is already activated for the user profile. The Mercedes me PIN and, depending on the vehicle equipment, biometric sensors are available for access. Biometric sensors in the vehicle must be taught in. The authentication process then takes all taught-in and available sensors into account.

THE FOLLOWING USER-SPECIFIC CONTENT AND APPLICATIONS ARE PROTECTED, FOR EXAMPLE:

- User selection and user profile settings
- Biometric sensors
The teaching-in of biometric sensors
For teaching in and editing biometric recognition see the following section.
- Suggestions
The data and determination of the most probable navigation destinations, media sources, radio stations, contacts and messages.
- ENERGIZING COACH
The recorded health data and its evaluation.
- Parking service
The payment transactions.
- Mercedes me Store
The purchase of services.
- System activations of paid vehicle functions





IN THE FOLLOWING CASES YOU WILL BE PROMPTED FOR AUTHENTICATION OR RE-AUTHENTICATION USING A SENSOR OR THE MERCEDES ME PIN:

- When selecting a protected user profile
- When calling up a function requiring special protection
- If biometric sensors provide insufficient or contradictory information
- If the multimedia system no longer trusts a sensor
- If the seat belt buckle and the door are opened at the same seat and a function requiring special protection is called up
- When the vehicle is locked from outside

 Facial recognition for re-authentication in the driver's seat is only possible once the door has been closed or the seat belt buckle has been fastened.

- ▶ Select [Protect Content](#).
- ▶ Switch [Access Protection](#) on or off.

 When access protection is switched off, your user profile can be viewed from any seat and changes can be made.

 Access protection is switched on or off on a vehicle-specific basis.

 Note that authentication is necessary for some functions and therefore cannot be switched off completely.

SETTING UP AND EDITING BIOMETRIC RECOGNITION

The biometric data models are saved in the sensors in the vehicle. If recognition has been set up, this sensor serves as a contributory factor for authentication on the multimedia system.

- ▶ Select [Protect Content](#).
- ▶ Select [Facial Recognition](#), [Fingerprint Recognition](#) or [Voice Recognition](#).

 If necessary, authenticate yourself on the multimedia system.

SETTING UP FACIAL RECOGNITION

- ▶ Follow the system's instructions.
Your face is scanned. A message in the driver display or central display shows whether facial recognition was successful or not. You can unlock your user profile and protected applications with the facial scan.

SETTING UP FINGERPRINT RECOGNITION

- ▶ Place and lift your finger several times on the fingerprint sensor under the touchscreen (→ page 498).
The finger is scanned. If the scanning procedure is successful, a message appears on the central display. You can unlock your user profile and protected applications with your fingerprint.

SETTING UP VOICE RECOGNITION

- ▶ Speak the sentence shown on the central display and follow the voice assistant's instructions.
If the voice recognition was successful, a message appears on the central display. You can unlock your user profile.

 Avoid background or disturbing noises during voice recognition.





DELETING BIOMETRIC DATA

- ▶ Tap on , for example, behind [Fingerprint Recognition](#).
- ▶ Select [Yes](#).

CALLING UP THE SET-UP ASSISTANT

- ▶ Select [Profile](#).
- ▶ Select [Set-up Assistant](#).
- ▶ Follow the directions from the set-up assistant.

CHANGING A USER NAME OR PROFILE PHOTO

- ▶ Select [Profile](#).
- ▶ Select [Change User Name](#).

or

- ▶ Select [User Image](#).
- ▶ Enter the user name or select a user image.
- ▶ Select [Finish](#).

-  You can store your photo in the Mercedes me user account using the app or in the portal. The photo will then be shown in the vehicle. In the vehicle itself, you can select other sample images instead of the photo.

DELETING A USER PROFILE

- ▶ Select [Profile](#).
- ▶ Select [Remove](#).
- ▶ Select [Remove User Profile](#).

-  Your Mercedes me user account and your personal data will remain within the Mercedes me ecosystem.

RESETTING THE USER PROFILE TO FACTORY SETTINGS

- ▶ Select [Profile](#).
- ▶ Select [Reset](#).
- ▶ Select [Yes](#).

-  This resets the contents of the user profile to factory settings, but not the vehicle.

You can watch an animation on this topic via the following link:

SELECTING A USER


Multimedia system:



-  When you call up your driver profile, the driver's seat and the steering wheel can be set.

YOU CAN CANCEL THE SETTING PROCESS WITH THE FOLLOWING ACTIONS:

- Press [Tap Here to Cancel](#) message on the central display.
 - Press one of the seat operating buttons in the driver's door.
- ▶ Select [Select User](#).
 - ▶ Select a user.





- ▶ When requested to do so, authenticate with the Mercedes me PIN or a taught-in biometric characteristic.

The user profile is loaded and activated.

-  If you select [Continue Without Selecting a User](#), no specific settings for the user profile are loaded.

SYNCHRONIZING USER PROFILES

Requirements:

- You have a Mercedes me user account.
- The vehicle is connected with your Mercedes me user account.

Multimedia system:



- ▶ Activate [Synchronize Automatically](#).

When the vehicle is switched on or off, the data stored in the vehicle is automatically synchronized with the Mercedes me user accounts. This synchronization is done for all user profiles and is not profile-specific.

or

- ▶ Select [Synchronize Now](#).

After selecting this option, the data stored in the vehicle is synchronized with the Mercedes me user accounts.

-  Not all user profile functions are available during synchronization. During synchronization, the most recently changed data is applied.

 **IF THE PERSONALIZATION SERVICE IN THE VEHICLE IS DEACTIVATED, ONLY THE FOLLOWING USER PROFILE MASTER DATA IS SYNCHRONIZED:**

- Profile name
- Profile image
- Mercedes me PIN

Favorites

OVERVIEW OF FAVORITES

Favorites offer you quick access to frequently used applications. 100 favorites are available in total.

You can select favorites from categories or you add favorites directly from an application.


-  You can add and edit navigation favorites within the application.

CALLING UP FAVORITES

Multimedia system:



- ▶ Alternatively, in the home screen pull down bar  in the center of the status line (→ page 495).
- ▶ Select  in the Control Center.





ADDING FAVORITES

Multimedia system:



SELECTING FAVORITES FROM CATEGORIES

- ▶ Select .
- ▶ Select  [Create New Favorite](#).
- ▶ Select the category.
- ▶ Select a favorite.
The favorite is stored at the next available position.
- ▶ **All positions in the favorites are taken:** confirm the message shown.
A list shows all the favorites.
- ▶ Select a favorite to be overwritten.

ADDING A FAVORITE FROM AN APPLICATION

You can, for example, save a contact (example), or add an ENERGIZING COMFORT program.

- ▶ **To save a contact as a global favorite:** select a contact (→ page 597).
- ▶ Press on a telephone number until a menu is shown.
- ▶ Select [Save as Favorite](#).
The contact is added as a favorite.

RENAMING FAVORITES

Multimedia system:



- ▶ Press on a favorite until a menu is shown.

- ▶ Select [Rename](#).
- ▶ Enter the name.
- ▶ Save the names.

MOVING FAVORITES

Multimedia system:



- ▶ Press on a favorite until a menu is shown.
- ▶ Select [Move](#).
- ▶ Move the favorite to the new position.
- ▶ Tap on .

DELETING FAVORITES

Multimedia system:



- ▶ Press on a favorite until a menu is shown.
- ▶ Select [Delete](#).
- ▶ Select [Yes](#).

RESETTING FAVORITES

- ▶ In the menu, select [Reset All Favorites](#).
- ▶ Select [Yes](#).





Notifications Center

OVERVIEW OF THE NOTIFICATIONS CENTER

THE FOLLOWING COMMUNICATIONS ARE COLLECTED IN THE NOTIFICATIONS CENTER:

- Communications which are generated by the vehicle or from the multimedia system.
- Communications which are received through the use of services.

THE FOLLOWING NOTIFICATION TYPES ARE AVAILABLE FOR YOU:


- Navigable destinations and routes
- Messages (text messages)
- System information, e.g. [Important Software Update Available Confirm to Start the Update](#)
- Other notifications, e.g. from additional online services that can be subscribed to or emergency reports (e.g. tornado)

The Notifications Center is in the Control Center.

Depending on the style set, newly received notifications are shown using a colored dot.

Notifications are normally briefly shown as they are received. If you take no action, these are stored for future access in the Notifications Center.

The notifications are sorted chronologically. The most recent notifications are at the top.

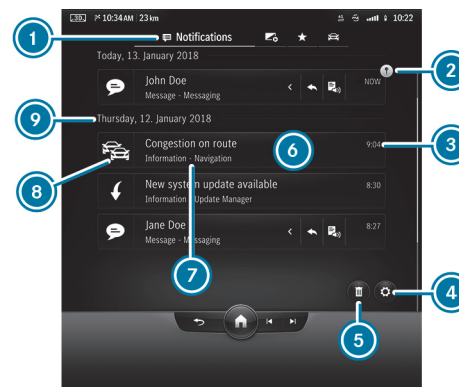

Example of a message

- ① Calls up the Notifications Center
- ② Symbol for a pinned notification
- ③ Time message received
- ④ Calls up the settings
- ⑤ Deletes notifications
- ⑥ Display for available actions
- ⑦ Description of the notification and the issuing service
- ⑧ Symbol for notifications
- ⑨ Date of the received notifications

Depending on the type of notification, up to four different actions are available.

EXAMPLES OF ACTIONS INCLUDE:

- Reading aloud
- Placing a call
- Replying
- Calling up a web page





- Navigation

Some notifications, e.g. a navigation destination, are stored longer. Therefore, it is not necessary to carry out available actions directly upon receipt of the notifications. A route guidance can be started at a later time.

You can pin a notification so that this is not deleted automatically after a certain time. The notification is then denoted by symbol .

CALLING UP NOTIFICATIONS

OPENING THE NOTIFICATIONS CENTER

- ▶ In the zero layer pull down bar  in the center of the status line (→ page 491).

or

- ▶ In the home screen pull down bar  in the center of the status line (→ page 495).

The Control Center opens.

- ▶ Select  in the Control Center.

SELECTING A NOTIFICATION

- ▶ If several messages are available swipe up or down.
- ▶ Select an action.

CLOSING THE NOTIFICATIONS CENTER

- ▶ Select .

SELECTING ACTIONS FOR A NOTIFICATION

THE FOLLOWING OPTIONS ARE AVAILABLE:

- Select the action directly after a notification is received and shown.
- Select the action later after calling up in the Notifications Center.

- ▶ Up to two actions available: select the action.
- ▶ More than two actions available: select .
- ▶ Select the action.
The notification is still available.
- ▶ Close the actions with .

EDITING NOTIFICATIONS

- ▶ Call up the Notifications Center (→ page 507).

CONFIGURING SETTINGS

- ▶ Select  [Settings](#).
- ▶ Select the service.
- ▶ Switch the options on or off.

THE FOLLOWING OPTIONS ARE AVAILABLE DEPENDING ON THE SERVICE:

- [Allow Notifications](#)
- [Display in Notification Center](#)
- [Show Notifications](#)
- Switching [Acoustic Signals](#) on or off
- [External Access](#)

The option allows an external service access to specific data, e.g. the current vehicle position. The detailed, approved information is shown with .

If [Allow Notifications](#) is switched off, the options cannot be selected with the exception of [External Access](#).





PINNING A NOTIFICATION

- ▶ Drag a notification to the right on the touchscreen.
A pin appears.
- ▶ Tap on the pin.
The notification is marked with a pin.

DELETING NOTIFICATIONS

- ▶ Drag a notification to the left on the touchscreen.

or

- ▶ Select .
- ▶ Select **Yes**.
All messages are deleted.

Global search

GLOBAL SEARCH OVERVIEW

You can call up the global search on the home screen. You can input characters using the keyboard or the handwriting recognition. Alternatively, the MBUX voice assistant allows voice input.

THE GLOBAL SEARCH PROVIDES SEARCH RESULTS FOR THE FOLLOWING CATEGORIES:

- Navigation
- Entertainment
- Telephone
- Digital Operator's Manual
- Website

The global search enables you to search for cities, roads and tourist attractions in the navigation category, for example.

If the search field is empty, you will first see smart suggestions in the **Suggestions** category.

The condition for this is that the smart suggestions are activated in the user options (→ page 501).

As soon as a letter is entered, you will be shown the best hits in the **All** category. You will find further search results in the individual categories. Next to the category is the number of results.

After selecting a category you can select the search results within the category. When you select a search result, a detailed view is opened depending on the category.

USING THE GLOBAL SEARCH

Multimedia system:



In the **Suggestions** category up to six smart suggestions are displayed, even if no search entry has been entered yet.

- ▶ Enter the search term into the search field.
As soon as a character is entered the **All** category is marked. Up to ten search results per category are displayed there.
In the other categories suitable search results for the entered search item are displayed.

 Alternatively, the MBUX Voice Assistant allows voice input using  or you switch to the handwriting recognition  (→ page 514).



- ▶ **To end the search:** select .
- ▶ **To show search results for a category:** select a category.
- ▶ **To accept the search result:** select the search result.
An action starts, e.g. a radio station is set or a detailed view is displayed, e.g. for a contact.

Content sharing menu

OVERVIEW OF THE CONTENT SHARING MENU

You can find the [Share Content](#) menu in the Control Center. It shows the available displays in the vehicle and their playback status. Content currently on a display can be shared with other displays; playback of an entertainment source, for example. Status symbols on the displays inform you about the current settings, for example "Headphones connected".

Content is shared in the menu itself or directly from an application.


Active content is shared on a display and played back on the receiving display.

Inactive content can be searched for in an application and then shared from there.

THE FOLLOWING DISPLAY CONTENT CAN BE SHARED, FOR EXAMPLE:

- Radio stations
- Media
- Browser
- ENERGIZING COMFORT programs

OPENING THE CONTENT SHARING MENU IN THE CONTROL CENTER

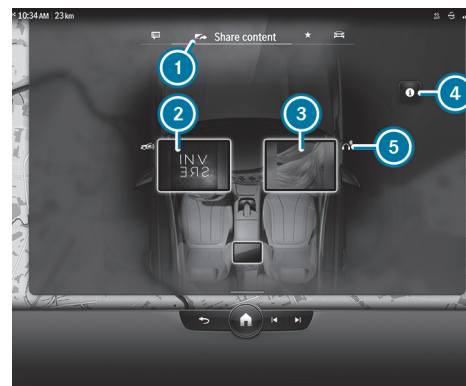

Example: content sharing menu

- ① Calls up a menu
- ② Central display with active content (cover display)
- ③ Front passenger display
- ④ Displays animation for content sharing
- ⑤ Status information, e.g.  Bluetooth® headphones connected to the front passenger display on the right

- ▶ Call up the Control Center in the zero layer (→ page 491).

or

- ▶ Call up the Control Center on the home screen (→ page 495).
The Control Center opens.
- ▶ Select ①.

⑤ SHOWS THE FOLLOWING STATUS INFORMATION:

- Audio playback, for example via  Bluetooth® headphones or the  vehicle loudspeakers



- Playback status, for example pause or mute function active

DEPENDING ON THE STATUS OF THE DISPLAY, THE FOLLOWING INFORMATION IS SHOWN ON ② AND ③:

- The cover
- The active  privacy mode
- [Display Off](#)
- [System Off](#)

SHARING MBUX DISPLAY CONTENT

In the [Share Content](#) menu, you can share content currently being played back on one display with other displays.

You can also share content from an application in the vehicle, e.g. in a menu or in a search.

- ▶ In the menu drag and drop a display to another display.
The content of one display is placed on another display or retrieved from another display.

or

- ▶ Select [Share with Everyone](#).
The content of one display is shared with all displays in the vehicle.

or


- ▶ Share content directly from an application using [Share](#); share a radio station in the vehicle, for example.

CONTROLLING ENTERTAINMENT SOURCES WITH MBUX VOICE ASSISTANT

- ▶ Activate the voice assistant with "Hey Mercedes".

- ▶ Say a voice command, for example "Play Rihanna on front passenger seat".

CONTROLLING MEDIA PLAYBACK IN THE CONTROL CENTER

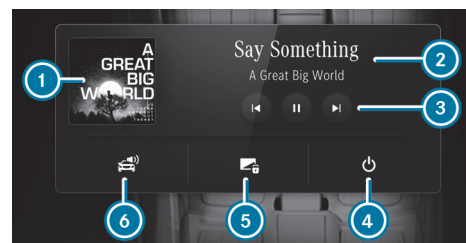

Example: control menu

- ① Cover (if available)
- ② Track and other information
- ③ Controls playback of the entertainment source
Previous track/scene, play/pause or sound on/off, next track/scene
- ④ On the central display: switches the MBUX multimedia system or the display off
On the front passenger display: switches the display off
- ⑤ Switches the  privacy mode on or off at the seat
- ⑥ Selects the current audio source at the seat for playback on the vehicle speakers

The available options are seat-specific. On the front passenger display the sound for the connected headphones can also be switched on or off and the volume can be set.

 The options in ③ are available depending on the application.





i In the active  privacy mode, the display content being played back is hidden from the other seats. The display content can be shared but not retrieved.

- ▶ Call up the Control Center on the home screen (→ page 495).
The Control Center opens.
- ▶ Briefly press on a display.
The control menu for media playback is called up.
- ▶ Change the settings.


SETTING THE VOLUME FOR HEADPHONES

- ▶ Select .
- ▶ Slide the volume button up or down.


SWITCHING THE SOUND FOR THE HEADPHONES ON AND OFF

- ▶ **To switch off:** press and hold .
- ▶ **To switch on:** press and hold  once again.

Switching the sound for the MBUX multimedia system on or off

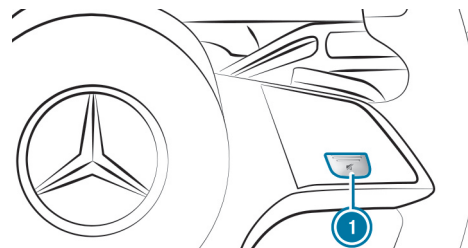


On the steering wheel

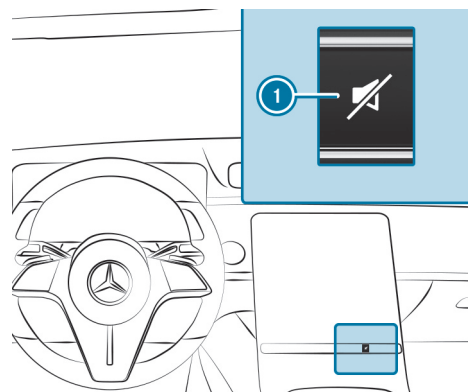

On the central display control panel



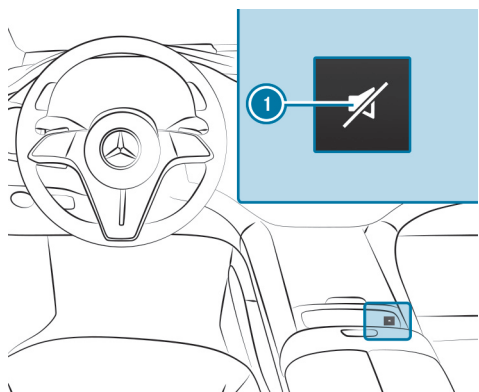

On the control panel when equipped with MBUX Hyperscreen

- ▶ **To switch off:** press button ①.

The current audio source is muted.

The  symbol appears in the status line of the central display.

If you are listening to a radio station, for example, and switch off the sound then all media sources will be muted.

Traffic and navigation announcements can still be heard in this case. The MBUX voice assistant and telephony are also not affected.

SWITCHING ON

- ▶ Press button ① again.

or


- ▶ Set the volume.

or


- ▶ The media source changes.

Setting the volume of the MBUX multimedia system

SETTING WITH THE BUTTON

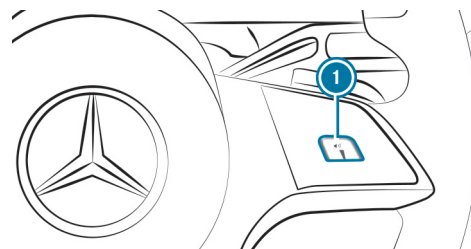

On the steering wheel

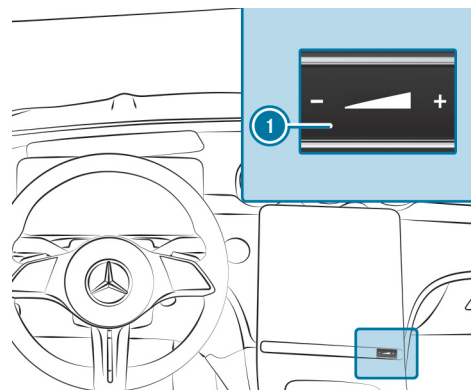


On the central display control panel

- ▶ Press  or  ①.

or

- ▶ Swipe across button ①.

The volume of the current audio source in the foreground is set.

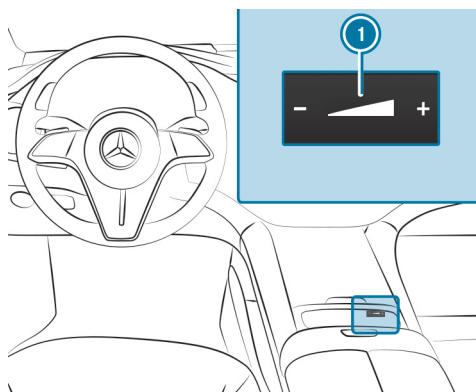

On the control panel when equipped with MBUX Hyperscreen

- ▶ Press  or  .

The volume of the current audio source in the foreground is set.

THE VOLUME IS ADJUSTED FOR THE FOLLOWING GROUPS:

- Entertainment
- Ringtone
- Calls, for example phone calls
- Voice output, for example MBUX voice assistant
- Navigation announcements

-  If you set the volume of the voice output to "0", for example, a minimum volume is automatically set when the MBUX voice assistant is next called up. The entertainment volume is automatically adjusted after the multimedia system is restarted.

SETTING IN THE MENU

- ▶ Press and hold the  button on the right of the steering wheel.

or

- ▶ Press and hold  on the touchscreen.
The home screen appears.
- ▶ Select **Settings**.
- ▶ Select **System**.
- ▶ Select **Audio**.
- ▶ Select a volume setting.

-  The volume can be set for all groups except the entertainment volume.

- ▶ Set the volume.

THE FOLLOWING SETTINGS ARE ALSO AVAILABLE IN THE ASSISTANCE MENU:

- Switching the navigation announcements on or off during a phone call.
- Reducing the entertainment volume while a navigation announcement is being issued.

Entering characters

USING THE CHARACTER INPUT FUNCTION

Requirements:

- **For the handwriting recognition read-aloud function:** the MBUX multimedia system is equipped with the MBUX voice assistant.
- The read-aloud function is available for the selected system language.



- The handwriting recognition read-aloud function is activated.

Enter the characters on the Touch Control or on the touchscreen. Character input can be started with a control element and resumed with another.

- ▶ When the keypad is shown, enter the characters by swiping and pressing on the Touch Control or by tapping on the touchscreen.

or

- ▶ If handwriting recognition has been selected, write the characters on the touchscreen.

Examples for character input include the global search, entering a navigation destination or the renaming of a favorite, for example.


THE TOUCHSCREEN SUPPORTS CHARACTER INPUT WITH THE FOLLOWING FUNCTIONS:

- Handwriting recognition offers character suggestions.
- If the read aloud function is activated for handwriting recognition then the entered characters are read aloud.

ENTERING CHARACTERS ON THE TOUCHSCREEN

Requirements:

- If you wish to have the character input read aloud: the read aloud function of the handwriting recognition is switched on .
- An online connection is required for some functions.

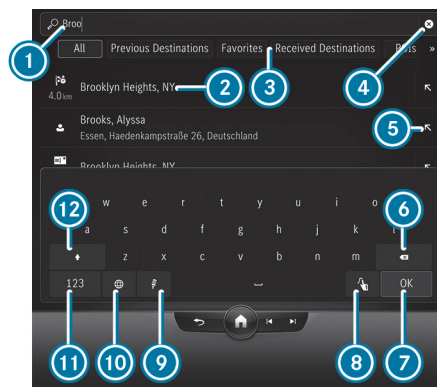

Example: character input with the keypad

- ① Input line with current entry
- ② Search result
- ③ Selects destination input, displays further destination inputs with double arrow
- ④ Deletes an entry
- ⑤ Adopts the search result in the input line and continues the search
- ⑥ Deletes the last character entered
- ⑦ Hides the keypad
- ⑧ Switches to handwriting recognition
- ⑨ Starts the MBUX Voice Assistant (→ page 475)
- ⑩ Sets the written language
- ⑪ Switches to digits and special characters
- ⑫ Switches to upper-case or lower-case letters

- ▶ Example: call up the navigation and enter a destination address (→ page 40).

- ▶ Briefly press on a character.

The character is entered in input line ①.





- ▶ Resume character input.


i The available editing functions depend on the editing task, the language set and the character level.

ENTERING ALTERNATIVE CHARACTERS

- ▶ Press and hold on a character.
- ▶ Select the character.

TO FINISH CHARACTER ENTRY

- ▶ Hide keypad **7**.

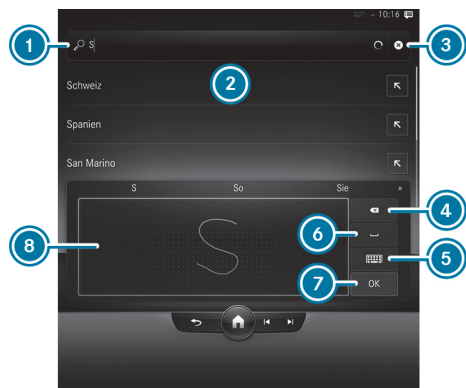

Example: entering characters with handwriting recognition

- 1** Input line
 - 2** Shows suggestions during input
 - 3** Deletes an entry
 - 4** Last character entered
- Pressing and holding deletes the entry
- 5** Switches to input using the keyboard
 - 6** Enters a space

- 7** Accepts an entry

- 8** Writing area

If available, the  symbol allows you to change to voice input.

- ▶ When the keyboard is displayed, select .
- ▶ Write the character with one finger on the touchscreen. The letters can be written next to each other or above each other.
The character is entered in input line **1**. Suggestions are shown in **2**.
- ▶ Select one of the suggestions.
- ▶ If available, display additional suggestions with  or .
- ▶ **To end character entry:** press briefly on .





< Driver camera

Overview of the driver camera

WARNING

Risk of injury from infrared radiation from the camera

This product uses an infrared lighting system of risk group 0 (RG0). If the housing is opened or damaged, infrared radiation may damage your retina.

- ▶ Do not open the housing.
- ▶ Always have maintenance work and repairs carried out by a qualified specialist workshop.

This device is a product of risk group 0 (RG0) according to IEC 62471: 2006 (First Edition) & DIN EN 62471: 2008.

The driver camera is located in the driver display.

THE DRIVER CAMERA DETECTS THE FOLLOWING CHARACTERISTICS:

- Head position
- Viewing direction
- Eyelid closure characteristics
- Driver's face

-  The driver camera is automatically activated each time the vehicle is opened with the key.

The current status of the  driver camera is shown in the status line of the central display.

-  The driver camera records image data for applications such as ATTENTION ASSIST and facial recognition, for example. The driver camera converts the image data directly into meta data. No image data is saved in the process. The data is only processed in the vehicle and is not transmitted from the vehicle.

The driver camera must be set up for facial recognition before use (→ page 501).

SYSTEM LIMITS

THE SYSTEM MAY BE IMPAIRED OR MAY NOT FUNCTION IN THE FOLLOWING SITUATIONS:

- The driver camera is covered or dirty, fogged up or scratched.
- The driver's face and/or eyes are covered.
- The driver is wearing glasses that block infrared.

DISPLAY MESSAGES

IN THE FOLLOWING SITUATIONS DISPLAY MESSAGES MAY BE SHOWN:

- If the driver camera is not functioning.
The driver camera is malfunctioning.
The [Driver Camera Inoperative See Operator's Manual](#) message appears.



- If the driver camera cannot capture the position of your head due to the position of the steering wheel or seat.
The [Change the steering wheel/ seat position until 6 dots are visible on the upper edge of the screen.](#) message appears.
- If the view of the driver camera is reduced or restricted.
The [The camera view of the driver is currently obstructed Affected functions: See operator's manual](#) message appears.
The message can appear, for example, in the following cases:
 - The camera's view is obstructed, e.g. due to a scarf or hat being worn.
 - The driver is wearing glasses that block infrared.
 - If hair partially obstructs the eyes, e.g. as with a long fringe.
 - In the event of strong direct sunlight. The driver camera cannot detect the driver's eyes if the light-dark contrast is too strong.
 - When one or both hands are on top of the steering wheel (twelve o'clock position).

NOTES ON CARE

For the display, please comply with the notes on caring for the interior (→ page 668).

Switching the driver camera on or off

Multimedia system:

  >> [Settings](#) >> [System](#) >> [Intelligent Assistance](#)

The driver camera is automatically activated each time the vehicle is switched on.

- ▶ Select [On](#) or [Off](#).

WHEN THE DRIVER CAMERA IS SWITCHED OFF OR THE [THE CAMERA VIEW OF THE DRIVER IS CURRENTLY OBSTRUCTED AFFECTED FUNCTIONS: SEE OPERATOR'S MANUAL](#) MESSAGE APPEARS, THE FOLLOWING FUNCTIONS ARE NOT AVAILABLE OR LIMITED:

- The microsleep and distraction detection function of ATTENTION ASSIST (→ page 374)
- The facial recognition
This function serves as sensor input for authentication and unlocking of the user profile and protected applications (→ page 501).





< System settings

Display

CONFIGURING DISPLAY SETTINGS

Multimedia system:



ADJUSTING THE BRIGHTNESS

- ▶ Select [Display Brightness](#).
- ▶ Vehicles with a driver display and central display: adjust the display brightness of the driver display or central display.
- ▶ Vehicles with the MBUX Hyperscreen: adjust the display brightness of the driver display, central display or the front passenger display.

SETTING THE DECORATIVE IMAGE FOR THE FRONT PASSENGER DISPLAY (VEHICLES WITH MBUX HYPERSCREEN)

 The function is country-dependent.

- ▶ Select [Passenger Screen Decorative Image](#).
A selection of decorative images is displayed.
- ▶ Select the desired decorative image.

 The number of available decorative images is variable.

 Using the Mercedes me App you can select a personal image for the front passenger display.

 If no user is logged in on the front passenger display and the front passenger display is switched on, the decorative image or the personal image is visible.

Time and date

SETTING THE TIME ZONE

Multimedia system:



- ▶ Select [Time Zone](#).
The list of countries is displayed.

 If there are several time zones available in a country, these will be shown after the country is selected.

- ▶ Select a country and, if required, a time zone.
The time zone set is displayed after [Time Zone](#).

or





- ▶ Select the **Automatic Time Zone** entry from the country list.
The time zone will be set automatically according to the vehicle location.

 The **Automatic Time Zone** option is available for vehicles with satellite reception.

SETTING THE TIME AND DATE FORMAT

Multimedia system:

  >> Settings >> System >> Time and Date >> Set Format

- ▶ Select a time and date format.

SETTING THE TIME AND DATE MANUALLY

Requirements:

- The vehicle does not have satellite reception.

Multimedia system:

  >> Settings >> System >> Time and Date

SETTING THE TIME

- ▶ Select **Set Time**.
- ▶ Set a time.
- ▶ Press **OK** to confirm.

SETTING THE DATE

- ▶ Select **Set Date**.
- ▶ Select a date.
- ▶ Press **OK** to confirm.

 On vehicles with satellite reception, the time and date settings are determined automatically based on the vehicle location and cannot be set manually.

ADJUSTING THE TIME

- ▶ Select **Adjust Time**.
- ▶ Set a value.
- ▶ Press **OK** to confirm.

 The function is only available in vehicles with satellite reception.

Vehicle position

SWITCHING TRANSMISSION OF THE VEHICLE POSITION ON OR OFF

Requirements:

- The vehicle is linked to a Mercedes me ID.
- At least one digital Mercedes-Benz service is activated for the vehicle, which customers and/or third parties can use to display the vehicle position via the respective user accesses.

With this setting, you decide whether the vehicle position will be transmitted in order to show it to users who have access to the digital Mercedes-Benz services for this vehicle.

 The function is country-dependent. For more information, consult an authorized Mercedes-Benz Center.





Multimedia system:

  >> Settings >> System >> Data Protection

- ▶ Activate or deactivate the **Transmit Veh. Position** function.

 Alternatively, you can also switch the function on or off in the status line via .

Setting permissions

Multimedia system:

  >> Settings >> System >> Data Protection >> Permissions

In the **Permissions** menu, you can set access authorization for various data points (such as microphone, camera) used in an application. You can change permissions that have already been granted here. You can set permissions either for individual data points or for certain applications or websites.

- ▶ Select **Requests** or **Apps/Websites**.
- ▶ Make the required settings for the permissions.

Bluetooth®

INFORMATION ABOUT BLUETOOTH®

Bluetooth® technology is a standard for short-range wireless data transfer up to approximately 32.8 ft (10 m).

YOU CAN USE BLUETOOTH® TO CONNECT YOUR MOBILE PHONE TO THE MULTIMEDIA SYSTEM AND USE THE FOLLOWING FUNCTIONS, FOR EXAMPLE:

- Hands-free system with access to the following options:

- Contacts (→ page 596)
- Call lists (→ page 599)
- Text messages (→ page 599)
- Internet connection (→ page 619)

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

 Internet connection via Bluetooth® is not available in all countries.

ACTIVATING/DEACTIVATING BLUETOOTH®

Multimedia system:

  >> Settings >> System >> Internet and Bluetooth

- ▶ Activate or deactivate **Bluetooth**.

Wi-Fi


WI-FI CONNECTION OVERVIEW

You can use Wi-Fi to set up a connection to the Internet or to external network devices.

 The availability of the function is dependent on the country.

GENERALLY, TWO TYPES OF WI-FI CONNECTION ARE AVAILABLE:

- **Using the multimedia system as a Wi-Fi hotspot** (→ page 521)





The vehicle's multimedia system serves as Wi-Fi hotspot for mobile communication devices, such as smartphone or tablet PC, for example.

- **Using a mobile communication device as a Wi-Fi hotspot (tethering)**
(→ page 621)

An external Wi-Fi hotspot is accessed for the Internet connection of the vehicle's multimedia system.

SWITCHING WI-FI ON OR OFF

Multimedia system:



- ▶ Select **Wi-Fi**.

The controller is to the right: Wi-Fi is switched on.

When Wi-Fi is switched on, you can connect the multimedia system with external hotspots or make it available as a hotspot for external devices.

When Wi-Fi is switched off, it is not possible to establish a hotspot connection.

 Availability of the function is dependent on the respective country.

USING THE MULTIMEDIA SYSTEM AS A WI-FI HOTSPOT

Requirements:

- The device to be connected supports at least one of the types of connection described.
The connection types shown depend on the device to be connected.
The function must be supported by the multimedia system and by the

device to be connected. The type of connection must be selected on the multimedia system and on the device to be connected.

 The data volume of the vehicle or an already connected tethering device is used for the data connection.
Data volume for the vehicle: depending on the vehicle equipment, you can obtain an Entertainment Package via the Mercedes me Store. In order to use the data package included, you must conclude your own contract with a mobile phone network provider via the Mercedes me App. This can be terminated at any time and incurs no costs. Without this contract it is not possible to use the services included in the previously acquired Entertainment Package. The availability of this option is dependent on the country.
If the data package option is not available or can be upgraded, you can purchase data volume directly from the mobile phone network provider for a fee. The availability of this option is dependent on the country.

 Some functions may first need to be activated on the device being connected. More detailed information can be found in the manufacturer's operating instructions.

 The use of the vehicle data tariff by external devices is not available in all countries.





Multimedia system:

  >> Settings >> System >> Internet and Bluetooth

- ▶ Select **MBUX Hotspot**.
- ▶ Select one of the following connection options.

CONNECTING USING A QR CODE

Requirement: an app for scanning the QR code is installed on the device being connected.

Alternatively: the device being connected has an integrated QR code scanner (see the manufacturer's operating instructions).

- ▶ Scan the QR code shown.
- The WLAN connection is established.

CONNECTING USING A SECURITY KEY

- ▶ Select the vehicle from the device to be connected. The vehicle is displayed with the **MBUX XXXXX** network name.
- ▶ Enter the security key which is shown in the central display on the device to be connected.
- ▶ Confirm the entry.

GENERATING A NEW SECURITY KEY

- ▶ Select the **Generate New Security Key** option in the **MBUX Hotspot** menu.
- ▶ Confirm the prompt with **Yes**.
- A new security key is generated.

A connection will be established with the newly created security key.

 When a new security key is generated, all existing WLAN connections are then disconnected. If the WLAN connections are re-established, the new security key must be entered.

System language

NOTES ON THE SYSTEM LANGUAGE

This function allows you to determine the language for the menus and navigation announcements. The selected language affects the characters available for entry. The navigation announcements are not available in all languages. If a language is not available, the navigation announcements will be in English.

SETTING THE LANGUAGE

Multimedia system:

  >> Settings >> System >> Language

SETTING THE SYSTEM LANGUAGE

A list of the available system languages is shown.


- ▶ Select a language.
- The system language is switched to the selected language.

Setting the distance unit

Multimedia system:

  >> Settings >> System >> Display

 This function is not available in all countries.





- ▶ Select a unit for the distance.
- ▶ Activate [Additional Speedometer](#) for an additional display in the driver display.

Activating/deactivating system PIN protection

Multimedia system:



SETTING THE SYSTEM PIN

- ▶ Select [Set PIN](#).
- ▶ Enter a four-digit system PIN.
- ▶ Enter the four-digit system PIN again.
If both system PINs match, then the system PIN protection is active.

CHANGING THE SYSTEM PIN

- ▶ Select [Change Settings](#).
- ▶ Enter the current system PIN.
- ▶ Select [Change PIN](#).
- ▶ Set a new system PIN.

ACTIVATING SYSTEM PIN PROTECTION FOR SOFTWARE UPDATES

- ▶ Select [Protect Software Updates](#).
- ▶ Activate or deactivate the function.

Configuring suggestions

Multimedia system:



- ▶ Select .
- ▶ Switch the options on or off individually.

If an option is switched on and sufficient data has been gathered, personalized suggestions based on your user behavior will be offered to you. These are, for example, navigation destinations visited, phone numbers dialed as well as suggestions based on your music preferences.

Navigation

When [Allow Destination Suggestions](#) is switched on, the vehicle makes suggestions based on your visited navigation destinations.

If [Commuter Route](#) is switched on, the navigation automatically detects that the vehicle is on a commuter route.

Calls & Messages

Suggestions are offered for numbers dialed and messages sent.

Comfort


The vehicle makes suggestions based on the use of your comfort functions, e.g. which massage program should be started at what time.

Entertainment

Suggestions are offered for the currently played media source. Suggestions are also made for online digital services, e.g. Spotify, TuneIn Radio and streaming services, and for categories, e.g. genre, artist and mood.

Vehicle

The suggestions for vehicle functions such as Parking Assist PARKTRONIC and the vehicle level settings are displayed on the zero layer.





The zero layer is your own personalized user interface with the digital map in the foreground and the applications that you use the most. You can switch between the zero layer and the home screen with a classic menu.

Online Voice Services

The suggestions are made available online based on your voice input and are offered on the zero layer.

 The suggestions offered depend on the equipment.

Deleting collected suggestions

Multimedia system:

   Settings  System  Suggestions

▶ Select .

▶ Select **Yes**.

The suggestions are reset.

Software update

INFORMATION ON SOFTWARE UPDATES

Software updates keep your vehicle and the related systems up-to-date and prevent security flaws.

Software updates are available online for vehicle components such as control units, convenience systems, locking and safety systems, driver assistance systems, suspension and drive systems as well as for the MBUX multimedia system. Software updates are available via the communication module or a Wi-Fi connection to an external hotspot.

The navigation maps are also updated via updates from external storage media (e.g. USB flash drive).

Install available software updates regularly. Otherwise the security of your MBUX multimedia system and individual vehicle components cannot be ensured.

 Software updates can be protected with a system PIN. Further information about the system PIN (→ page 523).

Further information about software updates can be found at <https://me.secure.mercedes-benz.com>.

CARRYING OUT SOFTWARE UPDATES

Requirements:

FOR SOFTWARE UPDATES VIA THE COMMUNICATION MODULE AND WLAN:

- Your vehicle is linked to a Mercedes me user account (→ page 613).
- Software updates without Mercedes me user account: The **Allow Software Updates** option is activated in the **Software Update** menu.
- For software updates via the communication module: an Internet connection exists via the communication module (→ page 620).
- For software updates via Wi-Fi: a connection to an external Wi-Fi hotspot exists (→ page 621).

 Depending on the software update, this is started via the  communication module,  Wi-Fi or an  external storage medium.



 Online software updates cannot be performed via external WLAN hotspots that are encrypted via TKIP.

 If the WLAN hotspot requires logging in via the browser, once the connection is successfully established the browser will open in order to start the update. To start the download follow the instructions in the browser.

Multimedia system:



STARTING A MAP UPDATE FROM AN EXTERNAL STORAGE MEDIUM

- ▶ Connect the storage medium with the vehicle via a media interface.
A message about an available map update appears on the central display.
- ▶ Select the message.
- ▶ Select **Start**.
The map update is started.

STARTING THE SOFTWARE UPDATE VIA THE COMMUNICATION MODULE

If the **Automatic Online Update** option is active, available software updates are downloaded and installed automatically. Activate the option in order to always keep your vehicle up-to-date and avoid security flaws.

- ▶ Select **Automatic Online Update**.
The software update is downloaded and installed automatically.

If the option is deactivated, you will be informed of new software updates once. The updates are available for downloading for a limited period of time.

- ▶ Select an update from the list of available updates.
- ▶ Start the update.
The software update is downloaded and installed automatically.

STARTING A SOFTWARE UPDATE VIA WI-FI

Some software updates require an additional connection to a Wi-Fi hotspot. The connection to an external hotspot can be established when the software update is started.

- ▶ Select an update from the list of available updates.
- ▶ Start the update.
- ▶ Establish the connection to a Wi-Fi hotspot.
The update is downloaded and installed automatically.


For software updates requiring a safe vehicle status: when the last installation step is reached, a message appears on the central display after the vehicle is switched off. Follow the step-by-step instructions on the central display to complete the installation.

There are software updates that can only be installed when the vehicle is safely parked, there are no more people in the vehicle and the vehicle is locked.

INSTALLING SOFTWARE UPDATES

Software updates are installed automatically after they are downloaded. As soon as the software update has been completed, a message appears in the central display. It may be necessary to restart the MBUX multimedia system.

Some software updates require a safe vehicle status for the installation to be completed. They can only be carried out in a safely parked vehicle with the vehicle switched off. If this is necessary, a message appears on the central display after the vehicle is switched off.





- ▶ Follow the instructions on the central display.

For some software updates, you can set a time for installation. The installation is carried out automatically at the scheduled time. You do not need to be in the vehicle during installation. Note that the planned installation is canceled as soon as the vehicle door is opened.

If an installation is available where you can set the time, a message appears on the central display after the vehicle is switched off.

- ▶ Follow the instructions on the central display.

The vehicle cannot be used while these software updates are being installed. Make sure that no persons or animals are in the path of your vehicle. Events stored in the vehicle's control units can be overwritten.

AVAILABILITY OF THE DRIVER AND CENTRAL DISPLAY

During the installation of software updates, it is not possible to use the vehicle, driver display and central display. You may receive the following display messages when an installation is running:



-  The display message does not appear every time a software update is installed.

In rare cases, an error can occur during the installation. The multimedia system automatically attempts to restore the previous version.

If it is not possible to restore the previous version, the display message shown above appears every time the vehicle is started.

FAILURE OF THE DRIVER DISPLAY:

If the driver display fails or there is a malfunction, you may not recognize limitations in the functions of systems relevant to safety or the speed display, for example. This may impair the operating safety of the vehicle. Park the vehicle safely as soon as possible and notify a qualified specialist workshop. (→ page 841)

Further information about software updates can be found at <https://me.secure.mercedes-benz.com>

FAILURE OF THE CENTRAL DISPLAY:

If the central display fails or the display message shown above is shown continuously, several systems such as the rear view camera, Parking Assist PARKTRONIC or climate control are no longer available. Drive on carefully and consult a specialist workshop as soon as possible.

FRONT PASSENGER DISPLAY FAILURE (ONLY VEHICLES WITH MBUX HYPERSCREEN):

If the front passenger display has failed or a display message appears permanently, functions and systems are no longer available via the front passenger display. Visit a qualified specialist workshop.





Resetting the multimedia system (reset function)

WARNING

Risk of accident due to failure of central display functions

While the multimedia system is reset, its functions, such as the rear view camera, are not available.

- ▶ Only reset the multimedia system when the vehicle is stationary.

- ▶ Select **Reset**.

A query appears asking if the system should really be reset.

- ▶ Select **Yes**.

The multimedia system is reset to the factory settings. The multimedia system is restarted after the system reset.

-  Due to data protection, as well as the function of individual driving systems and driving safety systems, it is a requirement to carry out a complete system reset before selling the vehicle or transferring it to a third party, or after use as a hire car.

Requirements:

- The vehicle is switched on.
- The vehicle is stationary.

Multimedia system:



WHEN RESETTING THE SYSTEM, PERSONAL DATA AND SETTINGS ARE DELETED, FOR EXAMPLE:

- Connected devices
- Individual user profiles
- Biometric data

-  Data used and saved by the driving and driving safety systems as well as activated functions in the multimedia system are deleted.





< AMG TRACK PACE

Function of AMG TRACK PACE

 This function is an on-demand feature (→ page 96).

With AMG TRACK PACE, the driving characteristics on race tracks can be analyzed and optimized. You can drive previously saved race tracks (e.g. Hockenheimring), or record and save new tracks. The driven lap times are stored for every track. These can be analyzed and compared with other lap times to achieve the best possible race results. Additionally, acceleration and braking procedures can be measured and stored.

Note: Use AMG TRACK PACE only on closed-off routes outside the public traffic area. Adapt your driving style to your personal performance and environmental conditions. As the driver, you are solely responsible for driving your vehicle. Park your vehicle safely before operating the application.

Setting Track Race

Multimedia system:

 TRACK PACE  Track Race

RECORDING A NEW TRACK

- ▶ Select  New Track .

- ▶ At the desired starting point, select  Start recording.
The track recording starts at this point.

During track recording, sectors can be set to subdivide the track.

- ▶ Select  Set sector.
- ▶ To finish track recording, select  Stop recording or cross the starting line again.
- ▶ Confirm the prompt with Yes.
- ▶ Select the weather.

 The temperature is determined automatically.

- ▶ Enter a name.
- ▶ Press  to confirm.
The track is saved under the name you entered.

SEARCHING BY TRACK NAME

- ▶ Select  Search .
- ▶ Enter the track name.
Tracks with the searched name are displayed.





MEASURING THE TIME ON THE SAVED TRACK

- ▶  Select **All tracks**.
- ▶ Select the desired track.
- ▶ Select .
- ▶ If you are already at the starting line, select **Start Time Recording**.

or

- ▶ Select **Navigate to** to be navigated to the starting line.
Timekeeping begins automatically when the starting line has been crossed.

 Selecting  enables you to switch to the AR view of the track. Selecting  also allows you to switch to the telemetrics display.

- ▶ To end the timekeeping, select  **End timekeeping**.
- ▶ Confirm the prompt with **OK**.
- ▶ Select the weather.
- ▶ Select **Yes** to save the times recorded for this track.

FADING IN DISPLAYS DURING TRACK RACE

THE FOLLOWING DISPLAYS CAN BE SUPERIMPOSED:

- Tire temperature
- Miniature map
- Sector overview
- Engine data
- G-force display

- Lap overview

- ▶ Select  **Start Time Recording**.
- ▶ Select .

Selecting  on the active display deactivates it.

DISPLAYING THE ANALYSIS

- ▶  Select **All tracks**.

An overview of all the driven tracks appears.

- ▶ Select a track.
- ▶ Select a session.

THE FOLLOWING DATA ARE DISPLAYED:

- lap and sector times
- average and maximum permissible speed
- driver
- vehicle
- date
- weather
- ▶ Select **Add Recording** to use a different session as a reference value.
- ▶ Select  in order to return to the overview.
- ▶ Select **Diagram**.
- ▶ Set the desired parameters.
The analysis is displayed.





i THE FOLLOWING VALUES CAN BE SET FOR PARAMETERS, FOR EXAMPLE:

- Speed
- Longitudinal/lateral acceleration
- Steering angle
- Engine speed
- Engine oil / tire temperature

Based on the analysis, you can check and optimize driving characteristics for any position on the track.

EXPORTING TRACKS (USB)

- ▶ Select  **Tracks** .
An overview of all saved tracks appears.
- ▶ Select the desired track.
- ▶ Select options  of the desired track.
- ▶ Select **Export Track to....**
The selected track can be exported to a USB storage device connected to the vehicle.

EDITING TRACKS AND RECORDINGS

- ▶ Select  **Tracks** .
- ▶ Select the desired track.
- ▶ Select options  of the desired track.
- ▶ Select **Rename** or **Delete**.

or

- ▶ Select a track.
- ▶ Highlight the desired recording.
- ▶ Select  options.
- ▶ Select **Export to...** or **Delete**.

Setting Drag Race

Multimedia system:

 **TRACK PACE**  **Drag Race**

MEASURING ACCELERATION

- ▶ Select  **Drag race options**.
- ▶ Select **Acceleration**.
- ▶ Set a starting speed or select **Automatic**.
Measurement begins as soon as the specified starting speed has been reached.
- ▶ Set a target speed.
Measurement stops as soon as the specified target speed has been reached.
- ▶ Start off and begin the measurement.
Measurement begins when the vehicle accelerates.

Measurement can be stopped early by interrupting the acceleration procedure.

QUARTER MILE RACE

- ▶ Select  **Drag race options**.





- ▶ Select [Quarter Mile](#).
- ▶ Set a target distance.
Measurement stops as soon as the specified target distance has been reached.
- ▶ Start off and begin the measurement.
Measurement begins when the vehicle accelerates. Timing runs until the target distance or a maximum of one mile has been traveled.

Measurement can be stopped early by interrupting the acceleration procedure.

MEASURING BRAKING

- ▶  [Drag Race options](#)
- ▶ Select [Braking](#).
- ▶ Set a starting speed or select [Automatic](#).
- ▶ Start off and begin the measurement.
- ▶ Brake to a stop.
Measurement is incremental, in steps of 6 mph (10 km/h) to a stop. If the braking procedure is started e.g. at a speed of 98 mph (157 km/h), measurement starts as soon as 93 mph (150 km/h) has been reached.

STORING AND CALLING UP MEASURED VALUES

If measurement is completed or canceled, a prompt appears asking whether the measurement should be saved.

- ▶ Confirm the prompt with [OK](#) to save.

CALLING UP SAVED MEASUREMENTS

- ▶  Select [History](#).
- ▶ Select [Acceleration](#), [Quarter Mile](#) or [Braking](#).

- ▶ Select a measurement.
The desired measurement is displayed in detail.

or

- ▶ Delete a measurement.

Calling up the telemetry display


Multimedia system:



The telemetry display shows current vehicle data as a digital value and as a diagram. Up to four parameters can be selected that are to be shown in the display.

FOR EXAMPLE:

- Engine speed
 - Wheel angle
 - Speed
 - Steering angle
- ▶ Set the desired parameters.
 - ▶ Set the time.
The set parameters are evaluated in the diagram for the time set.





Configuring AMG TRACK PACE

Requirements:

To connect a mobile device to the TRACK PACE app:

- The TRACK PACE app is installed on the mobile device.
- The mobile device is connected to the multimedia system via Wi-Fi (→ page 521).

Multimedia system:



CONNECTING A MOBILE DEVICE VIA THE TRACK PACE APP

The TRACK PACE app makes it possible to record videos and to synchronize them with stored circuits.

- ▶ Select [TRACK PACE App](#).
- ▶ Select [Authorize a New Device](#).
- ▶ Start the TRACK PACE app on the device to be connected.
- ▶ Enter the code on the smartphone.
The device is authorized.

DE-AUTHORIZING THE MOBILE DEVICE

- ▶ Select [TRACK PACE App](#).
- ▶ Select a device.
- ▶ Confirm the prompt with [Yes](#).
The device is de-authorized.

SETTING ACOUSTIC FEEDBACK

- ▶ Select [Acoustic Feedback](#).
A scale with values from 0 to 10 is shown.
- ▶ Select a setting.

SHOWING STATISTICS

- ▶ Select [TRACK PACE Statistics](#).
Statistics on the current user profile are displayed.

THE FOLLOWING DATA ARE DISPLAYED:

- Driving time
- Distance driven
- Tracks recorded
- Track races recorded
- Laps recorded
- Drag races recorded
- Maximum speed

ACTIVATING THE AMBIENT LIGHTING


If this function is active, the vehicle interior is lit in red or green depending on the delta time.

- ▶ Select [Ambient Light](#).
- ▶ Activate or deactivate the function.

SETTING THE DASHCAM

If the vehicle is equipped with a dashcam, it can be used in AMG TRACK PACE.

- ▶ Select [Dashcam](#).
- ▶ Select [Track Race](#) or [Drag Race](#) and activate [Activate Recording](#).





- ▶ You can set which overlay is to be used in the recorded video under [Video Overlay Content](#).





< Drive system settings

Overview of the energy flow display in the multimedia system

The active components of the drive system are highlighted on the energy flow display. The energy flow between the individual components is shown in color.

THE COMPONENTS DISPLAYED ARE:

- State of charge of the high-voltage battery
- Electric motors (drive system)
- Energy flow
- High-voltage battery

THE ENERGY FLOW IS SHOWN IN DIFFERENT COLORS DEPENDING ON THE OPERATING STATUS:

- **White:** strong acceleration (boost effect)
- **Copper:** driving at constant speed or with moderate acceleration
- **Blue:** recuperation (charging the high-voltage battery) or overrun mode

Calling up the energy flow display

Multimedia system:



- ▶ Select **Energy Flow**.

The energy flow in the vehicle will be displayed.





< Fit & Healthy

Setting ENERGIZING seat kinetics

Requirements:

-  These functions are available only for fully electric seats with a memory function.

Multimedia system:



- ▶ Select [Seat Kinetics](#).

ENERGIZING seat kinetics can support back health by changing the seat position during a journey. This involves repeatedly stressing and relieving the muscles and joints by means of minor movements of the cushion and backrest.

STARTING SEAT KINETICS

- ▶ Select  for the desired seat.
The program will run for the set duration.

CONFIGURING SEAT KINETICS

- ▶ Select  for the desired seat.
- ▶ Select [Backrest](#), [Backrest and Seat Surface](#) or [Seat Surface](#).
- ▶ Select the desired duration for the selected seat.

Vehicles with multicontour seats:

In addition to the seat backrest and seat cushion, the lumbar support can be activated for the function.

- ▶ Activate or deactivate [Including Lumbar](#).

ENERGIZING COMFORT

OVERVIEW OF ENERGIZING COMFORT PROGRAMS

-  Note that the available programs and the associated functions depend on your vehicle equipment. Depending on your equipment, fewer functions may be available.

PROGRAM OVERVIEW

- **Refresh:** Can have a refreshing effect with short, cool puffs of air. The seat is ventilated, the vehicle interior is illuminated with cool colors and the program is completed with appropriate sound. In addition, the vibration massage in the cushions can loosen the muscles.
- **Warmth:** Can increase the comfort level of the vehicle occupants. Seat and steering wheel heating provide soothing warmth. The program is completed with unobtrusive sound and warm colors.
- **Vitality:** Can counteract diminishing attentiveness in monotonous driving situations. The activating stimulation of the vehicle occupants is carried out with invigorating sound, activating light and a vitalizing massage.



- **Joy:** Can promote a positive mood in the vehicle occupants as well as mental regeneration. This results from the activation of a massage program, friendly sound and illumination with suitable colors.
- **Well-being:** Can help relax the vehicle occupants. This is achieved through a relaxing massage program, friendly light and calming sound.
- **Forest Glade:** Can have a calming and soothing effect on the vehicle occupants thanks to the acoustics of the forest. The ambience is supported by a suitable animation, colors and sound.
- **Sounds of the Sea:** Can contribute to calming the vehicle occupants. The acoustics of wave sounds and seagulls in combination with other vehicle functions create a relaxing seashore atmosphere.
- **Summer Rain:** Can help relax the vehicle occupants. The relaxing effect of a rain shower can be experienced via acoustics and other vehicle functions inside the vehicle.
- **Power Nap:** The program consists of three phases.
 - Falling asleep phase: here relaxing music is played and the air is purified by ionization.
 - Sleeping phase: the active functions are deactivated or restricted as much as possible.
 - Waking phase: slightly stimulating music is played and the air is purified by ionization. Additionally, functions such as seat ventilation and a massage program are activated.
- **Training:** Can counteract the onset of muscle tension, limbs falling asleep or stress with targeted relaxation or stimulation exercises. The exercises are demonstrated in short videos.

The training consists of audio content and a brief animation. The audio content is conceived so that it can also be played back when you are driving. Animations are only shown when the vehicle is stationary. Always observe the traffic conditions if you are training when driving.
- **Tips:** The system gives auditory tips for possible exercises or measures for improving the comfort level of the vehicle occupants. By selecting the

desired area of the body you can receive targeted tips for the comfort level of this area.

Most programs that have been started for one seat can also be transferred simultaneously to another seat.

STARTING THE ENERGIZING COMFORT PROGRAM



WARNING

Increased risk of accidents when using the ENERGIZING COMFORT programs [Tips](#) and [Training](#)

The [Tips](#) and [Training](#) ENERGIZING COMFORT programs can distract you when driving.

- ▶ Only carry out exercises if the traffic situation permits.
- ▶ When listening to the tips, make sure you are aware of the traffic around you at all times.





WARNING

Risk of entrapment when using the ENERGIZING COMFORT program **Power Nap**

With the **Power Nap** ENERGIZING COMFORT program the following systems are moved automatically if required:

- Seats
- Side windows
- Sliding sunroof
- Roller sunblinds

This can cause you or another vehicle occupant to be trapped.

- ▶ Make sure that there is sufficient space behind the front seats.
- ▶ Make sure that no body parts are in the areas of movement.

Requirements:

- The vehicle is switched on.

FOR THE START OF **POWER NAP:**

- Only the power supply is on.
- The doors are closed.
- The vehicle is secured against rolling away.
- The state of charge of the high-voltage battery is sufficient for the use of the auxiliary climate control.

Multimedia system:

   **Comfort**  **ENERGIZING COMFORT**

STARTING AND STOPPING A PROGRAM

- ▶ Select a program.
- ▶ Select  for the desired seat.
- ▶ Select  to stop the program.

 If, during an active program, a function requirement is no longer met, a corresponding message appears. The active program is canceled.

CONFIGURING A PROGRAM


- ▶ Select a program.
- ▶ Select **Settings**.
- ▶ Switch the functions included in the program on or off.

SETTING THE DURATION

- ▶ Select a program.
- ▶ Select **Settings**.
- ▶ Select the desired duration.

STARTING A POWER NAP

- ▶ Select **Power Nap**.
- ▶ Select  for the desired seat.





WHEN THE VEHICLE IS STATIONARY, THE FOLLOWING ACTIONS ARE CARRIED OUT WHEN POWER NAP IS STARTED:

- The roller sunblinds are extended.
- The doors are locked.
- The seats are moved into the fully reclined position.
- The parking brake is applied.

▶ Select  to stop the program.

 The program is available for the rear seats while the vehicle is in motion. The above-mentioned functions may only have limited availability.

STARTING THE TRAINING PROGRAM

- ▶ Select **Training**.
- ▶ Select  a program.
- ▶ Select  to stop the training program.

 The animations demonstrating the exercises are faded out when the vehicle is in motion and you only hear the instructions.

STARTING TIPS

- ▶ Select **Tips**.
- ▶ Select  an area of the body.
- ▶ Select  to stop playback of the tip.

ENERGIZING COACH

FUNCTION OF THE ENERGIZING COACH

REQUIREMENTS:

- The **ENERGIZING COACH** service is activated in the Mercedes me portal or the Mercedes me App.
- The Mercedes me ENERGIZING app is installed on the mobile phone to use the service.

With ENERGIZING COACH you can evaluate the driving and driver situation. Depending on the situation, it offers recommendations for the start of an appropriate ENERGIZING COMFORT program.

THE FOLLOWING PROGRAMS COULD BE SUGGESTED:

- **Vitality**
As an activating program in monotonous driving situations or for long journey times, for example
Information on the vitality program see (→ page 535).
- **Joy**
As a balancing program in demanding driving situations
Information on the Joy program see (→ page 535).
- **Refresh**
As a refreshing program when temperatures rise
Information on the Refresh program; see (→ page 535).
- **Warmth**
As a warming program when temperatures drop
Information on the Warmth program; see (→ page 535).





By connecting a Garmin fitness tracker, for example the Garmin vívoactive® 3, additional information can be entered into the evaluation for the recommendation of an ENERGIZING COMFORT program. The additional information includes the stress level, that is calculated by the fitness tracker. The stress level is based primarily on the pulse rate.

REQUIREMENTS FOR THE INTEGRATION OF ADDITIONAL INFORMATION VIA A GARMIN FITNESS TRACKER:

- Your fitness tracker is connected with your Garmin account.
- Your Garmin account is connected with your Mercedes me user account.

If you wear your Garmin fitness tracker at night also, the sleep data is included in the evaluation of the ENERGIZING COACH.

REQUIREMENT FOR THE INTEGRATION OF THE SLEEP DATA:

- The Garmin fitness tracker is synchronized with the Garmin account before the beginning of the journey.

 If ATTENTION ASSIST determines an excessive lack of attention, ENERGIZING COACH makes no further suggestions. Further information about ATTENTION ASSIST (→ page 376).

CALLING UP THE ENERGIZING COACH DISPLAY

Requirements:

- The fitness tracker is connected with your Garmin account.
- Your Garmin account is connected with your Mercedes me user account in the Mercedes me ENERGIZING app.
- The mobile phone is connected to the multimedia system (→ page 591).

- You are logged in with your Mercedes me profile both in the vehicle and in the Mercedes me ENERGIZING app.

Multimedia system:

   Apps  ENERGIZING COACH

- ▶ Your current pulse as well as an evaluation of your pulse for the last 30 minutes driving time are shown.

A corresponding malfunction message is shown if there is no mobile phone connected or no pulse can be sent to the system for an extended period.

 Only pulse values in the range of 30 - 140 (possibly 150) bpm are shown on the central display. The pulse values have no medical validity but are only informative in nature and are therefore also not required to be accurate.





< Navigation and traffic

Switching navigation on

Multimedia system:



- ▶ Alternatively, press the  button on the steering wheel on the right (→ page 496).

The Zero Layer with the digital map is displayed.

Navigation overview

DIGITAL MAP AND USER-SPECIFIC APPLICATIONS



- 1 Navigation module (reduced view) or EQ module (reduced view)

Route guidance active:

Reduced view of the navigation module shows information relevant to the route, e.g. the next charging stop, the destination and a traffic delay

-  Ends the current route guidance

Tapping opens the navigation module in the expanded view with the [Route](#) (→ page 557)

Route guidance not active:

EQ module is shown in the reduced view

Tapping opens the EQ module in the expanded view with the charging functions (→ page 493)

- 2 Enters a destination
 - 3 Calls up the Control Center in the status line
 - 4 Current vehicle position (vehicle symbol or arrow)
 - 5 Display area with entertainment sources, phone, active applications and suggestions
 - 6 Searches for POIs, e.g. charging stations  and parking facilities , as well as sets map orientation  and map type
 - 7 Navigation window shows the next maneuver (zoomed out view) or the route monitor (zoomed in view)
- Route Guidance active: route monitor shows, e.g. route sections, upcoming driving maneuver with lane recommendations, charging stops, destination, traffic delays, 3D images at freeway exits, online content
-  Switches off navigation announcements
 -  Switches on navigation announcements

THE FOLLOWING MAP ORIENTATIONS 6 ARE AVAILABLE:

- 2D and to the north
- 2D and in the direction of travel
- 3D and in the direction of travel





- Map with complete route

 If the map is moved, the map switches between 3D direction of travel and 2D north orientation.

THE FOLLOWING MAP TYPES ARE AVAILABLE:

- Daytime display
- Night-time display
- Satellite map

 If you notice a problem with the digital map, you can report it at <https://mapfeedback.here.com/#/report>.

You can watch an animation on this topic via the following link:

Destination entry

NOTES ON DESTINATION ENTRY



WARNING

Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

ENTERING A POI OR ADDRESS

Requirements:

Observe the notes on destination entry (→ page 541).

- **For the online search:**
 - There is an Internet connection.
 - Mercedes me connect is available.
 - The vehicle is connected with the user account and you have accepted the Mercedes me connect terms of use.
 - Further information can be found at: <https://www.mercedes.me>





- The service is available.
- The service has been activated at an authorized Mercedes-Benz Center.

 If Online Search is not available, the search is performed using the data of the digital map.

Multimedia system:



Example: entering a POI or address

-  Input line
-  POI search
-  Selects destination search, displays further destination searches with double arrow
-  Deletes the last character entered
-  Hides the keypad
-  Switches to handwriting recognition (→ page 514)
-  Starts the MBUX Voice Assistant (→ page 475)

-  Sets the written language
-  Switches to digits and special characters
-  Switches to upper-case or lower-case letters

- ▶ Enter a destination. The entries can be made in any order.
The search results are displayed in a list.

 Online search results for POIs may contain additional information, for example opening times and ratings. The information is provided by an online map service.
This online function is not available in all countries.

THE FOLLOWING ENTRIES CAN BE MADE, FOR EXAMPLE IN :


- city, street, house number or street, city
- ZIP code
- POI name or POI category, e.g. [Restaurants](#)
- city, POI name
- Contact name
- Geo-coordinates (→ page 545)

- ▶ Hide the keyboard with .

- ▶ Select the destination in the list.

The following menu shows the selected destination with the address information and a corresponding map section.

The menu enables the route to be calculated.





SELECTING A DESTINATION SUGGESTION

Requirements

- The [Allow Destination Suggestions](#) option is switched on (→ page 523).
- The multimedia system has gathered sufficient data in order to show destination suggestions.

Multimedia system:



- ▶ Select [Suggestions](#).

or

- ▶ Select a destination suggestion directly on the Zero Layer (→ page 490).
The route is calculated in the following menu.

 If [Suggestions](#) has been selected, a menu is available via . The menu offers settings for the suggestions and memory functions.

 Managing destination suggestions (→ page 568).

SELECTING PREVIOUS DESTINATIONS

Multimedia system:



- ▶ Select [Previous Destinations](#).
- ▶ Select the destination.
The following menu enables the route to be calculated.

 You can save a destination as a favorite (→ page 568).

SELECTING A POI

Requirements:

- **For the use of personal POIs:**
 - A USB device is connected with the multimedia system .
 - Personal POIs with the GPS Exchange format (.gpx) have been saved in the PersonalPOI folder on the USB device.

Multimedia system:



- ▶ Select [POIs](#).
- ▶ Select one of the displayed quick-access categories, e.g.  .
- ▶ Select the POI.
The following menu enables the route to be calculated.

or

- ▶ Select [All Categories](#) or [Personal POIs](#) (see requirements).
- ▶ Select the category.
- ▶ Select the POI.
The following menu enables the route to be calculated.





SETTING A SEARCH FILTER AFTER SELECTING A POI CATEGORY

THE PRESET SEARCH POSITION DEPENDS ON THE STATUS OF THE ROUTE GUIDANCE:

- If route guidance is not active, [In the Vicinity](#) is searched.
 - If route guidance is active, [Along the Route](#) is searched.
- ▶ When the search results are displayed, select [Filter](#).
 - ▶ Select the search position, e.g. [In the Vicinity](#).
 - ▶ If a route with intermediate destinations already exists and [Near Destination](#) has been selected in the search filters, the destination is selected for the search.

or

- ▶ Select the desired traveling time to the point of interest.
- ▶ Select [Search Results](#).

CONFIGURING CATEGORIES FOR QUICK ACCESS

THE CATEGORIES ARE DISPLAYED:

- As symbols after calling up the destination entry via 
 - As a list after calling up [All Categories](#)
- ▶ In the POI menu, select [All Categories](#).
 - ▶ Select  or  for a category.
Tapping on  adds the category.
Tapping on  removes the category.

- ▶ Use  to change back.

The new categories are shown after the destination entry is called up the next time.

 If all available quick-access positions are full, select the category to be replaced.

CHANGING THE ORDER OF QUICK-ACCESS CATEGORIES

- ▶ In the POI menu, press and hold a category for quick access.
- ▶ Tap on the arrows next to the selected category.
The arrows for the other categories are grayed out.
- ▶ Drag the category up or down.
- ▶ Select .

DELETING QUICK-ACCESS CATEGORIES

- ▶ In the POI menu, press and hold a category for quick access.
- ▶ Select  for the chosen category.
- ▶ Select [Delete](#).
- ▶ Select .

CHANGING CATEGORIES FOR PERSONAL POIS

- ▶ Select [Personal POIs](#).
- ▶ Press on a category as long as is necessary until a menu appears.
- ▶ Select [Change name](#) and enter a name.
- ▶ Select [Change Icon](#) and select a symbol.





- ▶ Select **Delete** and confirm the prompt with **Yes**.

SELECTING A CONTACT FOR DESTINATION ENTRY

Requirements

- A mobile phone is connected to the multimedia system (→ page 591).
- The contacts from the mobile phone have been downloaded .
- The contact has a navigable address.
- The address data can be located on the digital map.

Multimedia system:



- ▶ Enter a contact in the entry line.
- ▶ Select the address.

Alternatively, after calling up the destination entry, you can enter the name of a contact in the search field.

ENTERING GEO-COORDINATES

Multimedia system:



- ▶ Enter the geo-coordinates as latitude and longitude.

EXAMPLES OF INPUT FORMATS:

- 47°58'11"N 7°57'25"E (degrees, minutes and seconds)
 - 47.969722 7.956944 (decimal degrees)
- ▶ Confirm the entry.
The following menu enables the route to be calculated.

SELECTING A DESTINATION ON THE MAP

Multimedia system:



- ▶ If necessary, move the map (→ page 574).
- ▶ Press and hold on the map.
Available destinations are displayed.

or

- ▶ Briefly press on a POI symbol.
The POI is selected. If there are several POIs at this map position, a list appears.
- ▶ Select the destination in the **Selected Objects** list.
The following menu enables the route to be calculated.

SELECTING A DESTINATION FROM FAVORITES

Requirements:

- Destinations are saved as favorites.
Save a previous destination or a destination suggestion as a favorite (→ page 568).

Multimedia system:



- ▶ Select **Favorites**.
- ▶ Select a favorite.
The following menu enables the route to be calculated.





ADDRESSES FOR HOME AND WORK ARE ALREADY SET

- ▶ Select [Home](#) or [Work](#).
The route is calculated in the following menu.

ADDRESSES FOR HOME AND WORK ARE NOT YET SET

- ▶ Select [Home](#) or [Work](#).
The prompt [No "Home" Address Available Set Address Now?](#) appears, for example.
- ▶ Select [Yes](#).
- ▶ Search for or select the address.
- ▶ Select [Save](#).

DELETING FAVORITES

- ▶ Select  for a favorite.
- ▶ Select [Delete](#).

or

- ▶ Select [Delete All](#).
- ▶ Confirm the prompt.
When all the favorites have been deleted, [Add Favorite](#) is available, for example.

SELECTING RECEIVED DESTINATIONS

Requirements:

- There is an Internet connection for receiving external destinations.
- A destination has been sent to the vehicle.
- Destinations have been shared from another seat in the vehicle.

Multimedia system:



The vehicle can receive destinations from services or apps. You will be informed when a destination is received.

- ▶ Select [Received Destinations](#).
- ▶ Select a destination.
The route is calculated in the following menu.

 You can save a received destination in the favorites
(→ page 568).

DELETING RECEIVED DESTINATIONS

- ▶ Delete a destination with .

or

- ▶ Select [Delete All](#).

Route

CALCULATING A ROUTE WITH ELECTRIC INTELLIGENCE

Requirements:

- The destination has been entered.
- The destination address is shown.
- **For Navigation with Electric Intelligence:**
 - Mercedes me connect is available.
 - You have a Mercedes me connect user account and the vehicle is connected with the account.





- The "Navigation with Electric Intelligence" service is available and activated in the Mercedes me Portal.
The services "Navigation with Electric Intelligence", "Display of charging stations" and "Mercedes me Charge" are required for optimal function.
- The **Plan Charging Stops** route option is switched on (→ page 549).



Example: detailed display

- ① Saves destination as a favourite (**Plan Charging Stops** is switched on)
Calls up alternative routes (**Plan Charging Stops** is switched off)
- ② Calculates the route and starts route guidance
- ③ Selects a point of interest in the vicinity of the destination
- ④ Destination information, online content (e.g. weather information), saves destination as a favourite, shares destination

The route with Electric Intelligence is automatically and intelligently calculated to the destination. This is updated during route guidance. The route with Electric Intelligence contains the required charging stops as intermediate destinations. The charging stations are determined taking account of the driving distance and the estimated charging times.

- ▶ Select one of the options.

 When the **Plan Charging Stops** route option is switched off, a route without charging stations is calculated.

SAVES A DESTINATION AS A FAVOURITE

- ▶ Select  **Favorite** .
- ▶ Select an option.

CALLING UP THE ROUTE OVERVIEW

 When **Plan Charging Stops** is switched off, this option is available instead of the favourites function.


- ▶ Select **Routes**.
- ▶ Select an alternative route.

STARTING ROUTE GUIDANCE

- ▶ Select  **Let's Go!** .

CALLING UP THE DETAILED DISPLAY WITH DESTINATION ADDRESS

- ▶ Pull the bar above the  **Let's Go!** symbol upwards.
Depending on the destination selection and availability, online content, for example ratings, prices and weather information, is shown.
If the destination is in a different time zone, a message is displayed.
- ▶ **To share a destination:** select  **Share**.
This option allows you to scan the displayed QR code.





- ▶ **To call up an Internet address:** if a web address is available, select [Browser](#).
- ▶ **To call the destination:** if a telephone number is available, select [Call](#).

SEARCHING FOR POIS IN THE VICINITY OF THE DESTINATION SHOWN

- ▶ Select [In The Vicinity](#).
- ▶ Search using categories, enter a search entry or search for a personal POI (→ page 543).

ADDING AN INTERMEDIATE DESTINATION TO THE EXISTING ROUTE OR STARTING A NEW ROUTE GUIDANCE

- ▶ Select  [Add](#).
The selected destination address is set as the next intermediate destination. Route guidance begins.
- ▶ **There are already four intermediate destinations:** confirm the prompt with [Yes](#) and select an intermediate destinations in the route overview (→ page 557), that should be overwritten with the new intermediate destination.

or

- ▶ Select  [Replace](#).
The selected destination address is set as a new destination. Route guidance begins.

IF YOU CALL UP THE MENU DURING ROUTE GUIDANCE, MORE OPTIONS ARE AVAILABLE:

- To change the order of destinations, select [Move](#) (→ page 559).
- To delete the destination, select [Delete](#) (→ page 559).

- To end route guidance, select [Cancel Route Guidance](#).

OVERVIEW: NAVIGATION WITH ELECTRIC INTELLIGENCE

If the [Plan Charging Stops](#) route option is enabled, the optimal route based on time is calculated with the required charging stops. The charging stops are determined taking into account the route and charging times and are set as intermediate destinations for route guidance.

Navigation with Electric Intelligence constantly checks a large number of influencing variables, e.g. specifications for the climate control in the vehicle interior or changes in the weather. For each section of the route, the current energy requirement is calculated from the high-voltage battery. The multimedia system determines the ideal charging stations along the route based on availability and charging power.

For each charging stop, the required amount of energy and the expected charging time is calculated and displayed. If the driver wishes, they will be informed by a notification on their mobile phone when the required state of charge is reached. The high-voltage battery continues to charge until the process is interrupted by the driver.

-  Observe the notes on charging the high-voltage battery (→ page 329).

You can influence the route calculated by the Navigation with Electric Intelligence.

The options "Ignore charging station" and "Add charging station" are available for this purpose (→ page 557).





i NAVIGATION WITH ELECTRIC INTELLIGENCE ATTEMPTS TO SHORTEN THE TOTAL TRAVEL TIME, IF NECESSARY, BY USING THE FOLLOWING CHARGING STRATEGIES:

- Charge twice briefly with high charging power instead of charging once for a long time with low charging power
- Charge once briefly with low charging power to reach a charging station with higher charging power

NAVIGATION WITH ELECTRIC INTELLIGENCE USES THE FOLLOWING DATA:

- Online Route
Route calculation establishes an Online Route.
The Online Route is continuously updated during the journey, e.g. if traffic information is available.
- Specific vehicle information
The current state of charge of the high-voltage battery and electrical consumption are taken into account, for example.
- Charging stations
These are made available as intermediate destinations in the Online Route.

i This function is not available in all countries.

You can watch an animation on this topic via the following link:

SWITCHING ON THE ELECTRIC INTELLIGENCE ROUTE OPTION

Multimedia system:



- ▶ Switch on the [Plan Charging Stops](#) route option.

If the route has been calculated and the state of charge of the high-voltage battery is not sufficient to reach the destination, charging stations are set automatically as intermediate destinations.

i This function is not available in all countries.

SELECTING SETTINGS FOR CHARGING STATIONS ON THE ROUTE

Requirements:

- The "Navigation with Electric Intelligence" service is available and activated in the Mercedes me Portal.
The services "Navigation with Electric Intelligence", "Display of charging stations" and "Mercedes me Charge" are required for optimal function.


Multimedia system:



SETTING THE STATE OF CHARGE OF THE HIGH-VOLTAGE BATTERY WHEN THE CHARGING STATION AND DESTINATION ARE REACHED

- ▶ Select [State of Charge at Destination](#) or [State of Charge at Charging Stations](#).
- ▶ Move the control knob to the left or right and set the preferred state of charge in percent (%).

To reach a charging station, the system uses the battery capacity, e.g. up to 10 % residual energy content (state of charge) or even less. The [Min.](#) message appears on the central display. You can increase this state of charge for the





arrival at the charging station and destination, e.g. to 25 % at the charging station and 50 % at the destination.

IN THE EVENT OF INCREASED ENERGY CONSUMPTION WHILE DRIVING, E.G. WITH HEADWIND, THE FOLLOWING OPTIONS ARE AVAILABLE FROM THE SYSTEM:

- The charging station is safely reached even at states of charge of less than 10 %.
- Navigation with Electric Intelligence selects a closer charging station for the route.

If a charging facility is available at the destination, the state of charge can be lowered below 10 %. The **Min.** message appears on the central display. Make sure that the range monitor is switched on.

When planning a route, you can enter another destination or the return journey. The Navigation with Electric Intelligence then takes into account the required state of charge at the destination. This ensures that an optimal charging station or the new destination is reached safely on the onward journey.

SELECTING A PROVIDER FOR CHARGING STATIONS

- ▶ Activate or deactivate **Mercedes me Charge**.

If the option is activated, only charging stations payable with Mercedes me Charge are taken into account when selecting the charging station.

- ▶ Activate **All**.

All charging stations known to the navigation system are taken into account when calculating routes with Electric Intelligence, regardless of the type of payment.

It may be necessary to register with the provider.

If route guidance is active, the high-voltage battery is tempered before a charging stop depending on the state of charge and the battery temperature.

SWITCHING THE RANGE MONITOR ON OR OFF

Multimedia system:



The activated range monitoring assists with messages on the driver and central display to ensure safe arrival at the destination.

- ▶ Activate or deactivate **Range Monitor**.

To reach the destination with the state of charge set by the driver, the range is permanently monitored when the option is switched on.

If necessary, the range monitor in the speedometer shows a recommended maximum speed and informs you in the driver display, e.g. with the message **Avoid additional charging stop: Drive less than 60 mph**.

Tips for saving energy are then also shown on the central display while driving.

or



THE RECOMMENDED MAXIMUM SPEED IS ACCOUNTED FOR BY THE FOLLOWING DRIVING SYSTEMS:

- Active Distance Assist DISTRONIC (→ page 382)
- Cruise control (→ page 377)

i This function is not available in all countries.

SHOWING CHARGING STATIONS ON THE MAP

Requirements:

- **For the display of online charging stations:**
 - Mercedes me connect is available.
 - You have a Mercedes me connect user account and the vehicle is connected with the account.
 - The "Display of charging stations" service is available and activated in the Mercedes me Portal.

Multimedia system:



- ▶ Select **Plan Charging Stops**.

DISPLAYING ON-BOARD CHARGING STATIONS

On-board charging stations are included in the map data of the MBUX multimedia system navigation. The data on these charging stations is not updated regularly. In contrast, online charging stations are transmitted to the vehicle via an Internet connection and displayed on the map.

- ▶ Select **POI Symbols** .

- ▶ Select **All Categories** .

- ▶ Switch on the **Charging Stations** category.

YOU CAN RECOGNIZE CHARGING STATIONS IN THE VICINITY OF THE CURRENT VEHICLE POSITION ON THE MAP BY THE FOLLOWING SYMBOLS:

- **Online charging stations**
The charging power and availability are shown in the symbol for the charging station using arrows and a status indicator.
- **On-board charging stations**
The charging stations are shown on the map with white symbols without detailed information.

i The display of the online charging stations is not available in all countries.

PAYING FOR CHARGING ON A ROUTE WITH MERCEDES-BENZ CHARGE

Requirements:

- The Mercedes-Benz Charge service is available and booked in the Mercedes-Benz Portal.
- The "Display of Charging Stations" and "Mercedes-Benz Charge" services are activated.
- **To select the charging station using Navigation with Electric Intelligence:** the "Navigation with Electric Intelligence" service is activated and the **Plan Charging Stops** option is switched on in the multimedia system.
- **For authentication at the charging station:** after activation in the Mercedes-Benz Portal, you have concluded a charging contract with your payment details with the respective contractual partners.



- **For authentication using the app:** the Mercedes me App is installed on the external device, e.g. tablet or smartphone.
- For charging stations without the ability to be unlocked using the app, you have purchased an RFID card for the contractual partner.

 This function is not available in all countries.

Multimedia system:



 OBSERVE THE FOLLOWING INFORMATION:

- Read the notes on charging the high-voltage battery (→ page 329).
- Read the notes on charging the high-voltage battery at the charging station (→ page 333) and (→ page 334).
- **Before selection of a charging station:** the data for the charging stations is based on the online content available from the respective third-party provider.
- Observe the local information and conditions.

-  With the Plug & Charge charging function from Mercedes-Benz Charge, you can charge the vehicle at public Plug & Charge-compatible charging stations. The charging process starts immediately when the charging cable is plugged into the charging station. Observe the instructions on and/or at the charging station. No further authentication is required. Communication between the vehicle and the charging station takes place directly via the charging cable.

This charging function is not available in all countries.

- ▶ **To select a charging station:** tap on a symbol on the map for a charging station or on a group of symbols for several charging stations.

or

- ▶ Select a charging station as a POI and accept it in the list (→ page 543).

or

- ▶ When route guidance is active with Navigation with Electric Intelligence, select a charging stop  in the route overview (→ page 557).
- ▶ Select [Details](#).

When arriving at a charging station, the corresponding screen is automatically displayed if necessary.

THE FOLLOWING INFORMATION IS DISPLAYED ON THE CHARGING STATION (IF AVAILABLE):

- Name of the charging station operator
- Address of the charging station
- Plug with availability and information about charging power
- Opening times
- Name of the charging station
- Travel time and distance of the charging station from the vehicle
- Authentication method
- Contact information of the charging station operator
- General costs and charging costs
- Estimated charging costs and your available energy volumes, if available
- Display of available reviews and the ability to review with up to five stars





- Availability prognosis
- Information on green charging

Mercedes-Benz provides high-quality certificates of origin to ensure that an equivalent amount of electricity from renewable sources is fed into the grid for charging processes carried out via Mercedes me Charge.

- ▶ Calculate the route (→ page 546).

 If the function is available, the start/stop of the charging process can be selected.

AUTHENTICATION AT THE CHARGING STATION (START/STOP)

 During authentication, the contract data is checked at the charging station. If the check is successful, the charging process is authorized. Payment is made automatically via the payment method specified in the contract.

Depending on the charging station operator, authentication is first carried out at the charging station. The charging cable of the charging station is then unlocked. Alternatively, first plug the charging cable connector into the vehicle socket and then carry out authentication at the charging station.

 For some charging stations, unlocking the charging station via the app is not available. In this case use your RFID card to activate the charging process (if available).

- ▶ In the app or on the MBUX multimedia system, select a charging station in the map menu.

- ▶ Display the details using the widget (program symbol).
- ▶ Select [Start charging process](#).
The charging process starts. In addition, the payment agreement saved with the third-party provider is authorized.
- ▶ If required, enter the PIN for personalization.
- ▶ Confirm the action.
- ▶ If required, select the connector ID from the list shown.
The selected charge port is unlocked.
- ▶ Start the charging process.
The start of the charging process is shown.
- ▶ Select the [Stop charging process](#) display button in the app.
The charging process is ended.
Payment is processed automatically.

IF DATA FOR THIRD-PARTY PROVIDERS IS AVAILABLE, YOU WILL RECEIVE THIS INFORMATION:

- Overview of the charging process
- Estimated cost

 There may be differences between the costs listed and the costs billed.

You can watch an animation on this topic via the following link:

OVERVIEW OF THE RANGE ON MAP SERVICE

If there are only a few fast-charging stations or charging stations available within the vehicle's electric range, the service warns you with a notification.





The notification recommends charging stations made available to the service by charging station providers/operators.

THE FUNCTION IS AVAILABLE UNDER THE FOLLOWING CONDITIONS:

- The chargeable "Range on Map" service is available and activated in the Mercedes me Portal.
- The route type **Online routes** is switched off (→ page 555).

THERE ARE THREE NOTIFICATION TYPES:

- **Comfort warning**
There are no longer enough fast charging stations nearby.
- **Warning when electric range falls below 31 mi (50 km)**
As soon as the vehicle falls below the electric range of 31 mi (50 km), the next charging stations in the vicinity are suggested.
- **Critical warning**
There are less than five charging stations including fast charging stations nearby.

 If you do not want to receive notifications, deactivate the **Allow Notifications** option for the "Range on Map" service (→ page 507).

In addition, the electric range can be displayed on the map (→ page 579).

 If the electric range of the vehicle is less than 4 mi (6 km), there is no display on the map. If there are not enough charging stations available within this range, you will receive a notification.

 If the route type **Online routes** is switched on, you will not receive any notifications.

OVERVIEW OF CHARGING NEAR DESTINATION

THE FUNCTION IS AVAILABLE UNDER THE FOLLOWING CONDITIONS:

- The destination has been entered.
- The destination address is shown.
- **For Navigation with Electric Intelligence:**
 - Mercedes me connect is available.
 - You have a Mercedes me connect user account and the vehicle is connected with the account.
 - The "Navigation with Electric Intelligence" service is available and activated in the Mercedes me Portal.
The services "Navigation with Electric Intelligence", "Display of charging stations" and "Mercedes me Charge" are required for optimal function.

The function suggests the best possible charging stop near the destination from which you can reach the destination on foot.

THE DIGITAL MAP SHOWS THE FOLLOWING INFORMATION, FOR EXAMPLE:

- The route to the destination
- The route to the charging stop
- The pedestrian route from the charging stop to the destination and the walking time in minutes





THE FOLLOWING FUNCTIONS CAN BE USED, FOR EXAMPLE:

- Select the charging station as the destination and calculate the route.
- Move the map and reset the map to the current vehicle position.
- Change the map scale.
- Select additional map symbols, e.g. for displaying traffic information or hazard warnings from Car-2-X.

SELECTING A ROUTE TYPE

Multimedia system:



USING ONLINE ROUTES

The route is calculated as a fast route with a short journey time.

If available, you can select online routes.

 Online routes are not available in all countries and for all vehicles.

- ▶ **To use online routes:** switch on the option.

TAKING TRAFFIC INFORMATION FOR THE ROUTE INTO ACCOUNT

- ▶ Select **Reroute Based on Traffic** .
- ▶ Select one of the options.

EXPLANATION OF THE OPTIONS:

- **Automatic**
Traffic reports via Live Traffic Information are taken into account (→ page 568).
Live Traffic Information is not available in all countries.
- **On Request**

A prompt appears when a new route is detected with a shorter journey time based on traffic reports. You can continue to use the current route or use the dynamic route instead (→ page 555).

- **Off**

No traffic reports are taken into account for the route.

CALCULATING ALTERNATIVE ROUTES

Requirements:

- The **Plan Charging Stops** option is switched off (→ page 549).

Multimedia system:



- ▶ Activate **Route Overview after Start**.

Alternative routes are calculated for every route.


 When **Plan Charging Stops** is switched on, the route is calculated with Electric Intelligence.

ACCEPTING A DETOUR RECOMMENDATION AFTER A PROMPT

Requirements:

- **On Request** is switched on (→ page 555) in the **Reroute Based on Traffic** menu.
- Route guidance is active.
- There are traffic reports for the current route.

If a new route with a shorter driving time is determined, the current and new routes will be shown.





If another application is active, a notification is hidden.

- ▶ Confirm the notification.
- ▶ **To accept the new route:** select [Accept](#).
- ▶ **To maintain the current route:** select [Keep to Current Route](#).

SELECTING ROUTE OPTIONS

Multimedia system:



AVOIDING OR USING ROUTE SECTIONS, E.G. HIGHWAYS OR FERRIES

- ▶ Activate or deactivate the avoid option.
Avoid: the option is activated. The route avoids highways, for example.
Use: the option is deactivated. The route takes highways into consideration, for example.

 The selected route options cannot always be taken into account. Therefore, a route may include a ferry, for instance, even though the [Avoid Ferries](#) avoid option is enabled. A message then appears and you will hear a corresponding message.

AVOIDING OR USING TOLL ROADS

The use of toll roads requires a usage fee (toll).

- ▶ Select [Toll Roads](#) .
- ▶ Activate or deactivate [Avoid All](#).
 If the option is activated, the route avoids toll roads.
 If the option is deactivated, the route takes toll roads into account.

or

- ▶ Select an option for [Cash or Card Payment](#) or [Electronic Billing](#).
Avoid: the route avoids toll roads with the selected method of payment.
Use: the route takes into account roads that require a toll corresponding with the payment type selected.

USING CARPOOL LANES

When using carpool lanes, observe the applicable legal requirements as well as any conditions pertaining to when and where such lanes may be used. Carpool lanes are only available under certain conditions.

Carpool lanes are not available in all countries.


- ▶ Select [Carpool Lanes](#) .
- ▶ Select one of the options.

THE FOLLOWING OPTIONS ARE AVAILABLE:

- [Avoid](#)
 If this option is selected, then no carpool lanes will be used for the route.
- [2 People](#)
- [At Least 3 People](#)
- [On Request](#)
 When this option is selected and a carpool lane is available, a prompt appears. You can continue to use the current route or select a route with the carpool lane.

AVOIDING AREAS

- ▶ Select [Avoid Areas](#)  (→ page 576).





SELECTING NOTIFICATIONS FOR THE ROUTE

Requirements:

- **For an audible indication when approaching a personal POI:** the USB device contains personal POIs.
- The USB device is connected with the multimedia system.
- The category in which the personal POI belongs is activated.

Multimedia system:



SWITCHING NAVIGATION ANNOUNCEMENTS ON OR OFF

- ▶ Activate [Reduced Messages](#).

If a driving instruction is available for a simple change in direction, you hear a brief announcement, e.g. "turn right in 600 ft (200 m)". The number of driving instructions along the route is minimized.

- ▶ Activate [Detailed Messages](#).

If a driving instruction is available and there is a complex driving situation, you hear supplementary information, e.g. "In 600 ft (200 m) turn right and continue to follow the major road". Additional driving instructions are issued for the route, for example on turning major roads.

- ▶ Activate [Announce Street Names](#).

The name of the street into which the vehicle should turn is announced.

 This option is not available in all countries and languages.

SWITCHING TRAFFIC ANNOUNCEMENTS ON OR OFF

- ▶ Activate or deactivate [Announce Traffic Warnings](#).

If available, traffic warnings are announced, e.g. before the end of traffic jams that pose a risk.

AUDIBLE INDICATION WHEN APPROACHING A PERSONAL POI

- ▶ Select [Personal POIs](#).

- ▶ Activate a category.


When approaching a personal POI in the selected category an audible indication will be issued.

DISPLAYING A ROUTE OVERVIEW WITH CHARGING STATION

Requirements:

- A destination is entered.

Multimedia system:

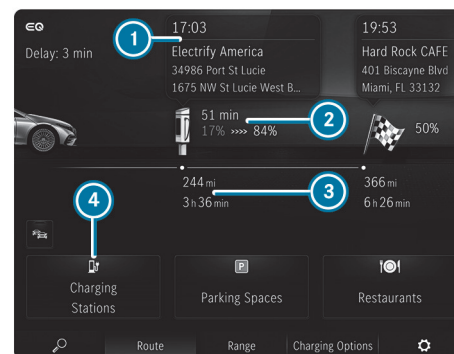

- ① Arrival time at charging stop, type of charging station
- ② Charging stop shows the charging time recommended by the Navigation with Electric Intelligence as well as states of charge on arrival and onward journey for an optimal travel time
- ③ Distance from current vehicle position and remaining driving time
- ④ Searches for an additional charging station



When route guidance is active, the charging stops, entered intermediate destinations the destination are shown.

DEPENDING ON THE ROUTE, TRAFFIC SITUATION AND AVAILABLE DATA, FURTHER INFORMATION IS DISPLAYED:

- Name, destination address
- Symbols for intermediate destination and destination
- Phone number (if available)
- Web address (if available)
- Traffic information

You can influence the route calculated by the Navigation with Electric Intelligence using options ① and ④.

- ▶ Select one of the options.

IGNORING A CHARGING STATION

If you do not want to drive to the selected charging station, it can be removed for the current route guidance. The Navigation with Electric Intelligence tries to plan the best possible alternative charging station for the route.

- ▶ Select ①.
The expected charging output, the dynamic charge level display as well as the current state of charge and the predicted charging target are displayed, for example.
- ▶ Select **Ignore**.
- ▶ Select **Ignore during this journey**.
The charging station is removed from the route.

 After selecting **Details**, the detailed information about the charging station is displayed.

ADDING A CHARGING STATION

If you want to drive to a charging station on the route earlier than planned, for example, you can search for an additional charging station. If the charging station is suitable for the route, it will be accepted by the Navigation with Electric Intelligence.

- ▶ Select ④.
- ▶ If necessary, filter the display of the charging stations according to the charging power.
- ▶ Select a charging station.

 You can also search for a charging station using the  symbol on the digital map or next to  **Where to?**(→ page 540).

PLANNING ROUTES

Requirements:

- A destination is entered.

Multimedia system:



- ▶ Enter the intermediate destination (→ page 40).
After entering the destination and new calculation of the route, the route overview is shown again. The route contains a new intermediate destination.



-  If there are already four intermediate destinations, delete an intermediate destination (→ page 559).

EDITING A ROUTE WITH INTERMEDIATE DESTINATIONS

Requirements:

- The destination and at least one intermediate destination have been entered.

Multimedia system:



CHANGING THE ORDER OF THE DESTINATIONS

- In the route overview, press and hold on a destination.
- Move the destination with  or .
- Tap on .
The editing mode is ended.

DELETING A DESTINATION

- In the route overview, press and hold on a destination.
- Tap on .
The editing mode is ended.

DISPLAYING THE ROUTE LIST

Multimedia system:



- Tap on the navigation window  (→ page 540).



Example: route list

-  Route sections with turning arrow, distance to change of direction, road number, road name
Current driving maneuver at the top of the list
Destination at the end of the list
-  Current vehicle position

The route sections are displayed in the navigation window. The route list is updated during the journey.


-  Freeway information shows the available service facilities. After selecting symbols, e.g. for car parks, service areas or freeway exits, the POI is adopted as an intermediate destination or destination.

- Swipe up or down.
- Select a route section.
The map section is displayed.
- To return to vehicle position:** select [Current Position](#).

SELECTING AN ALTERNATIVE ROUTE

Requirements:

- A route has already been created.





- The [Route Overview after Start](#) option is switched on (→ page 555).
- The [Plan Charging Stops](#) option is switched off (→ page 549).

 When [Plan Charging Stops](#) is switched on, the route is calculated with Electric Intelligence. Alternative routes are then not available.

Multimedia system:



The original route and alternative routes with indication of the travel time difference are displayed on the map. An alternative route can also be a faster route, but one that is significantly longer.

THE FOLLOWING ROUTE INFORMATION IS DISPLAYED:

- Driving time
 - Time of arrival
 - Distance to the destination
 - Avoid options based on the set route options
 - Driving time saved or lost compared with the original route
- ▶ When the alternative routes have been calculated, display the route in the navigation window by swiping to the right or left.

CHANGING ROUTE TYPE

- ▶ Select [Filter](#).
- ▶ Switching the route type on or off.

AVOIDING OR USING ROUTE OPTIONS

- ▶ Select [Filter](#).
- ▶ Switch the route options on or off (→ page 556).
- ▶ Confirm the settings with [Done](#).
- ▶ **To start route guidance to the alternative route:** select [Start](#).
- ▶ **To select an alternative route on the map:** touch any point on the alternative route.

The alternative route is highlighted.

ACTIVATING A COMMUTER ROUTE

Requirements:

- You have created a profile (→ page 501).
- The [Allow Destination Suggestions](#) option is switched on (→ page 523).
- The [Commuter Route](#) option is switched on.
- The multimedia system has gathered sufficient data in order to show destination suggestions.
- Routes have been learned for these destination suggestions.
- Route guidance is active.

 This commuter route is not available in all countries.

Multimedia system:



- ▶ Activate [Commuter Route](#).

The navigation system automatically detects that the vehicle is on a commuter route.



For the daily commuter route, traffic incidents on the route are also reported when driving without active route guidance.

- ▶ **To select commuter route:** select **Start**.

Route guidance begins without spoken driving instructions.

 A commuter route is suggested even with delays on the route.

- ▶ **To delete a commuter route:** select .

ADJUSTING THE ROUTE ON THE MAP

Requirements:

- A route has already been created.

You can change the course of the original route on the map. A new intermediate destination is set in the process.

 If the maximum number of intermediate destinations is reached, the function is not supported. Press the **OK** button to confirm the message.

- ▶ Press and hold on the route lightly.
A symbol appears. The route can be changed.
- ▶ Drag and hold the route with your finger to a desired map position.
The new route is displayed. The route is recalculated.
When the route is calculated, the journey time and distance are compared with the original route.

When the finger is pulled away from the display, the intermediate destination is shown on the map.

- ▶ Accept the route with **Confirm** or reject it with **Cancel** and return to the original route.

STARTING THE AUTOMATIC SERVICE STATION SEARCH

Requirements:

- ATTENTION ASSIST is activated (→ page 376).
- You are driving on a freeway.
- There are service stations along the route section ahead.

DRIVING SITUATION

The following notification is shown on the central display **ATTENTION ASSIST**
[Tap here to search for rest areas..](#)

- ▶ Confirm the notification.
The service station search starts. The available service stations along the route or in the vicinity of the vehicle's current position are displayed.
- ▶ Select a service station.
- ▶ Calculate the route with the service station as an  intermediate destination or as a  destination (→ page 546).
- ▶ **If there are already four intermediate destinations:** select **Yes** in the prompt.
The selected service station is entered in the route overview at position 1. Intermediate destination 4 is deleted. Route guidance begins.





STARTING AND EDITING A STORED ROUTE

Requirements:

- A USB device with stored routes is connected with the multimedia system (→ page 632).
- The route is stored in the "Routes" folder with the GPS Exchange data format (.gpx).

Multimedia system:



- ▶ Press the double arrow in the destination input line until **Saved Routes** is displayed.
- ▶ Select **Saved Routes**.

STARTING A SAVED ROUTE

- ▶ Select a route.
- ▶ Select **Start Route Guid.** from **Start** or **Start: from Current Position**.
Route guidance begins.

RENAMING A ROUTE

- ▶ Press on a route until a menu is shown.
- ▶ Select **Rename**.
- ▶ Enter the name.
- ▶ Select **OK**.

RECORDING AND STORING A ROUTE

Requirements:

- A USB device is connected with the multimedia system (→ page 632).

Multimedia system:



- ▶ Press the double arrow in the destination input line until **Saved Routes** is displayed.
- ▶ Select **Saved Routes**.

STARTING RECORDING

- ▶ Select **Start Recording**.
A white rectangle is displayed.
The route is stored on the USB device.

STOPPING RECORDING

- ▶ Press the white rectangle.
- ▶ Select **End Recording**.





Route guidance

NOTES ON ROUTE GUIDANCE

WARNING

Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Route guidance begins once a route has been calculated. The road and traffic rules and regulations always have priority over multimedia system driving instructions. Driving instructions are, for example navigation announcements, changes in direction and lane recommendations.

Changes in direction and lane recommendations are shown in the navigation window.

THE FOLLOWING DISPLAYS AND FUNCTIONS ARE ALSO AVAILABLE IN THE NAVIGATION WINDOW, FOR EXAMPLE:

- Route list
- Destination information

- Traffic information, e.g. length of traffic jam, delay
- Freeway facilities
- Car park search

If you do not follow the driving instructions or if you leave the calculated route, a new route is calculated automatically.

If, for example, the route is diverted or the direction of a one-way road has been reversed, driving instructions may deviate from the actual traffic situation.

Alternatives may be offered during route guidance, e.g. before passing a freeway exit road. The additional driving time for the journey along the freeway exit is shown.

For this reason, you must always observe road and traffic rules and regulations during your journey as well as the prevailing traffic conditions.

The route can differ from the ideal route, for example in the event of roadworks or incomplete digital map data.

NOTES ON SATELLITE RECEPTION

The correct function of the navigation system depends amongst other things on reception of the satellite system used. In certain situations satellite reception can be impaired, malfunction or even not be possible, e.g. in tunnels or in parking garages.

CHANGING DIRECTION OVERVIEW

CHANGES OF DIRECTION ARE SHOWN IN THE FOLLOWING DISPLAYS:

- Detailed image of the intersection
The display appears when you drive into an intersection.
- 3D image





The display appears when driving on intersection-free, multi-lane roads, for example at freeway exits and freeway interchanges.



Example: detailed image of the crossing with upcoming changes of direction

- ① Name of the street to turn into
- ② Change of direction arrow (also on the map)
- ③ Current distance to the change of direction




Example: 3D image of the upcoming change of direction

- ① Maneuver point
- ② Change of direction arrow (also on the map)
Larger map scales show change of direction points instead of change of direction arrows.
- ③ Current distance to the change of direction
- ④ Current vehicle position

THERE ARE THREE PHASES WHEN CHANGING DIRECTION:

- Preparation phase
If there is enough time between the changes of direction, the multimedia system prepares you for the upcoming change of direction. A navigation announcement is issued, e.g. "Prepare to turn right".
The navigation window shows: the direction information or the name of the road which is to be turned into as well as the distance to the change of direction.
- Announcement phase
The multimedia system announces the upcoming change of direction, e.g. by announcing "Turn right in 900 ft (300 m)".





When the **Auto Zoom** map orientation is switched off (→ page 578), a detailed representation of the intersection or a 3D image of the upcoming change in direction appears in the navigation window.

• Change-of-direction phase

The multimedia system announces the imminent change of direction, e.g. by announcing "Now turn right".

Example of 3D image: when the distance to maneuver point ① is shown with 0 ft (0 m) and the symbol for current vehicle position ④ has reached maneuver point ① the change in direction is carried out.

① Changes in direction are also displayed on the driver display and head-up display.

LANE RECOMMENDATIONS OVERVIEW



Example: lane recommendations

- ① Recommended lane (white arrow, blue background)
- ② Possible lane (white arrow)
- ③ Lane not recommended (gray arrow)

This display appears for multi-lane roads.

If the digital map contains the relevant data, lane recommendations are displayed in the navigation window.

EXPLANATION OF THE DISPLAYED LANES:

- Recommended lane
In this lane, you will be able to complete both the next change of direction and the one after that.
- Possible lane
In this lane, you will only be able to complete the next change of direction.
- Non-recommended lane
In this lane, you will not be able to complete the next change of direction without changing lane.

During the change of direction, new lanes may be added. Bus lanes are also shown.


① Lane recommendations are also displayed on the driver's display and head-up display.

USING FREEWAY INFORMATION

When driving on the freeway, upcoming freeway facilities and available service facilities are shown in the route list. These include car parks, service stations or freeway exits with service POIs, for example.

The entries are sorted according to increasing distance from the current vehicle position.

- ▶ Select an entry.





- ▶ If several service facilities are available, select a service facility from the list.
The destination address and the map position are shown.
- ▶ Calculate the route (→ page 546).

or

- ▶ Search for a POI in the vicinity.

or

- ▶ Use other functions, e.g. store the destination address of the service facility.

DESTINATION REACHED

Once the destination is reached, you will see the  checkered flag. Route guidance will now be complete. The navigation menu is shown.

When an intermediate destination has been reached, you will see the intermediate destination flag with the number of your  intermediate destination. Route guidance is continued.

SWITCHING NAVIGATION ANNOUNCEMENTS ON OR OFF

SWITCHING OFF

- ▶ Press the  button on the right of the steering wheel or on the MBUX multimedia system during a navigation announcement (→ page 511).
The **Spoken voice guidance has been deactivated.** message appears.

or

- ▶ In the navigation window, select  for an upcoming driving maneuver.
The symbol changes to .

SWITCHING ON

- ▶ Press the  button again on the right of the steering wheel or on the MBUX multimedia system.

or

- ▶ In the navigation window, select  for an upcoming driving maneuver.
The current navigation announcement is played.
The symbol changes to .

SWITCHING NAVIGATION ANNOUNCEMENTS ON OR OFF DURING A PHONE CALL

- ▶ When the zero layer is shown, press the  button on the right side on the steering wheel (→ page 496).

or

- ▶ Select  on the zero layer.
The applications are displayed.
- ▶ Select **Settings**.
- ▶ Select **System**.
- ▶ Select **Audio**.
- ▶ Select **Navi. And Traffic Announcements**.
- ▶ Activate or deactivate **Driving Recommendations During Call**.
- ▶ **To leave the menu:** select .





ADJUSTING THE VOLUME OF NAVIGATION ANNOUNCEMENTS

Multimedia system:



▶▶ Navi. And Traffic Announcements

▶ Select **Voice Guidance Volume**.

▶ Set the volume.

▶ **To leave the menu:** select .

ROUTE GUIDANCE IS ACTIVE

▶ Set the volume during a navigation announcement on the steering wheel or under the touchscreen (→ page 512).

SWITCHING AUDIO FADEOUT ON OR OFF DURING NAVIGATION ANNOUNCEMENTS

▶ Press the  button on the steering wheel on the right.

or

▶ Tap  on the central display.

▶ Select **Settings**.

▶ Select **System**.

▶ Select **Audio**.

▶ Select **Navi. And Traffic Announcements**.

▶ Activate or deactivate **Audio Fadeout During Navigation Announcements**.

▶ **To leave the menu:** select .

REPEATING NAVIGATION ANNOUNCEMENTS

Requirements

- A route has already been created.
- Route guidance is active.

Multimedia system:



▶ In the navigation window, select  for an upcoming driving maneuver.

▶ Select .

The current navigation announcement is repeated.

CANCELING ROUTE GUIDANCE

Requirements


- A route has already been created.
- Route guidance is active.

▶ Select  in the navigation module (→ page 540).

OVERVIEW OF OFF-ROAD STATUS DURING ROUTE GUIDANCE

Due to roadworks, for example, there may be differences between the data on the digital map and the actual course of the road. In such cases, the multimedia system will temporarily be unable to locate the vehicle's current position on the digital map. The vehicle is off-road. **Road Not Mapped** will be shown. Route guidance may be restricted.

When the vehicle is back on a road known to the multimedia system, route guidance continues as normal.





Destination

SAVING THE CURRENT VEHICLE POSITION

Multimedia system:



- ▶ When the map is shown, tap on the  current vehicle position.
- ▶ Select [Save Position](#).
- ▶ **To save as a favorite:** select [Save as Favorite](#) .
- ▶ **To save as "Home" address:** select [Home](#) .
- ▶ **To save as "Work" address:** select [Work](#) .

MANAGING PREVIOUS DESTINATIONS

Multimedia system:



- ▶ Select [Previous Destinations](#).

SAVING THE LAST DESTINATION AS A FAVORITE

- ▶ Select  for the last destination.
A menu appears.
- ▶ **To save as a favorite:** select [Save as Favorite](#) .
- ▶ **To save as "Home" address:** select [Home](#) .
- ▶ **To save as "Work" address:** select [Work](#) .

DELETING A PREVIOUS DESTINATION

- ▶ Select  for the last destination.
- ▶ Select [Delete](#).

or

- ▶ Select [Delete All](#).
- ▶ Confirm the prompt.
When all the favorites have been deleted, [Add Favorite](#) is available, for example.

EDITING DESTINATION SUGGESTIONS

Requirements:

- The [Allow Destination Suggestions](#) option is switched on (→ page 523).
- For the display of destination suggestions: the multimedia system has gathered sufficient data.

Multimedia system:



- ▶ Press and hold on a destination suggestion.
A menu appears.
- ▶ **To cancel a destination suggestion:** select [Do Not Suggest Now](#) or [No Longer Suggest](#).
- ▶ **To save a destination suggestion:** select [Save as Favorite](#), [Home](#) or [Work](#).

 Delete a destination suggestion from the favorites (→ page 545).

Route guidance with current traffic reports

TRAFFIC INFORMATION OVERVIEW

Current traffic reports are received with the Live Traffic Information subscription service.



 Live Traffic Information is not available in all countries.

The service updates the traffic situation via the Internet connection at short, regular intervals.

Information on the vehicle's position is regularly sent to Mercedes-Benz AG. The data is immediately rendered anonymous by Mercedes-Benz AG and forwarded to the traffic data provider. Using this data, traffic reports relevant to the vehicle's position are sent to the vehicle. The vehicle acts as a sensor for the flow of traffic and helps to improve the quality of the traffic reports.

 There may be differences between the traffic reports received and the actual road and traffic conditions.

IF YOU DO NOT WANT TO TRANSMIT THE VEHICLE POSITION, YOU HAVE THE FOLLOWING OPTIONS:

- You deactivate the service in the Mercedes me user account.
- You have the service deactivated at an authorized Mercedes-Benz Center.

 Further hazard warnings are received using the Car-to-X service (→ page 571).

SHOWING INFORMATION FROM THE SERVICE PROVIDER FOR LIVE TRAFFIC INFORMATION

Requirements:

- The vehicle is equipped with Live Traffic Information.

Multimedia system:

  >> Apps >> Mercedes me >> My Services
▶ Select [Live Traffic](#).

YOU HAVE THE FOLLOWING OPTIONS FOR EXTENDING THE SUBSCRIPTION:

- At any authorized Mercedes-Benz Center
- With a call to the Mercedes-Benz Customer Assistance Center via the me button (→ page 608)
- If the vehicle identification number (VIN) is linked to your Mercedes me user account, you can renew the subscription yourself. To do this, call up the user profile on the Mercedes me website after logging in with your Mercedes me user account.

DISPLAYING TRAFFIC INFORMATION ON THE MAP

Requirements:


- [Traffic Incidents](#) and [Free Flowing Traffic](#) are switched on (→ page 571).

Multimedia system:

 
▶ If necessary, move the map (→ page 574).

THE MAP SHOWS THE FOLLOWING TRAFFIC INFORMATION DEPENDING ON THE ACTIVATED SETTINGS:

- Traffic incidents
These are roadworks, road blocks and warning messages, for example.





When route guidance is active, the symbols for traffic incidents will be shown in color on the route. Off the route they are gray.

- Warning messages

Warning messages are shown as the  symbol.

Traffic safety information can be shown, e.g. if there are people on the road.

If the vehicle approaches a danger area, for example the end of a traffic jam in a dangerous position, the  symbol is shown on the map. If **Announce Traffic Warnings** is switched on and a message has been issued, an additional announcement is made.

- Traffic flow information:

- Traffic jam (red line)
- Slow-moving traffic (orange line)
- Heavy traffic (yellow line)
- Free-flowing traffic (green line)

- Display for traffic delays on the current route

The smallest value for the display for traffic delays is a minute.

SHOWING TRAFFIC INCIDENTS ON THE ROUTE

Requirements:

- The **Traffic Incidents** display is switched on (→ page 571).


Multimedia system:



If there are traffic incidents on the route, these are shown on the map and in the route overview.

-  With the MBUX Voice Assistant you can inform yourself about traffic incidents on your route. Ask, for example **How is the traffic**

on my route? or How is the traffic at home?. A voice output is issued.

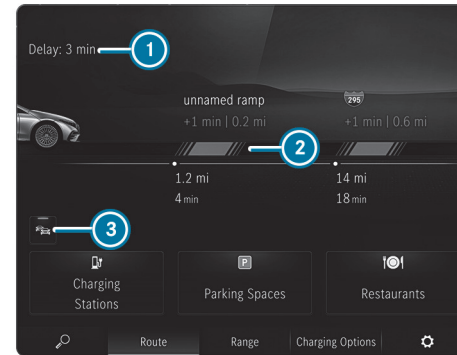

Example: traffic incidents on the route

- ① Delay
- ② Color display of traffic flow information, delay and length, road name or road number
- ③ Switches traffic information display on or off

DURING ACTIVE ROUTE GUIDANCE, THE TOTAL DELAY ON THE ROUTE IS DISPLAYED:

- in the navigation system in the navigation window
- in other applications in the status line at the top

A traffic incident symbol is, for example  for roadworks. In the map several traffic incidents may be shown on top of each other. The traffic incident symbol shows a plus sign.



If available, the street number can be replaced by a street name or both the name and number.

- ▶ To see all of the traffic incidents on the route, swipe to the right or left. The route section is highlighted on the map.
- ▶ **To show detailed information in the route overview:** tap on a display in the route overview.
The detailed information is shown, for example the road section and the direction.

CALLING UP DETAILED INFORMATION ON THE MAP

- ▶ Tap on traffic flow information on the map, e.g. a red line for a traffic jam section.
The detail information is displayed.
- ▶ If several lines are shown on top of the other, then select an item of traffic flow information from the list.

SHOWING TRAFFIC INCIDENTS ON THE MAP

- ▶ Tap on a traffic incident symbol.
The detail information is displayed.
- ▶ **Several traffic incidents are in the immediate vicinity:** tap on the top traffic incident symbol and select from the list of traffic incidents.

SWITCHING THE TRAFFIC INFORMATION DISPLAY ON

Multimedia system:



- ▶ Select **View**.
- ▶ **Traffic**.

- ▶ Activate **Traffic Incidents** and **Free Flowing Traffic**.

Traffic incidents, for example roadworks, local area reports (e.g. fog) and warning messages, are shown on the route.

- ▶ **To switch traffic information in the quick-access on or off:** tap on  in the route overview (→ page 557).

The indicator lamp lights up or is off.

Car-to-X-Communication

CAR-TO-X-COMMUNICATION OVERVIEW

THE FOLLOWING REQUIREMENTS APPLY FOR THE CAR-TO-X-COMMUNICATION SERVICE:

- The vehicle is equipped with an MBUX multimedia system with navigation function.
- There is a subscription for the Live Traffic Information service.
- The Car-to-X-Communication service is activated in your Mercedes me user account.

 Car-to-X-Communication is available in selected countries.

The communication module automatically establishes an Internet connection once the vehicle is switched on. If there are any hazard warnings, they will be provided shortly thereafter. Depending on the mobile phone connection, provision takes place from within a second up to about a minute.





BENEFITS OF CAR-TO-X-COMMUNICATION:

- Dangers are automatically detected by the vehicle or can be reported by the driver. These are then sent to vehicles with Car-to-X-Communication in the immediate vicinity.
- If available, current details relating to hazard spots near the vehicle's current position are received.
This gives you sufficient time to adapt your driving style to the traffic conditions.

The use of Car-to-X-Communication requires the regular transmission of vehicle data to Mercedes-Benz AG. The data is then immediately pseudonymized by Mercedes-Benz AG. The vehicle data is deleted after an appropriate amount of time has elapsed (several weeks) and is not stored permanently.

-  Data which serves as identification is replaced during the pseudonymization process. In this way, your identity is protected against access by unauthorized third parties.

DISPLAYING HAZARD WARNINGS

Multimedia system:



If hazard warnings are available these can be shown as symbols on the map. The display depends on the settings for the [Traffic Incidents](#) option.

- ▶ Select [EQ](#).
- ▶ Select .
- ▶ Activate or deactivate [Traffic Incidents](#).
If the option is activated, all of the symbols are shown.

If the option is deactivated, the symbols are only shown when there is a hazard warning.

THE FOLLOWING HAZARDS MAY BE SHOWN ON THE MAP:

- Accidents and breakdowns
- Slippery roads, fog, crosswinds and heavy rain
- Hazards reported manually
- Vehicle with active hazard warning light
- Roadworks
- Additional hazards (if available)

-  If [Announce Traffic Warnings](#) is switched on (→ page 557), voice output can indicate a danger area.

SENDING HAZARD WARNINGS

REPORTING HAZARDS MANUALLY

-  Automatically detected hazard warnings are sent by the vehicle.

- ▶ When the map is shown, tap on the  current vehicle position.
The [Position](#) menu is shown.
- ▶ Select [Report Traffic Incident](#).
The [Thank you for supporting accident prevention!](#) message appears.





Route guidance with augmented reality

OVERVIEW OF ROUTE GUIDANCE WITH AUGMENTED REALITY

WARNING


Risk of accident and injury as a result of distraction, incorrect depiction or wrong interpretation of the display

The camera image of the augmented reality display is not suitable as a guide for driving.

- ▶ Always keep an eye on the actual traffic situation.
- ▶ Avoid extended observation of the camera image.

During route guidance with augmented reality a camera image with the real traffic scene is shown on the central display before a turning maneuver. The camera image includes additional information, for example arrows indicating a change of direction.

If the options are switched on and this additional information is available, road names and house numbers are displayed (→ page 574).

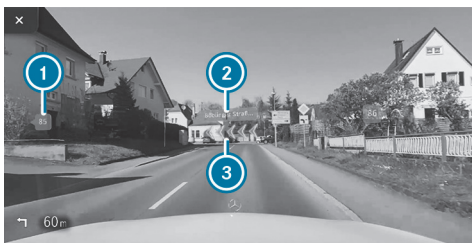

- ① House number
- ② Street name
- ③ Change of direction arrow

Route guidance with augmented reality will not be available in some situations, e.g. in the event of poor satellite reception or roads that have not been digitized.

Route guidance with augmented reality is not available in all countries.

You can watch an animation on this topic via the following link:

ACTIVATING ROUTE GUIDANCE WITH AUGMENTED REALITY

WARNING

Risk of accident and injury due to imprecise positioning of additional information

The additional information from the augmented reality display may be inaccurate and is not a substitute for observing and assessing the actual driving situation.

- ▶ Always keep an eye on the actual traffic situation when carrying out all driving maneuvers.

Multimedia system:



- ▶ Select **View**.
- ▶ Select **Augmented Reality Video**.
- ▶ Activate or deactivate **Augmented Reality Video**.

The camera's video image is shown on the central display before a turning maneuver. The video image includes additional information.



SHOWING PROPERTY INFORMATION FOR ROUTE GUIDANCE WITH AUGMENTED REALITY

Requirements:

- Augmented reality is activated (→ page 573).

Multimedia system:



- Select [View](#).
- Select [Augmented Reality Video](#).
- Activate [Street Names](#) and [House Numbers](#).

During route guidance, the activated options are shown as additional information in the camera image.

Map and compass

SETTING THE MAP SCALE

Multimedia system:



ZOOMING IN

- When the map is shown, tap twice quickly with one finger on the central display.

or

- Move two fingers apart on the central display.

ZOOMING OUT

- Tap with two fingers on the central display.

or

- Move two fingers together on the central display.

 You can set the unit of measurement of the map scale (→ page 522).

MOVING THE MAP

Multimedia system:



- When the map is displayed, swipe in any direction with one finger on the central display.
- To reset the map to the current vehicle position:** select  [Center](#).

SWITCHING THE ROUTE OVERVIEW AFTER START ON OR OFF

Multimedia system:



- Select [View](#).
- Activate  or deactivate  [Route Overview after Start](#).

If the option is enabled, the map shows the full route after route guidance is started and, if available, all alternative routes.


SELECTING POI SYMBOLS FOR THE MAP DISPLAY

Multimedia system:



POIs include restaurants and hotels, for example. These are displayed as symbols on the map. Not all POIs are available in all countries.

Personal POIs are destinations which you have saved on a USB device, for example.





 The display of POI symbols on the map can be activated or deactivated as a favorite.

- ▶ Select **View**.
- ▶ Select **POI Symbols On Map** .
- ▶ Activate **Hide All POIs**.

When the option is switched on, the POI symbols for all categories are shown on the map according to the settings in the POI categories.

 If the conditions are fulfilled, the POI symbols are shown with current online information (→ page 579).

SWITCHING DISPLAY OF CATEGORIES FOR QUICK-ACCESS ON OR OFF

- ▶ Switch a category on or off in the menu.

SELECTING CATEGORIES

- ▶ In the menu, select **Other Categories** .
- ▶ Activate or deactivate **Show All**.

When the option is switched on, the POI symbols for all categories are shown on the map.

or

- ▶ Select  the categories.
- ▶ Activate or deactivate the categories.
The POI symbols for the selected categories are shown on the map.

SELECTING PERSONAL POI CATEGORIES

- ▶ In the menu, select **Personal POIs** .
- ▶ Select  a category.
- ▶ Activate or deactivate **Show on Map**.
- ▶ **To issue a signal when approaching:** activate **Visual Notification** and **Acoustic Notification**.

RESETTING THE POI SYMBOL DISPLAY

- ▶ In the menu, select **Reset POIs**.
The settings are reset to the standard settings.

SELECTING THE DISPLAY OF ADDITIONAL INFORMATION ON THE MAP


Multimedia system:



- ▶ Select **View**.
- ▶ Select **Show More Information**.
- ▶ Switch the options on or off.

THE FOLLOWING OPTIONS ARE AVAILABLE:

- **Current Street**
If the option is enabled, it will be displayed in the navigation window.
- **Scale**
If the option is switched off, the map scale is only displayed on the map when zooming.
If the option is enabled, the map scale is permanently displayed on the map.
The option also influences the display on the driver display.
- **Elevation**





- **Next Intersection**

If the option is switched on and the journey continues without route guidance, the name of the next intersecting street will be displayed in the navigation window.

DISPLAYING THE MAP VERSION

Multimedia system:



- ▶ Select **View**.
- ▶ Select **Map Data Version**.

The detail information is displayed.

 The online map update service from Mercedes me connect can be used to update the map data (→ page 39).
A message is shown on the central display when a new map version is available.

 Information about new versions of the digital map can be obtained from an authorized Mercedes-Benz Center.

OVERVIEW OF AREA AVOIDANCE ON THE ROUTE

You can define areas along a route that you would like to avoid.

Highways or multi-lane highways that pass through an area to be avoided may be included in the route despite being blocked.

AVOIDING A NEW AREA FOR THE ROUTE

Multimedia system:



- ▶ Select **Avoid New Area**.

STARTING USING THE MAP

- ▶ Select **Using Map**.
A red rectangle appears. This designates the area that should be avoided.
- ▶ Move the map (→ page 574).
- ▶ Set the map scale (→ page 574).
- ▶ Select **OK**.
The area is entered into the list.

STARTING USING DESTINATION SEARCH

- ▶ Select **Via Address Entry**.
- ▶ Enter the address (→ page 40).
- ▶ Select the destination in the list.
The map appears. The area is saved.

CHANGING AN AREA TO BE AVOIDED


Multimedia system:



- ▶ Select an area in the list.
- ▶ Select **Edit**.
- ▶ **To move an area on the map:** swipe in any direction on the central display.

CHANGING THE SIZE OF THE AREA

- ▶ Move two fingers apart or together on the central display.
- ▶ Select **OK**.
The area is entered into the list.





TAKING THE AREA FOR THE ROUTE INTO ACCOUNT

- ▶ Select the area in the list.
- ▶ Activate [Avoid Area](#).

If route guidance is active, a new route is calculated.

If there is no route yet, the setting is carried over to the next route guidance.

THE ROUTE CAN INCLUDE AN AREA THAT IS TO BE AVOIDED IN THE FOLLOWING CASES:

- The destination is located in an area that is to be avoided.
- The route includes freeways or multi-lane freeways which pass through an area to be avoided.
- There is no practical alternative route.

DELETING AN AREA TO BE AVOIDED

Multimedia system:



DELETING AN AREA TO BE AVOIDED

- ▶ Select an area in the list.
- ▶ Select [Delete](#).
- ▶ Confirm the prompt with [Yes](#).

DELETING ALL AREAS TO BE AVOIDED

- ▶ If at least two areas to be avoided are set, select [Delete All](#).
- ▶ Confirm the prompt with [Yes](#).

MAP DATA UPDATE OVERVIEW

As the content of a digital road map has a short life, outdated data may have a negative effect on all navigation functions. For the best MBUX navigation

experience, you should install all of the map updates offered by Mercedes-Benz.

THE FOLLOWING OPTIONS ARE AVAILABLE FOR THE UPDATE OF MAP DATA:

- Online map update
 - Updates from the Mercedes me Portal
 - Update at an authorized Mercedes-Benz Center
- Additional costs can be incurred in this process.

ONLINE MAP UPDATE

REQUIREMENTS:

- Mercedes me connect is available.
- You have a Mercedes me user account.
- The Online Map Update service is available for your region.
- The service has been activated.

Installation takes place in the background as an automatic map update.


The MBUX multimedia system installs all of the available map updates for the North American regions in which the vehicle is located or is moved.

The online map update is activated at the latest after the next time the vehicle is switched on.

UPDATES FROM THE MERCEDES ME PORTAL

The map data for several regions can also be updated manually. Log in with your Mercedes me user account at: <https://www.mercedes-benz.de/>

Follow the menu path [My Mercedes Me account](#) > [My vehicles](#) > [Selection of car](#) > [Online Map Update](#). Select the regions to be downloaded to a storage medium.





After the map data has been copied, connect the storage medium with your vehicle. Select the notification with information about a new version of the map data and start the installation. After the MBUX multimedia system has been restarted, the updated map data is used.

OVERVIEW OF MAP DATA

If map data is reinstalled in a vehicle, no activation code needs to be entered.

For map data purchased as data media, the enclosed activation code must be entered after starting the installation.

Activation codes are only ever valid for one vehicle.

IN THE EVENT OF THE FOLLOWING PROBLEMS, PLEASE CONTACT AN AUTHORIZED MERCEDES-BENZ CENTER:

- The multimedia system does not accept the activation code.
- You have lost the activation code.

DISPLAYING THE COMPASS

Multimedia system:



- ▶ When the map is shown, tap on the  current vehicle position until the **Position** menu is shown.
- ▶ Select **Compass**.

THE COMPASS DISPLAY SHOWS THE FOLLOWING INFORMATION:

- The current direction of travel with bearing (360° format) and compass direction
- Longitude and latitude coordinates in degrees, minutes and seconds
- Number of satellites from which a signal can be received

SHARING THE VEHICLE POSITION WITH A CONTACT

Requirements:

- A mobile phone is connected to the MBUX multimedia system.
- The connected mobile phone supports sending text messages from the vehicle (→ page 599).

Multimedia system:



The current vehicle position can be shared with a contact.

- ▶ In the Route menu, select **Share Journey**.
The display changes to **Stop Sharing Journey**.
- ▶ Select the contact (→ page 597).
The text message is sent. The display changes back to the digital map. A symbol is displayed in the status line. When the message has been sent, a notification is displayed.

SETTING THE MAP SCALE AUTOMATICALLY


Multimedia system:



- ▶ Select **View**.
- ▶ Activate  **Auto Zoom**.

When the option is switched on, the map scale is set automatically depending on your driving speed and the type of road.

 The automatically selected map scale can be changed manually. After a few seconds, this is automatically reset.





When the option is activated, no detailed display of the intersection or a 3D image is shown in the navigation window during an upcoming driving maneuver.

DISPLAYING THE SATELLITE MAP

Multimedia system:



- ▶ Select **View**.
- ▶ Activate or deactivate **Satellite Map**.

WHEN SATELLITE MAP IS SELECTED, THEY ARE DISPLAYED AT THE FOLLOWING MAP SCALES:

- On-board maps
The satellite maps are displayed in map scales from 2 mi (2 km).
- Online maps
The satellite maps are displayed in high-resolution map scales from 50 ft (10 m).

When **Satellite Map** is not selected, no satellite maps are displayed.

 The satellite maps for these map scales are not available in all countries.

SHOWING ELECTRIC RANGE ON THE MAP

Requirements:

- There is an Internet connection.
- Mercedes me connect is available.
- You have a Mercedes me user account.

- The vehicle is connected with the user account and you have accepted the Mercedes me connect terms of use.
Further information can be found at: <https://www.mercedes.me>
- The service is available.
- The service has been activated at an authorized Mercedes-Benz Center.

Multimedia system:



- ▶ Select **View**.
- ▶ **Range**.

The electric range is shown on the map with a white line around the current vehicle position.

 The electric range display on the map is not available in all countries.

DISPLAYING ONLINE MAP CONTENTS

Requirements:

- There is an Internet connection.
- Mercedes me connect is available.
- You have a Mercedes me user account.
- The vehicle is connected with the user account and you have accepted the Mercedes me connect terms of use.
Further information can be found at: <https://www.mercedes.me>
- The service is available.
- The service has been activated at an authorized Mercedes-Benz Center.



Multimedia system:



- ▶ Select [View](#).
- ▶ Switch on an online service, e.g. [Weather](#).
Current weather information is displayed on the navigation map, e.g. temperature or cloud cover.
The service information is not shown in all map scales, e.g. weather symbols.

 The display of online map content is not available in all countries.

Toll collection with Toll System

OVERVIEW OF THE PAYMENT SYSTEM FOR TOLL CHARGES

WARNING

Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the MBUX multimedia system and the control unit.

 The toll system is optional equipment and is not available in all countries and vehicles.

Debiting of toll charges at freeway toll gates is facilitated with an electronic payment system.

The toll system uses RFID (Radio Frequency Identification) for data transfer between the control unit and the toll station.

The toll system is initially switched off at the factory.

The control unit is in the vehicle glove box.

IN ORDER TO BE ABLE TO USE THE TOLL SYSTEM, IT MUST HAVE BEEN REGISTERED BY THE CUSTOMER AND ACTIVATED BY THE SERVICE PROVIDER:

- Activate the toll system in the settings of the MBUX multimedia system.
- Registration and activation are carried out on the website of the Payviam service provider <https://www.payviam.com/MB>.



 Payviam is a payment platform via which the vehicle pays the required toll charges.



Activation of the toll system can take up to 48 hours after registration.

When the toll system is activated, the automatic detection of the number of vehicle occupants is initially switched off at the factory. The number of vehicle occupants is preset with one person.

THE FOLLOWING APPLIES FOR ROADS ON WHICH TOLL CHARGES ARE DEPENDENT ON THE NUMBER OF VEHICLE OCCUPANTS:

- If the automatic detection of the number of vehicle occupants is switched off, the number of vehicle occupants must be selected manually. This ensures correct toll accounting.
- The number of vehicle occupants can be transmitted automatically. In the process, the number of seat belts worn is determined.
If the number of detected persons does not correspond with the number of persons actually in the vehicle, the number of persons must be manually selected.

The standard setting of one person does not need to be changed for roads which require toll payment regardless of the number of vehicle occupants.

The toll payment system enables the payment of toll charges in many states in the USA.

YOU CAN VIEW OR CALL UP THE STATES PARTICIPATING IN PAYVIAM VIA THE FOLLOWING CONTACT OPTIONS:

- Internet: <https://www.payviam.com/MB>
- Telephone: (888) 725-1012
- Email: support@payviam.com

You can also reach Account Management via phone or email and obtain information about your invoices.

-  In Mexico, for example, the toll system can be registered and activated for journeys to the USA.

NOTICES

- You can only use the toll system once registration and activation are complete.
- Drive at the prescribed vehicle speed in the toll lane.
- Mercedes-Benz recommends operation using the MBUX multimedia system.
- For safety reasons, entries should be made while the vehicle stationary.
- You can obtain further information from an authorized Mercedes-Benz Center. Alternatively, you can call 1-800-FOR-MERCEdes (in the USA) or 1-800-387-0100 (in Canada).

REGISTERING WITH AND ACTIVATING THE PAYMENT SYSTEM FOR TOLL CHARGES

REGISTERING AND ACTIVATING VIA PAYVIAM

- Go to the website <https://www.payviam.com/MB> and select **SIGN UP**.

or


- Scan the QR code shown.





- ▶ To check and confirm the geographic area of validity on the map, select **NEXT**.
- ▶ Enter the contact information and select **NEXT**.
- ▶ Enter the **UID Serial Number** of the control unit.

i The UID serial number is a 9-digit alpha-numeric string. You will find it under the following menu path in the MBUX multimedia system:  > **Settings** > **Vehicle** > **Driving** > **Toll System**.

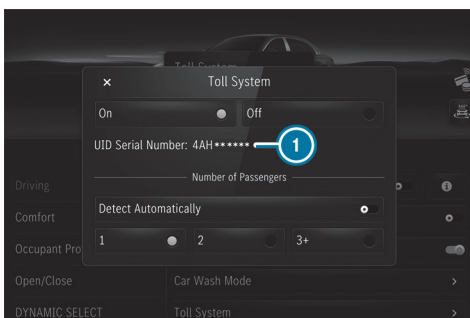

1 UID serial number

- ▶ Select **CHECK MY UID**.
- ▶ Enter the vehicle information and select **NEXT**.
- ▶ Enter the license plate information and select **NEXT**.

- ▶ Enter the payment information and select **PAY NOW**.
Your payment confirmation appears. A Payviam account is created in the next step. You can use this account to manage any data entered and toll payments.

i Activation of the toll system can take up to 48 hours after registration.

YOU CAN FIND OUT THE CURRENT ACTIVATION STATUS OF THE TOLL SYSTEM FROM THE PAYVIAM SERVICE PROVIDER VIA THE FOLLOWING CONTACT OPTIONS:

- Internet: <https://www.payviam.com/MB>
- Telephone: (888) 725-1012
- Email: support@payviam.com

OPERATION ON THE MBUX MULTIMEDIA SYSTEM


- ▶ Select .
- ▶ Select **Settings**.
- ▶ Select **Driving**.
- ▶ Select **Toll System**.
- ▶ Switch the toll system on or off.
If you switch the toll system on or off, the number of vehicle occupants is preset to one person.
- ▶ Activate **Detect Automatically**.
The number of seat belts worn is transmitted and displayed, e.g. **2**.
- ▶ If this does not correspond to the number of vehicle occupants, use the number keys to select **1**, **2** or **3+**.





OPERATION WITH THE CONTROL UNIT

- Open the glove box (→ page 49).

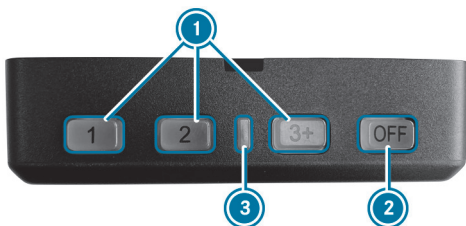

- ① Buttons for entering the number of vehicle occupants
The control unit is switched off: switches on the control unit
 - ② Switches off the control unit
 - ③ LED lights up green: control unit is ready for operation
LED flashes red: there is an error
- To enter the number of people in the vehicle, press one of buttons ①.
This changes the automatic operation to manual operation.

① The number keys on the control unit correspond to the number keys in the [Toll System](#) menu.

CONTROL UNIT IS MALFUNCTIONING

If the control unit is malfunctioning, an acoustic signal will sound. Toll payment with the control unit cannot be made.

- Consult an authorized Mercedes-Benz Center.

Parking service

NOTES ON THE PARKING SERVICE



NOTE

Vehicle damage due to failure to observe the maximum permissible clearance height

If the vehicle height exceeds the maximum permissible clearance height, the roof and other vehicle parts may be damaged.

- Please observe the maximum clearance height indicated.
- If the vehicle exceeds the permissible clearance height, do not drive in.
- Take the modified vehicle height into account in the case of roof superstructures or other carrier systems.



This service is not available in all countries.

DISPLAYING PARKING OPTIONS ON THE MAP

Requirements

- Navigation Services is activated in your Mercedes me user account.
- The parking service is part of the scope of the Navigation Services.





Multimedia system:



- ▶ Activate **Parking**.

The parking options within the vicinity of the current vehicle position are shown.

SELECTING PARKING OPTIONS

NOTE

Vehicle damage due to failure to observe local information and parking conditions

The data is based on the information provided by the respective service providers.

Mercedes-Benz does not guarantee the accuracy of the information provided in relation to the car park or parking area.

- ▶ Always observe the local information and conditions.

Requirements:

- Navigation Services is activated in your Mercedes me user account.
- The parking service is part of the scope of the Navigation Services.
- **Parking** is activated (→ page 583).

Multimedia system:



- ▶ Tap on **P** the map.

or

- ▶ In the route overview, select **P** **Parking Spaces** (→ page 557).

- ▶ Select the search position and search filter, e.g. **Near Destination** and **Parking Garages**.

The map shows car parks suited to the selected settings.

- ▶ Select a parking option.

The map shows the parking options in the vicinity.

THE FOLLOWING INFORMATION IS DISPLAYED (IF AVAILABLE):

- Destination address, distance from current vehicle position and arrival time
- Information on the car park, e.g.
 - Opening times
 - Parking charges
 - Current occupancy
 - Maximum parking time
 - **Maximum access height**
The maximum access height shown by the parking service does not replace the need for observation of the actual circumstances.
- Available payment options (Mercedes pay, coins, bank notes, cards)
- Details on parking tariffs
- Number of available parking spaces
- Payment method (e.g. at parking meters)
- Services/facilities at the parking option
- Telephone number

- ▶ Calculate the route (→ page 546).

THE FOLLOWING FUNCTIONS CAN ALSO BE SELECTED (IF AVAILABLE):

- Searching for POIs in the vicinity.





- Saving the destination.
- Placing a call at the destination.
- Sharing the destination via QR code.
- Calling up the web address.
- Showing the destination on the map.

Dashcam

NOTES ON THE DASHCAM

NOTE

Risk of legal consequences due to violation of legal regulations and data protection provisions

You are legally responsible for operation and use of the dashcam functions.

The legal requirements relating to operation and use of the dashcam can vary depending on the country in which the dashcam is operated.

This function is not permitted in all countries.

- ▶ Before using the dashcam, read up on the content of the legal regulations, in particular the data protection requirements in the respective country of use.
- ▶ Observe the legal regulations, in particular the data protection requirements.



OBSERVE THE FOLLOWING INSTRUCTIONS FOR SAFE OPERATION:

- Only use FAT32 or exFAT formatted USB storage devices.
- Use USB-IF certified USB storage devices.
USB-IF is a non-profit corporation and stands for USB Implementers Forum. Based on the USB specification, USB-IF certifies, for example, USB versions, corresponding cables and plugs as well as energy supply processes via the USB interface.
- USB storage devices may be damaged if often or permanently overwritten at high speed. Mercedes-Benz recommends a high-quality external SSD drive.
The abbreviation SSD stands for Solid State Drive.



The file size and therefore the duration of single recording is limited by the limitations of the USB flash drive format. So FAT32 formatted USB flash drives do not allow files larger than 4 GB, for example.
When the file size is reached, the recording stops and you receive a notification.



THE FOLLOWING FUNCTIONS ARE AVAILABLE IN THE GALLERY APP:

- Switching write protection on or off
- Deleting video files

Additional information about the Gallery app (→ page 614).





SELECTING A USB DEVICE FOR A VIDEO RECORDING WITH THE DASHCAM

Requirements:

- At least one USB device is connected with the multimedia system (→ page 632).

Multimedia system:



- Select the USB symbol.
- Select the USB device.

 When USB devices contain multiple partitions, recorded video files are not always displayed in the recording list. Mercedes-Benz recommends that you use USB devices with one partition.

STARTING OR STOPPING A LOOP RECORDING WITH THE DASHCAM

Requirements:

- For recording and saving a video file: a USB device is connected with the multimedia system (→ page 632).
- The vehicle is switched on.

Multimedia system:



- If several USB devices are connected with the multimedia system, select a USB device (→ page 586).

If no USB device is selected, a selection is made automatically when recording starts.

- To select recording mode:** select [Loop Recording](#).

[Loop Recording](#) continuously records short video files. When the memory is full, recording is continued automatically. In doing so, the oldest video file is written over.

- To start:** select [Start Recording](#).


The length of the recording is shown. The [Do not remove the storage medium during recording. Before removing the storage medium, eject it first.](#) message appears. The video file is stored on the USB device.

- To end:** select [End Recording](#).

 In some countries, geo-coordinates (longitude and latitude) are shown in the video image. For technical reasons, the geo-coordinates may show greater inaccuracies.

A MESSAGE MAY APPEAR IN THE FOLLOWING CASES:

- The camera is not functional, the [Camera Unavailable](#) message appears. Have the camera checked in an authorized Mercedes-Benz Center.
- If the country border indication has been switched on (→ page 587).
- If an outdoor recording is started with the camera app during a dashcam recording, the dashcam recording pauses and resumes automatically





after the camera recording is finished. A notification to this effect is displayed.

STARTING OR STOPPING INDIVIDUAL RECORDINGS WITH THE DASHCAM

Requirements:

- For recording and saving a video file: a USB device is connected with the multimedia system (→ page 632).
- The vehicle is switched on.

Multimedia system:

  >> Apps >> Dashcam

- ▶ If several USB devices are connected with the multimedia system, select a USB device (→ page 586).

If no USB device is selected, a selection is made automatically when recording starts.

- ▶ **To select recording mode:** select [Individual Recording](#).

[Individual Recording](#) stops recording when the memory limit is reached. An individual recording is automatically protected against being overwritten.

- ▶ **To start:** select [Start Recording](#).

The length of the recording is shown. The [Do not remove the storage medium during recording. Before removing the storage medium, eject it first.](#) message appears. The video file is stored on the USB device.

- ▶ **To end:** select [End Recording](#).

 In some countries, geo-coordinates (longitude and latitude) are shown in the video image.

For technical reasons, the geo-coordinates may show greater inaccuracies.

A MESSAGE MAY APPEAR IN THE FOLLOWING CASES:

- [Individual Recording](#): the memory is full or there are only a few minutes recording time available. The video recording stops or will be stopped imminently.
Change the USB device or delete a video file.
- The camera is not functional, the [Camera Unavailable](#) message appears.
Have the camera checked in an authorized Mercedes-Benz Center.
- If the country border indication has been switched on (→ page 587).
- If an outdoor recording is started with the camera app during a dashcam recording, the dashcam recording pauses and resumes automatically after the camera recording is finished. A notification to this effect is displayed.

CONFIGURING DASHCAM SETTINGS

Requirements:

- A USB device is connected with the multimedia system (→ page 632).

Multimedia system:

  >> Apps >> Dashcam

- ▶ Select .

RECEIVING NOTIFICATIONS AFTER PASSING A BORDER CROSSING

- ▶ Switch on [National Borders Alert](#).

A message is shown if video is being recorded and the vehicle passes a border.



ⓘ This function is not available in all countries.

STARTING AUTOMATIC VIDEO RECORDING

- ▶ Select [Automatic Loop Recording](#).
- ▶ Switch on [Automatic Loop Recording](#).
When the vehicle is started, video recording starts automatically.

ⓘ This function is not available in all countries.





< Telephone

Telephony

NOTES ON TELEPHONY

WARNING

Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.


WARNING

Risk of accident from operating mobile communication equipment while the vehicle is in motion

Mobile communication devices distract the driver from the traffic situation. This can also cause the driver to lose control of the vehicle.

- ▶ As a driver, only operate mobile communication devices when the vehicle is stationary.
- ▶ As a vehicle occupant, use mobile communication devices only in the designated area, e.g. in the rear passenger compartment.

When operating the multimedia system and mobile communication devices in the vehicle, observe the legal regulations of the country in which you are currently traveling.





⚠ WARNING

Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they may slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles will not always be able to retain all objects that they contain in the event of an accident.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects such that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from stowage spaces, parcel nets or stowage nets.
- ▶ Close the lockable stowage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk/cargo compartment.

OBSERVE THE ADDITIONAL INFORMATION ON STOWING MOBILE COMMUNICATIONS DEVICES CORRECTLY:

- Loading the vehicle (→ page 230)

Further information can be obtained from an authorized Mercedes-Benz Center or at: <https://www.mercedes-benz-mobile.com/>

TELEPHONE MENU OVERVIEW



- ① Bluetooth® device name of the currently connected mobile phone/of the mobile phone
- ② Bluetooth® device name of the currently connected mobile phone/of the mobile phone (two phone mode)
- ③ Signal strength of the mobile phone network
- ④ Battery status of the connected mobile phone
- ⑤ Options
- ⑥ Messages
- ⑦ Calls up devices
- ⑧ Numerical pad
- ⑨ Starts contact search

BLUETOOTH® PROFILE OVERVIEW

Bluetooth® profile of the mobile phone	Function
PBAP (Phone Book Access Profile)	Contacts are automatically displayed in the multimedia system
MAP (Message Access Profile)	Message functions can be used



Bluetooth® profile of the mobile phone	Function
HFP (Hands Free Profile)	Wireless telephony is available
SAP (SIM Access Profile)	The car telephone has access to the SIM card data and dials into the mobile phone network via the exterior antenna

TELEPHONY OPERATING MODES OVERVIEW

DEPENDING ON YOUR EQUIPMENT, THE FOLLOWING TELEPHONY OPERATING MODES ARE AVAILABLE:

- A mobile phone is connected to the multimedia system via Bluetooth® (→ page 591).
- Two mobile phones are connected with the multimedia system via Bluetooth® (two phone mode) (→ page 592).
 - You can use all the functions of the multimedia system with both mobile phones.

 Irrespective of this, Bluetooth® audio functionality can be used with any mobile phone (→ page 632).

INFORMATION ON TELEPHONY

THE FOLLOWING SITUATIONS CAN LEAD TO THE CALL BEING DISCONNECTED WHILE THE VEHICLE IS IN MOTION:

- There is insufficient network coverage in the area
- You move from one transmission/reception station to another and no communication channels are free
- The SIM card used is not compatible with the network available

- A mobile phone with "Twincard" is logged into the network with the second SIM card at the same time

The multimedia system supports calls in HD Voice® for improved speech quality. A requirement for this is that the mobile phone and the mobile phone network provider of the person you are calling support HD Voice®.

Depending on the quality of the connection, the voice quality may fluctuate.

CONNECTING A MOBILE PHONE

Requirements:

- Bluetooth® is activated on the mobile phone (see the manufacturer's operating instructions).
- Bluetooth® is activated on the multimedia system (→ page 520).

Multimedia system:

  >> Phone >>  >> Devices >> Devices

SEARCHING FOR A MOBILE PHONE

- ▶ Select [Connect New Device](#).

AUTHORIZING A MOBILE PHONE

- ▶ Select a mobile phone.
A code is displayed in the multimedia system and on the mobile phone.
- ▶ **If the codes match:** confirm the code on the mobile phone.

 For older mobile phone models, enter a 1 to 16-digit number code on the mobile phone and on the multimedia system for authorization.



- Up to 15 mobile phones can be authorized on the multimedia system.
Authorized mobile phones are reconnected automatically.

- The connected mobile phone can also be used as a Bluetooth® audio device (→ page 632).

You can watch an animation on this topic via the following link:

CONNECTING A SECOND MOBILE PHONE (TWO PHONE MODE)

Requirements:

- At least one mobile phone is already connected to the multimedia system via Bluetooth®.

Multimedia system:



- Select [Connect New Device](#).
- Select the mobile phone.
- In some cases, if the query appears, confirm the selection of the mobile phone pair with the [Device name 1 + Device name 2](#) option.

The selected mobile phone is connected to the multimedia system.

INTERCHANGING MOBILE PHONES (TWO PHONE MODE)

Multimedia system:



Both mobile phones are shown individually in separate tabs.

- Select the tab with the desired mobile phone.
Selecting the tab of a specific mobile phone displays the associated telephone contents.
Selecting the other tab switches the view to the other telephone.
The submenus in the telephone menu (e.g. contacts, call lists, messages) relate to the currently selected mobile phone with the exception of the telephone settings. In the telephone settings, settings can be made for both mobile phones.

CHANGING THE FUNCTION OF A MOBILE PHONE

Multimedia system:



ACTIVATING A FUNCTION

- Select a gray symbol in the line of a mobile phone.
The corresponding function is activated.

DEACTIVATING A FUNCTION

- One function is active:** select the color symbol in the line of a mobile phone.
The mobile phone is disconnected from the multimedia system.
- Several functions are active:** de-select an active function in the line of one of the mobile phones.
The corresponding function is deactivated.


REPLACING MOBILE PHONES

Multimedia system:



NO AUTHORIZED MOBILE PHONE AVAILABLE:

- Select [Connect New Device](#).
- Select a mobile phone.





- ▶ **Newly authorized mobile phone:** confirm the numerical code on the mobile phone.

USING IN SINGLE TELEPHONE MODE

- ▶ Select **Device name**.

A newly authorized mobile phone is connected in single telephone mode.

If the mobile phone has already been authorized and connected in single telephone mode, it is connected again in single telephone mode.

If a mobile phone is already authorized and has been connected in two phone mode with another mobile phone, a query may come, whether the mobile phone should in future be operated in single telephone mode or connected with another mobile phone in two phone mode.

- ▶ If required, confirm the query about operating mode (single telephone or two phone mode) by confirming the **Device name** option.

USING IN TWO PHONE MODE

- ▶ Select **Device name 1 + Device name 2**.

A newly authorized mobile phone is connected with the selected mobile phone in two phone mode.

If the mobile phone has already been authorized and connected in single telephone mode, it will be connected in future with the selected mobile phone in two phone mode.

If the mobile phone was previously connected with another mobile phone, this connection is canceled.

DISCONNECTING OR DELETING A MOBILE PHONE

Multimedia system:



DISCONNECTING A MOBILE PHONE

- ▶ Select **Disconnect**.

If applicable, the mobile phone will be automatically reconnected when the vehicle is next started.

DELETING A MOBILE PHONE

- ▶ Select **Devices**.

- ▶ Select  in the line of the mobile phone.

- ▶ Select **Delete Device**.

The mobile phone is deleted from the system.

SETTING THE RECEPTION AND TRANSMISSION VOLUME

Requirements:

- A mobile phone is connected (→ page 591).

Multimedia system:



This function ensures optimal language quality.

 Please note that the respective mobile phone must be selected for adjustment of the reception and transmission volume.

- ▶ Select  in the line of the mobile phone.

- ▶ Select **Volume**.





- ▶ Set the reception and transmission volume using [Reception Volume](#) and [Transmission Volume](#).

Further information on the recommended reception and transmission volume:
<https://www.mercedes-benz-mobile.com/>

SETTING THE RINGTONE

Multimedia system:



- ▶ Set the ringtone.

-  If the mobile phone supports the transfer of the ringtone, you will hear the ringtone of the mobile phone instead of that of the vehicle audio system.

STARTING OR STOPPING MOBILE PHONE VOICE RECOGNITION

Requirements

- At least one mobile phone is connected to the multimedia system (→ page 591).
- The tab with the mobile phone for which voice recognition should be started is selected (→ page 592).

STARTING MOBILE PHONE VOICE RECOGNITION

- ▶ Press and hold the  button on the multifunction steering wheel for more than one second.
 Voice recognition is started for the currently selected mobile phone.

STOPPING MOBILE PHONE VOICE RECOGNITION

- ▶ Press the  or  button on the multifunction steering wheel.

-  If a mobile phone is connected via Smartphone Integration, the voice recognition of this mobile phone is always started or stopped.

NOTE ABOUT CONTACT SUGGESTIONS

The multimedia system can show contact suggestions based on frequently used contacts, outgoing calls and text messages. For this, the [Allow Contact Suggestions](#) option must be switched on (→ page 523).

When you open the call list or the message menu, contacts which you can call or write to will be suggested to you. Suggestions will be shown in the [Suggestionstab](#).

-  The multimedia system does not use the content of messages for suggestions.

SELECTING OPTIONS FOR CONTACT SUGGESTIONS

Requirements:

- The [Allow Contact Suggestions](#) option is switched on (→ page 523).
- The multimedia system has gathered sufficient data in order to show contact suggestions.

Multimedia system:



- ▶ Select [Recent Calls](#) or [Contacts](#).
- ▶ Select [Suggestions](#).





- ▶ Select  in the line of the suggested contact.

THE FOLLOWING OPTION IS AVAILABLE FOR SELECTION:

- [Do Not Suggest Now](#)

Calls

TELEPHONE OPERATION

Multimedia system:



MAKING A CALL BY ENTERING NUMBERS

- ▶ Select .
 - ▶ Enter a number.
 - ▶ Select .
- The call is made.

ACCEPTING A CALL

- ▶ Select  [Accept](#).

REJECTING A CALL

- ▶ Select  [Reject](#).

ANSWERING A CALL WITH A MESSAGE

- ▶ Select  [Message](#).

ENDING A CALL

- ▶ Select .

PUTTING A CALL ON IN-CAR OFFICE'S TO-DO LIST

- ▶ Select  [Put call on In-Car Office's to-do list](#).

ACTIVATING FUNCTIONS DURING A CALL

THE FOLLOWING FUNCTIONS ARE AVAILABLE DURING A CALL:

-  [End Call](#)
-  [Mic Off](#)
-  [Number Pad](#) (show to send DTMF tones)
-  [Add Call](#)
- [Hands-free](#)
Transfer the call, e.g. to [Front](#), [Rear](#) or [All Seats](#).
- [Private Mode](#)
Transfer the call to the telephone or headphones, for example.

- ▶ Select a function.

 Observe that the functions and symbols can vary depending on the vehicle equipment.

CONDUCTING CALLS WITH SEVERAL PARTICIPANTS

Requirements:

- There is an active call (→ page 595).
- Another call is being made.

SWITCHING BETWEEN CALLS

- ▶ Select the contact.
The selected call is active. The other call is on hold.

ACTIVATING A CALL ON HOLD

- ▶ Select the contact of the call on hold.





CONDUCTING A CONFERENCE CALL

- ▶ Select  **Conference**.

The new participant is included in the conference call.

ENDING AN ACTIVE CALL

- ▶ Select  **End Call**.

 On some mobile phones, the call on hold is activated as soon as the active call is ended.

ACCEPTING OR REJECTING A WAITING CALL

Requirements:

- There is an active call (→ page 595).

If you receive a call while already in a call, a message is displayed.

Depending on the mobile phone and mobile phone network provider you will hear a call waiting signal.

Alternatively, in two phone mode you will hear an acoustic signal when the call goes through to the other (not yet active) mobile phone.

- ▶ Select  **Accept**.

The incoming call is active.

If only one mobile phone is connected with the multimedia system, the previous call will be put on hold.

If during a call you accept a call with the other mobile phone when in two phone mode then the existing call is ended.

- ▶ Select **Message**.

The incoming call is not accepted.

You answer with a message.

or

- ▶ Select  **Reject**.

 The function and the behavior depend on your mobile phone network provider as well as on the mobile phone (see the manufacturer's operating instructions).

USING THE INTERNATIONAL DIALING CODE

Multimedia system:



- ▶ Press and "0" until a "+" appears in the selection field.
 - ▶ Enter the numbers of the country code, regional code and the telephone number.
 - ▶ Select .
- The call is made.

Contacts

INFORMATION ABOUT THE CONTACTS MENU

The contacts menu contains all contacts from existing data sources, e.g. mobile phone or data storage medium.

or





DEPENDING ON THE DATA SOURCE, IT IS POSSIBLE TO SAVE/LOAD THE FOLLOWING NUMBER OF CONTACTS:

- Permanently saved contacts: 3,000 entries
- Contacts loaded from the mobile phone: 5,000 entries per mobile phone

FROM THE CONTACTS MENU, YOU CAN PERFORM THE FOLLOWING ACTIONS:

- Make a call, for example call a contact (→ page 598)
- Navigation (→ page 545)
- Compose messages (→ page 600)
- Additional options (→ page 598)

Mobile phone contacts are automatically displayed when a mobile phone is connected to the multimedia system (→ page 591).

DOWNLOADING MOBILE PHONE FAVORITE CONTACTS

If the mobile phone supports the function, the favorites of the mobile phone are automatically loaded and appear in the overview of the phone menu.

CALLING UP CONTACTS

Multimedia system:



THE FOLLOWING OPTIONS CAN BE USED TO SEARCH FOR CONTACTS:

- Searching by initials
 - Searching by name
 - Searching by phone number
- ▶ Enter characters into the search field.

- ▶ Select the contact.

A CONTACT CAN CONTAIN THE FOLLOWING DETAILS:

- Phone numbers
- Navigation addresses
- Internet address
- Email addresses
- Relationship (if set)

MANAGING THE FORMAT OF A CONTACT'S NAME

Multimedia system:




- ▶ Select **Name Format**.
- ▶ Select an option.

OVERVIEW OF IMPORTING CONTACTS

IMPORTING CONTACTS INTO THE CONTACTS MENU

Source	Requirements
USB device	The USB device is connected with the USB port.
Mobile phone	A mobile phone is connected to the multimedia system via Bluetooth®. Contacts are available.

Note that the imported contacts remain in the vehicle and can be accessed at any time regardless of the connected mobile phones.





IMPORTING CONTACTS INTO THE CONTACTS MENU

Multimedia system:

  >> Phone >>  >> Contacts >> Import Contacts

- ▶ Select a mobile phone <device name>, from which the contacts should be imported.
- ▶ Select an option.

SAVING A MOBILE PHONE CONTACT

Multimedia system:

  >> Phone >> Contacts

- ▶ Select  in the line of the mobile phone contact.
- ▶ Select .
- ▶ Select [Save](#).
- ▶ Select [Yes](#).
The contact saved in the multimedia system is identified by the MBUX symbol.

CALLING A CONTACT

Multimedia system:

  >> Phone >> Contacts

- ▶ Select  [Search for Contacts](#).
- ▶ Enter characters into the search field.
- ▶ Select the contact.
- ▶ Select the telephone number.
The number is dialed.

SELECTING FURTHER OPTIONS IN THE CONTACTS MENU

Multimedia system:

  >> Phone >> Contacts

- ▶ Select  in the line of the contact.
- ▶ Select .
- ▶ Select an option.

DELETING CONTACTS

Requirements:

- The contacts are saved in the vehicle.
- To delete an individual contact, this has been imported manually into the vehicle.

Multimedia system:

  >> Phone

DELETING ALL CONTACTS

- ▶ Select .
- ▶ Select [Contacts](#).
- ▶ Select [Delete All MBUX Contacts](#).
- ▶ Select an option.

DELETING A CONTACT

- ▶ Select [Contacts](#).
- ▶ Select  in the line of the contact.
- ▶ Select .





- ▶ Select **Delete Contact**.
- ▶ Select **Yes**.

Call list

OVERVIEW OF THE CALL LIST

Depending on whether your mobile phone supports the PBAP Bluetooth® profile or not, this can have different effects on the presentation and functions of the call list.

IF THE PBAP BLUETOOTH® PROFILE IS SUPPORTED, THE EFFECTS ARE AS FOLLOWS:

- The call lists from the mobile phone are displayed in the multimedia system.
- When connecting the mobile phone, you may have to confirm the connection for the PBAP Bluetooth® profile.

IF THE PBAP BLUETOOTH® PROFILE IS NOT SUPPORTED, THE EFFECTS ARE AS FOLLOWS:

- The multimedia system generates a call list independently as soon as calls are made in the vehicle.
- The call list is not synchronized with the call lists in the mobile phone.

MAKING A CALL FROM THE CALL LIST

Multimedia system:

-    **Phone**
- ▶ Select  **Recent Calls**.

- ▶ Select an entry.
The call is made.

SELECTING ADDITIONAL OPTIONS IN THE CALL LIST

Multimedia system:

-    **Phone**
- ▶ Select  **Recent Calls**.
 - ▶ For contacts that are in the address book: select options.
The contact details are called up.
 - ▶ For contacts where only one number is shown (not in the address book): select .

DELETING THE CALL LIST

Multimedia system:

-    **Phone**  **<Device name>**   **Devices**
- ▶ Select **Delete Recent Calls**.
 - ▶ Select **Yes**.


 This function is only available if your mobile does not support the PBAP Bluetooth® profile.

Text messages

OVERVIEW OF MESSAGE FUNCTIONS

In the message menu you can receive text messages and create and send them with the help of the MBUX voice assistant.

If the connected mobile phone supports the Bluetooth® MAP profile, the message functions can be used on the multimedia system.





You can obtain further information about settings and supported functions of Bluetooth®-capable mobile phones at a Mercedes-Benz service center or at: <https://www.mercedes-benz-mobile.com/>

Some mobile phones require further settings after being connected to the multimedia system to activate the messaging functionality (see manufacturer's operating instructions).

SETTING MESSAGE DISPLAYS

Multimedia system:

  >> Phone >> <Device name> >>  >> Devices

▶ Select **Message Display**.

▶ Select **On** or **Off**.

READING MESSAGES

Multimedia system:

  >> Phone >> <Device name> >> 

USING THE READ-ALOUD FUNCTION

A message list is shown.

- ▶ To read aloud, select the  symbol at a conversation.
The message is read aloud.

CREATING AND SENDING A NEW MESSAGE

Requirements:

- There is an Internet connection.
- At least one mobile phone with reception is connected.
- If applicable, the message function must be activated on the mobile phone.

Multimedia system:

  >> Phone >> <Device name> >> 

- ▶ Using the MBUX voice assistant, speak the voice command **Send a message to**, and name the desired contact (→ page 475).

DICTATING TEXT

- ▶ Say the message.

You are guided by the voice dialog.

REPLYING TO A MESSAGE IN THE MESSAGING HISTORY

Multimedia system:

  >> Phone >> <Device name> >> 

A message list is shown.

- ▶ Select  next to a contact.
The messaging history with this contact is shown. You will be guided through the steps with the help of a voice dialog.
- ▶ Say the message.

FORWARDING MESSAGES

Multimedia system:

  >> Phone >> <Device name> >> 

A message list is shown.

- ▶ Speak the voice command **Forward message**.
You are guided by the voice dialog.

CALLING A MESSAGE SENDER

Multimedia system:

  >> Phone >> <Device name> >> 

A message list is shown.





- ▶ Select  next to a contact.
The messaging history with this contact is shown.
- ▶ Select .
- ▶ Select [Call](#).

USING TELEPHONE NUMBERS, URLS OR EMAIL ADDRESSES FROM A TEXT MESSAGE

Requirements

- An Internet connection is available to call up a URL.

Multimedia system:



A message list is shown.

- ▶ Select  next to a contact.
The messaging history with this contact is shown.
- ▶ Select a telephone number or a URL in the message.
If a URL is selected the web browser opens.

IF A TELEPHONE NUMBER IS SELECTED THE FOLLOWING OPTIONS ARE AVAILABLE:

- [Call](#)
- [New Message](#)

or

- ▶ **If In-Car Office and the email function are available:** select an email address.
In-Car Office opens.

 The availability of In-Car Office is country-dependent.

- ▶ Select an option.


DELETING A MESSAGE

Multimedia system:



A message list is shown.

- ▶ Select a contact.
- ▶ Press and hold on a message.
- ▶ **To delete the message:** select [Delete](#).





Apple CarPlay®

OVERVIEW OF APPLE CARPLAY®

WARNING

Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

iPhone® functions can be used via the multimedia system using Apple CarPlay®. They are operated using the touchscreen, Touch Control or Siri® voice control. You can activate voice control by pressing and holding the  button on the multifunction steering wheel.

-  By briefly pressing the  button on the multifunction steering wheel you can continue to operate the multimedia system using the MBUX Voice Assistant (→ page 475).

Only one iPhone® at a time can be connected via Apple CarPlay® with the multimedia system.

Also for use of Apple CarPlay® with two phone mode, only one additional mobile phone can be connected using Bluetooth® with the multimedia system.

As access to the iPhone® is restricted by MBUX when an Apple CarPlay® session is active, not all MBUX functions (e.g. dialing from the address book) can be fully provided for the connected device. In this case use Apple CarPlay®.

The full range of functions for Apple CarPlay® is only available with an Internet connection.

The availability of Apple CarPlay® may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

Apple CarPlay® is a registered trademark of Apple Inc.

You can watch an animation on this topic via the following link:

INFORMATION ON APPLE CARPLAY®

The Apple CarPlay® symbol in the status line switches within Apple CarPlay® to the last active display.

If route guidance is active on the multimedia system, it is closed when route guidance is started on the mobile phone.

CONNECTING AN IPHONE® VIA APPLE CARPLAY® (WIRED)

Requirements:

- The current version of your device's operating system is being used (see the manufacturer's operating instructions).





 For safety reasons, the first activation of Apple CarPlay® on the multimedia system must be carried out when the vehicle is stationary and the parking brake applied.

- ▶ Connect the iPhone® to a USB port on the multimedia system using a suitable cable (→ page 632).

When the application is connected for the first time, a message about data protection regulations appears.

- ▶ Select **Accept & Start** if the application should be started.

or

- ▶ Open the device manager (→ page 592).
- ▶ Start Apple CarPlay® using the relevant symbol next to the device name.

 If applicable, a message about data protection regulations appears.

- ▶ If required confirm the use of Apple CarPlay® on your iPhone®.

EXITING APPLE CARPLAY®

- ▶ Select .

or

- ▶ Press the  button on the multifunction steering wheel (MBUX multimedia system).

 If Apple CarPlay® was not displayed in the foreground before disconnecting, the application starts in the background when

reconnected. You can call up Apple CarPlay® using the Apple CarPlay® symbol in the status line.

CONNECTING AN IPHONE® VIA APPLE CARPLAY® (WIRELESS)

Requirements:

- The current version of your device's operating system is being used (see the manufacturer's operating instructions).
- Bluetooth® is activated on the device (see the manufacturer's operating instructions).
- The device is "visible" for other devices.

 For safety reasons, the first activation of Apple CarPlay® on the multimedia system must be carried out when the vehicle is stationary and the parking brake applied.

Multimedia system:

   **Phone**   **Devices**

- ▶ Connect the mobile phone using Bluetooth® (→ page 591).
When the application is connected for the first time, a message about data protection regulations appears.
- ▶ Select **OK, start Apple CarPlay** if the application should be started.
- ▶ If required confirm the use of Apple CarPlay® on your iPhone®.

 It is possible at any time to switch between a connection via Bluetooth® or Apple CarPlay® (wireless) in the device list.





-  If you have already connected a mobile phone via Bluetooth®, you can connect another iPhone® via Bluetooth® to use Apple CarPlay® via the device manager.

EXITING APPLE CARPLAY®

- ▶ Select .

or

- ▶ Press the  button on the Touch Control (MBUX multimedia system).

-  If Apple CarPlay® was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Apple CarPlay® using the Apple CarPlay® symbol in the status line.

CALLING UP APPLE CARPLAY® SOUND SETTINGS

Multimedia system:

- ▶   ▶ Settings ▶ System ▶ Audio

- ▶ Select the sound settings.

ENDING APPLE CARPLAY®

- ▶ Select the Apple CarPlay® symbol in the device manager (telephone, media) that is next to the device name of the iPhone®.

-  Select the Apple CarPlay® symbol in the device manager in the telephone or media applications if Apple CarPlay® should be restarted.

-  If Apple CarPlay® was not displayed in the foreground before disconnecting, the application starts in the background the next time it is started automatically. You can call up Apple CarPlay® using the relevant symbol in the status line.

Android Auto

ANDROID AUTO OVERVIEW



WARNING

Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Mobile phone functions can be used with Android Auto using the Android operating system on the multimedia system. They are operated using the touchscreen, Touch Control or voice control. You can activate the voice control system by pressing and holding the  button on the multifunction steering wheel.



-  By briefly pressing the  button on the multifunction steering wheel you can continue to operate the multimedia system using the MBUX Voice Assistant (→ page 475).

Only one mobile phone at a time can be connected via Android Auto with the multimedia system.

Also for use of Android Auto with two phone mode, only one additional mobile phone can be connected using Bluetooth® with the multimedia system.

The full range of functions for Android Auto is only possible with an Internet connection.

The availability of Android Auto and Android Auto apps may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

You can watch an animation on this topic via the following link:

INFORMATION ON ANDROID AUTO

The Android Auto symbol in the status line switches within Android Auto to the last active display.

If route guidance is active on the multimedia system, it is closed when route guidance is started on the mobile phone.

CONNECTING A MOBILE PHONE VIA ANDROID AUTO (WIRED)

Requirements:

- The mobile phone supports Android Auto from Android 5.0.
- The current version of the Android Auto app is installed on the mobile phone.

- In order to use the telephone functions, the mobile phone must be connected to the multimedia system via Bluetooth® (→ page 591).
If there was no prior Internet connection, this is established with the use of the mobile phone with Android Auto.

-  For safety reasons, the first activation of Android Auto on the multimedia system must be carried out when the vehicle is stationary with the parking brake.

- ▶ Connect the mobile phone to a USB port on the multimedia system using a suitable cable (→ page 632).

When the application is connected for the first time, a message about data protection regulations appears.

- ▶ Select **Accept & Start** if the application should be started.

or

- ▶ Open the device manager (→ page 592).
- ▶ Start Android Auto using the relevant symbol next to the device name.

EXITING ANDROID AUTO

- ▶ Select .

or

- ▶ Press the  button on the Touch Control (MBUX multimedia system).





- ❗ If Android Auto was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Android Auto using the Android Auto symbol in the status line.

CONNECTING A MOBILE PHONE VIA ANDROID AUTO (WIRELESS)

Requirements:

- The current version of your device's operating system is being used (see the manufacturer's operating instructions).
- The device supports the Android Auto function (wireless).
- Bluetooth® is activated on the device (see the manufacturer's operating instructions).
- The device is "visible" for other devices.
- Bluetooth® is activated on the multimedia system (→ page 520)

- ❗ For safety reasons, the first activation of Android Auto on the multimedia system must be carried out when the vehicle is stationary and the parking brake applied.

- ❗ The Android Auto function (wireless) is not available in all countries.

Multimedia system:



- ▶ Connect the mobile phone using Bluetooth® (→ page 591).

- ❗ Depending on the device configuration, the query whether Android Auto should be started may appear after connecting the mobile phone via Bluetooth®. In this case, the query must be answered with **Yes**.

- ▶ Select **Start Android Auto**.

When the application is connected for the first time, a message about data protection regulations appears.

- ▶ Select **Accept & Start**.

- ❗ It is possible at any time to switch between a connection via Bluetooth® or Android Auto (wireless) in the device list.

- ❗ If you have already connected a mobile phone via Bluetooth®, you can connect another mobile phone via Bluetooth® to use Android Auto via the device manager.

EXITING ANDROID AUTO

- ▶ Select .

or

- ▶ Press the  button on the Touch Control (MBUX multimedia system).

- ❗ If Android Auto was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Android Auto using the Android Auto symbol in the status line.



CALLING UP THE ANDROID AUTO SOUND SETTINGS

Multimedia system:



- ▶ Select the sound settings.

ENDING ANDROID AUTO

- ▶ Select the Android Auto symbol in the device manager (telephone, media) that is next to the device name of the mobile phone.

-  Select the Android Auto symbol in the device manager if Android Auto should be restarted.

-  If Android Auto was not displayed in the foreground before disconnecting, the application starts in the background the next time it is started automatically. You can call up Android Auto using the Android Auto symbol in the status line.

Transferred vehicle data with Android Auto and Apple CarPlay®

OVERVIEW OF TRANSFERRED VEHICLE DATA

When using Smartphone Integration, certain vehicle data is transferred to the mobile phone. This enables you to get the best out of selected mobile phone services. Vehicle data is not directly accessible.

THE FOLLOWING SYSTEM INFORMATION IS TRANSMITTED:

- Software release of the multimedia system
- System ID (anonymized)

The transfer of this data is used to optimize communication between the vehicle and the mobile phone.

To do this, and to assign several vehicles to the mobile phone, a vehicle identifier is randomly generated.

This has no connection to the vehicle identification number (VIN) and is deleted when the multimedia system is reset (→ page 527).

THE FOLLOWING DRIVING STATUS DATA IS TRANSMITTED:

- Transmission position engaged
- Distinction between parked, standstill, rolling and driving
- Day/night mode of the driver display
- Drive type

The transfer of this data is used to alter how content is displayed to correspond to the driving situation.

THE FOLLOWING POSITION DATA IS TRANSMITTED:

- Coordinates
- Speed
- Compass direction
- Acceleration direction


This data is used by the mobile phone to improve the accuracy of the navigation (e.g. for continuation in a tunnel).





Mercedes-Benz Connect calls

MAKING A CALL VIA THE OVERHEAD CONTROL PANEL

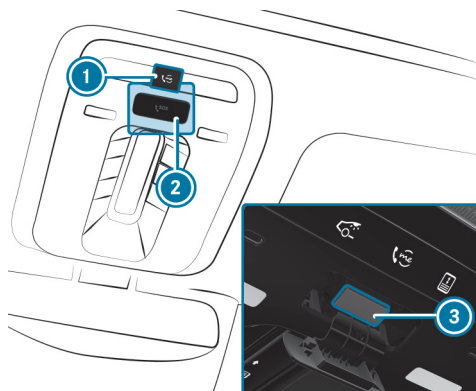

- ① me button for a Mercedes-Benz Connect call
- ② SOS button cover
- ③ SOS button (emergency call system)

Making a Mercedes-Benz Connect call

- ▶ Press me button ①.

MAKING AN EMERGENCY CALL

- ▶ To open the cover of SOS button ②, press it briefly.
- ▶ Press and hold SOS button ③ for at least one second.

If a Mercedes-Benz Connect call is active, an emergency call can still be triggered. This has priority over all other active calls.

INFORMATION ABOUT THE MERCEDES-BENZ CONNECT CALL USING THE ME BUTTON

A call to the Mercedes-Benz Customer Center has been initiated via the me button in the overhead control panel or the multimedia system (→ page 608).

USING THE VOICE DIALOG SYSTEM YOU ACCESS THE DESIRED SERVICE:

- Accident and Breakdown Management
- Mercedes-Benz Customer Center for general information about the vehicle

YOU CAN FIND INFORMATION ON THE FOLLOWING TOPICS:

- Activation of Digital Extras
- Operating the vehicle
- Nearest authorized Mercedes-Benz Center
- Further products from Mercedes-Benz

Data is transferred during the connection to the Mercedes-Benz Customer Center (→ page 610).

CALLING THE MERCEDES-BENZ CUSTOMER CENTER USING THE MULTIMEDIA SYSTEM

Requirements:

- Access to a mobile phone network is available.
- Sufficient network coverage is provided by the mobile phone network providers in the respective region.
- For automatic transmission of vehicle data: the vehicle is switched on.

Multimedia system:



- ▶ Call [Mercedes me connect](#).
 - After confirmation, the multimedia system sends the required vehicle data. The data transfer is shown in the display.



- ▶ Select a service via the voice dialog system.
You will be put in touch with a contact person at the Mercedes-Benz Customer Center.

THE FOLLOWING SELECTIONS MAY BE AVAILABLE:

- Accident and Breakdown Management
- Workshop service
- Mercedes-Benz Customer Center for general information about the vehicle

 The availability of the individual selection options is country-dependent.

CALLING THE MERCEDES-BENZ CUSTOMER CENTER AFTER AUTOMATIC ACCIDENT/BREAKDOWN DETECTION

Requirements:

The vehicle can detect accident or breakdown situations under certain circumstances.

Accident: no requirements.

Breakdown:

- The vehicle is stationary.
- The hazard warning lights are switched on.

Additional requirements may apply for collision detection with a parked vehicle (→ page 360).

 This function is not available in all countries.

ACCIDENT/BREAKDOWN DETECTION PROCEDURE

- The vehicle has detected an accident/breakdown situation (→ page 360).
- If an accident/breakdown is detected, the emergency guide shows safety instructions in the multimedia system display. This may take a few seconds.

Depending on the severity of the accident, an automatic emergency call can be initiated. This has priority over all other active calls (→ page 616).

- ▶ Exit the emergency guide display.
A prompt appears asking whether you would like to receive support from the Mercedes-Benz Customer Center.
- ▶ **Support from the Mercedes-Benz Customer Center directly after breakdown/accident detection:** select [Call](#).
 - The vehicle data is transferred automatically after your consent or if the "Breakdown Management" Digital Extra is activated (→ page 612).
 - The Mercedes-Benz Customer Center takes your call and organizes the Accident/Breakdown Assistance.

You may be charged for these services.

- ▶ **Support from the Mercedes-Benz Customer Center at a later time:** select [Call Later](#).

The message will disappear and reappear at a later time.



Additional prompt when the "Guard 360" Digital Extra is active: If the "Guard 360" Digital Extra is active, a message may appear in the multimedia system when the vehicle is switched on after a collision is detected, indicating the affected area and the severity of the impact.

- ▶ **Support from the Mercedes-Benz Customer Center directly after collision detection:** select [Call](#).
- ▶ **No support from the Mercedes-Benz Customer Center required:** reject the prompt.

ARRANGING A SERVICE APPOINTMENT VIA A MERCEDES-BENZ CONNECT CALL

If you have activated the Digital Extra Maintenance Management, relevant vehicle data is automatically transferred to the Mercedes-Benz Customer Center. You will then receive individual recommendations regarding the maintenance of your vehicle.

Regardless of whether you have consented to the maintenance management service, the multimedia system reminds you after a certain amount of time that a service is due. A prompt appears asking if you would like to make an appointment.

- ▶ **To arrange a service appointment:** select [Call](#).
After your consent, the vehicle data is transferred and the Mercedes-Benz Customer Center takes your preferred appointment date. The information is then sent to your desired service outlet.
This will contact you to confirm the appointment and if necessary consult about the details.

 If you select [Call Later](#) after the service message appears, the message is hidden and reappears at a later time.

DATA TRANSMITTED DURING A MERCEDES-BENZ CONNECT CALL

If you initiate a Mercedes-Benz Connect call, data is transferred to enable targeted advice and an efficient service.

THE FOLLOWING REQUIREMENTS MUST BE FULFILLED FOR THE TRANSFER OF THE DATA:

- The vehicle is switched on.
- The required data transfer technology is supported by the mobile phone network provider.
- The quality of the mobile connection is sufficient.

MULTI-STAGE TRANSFER DEPENDS ON THE FOLLOWING FACTORS:

- Reason for the initiation of the call
- The available mobile phone transmission technology
- Activated Digital Extras
- The service selected in the voice control system

 The scope of the data transmitted depends on the vehicle model and vehicle equipment. For technical reasons, not all data is available at all times.

DATA TRANSMISSION WHEN DIGITAL EXTRAS ARE NOT ACTIVATED IF NO DIGITAL EXTRAS ARE ACTIVATED, THE FOLLOWING DATA IS TRANSMITTED:

- Vehicle identification number
- Time of the call
- Reason for the initiation of the call
- Confirmation of the data protection prompt





- Country indicator of the vehicle
- Set language for the multimedia system
- Telephone number of the communication platform installed in the vehicle

IF A CALL IS MADE FOR A SERVICE APPOINTMENT VIA THE SERVICE REMINDER, THE FOLLOWING DATA IS ALSO TRANSMITTED:

- Current mileage and maintenance data

IF A CALL IS MADE AFTER AUTOMATIC ACCIDENT OR BREAKDOWN DETECTION USING THE MULTIMEDIA SYSTEM, THE FOLLOWING DATA IS ALSO TRANSMITTED:

- Current mileage and maintenance data
- Current vehicle location

IF ACCIDENT AND BREAKDOWN MANAGEMENT IS CALLED VIA THE VOICE CONTROL SYSTEM, THE FOLLOWING DATA CAN ALSO BE CALLED UP FROM THE VEHICLE BY THE MERCEDES-BENZ CUSTOMER CENTER:

- Current vehicle location

DATA PROCESSING

The data transmitted as part of the call will be deleted from the transmitting systems once the call has been completed, provided they are not used for other activated Digital Extras.

The incident-specific data is processed and stored in the Mercedes-Benz Customer Center and, if required to process the incident, forwarded to the service partner authorized by the Mercedes-Benz Customer Center. Please note the data protection note on the Mercedes-Benz website at <https://>

me.secure.mercedes-benz.com or in the announcement immediately after a call to the Mercedes-Benz Customer Center is connected.

 The recorded message is not available in every country.

Mercedes-Benz Connect

INFORMATION ON MERCEDES-BENZ CONNECT

Mercedes-Benz Connect comprises a number of Digital Extras.

YOU CAN USE THE FOLLOWING DIGITAL EXTRAS VIA THE MULTIMEDIA SYSTEM AND THE OVERHEAD CONTROL PANEL, FOR EXAMPLE:

- Accident Recovery (me button or the situation-dependent display in the multimedia system)
- Breakdown Management (me button or the situation-dependent display in the multimedia system)
- Mercedes-Benz Emergency Call System (automatic emergency call and SOS button)

The Accident and Breakdown Management Digital Extras and the Mercedes-Benz emergency call center are available to you around the clock.

The me button and the SOS button can be found on the vehicle's overhead control panel (→ page 608).

You can also call the Mercedes-Benz Customer Center using the multimedia system (→ page 608).

Please note that Mercedes-Benz Connect is a Mercedes-Benz service. In an emergency, use the emergency call system in the vehicle (→ page 66) or contact the standard national emergency numbers.





Please note the terms of use and data protection information for Mercedes-Benz Connect.. You can find these in your Mercedes me user account.

Further information on Mercedes-Benz Connect and Digital Extras can be found on the Mercedes-Benz Portal: <https://me.secure.mercedes-benz.com>

ACCIDENT AND BREAKDOWN MANAGEMENT DIGITAL EXTRAS

-  The Accident and Breakdown Management Digital Extras are not available in every country. Contact an authorized Mercedes-Benz Center to find out whether this function is available in your country.

THE ACCIDENT AND BREAKDOWN MANAGEMENT CAN INCLUDE THE FOLLOWING FUNCTIONS:

- Supplement to the Mercedes-Benz emergency call system (→ page 66)
If necessary, the contact person at the Mercedes-Benz emergency call center forwards the call to Accident and Breakdown Management. Forwarding the call is however not possible in all countries.
- Breakdown assistance by a technician on location and/or the towing away of the vehicle to the nearest authorized Mercedes-Benz Center
You may be charged for these services.
- Addition to the emergency guide after automatic accident or breakdown detection (→ page 609)
In the event of a breakdown or accident, further vehicle data is sent which enables optimal support by the Mercedes-Benz Customer Center and the authorized service partner or breakdown assistance.
- Supplement to the Digital Extra Telediagnosis
With the Telediagnosis function, specific wear and failure reports are recorded by the service provider, in so far as these can be clearly inter-

preted and are available through the monitoring of components that are subject to diagnostics.

If your vehicle detects a breakdown or threat of a breakdown, you may be prompted via the multimedia system to contact the Mercedes-Benz Customer Center for further help. This prompt in the multimedia system only appears when the vehicle is stationary.

-  These Digital Extras are subject to technical restrictions such as the mobile phone coverage, mobile network quality and the ability of the processing systems to interpret the transferred data. In some circumstances, this can result in delays or the failure of the information to appear in the multimedia system.


Please note that Mercedes-Benz Connect Call is a Mercedes-Benz service. In emergencies, be sure to contact the usual national emergency number first or use the Mercedes-Benz emergency call system (→ page 615).

You can find more information on Digital Extras on the Mercedes-Benz Portal: <https://me.secure.mercedes-benz.com>

DATA TRANSMITTED WITH A MERCEDES-BENZ CONNECT CALL THE DATA TRANSFERRED DURING THE MERCEDES-BENZ CONNECT CALL DEPENDS ON:

- The reason for initiation of the call
- The service that is selected in the voice control system
- The activated Digital Extras (→ page 610)

Which data is transferred for the Digital Extras can be taken from the currently valid terms of use and the data protection notices for Digital Extras. You can find these in your Mercedes-Benz user account.





MB Apps (Digital Extras)

INFORMATION ON MB APPS/DIGITAL EXTRAS

With a Mercedes me ID user account you have access to Mercedes-Benz services and offers.

Availability is dependent both on the country and equipment.

You can obtain further information at an authorized Mercedes-Benz Center or in the Mercedes-Benz Portal: <https://me.secure.mercedes-benz.com>

CALLING UP THE MERCEDES ME ID USER ACCOUNT

Multimedia system:



VEHICLE IS LINKED TO MERCEDES ME ID USER ACCOUNT AND MERCEDES ME ID IS AVAILABLE

- ▶ Select [Mercedes me ID](#).

Information about the linked user account appears.

VEHICLE IS NOT LINKED TO MERCEDES ME ID USER ACCOUNT

- ❗ If you do not yet have a Mercedes me ID user account, you can create a user account at: <https://me.secure.mercedes-benz.com> or in the Mercedes-Benz App. A valid email address or phone number is required for this.

- ▶ Select .
- ▶ Select [MB Apps](#).
- ▶ Select [Mercedes me](#).

- ▶ Follow the instructions on the display to link the user account with the vehicle.

- ❗ If the Mercedes-Benz App is available on a mobile phone, the vehicle link can be made via the displayed QR code.

CALLING UP DIGITAL EXTRAS

Requirements:

- The vehicle is linked to the Mercedes me ID user account.

Multimedia system:



- ▶ Select [My Services](#).

The Digital Extras for which you have a valid license are displayed in alphabetical order.

ORDERING OR RENEWING DIGITAL EXTRAS

Use the Store to order or renew Digital Extras.

- ▶ Select .
- ▶ Select [Store](#).

REMOVING THE LINK BETWEEN THE MERCEDES ME ID USER ACCOUNT AND THE VEHICLE

Requirements:

- The Mercedes me ID of the user account that was first linked to the vehicle is logged in.
- The user profile is synchronized (→ page 504).





- A Mercedes me PIN has been set.

Multimedia system:

   MB Apps  Mercedes me

- ▶ Select [Mercedes me ID](#).
- ▶ Select [Delete vehicle connection](#).

 Only the user whose Mercedes me ID user account was first linked to the vehicle can remove the link between all users and the vehicle.

SELECTING APPS

Requirements:

- Depending on the app, the general terms and conditions are confirmed.

Multimedia system:

   Apps

- ▶ Select an app.

THE FOLLOWING APPS ARE AVAILABLE, FOR EXAMPLE:

- [Weather](#)
- [Browser](#)
- Additional apps, which are purchased or installed subsequently

 You can also access both of the first two apps via the quick access at [Apps](#).

 The available features are country-dependent. License fees may be applicable.

THE FOLLOWING FUNCTIONS ARE AVAILABLE FOR APPS, FOR EXAMPLE:

- Search function
- Filter function, for displaying search results at the current vehicle position or at the destination
- Display of detailed information
- Read-aloud function
- Setting functions

USING THE GALLERY APP

Multimedia system:

   Apps

- ▶ Select [Gallery](#).

IMAGES AND VIDEO RECORDINGS ARE DISPLAYED FROM THE FOLLOWING SOURCES, FOR EXAMPLE:

- Dashcam video recordings
- Collision detection images
- Video recordings and images from other available sources
- Video recordings of off-road tracks and Emotion Tours
- Video recordings from AMG TRACK PACE
- Favorites

- ▶ Select a tab.

 The Gallery app is also available on the front passenger display.



FILTERING DISPLAYS

- ▶ Select .
- ▶ Select an option.
All files, all images or all video recordings are displayed.

PLAYING BACK A VIDEO RECORDING

- ▶ Select .
- ▶ Playback starts.
- ▶ **To continue playback in full screen mode:** tap on the display.
- ▶ **To pause playback:** select .
- ▶ **To continue playback from the desired position:** move the  position on the timeline by sliding it.
- ▶ **To select the previous or next video recording:** swipe to the right or left.

SCROLLING AND ZOOMING IMAGES

- ▶ **To scroll:** swipe on the image in one direction.
- ▶ **To zoom:** tap twice in quick succession on an image.
- ▶ **To select the previous or next image:** swipe to the right or left.

ADDING OR REMOVING A FILE FROM THE FAVORITES

- ▶ Press and hold on a file.
- ▶ Select [Add to Favorites/Remove from Favorites](#).
A corresponding message appears.

SWITCHING WRITE PROTECTION ON OR OFF

 Active write protection is not supported by every app.

- ▶ Press and hold on a file.
- ▶ Activate  or deactivate  [Write Protection](#).

DELETING FILES

- ▶ Select .
- ▶ **To delete a single file:** tap on a file.
 will appear.
- ▶ **To delete all files:** tap on .
- ▶ **To delete:** select .
- ▶ A prompt appears.
- ▶ Select [Yes](#).

 A single file can be deleted even after a long press on the file.

Mercedes-Benz emergency call system

INFORMATION ON THE MERCEDES-BENZ EMERGENCY CALL SYSTEM

Your vehicle is equipped with the Mercedes-Benz emergency call system ("eCall"). This feature can help save lives in the event of an accident. eCall in no way replaces assistance provided from dialing 911.

The Mercedes-Benz emergency call system is generally available for your vehicle for 10 years ex works.





Mercedes-Benz eCall only functions in areas where mobile phone coverage is available from the wireless service providers. Insufficient network coverage from the wireless service providers may result in an emergency call not being transmitted.

eCall is a standard feature in your Mercedes-Benz vehicle. In order to function as intended, the system relies on the transmission of data detailed in the Transmitted Data section that follows.

To disable eCall, a customer must visit an authorized Mercedes-Benz Service department to deactivate the vehicle's communication module.

Deactivation of this module prevents the activation of all Digital Extras. After the deactivation of eCall, automatic emergency call and manual emergency call will not be available.

The vehicle must be switched on before an automatic emergency call can be made.

-  eCall can be deactivated by an authorized Mercedes-Benz dealer. Please note that in the event ownership of the vehicle is transferred to another owner in its deactivated state, eCall will remain deactivated unless the new owner visits an authorized Mercedes-Benz dealership to reactivate the system.

OVERVIEW OF THE MERCEDES-BENZ EMERGENCY CALL SYSTEM

eCall can help to reduce the time between an accident and the arrival of emergency services at the site of the accident. It helps locate an accident site in places that are difficult to access. However, even if a vehicle is equipped with eCall, this does not mean the system is ON. As such, eCall does not replace dialing 911 in the event of an accident.

An emergency call can be made automatically or manually.

Only make emergency calls if you or others are in need of rescue. Do not make an emergency call in the event of a breakdown or a similar situation.

INFORMATION ON THE DISPLAY:

SOS NOT READY: the vehicle is not on or eCall not available.

During an active emergency call, <schar> appears in the display.

You can find more information on the regional availability of eCall at: <https://www.mercedes-benz-mobile.com/extra/ecall/>

-  If there is a malfunction of the emergency call system, the loudspeakers, microphone, air bag or the SOS button, for example, are faulty.

YOU CAN RECOGNIZE A MALFUNCTION IN THE EMERGENCY CALL SYSTEM BY THE FOLLOWING DISPLAYS:

- A corresponding message appears on the driver and media display .
- The SOS button lights up red continuously.


TRIGGERING AN AUTOMATIC MERCEDES-BENZ EMERGENCY CALL

Requirements:

- The vehicle is switched on.
- The starter battery is sufficiently charged.

THE MERCEDES-BENZ EMERGENCY CALL SYSTEM TRIGGERS AN EMERGENCY CALL AUTOMATICALLY IN THE FOLLOWING CASES:

- After activation of the restraint systems such as air bags or Emergency Tensioning Devices after an accident





- After an automatically initiated emergency stop by Active Emergency Stop Assist

THE EMERGENCY CALL HAS BEEN MADE:

- A voice connection is made to the Mercedes-Benz emergency call center.
 - A message with accident data is transmitted to the Mercedes-Benz emergency call center.
- The Mercedes-Benz emergency call center can transmit the vehicle position data to one of the emergency call centers.

The SOS button in the overhead control panel flashes until the emergency call is finished.

It is not possible to immediately end an automatic emergency call.

If no connection can be made to the emergency services either, a corresponding message appears in the media display.

- ▶ Dial the local emergency number on your mobile phone.

IF AN EMERGENCY CALL HAS BEEN INITIATED:

- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call center operator.
- Based on the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.
- If no vehicle occupant answers, an ambulance is sent to the vehicle immediately.

TRIGGERING A MANUAL MERCEDES-BENZ EMERGENCY CALL

- ▶ **To use the SOS button in the overhead control panel:** press the SOS button at least one second long (→ page 608).

or

- ▶ **To use voice control:** use the voice commands of the MBUX voice assistant (→ page 480).

THE EMERGENCY CALL HAS BEEN MADE:

- A voice connection is made to the Mercedes-Benz emergency call center.
 - A message with accident data is transmitted to the Mercedes-Benz emergency call center.
- The Mercedes-Benz emergency call center can transmit the vehicle position data to one of the emergency call centers.
- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call center operator.
 - Based on the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.

If no connection can be made to the emergency services, a corresponding message appears in the central display.

- ▶ Dial the local emergency number on your mobile phone.

ENDING AN UNINTENTIONALLY TRIGGERED MANUAL MERCEDES-BENZ EMERGENCY CALL

- ▶ Select <schar> on the multifunction steering wheel. Depress button for several seconds.





**DATA TRANSFER OF THE MERCEDES-BENZ EMERGENCY CALL SYSTEM
IN THE EVENT OF AN AUTOMATIC OR MANUAL EMERGENCY CALL THE
FOLLOWING DATA IS TRANSMITTED, FOR EXAMPLE:**

- Vehicle's GPS position data
- GPS position data on the route (a few 300 feet (100 m) before the incident)
- Direction of travel
- Vehicle identification number
- Vehicle drive type
- Number of people detected in the vehicle
- Digital Extras available or not
- Whether the emergency call was initiated manually or automatically
- Time of the accident
- Language setting on the multimedia system

Data transmitted is vehicle information. For any questions about the collection, use and sharing of the eCall system data, please contact MBUSA's Customer Assistance Center at 800-FOR-MERC.

For Canada, please contact MBC's Customer Assistance Center at 1-800-387-0100.

Customer requests for covered information should be submitted via the same channels.

**FOR ACCIDENT CLARIFICATION PURPOSES, THE FOLLOWING MEASURES
CAN BE TAKEN UP TO AN HOUR AFTER THE EMERGENCY CALL HAS BEEN
INITIATED:**

- The current vehicle position can be determined.
- A voice connection to the vehicle occupants can be established.

SELF-DIAGNOSIS FUNCTION OF THE EMERGENCY CALL SYSTEM

Your vehicle checks the functionality of the emergency call system every time the vehicle is switched on. During this time, the SOS button lights up red continuously for five seconds. In the event of a system failure, you will be informed via a text message on the driver display and the red **SOS NOT READY** indicator on the central display or media display.

Make sure that the red **SOS NOT READY** indicator on the upper right corner of the display is off within 30 seconds of switching on the vehicle. This means that the emergency call system has successfully passed diagnostics.





< Online and Internet functions

Internet connection

INFORMATION ON CONNECTING TO THE INTERNET

WARNING

Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

WARNING

Risk of accident from operating mobile communication equipment while the vehicle is in motion


Mobile communication devices distract the driver from the traffic situation. This can also cause the driver to lose control of the vehicle.

- ▶ As a driver, only operate mobile communication devices when the vehicle is stationary.
- ▶ As a vehicle occupant, use mobile communication devices only in the designated area, e.g. in the rear passenger compartment.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communication equipment in the vehicle.

DEPENDING ON THE VEHICLE'S EQUIPMENT AND AVAILABILITY IN THE COUNTRY, YOU CAN ESTABLISH AN INTERNET CONNECTION IN THE FOLLOWING WAYS:

- **Vehicles with a communication module:**
 - Using the communication module including data roaming (→ page 620)
 - Using Bluetooth® or Wi-Fi with a data-enabled mobile phone
- **Vehicles without a communication module:**
 - Using Bluetooth® with a data-enabled mobile phone





- Using Wi-Fi with a data-enabled mobile phone


The Internet functions can only be used to a limited degree whilst driving.

SETTING UP AN INTERNET CONNECTION USING THE COMMUNICATION MODULE

Requirements:

- The vehicle is equipped with a permanently installed communication module.
- A Mercedes me user account is available.
- The vehicle is linked to a Mercedes me user account.
- The Entertainment Package is active.
- The Comfort Data Volume service is active.

Multimedia system:



For most Mercedes me connect services, data volume is available when purchasing the services.

Additional data volume is required to use some functions, e.g. web browser or Wi-Fi hotspot.

If the data volume limit is reached, the availability of Mercedes me connect services is limited.

Depending on the vehicle equipment, you can obtain an Entertainment Package via the Mercedes me Store. In order to use the data package included, you must conclude your own contract with a mobile phone network provider

via the Mercedes me App. This can be terminated at any time and incurs no costs. Without this contract it is not possible to use the services included in the previously acquired Entertainment Package. The availability of this option is dependent on the country.

If the data package option is not available or can be upgraded, you can purchase data volume directly from the mobile phone network provider for a fee. The availability of this option is dependent on the country.

 Visit an authorized Mercedes-Benz Center to find out whether it is possible to purchase data volume in your country directly from a mobile phone network provider.


 Alternatively, and if available, you can utilize the tethering function of a mobile phone via Wi-Fi or Bluetooth® to use the web browser or Wi-Fi hotspot.

 With external Wi-Fi hotspots, which are encrypted via TKIP, online software updates cannot be carried out via the external Wi-Fi hotspot.

DISCONNECTING THE AUTOMATIC INTERNET CONNECTION VIA COMMUNICATION MODULE

Requirements:

- Wi-Fi or Bluetooth® tethering are available in the vehicle.





Multimedia system:



 Settings
  System
  Internet and Bluetooth
  Manage Internet Access

- ▶ Select the  settings in the line of [Data Plan](#).
- ▶ **To disconnect the automatic connection:** select the [Delete Entry](#) option.

 The communication module is removed from the list of known hotspots, but can be reconnected manually at any time (→ page 620).

The [Delete Entry](#) option permits the use of purchased data volume to be limited. The system is prevented from automatically establishing a connection to the communication module after this option has been activated.

SETTING UP AN INTERNET CONNECTION VIA WLAN

Requirements:

- The Wi-Fi function is activated on the multimedia system (→ page 521).
- The Wi-Fi hotspot function is activated on the mobile phone (see the manufacturer's operating instructions).
- Internet access via Wi-Fi is activated (see the manufacturer's operating instructions).

Multimedia system:



 Settings
  System
  Internet and Bluetooth
  Manage Internet Access

 This function is country-dependent.

The mobile phone is listed in the Internet device manager

- ▶ Select the mobile phone with the  Wi-Fi symbol.

The mobile phone is not listed in the Internet device manager

- ▶ Select [Search for Access](#).
- ▶ Select the mobile phone with the  Wi-Fi symbol.
It may take a few seconds until the device is found by the Wi-Fi search.
- ▶ Log in to the Wi-Fi network (→ page 521).

THE INTERNET CONNECTION VIA WI-FI IS RESTRICTED OR DOES NOT FUNCTION IN THE FOLLOWING CASES:

- The mobile phone is switched off.
- Mobile data use is deactivated on the mobile phone.
- The Wi-Fi function is deactivated on the multimedia system.
- The Wi-Fi function is deactivated on the mobile phone.
- Internet access via Wi-Fi is deactivated on the mobile phone.

SETTING UP AN INTERNET CONNECTION VIA BLUETOOTH®

Requirements:

- The mobile phone supports the Bluetooth® profile PAN (**P**ersonal **A**rea **N**etwork).
- The mobile phone is connected to the multimedia system via Bluetooth® (→ page 591).
- Internet access via Bluetooth® is activated (see the manufacturer's operating instructions).



Multimedia system:


 >> Settings >> System >> Internet and Bluetooth
 >> Manage Internet Access

 This function is country-dependent.

The mobile phone is listed in the Internet device manager

- ▶ Select the mobile phone with the  Bluetooth® symbol.

The mobile phone is not listed in the Internet device manager

- ▶ Select [Search for Access](#).

In the list displayed, all mobile phones already known to the multimedia system are shown. New devices can be set up using the phone application.

- ▶ Connect the mobile phone using Bluetooth® (→ page 591).

 If a new mobile phone is connected using Bluetooth®, this is also used for the telephone application.

THE INTERNET CONNECTION VIA BLUETOOTH® IS RESTRICTED OR DOES NOT FUNCTION IN THE FOLLOWING CASES:

- The mobile phone is switched off.
- The mobile phone network coverage is insufficient.
- Mobile data use is deactivated on the mobile phone.
- The Bluetooth® function on the multimedia system is switched off and the mobile phone is to be connected via Bluetooth®.
- The Bluetooth® function is switched off on the mobile phone and the mobile phone is to be connected via Bluetooth®.

- Neither the mobile phone network nor the mobile phone allow simultaneous use of a telephone and an Internet connection.
- The mobile phone has not been enabled for Internet access via Bluetooth®.

CANCELING INTERNET ACCESS PERMISSION FOR A MOBILE PHONE

Multimedia system:


 >> Settings >> System >> Internet and Bluetooth
 >> Manage Internet Access

- ▶ Select options  next to the name of the mobile phone.
- ▶ Select [Delete Configuration](#).
- ▶ Select [Yes](#).

ESTABLISHING AN INTERNET CONNECTION

Multimedia system:



 >> Apps

- ▶ For example, select  [Browser](#).

If you select a function that requires an Internet connection and the system is currently offline, a menu opens with a selection of possible Internet accesses as well as all tethering devices that are within range.

- ▶ Select an Internet access from the list.
The Internet connection is established.

 The list of possible Internet connections can also be displayed using the extended status line.





-  Depending on the vehicle equipment and country availability, you can establish an Internet connection via the communication module or connected mobile phones.

-  The availability of the web browser depends on the country.

Connection status

CONNECTION STATUS OVERVIEW

DEPENDING ON THE CONNECTION STATUS, THE FOLLOWING SYMBOLS CAN APPEAR ON THE CENTRAL DISPLAY IN THE STATUS LINE:

- : a Wi-Fi device is selected as Internet access.
- : a Bluetooth® device is selected as Internet access.
- Mobile communications standard (e.g. 4G + double arrow symbol): the communication module is selected as the hotspot.

DISPLAYING THE CONNECTION STATUS

Multimedia system:



-  Briefly press the status line.
The extended status line is displayed.
-  Briefly press the Internet symbol in the symbol overview.
The current connection status is displayed.

NOTES ON DISPLAYING THE CONNECTION STATUS

- When connecting via Wi-Fi, the connection status and device name are displayed.

- When connecting via a Bluetooth® device, the connection status, device name, and network type are displayed.
- In the case of a connection via the communication module the following status information can be shown:
 - Type of network
 - Status (online, offline, data volumes available or used, limited service)
- For vehicles with a communication module, the connection data of non-user paid services can be displayed via [Mercedes me connect](#).

Web browsers

CALLING UP A WEB PAGE



WARNING

Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

-  Only operate this equipment when the traffic situation permits.
-  If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.





Multimedia system:



CALLING UP A NEW WEB PAGE

- ▶ Select **Search**.
- ▶ Entering a web address.
- ▶ Select **OK**.


 The function is country-dependent.

 No web pages can be displayed on the multimedia system while driving.

CALLING UP A WEBSITE FROM THE BROWSER HISTORY

- ▶ **To call up the previous page from the history:** select .

WEB BROWSER OVERVIEW

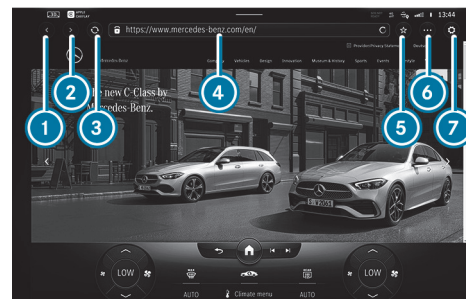

- ① Previous website
- ② Next website
- ③ Update
- ④ URL
- ⑤ Adds/removes bookmarks
- ⑥ Options
- ⑦ Settings

 **UNDER  YOU HAVE THE FOLLOWING OPTIONS:**

- Tabs
- Bookmarks & History
- Reading Mode
- Share Link
- Share Content
- Request Mobile Website



CALLING UP WEB BROWSER OPTIONS

Multimedia system:

  >> Apps >>  Browser >>  >> Bookmarks & History

THE FOLLOWING FUNCTIONS ARE AVAILABLE:

- Bookmarks
- Browser History
- Entered URLs

- ▶ Select an option.
- ▶ Change the settings.

CALLING UP THE WEB BROWSER SETTINGS

Multimedia system:

  >> Apps >>  Browser >>  >> Settings

THE FOLLOWING FUNCTIONS ARE AVAILABLE:

- Block Pop-ups
- Allow Cookies
- Activate Javascript

- ▶ Switch a function on  or off .

DELETING BROWSER DATA

Multimedia system:

  >> Apps >>  Browser >>  >> Browser Data

THE FOLLOWING SPECIFIC BROWSER DATA CAN BE DELETED:

- Cache
- Cookies

- Form Data

- ▶ Select one of the options shown.

MANAGING BOOKMARKS

Multimedia system:

  >> Apps >>  Browser >> 

- ▶ Select [Bookmarks & History](#).
- ▶ Select  after the bookmark.

A menu with options opens.

THE FOLLOWING OPTIONS ARE AVAILABLE:

- [Delete Entry](#)
- [Delete All](#)
- [Edit](#)
- [Share](#)

- ▶ Select one of the options shown.

MANAGING TABS

Multimedia system:

  >> Apps >>  Browser >>  >> Tabs

OPENING A NEW TAB


- ▶ Select [New Tab](#).

CHANGING TAB

- ▶ Select the icon for the desired tab.

CLOSING A TAB

- ▶ Press and hold the icon of the tab to be closed until a menu appears.
- ▶ Select [Close](#).
The tab is closed.





PRIVATE MODE

- ▶ Switch private mode on  or off .

If the private mode is switched on, an icon appears in the input line of the web browser.

-  In private mode, neither the history nor cookies are saved. Bookmarks can also be created in private mode.

SHARING URLS FROM THE WEB BROWSER

Requirements:

- To share via QR code: an app for scanning the QR code is installed on the mobile device.

Multimedia system:



SHARING URLS VIA QR CODE

- ▶ Select [Share Link](#).
A QR code appears.
- ▶ Scan the displayed QR code with a mobile device.

SHARING URLS WITH ANOTHER DISPLAY

- ▶ Select [Share Content](#).
- ▶ In the menu drag and drop a display to another display.
The displayed web page opens on the other display.

-  More information on sharing display content: (→ page 510)

SETTING THE WEB BROWSER IN THE BACKGROUND

Multimedia system:



- ▶ Press .

Audio playback continues.

TuneIn Radio

CALLING UP TUNEIN RADIO

Requirements:

- There is a user account at <https://www.mercedes.me>.
- The vehicle is linked to the Mercedes me user account.
- The TuneIn radio service is activated.
- The data volume is available.
Depending on the country, data volume may need to be purchased.
- A fast Internet connection for data transmission free of interference.

-  The functions and services are country-dependent. For more information, consult an authorized Mercedes-Benz Center.

Multimedia system:



- ▶ Select [TuneIn Radio](#).


The TuneIn Radio menu appears. The last station set starts playing.





The connection quality depends on the local mobile phone reception.

OVERVIEW OF TUNEIN RADIO

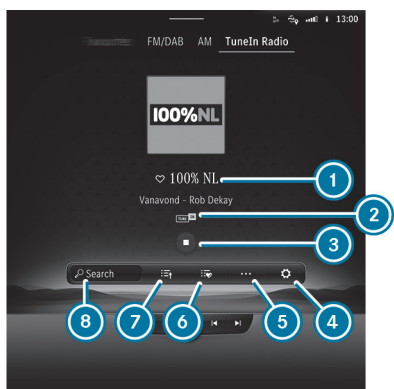

- ① Internet Radio provider
- ② Additional information on the current station
- ③ Controls playback
- ④ Settings
- ⑤ Additional options
- ⑥ Favorites
- ⑦ Station list
- ⑧ Search

SELECTING AND CONNECTING TO TUNEIN RADIO STATIONS

Multimedia system:



- ▶ Select .

- ▶ Select a category.
- ▶ Select a station.
The connection is established automatically.

or

- ▶ Select the search field.
- ▶ Enter a station name.

A relatively large volume of data can be transmitted when using Internet Radio.

SAVING/DELETING A TUNEIN RADIO STATION AS A FAVORITE

Multimedia system:



SAVING FAVOURITES

- ▶ Select a station.
- ▶ Press the symbol next to the station name.

DELETING FAVORITES

- ▶ Select a station.
- ▶ Press the symbol next to the station name.

SETTING INTERNET RADIO OPTIONS

Multimedia system:



THE FOLLOWING OPTIONS ARE AVAILABLE:

- [Select Stream](#): select the stream quality
- [Login to TuneIn Account](#): log in to your TuneIn user account





- [Log Out of Account](#): log out of your TuneIn user account
- ▶ Select an option.





< Media

Information about media mode

INFORMATION ABOUT SUPPORTED FORMATS AND DATA STORAGE MEDIA

WARNING

Risk of distraction when handling data storage media

If you handle a data storage medium while driving, your attention is diverted from the traffic conditions. This could also cause you to lose control of the vehicle.

- ▶ Only handle a data storage medium when the vehicle is stationary.

-  The driver may be distracted from the traffic situation by the sounds of media playback. Use headphones for media playback to avoid distracting the driver.

SUPPORTED FORMATS AND DATA STORAGE MEDIA:


Permissible file systems	FAT32, exFAT, NTFS
Permissible data storage media	USB devices, iPod®/iPhone®, MTP devices, Bluetooth® audio devices
Supported audio formats	MP3, WMA, AAC, WAV, FLAC, ALAC
Supported video formats	MPEG, AVI, MKV, MP4, M4V, WMV

OBSERVE THE FOLLOWING NOTES:

- The multimedia system supports a total of up to 50,000 files.
- Data storage media up to 2 TB are supported (32-bit address space).
- Due to the large variety of available music and video files regarding encoders, sampling frequency and data transfer rates, playback cannot be guaranteed.
- Due to the wide range of USB devices available on the market, playback cannot be guaranteed for all USB devices.
- Videos up to FullHD (1920x1080) are supported.
- Copy-protected music and video files or DRM (Digital Rights Management) encrypted files cannot be played back.
- MP3 players must support Media Transfer Protocol (MTP).
- Files with the corresponding format can be played back from the USB device in Dolby Atmos.

INFORMATION ON COPYRIGHT PROTECTION AND TRADEMARKS

Audio files which you create yourself (e.g. copies of data storage media you make yourself) are generally subject to copyright protection. In many countries, reproductions are not permitted without the prior consent of the copyright holder, even for private use. Make sure that you know about the applicable copyright regulations and that you comply with these.





Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished works. Copyright 2020-2022 Dolby Laboratories. All Rights Reserved.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.



For DTS Patents, see <https://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruVolume is a trademark of DTS, Inc.®. DTS, Inc. All Rights Reserved.



DTS® Connected Radio™

For DTS Patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, DTS Connected Radio, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED. Lyrics licensed and provided by Lyric Find™. Content licensed and sourced from Radioplayer™.




Gracenote, the Gracenote logo and logotype, "Powered by Gracenote", MusicID and Playlist Plus are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.





TIDAL and TIDAL logo are registered trademark of Aspiro AB in the European Union and other countries.

Overview of the media menu

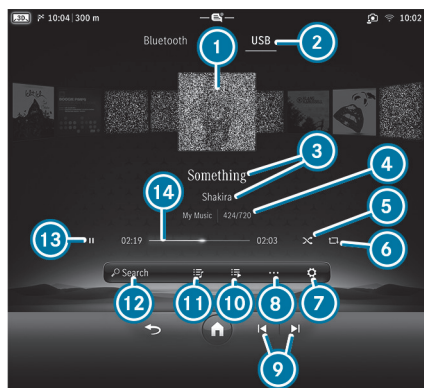

- ① Album cover
- ② Active media source
- ③ Track and artist
- ④ Active data storage medium and current track number/track in playback list
- ⑤ Random playback
- ⑥ Repeat
- ⑦ Settings

- ⑧ Additional options
- ⑨ Previous or next track and fast rewind or fast forward
- ⑩ Additional categories
- ⑪ Playlists and categories
- ⑫ Media search
- ⑬ Controls playback
- ⑭ Timeline

When the control menu is called up on the zero layer, the following functions are available:

- Controlling media playback
- Selecting tracks from the current playlist
- Selecting a playback list
- Media search
- Selecting a media source
- Creating favorites
- Configuring settings

- ① Further information on:
- Overview of the zero layer (→ page 491).
 - Operating the zero layer (→ page 493).





Connecting the data storage medium to the multimedia system

CONNECTING USB DEVICES




NOTE

Damage caused by high temperatures

High temperatures can damage USB devices.

- ▶ Remove the USB device after use and take it out of the vehicle.

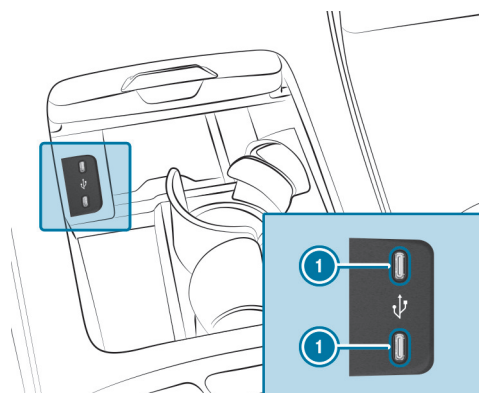

Example: vehicles with cup holders

The multimedia connection unit is found in the center console storage compartment and has two type C USB ports ①. Depending on the vehicle equipment, there are further USB ports in the stowage compartment under the armrest.

The charging power of the USB ports is at least 5 V (3 A) and, depending on the vehicle equipment, a maximum of 20 V (5 A).

- ▶ Connect the USB device to the USB port.

SEARCHING FOR AND AUTHORIZING A BLUETOOTH® AUDIO DEVICE

Requirements:

- Bluetooth® is activated on the multimedia system and audio device.
- The audio device supports the Bluetooth® audio profiles A2DP and AVRCP.
- The audio device is "visible" for other devices.

Multimedia system:



AUTHORIZING A NEW BLUETOOTH® AUDIO DEVICE

- ▶ Select [Connect device](#).
Detected equipment is displayed in the device list.
- ▶ Select an audio device.
Authorization starts. A code is displayed on the multimedia system and on the mobile phone.
- ▶ If the codes are identical, confirm on the audio device.
- ▶ Select [No, Only for Music](#).
The Bluetooth® audio device is connected with the multimedia system.

CONNECTING A PREVIOUSLY AUTHORIZED BLUETOOTH® AUDIO DEVICE

- ▶ Select a Bluetooth® audio device from the list.
The connection is being established.



Starting media playback

Requirements:

- A data storage medium is connected to the multimedia system.

Multimedia system:



- ▶ Select a media source.

Controlling media playback

Multimedia system:



- ▶ **To pause playback:** select .
- ▶ **To continue playback:** select .
- ▶ **To repeat a track:** select .

FOR THE REPEAT FUNCTION THERE ARE THE FOLLOWING SETTINGS:

- **Select once:** the active playlist is repeated.
 - **Select twice:** the current track is repeated.
 - **Select three times:** the repeat function is deactivated.
- ▶ **To play back tracks in random order:** select .
 - ▶ **To rewind or fast-forward a track:** tap on the desired point on the timeline.
 - ▶ **To select the next track:** select .

- ▶ **To select the previous track:** select .
- ▶ **To scroll through tracks quickly:** press and hold  or .
- ▶ **To show the current track list:** select .

 You can also control media playback on the zero layer using the control menu displayed (→ page 491).

Additional options for setting media playback

Multimedia system:



CALLING UP ADDITIONAL OPTIONS

- ▶ Select .
- The additional options are shown.
- ▶ Select an option.

Media search

NOTES ABOUT THE SEARCH FUNCTION IN CATEGORIES

Under  you can search through all available media files. There are several categories available for selection. The categories shown depend on the connected device and data format.

 The categories are available as soon as the entire media content has been read in and analyzed.





Availability of the media search with Android devices may be limited.

STARTING A SEARCH IN CATEGORIES

Multimedia system:



- ▶ Select a category.

USING THE KEYWORD SEARCH

Multimedia system:



You can look for content using the keyword search with free text input.

- ▶ Select .
A keyboard for character entry appears.
- ▶ Enter the term searched for.

 The search begins with the first character entered. The more characters entered the more concrete the search results become.

- ▶ Select the desired entry from the result list.
If a list with several tracks is selected, then this is opened in the search.
To playback all of the tracks in the list, select  and then [Play Now](#).

Media operation on the front passenger display (only vehicles with MBUX Hyperscreen)

INFORMATION ON MEDIA MODE ON THE FRONT PASSENGER DISPLAY (ONLY VEHICLES WITH MBUX HYPERSCREEN)

You can also use functions of the MBUX multimedia system on the front passenger display.

YOU CAN FIND MORE INFORMATION ON THE FOLLOWING TOPICS:

- Information about supported formats and data storage media (→ page 629)
- Information on copyright protection and trademarks (→ page 629)
- Overview of the media menu (→ page 631)

Bluetooth® headphones can be connected to the MBUX multimedia system on the front passenger display.



WARNING

Risk of injury from unsecured items in the vehicle

If objects such as headphones/headsets or external audio/video sources are not secured in the vehicle interior, they can be flung around and hit vehicle occupants.

- ▶ Always stow these items or similar objects carefully so that they cannot be flung around, for example in a lockable vehicle stowage compartment.

Observe the notes on loading the vehicle.



WARNING

Health hazard due to excessive volume on headphones

Excessive volume can damage your hearing.

- ▶ Avoid wearing headphones for long periods of time and at too high a volume (85 decibels).
- ▶ Ensure that the volume is set to a comfortable level.

 The headphones are special equipment for the MBUX multimedia system.
You can also obtain the headphones from Mercedes-Benz Customer Solutions or in a specialist shop (see the manufacturer's operating instructions).

 The function of wireless headphones can be impaired by other radio-based electronic devices, such as mobile phones, for example.

STARTING AND OPERATING MEDIA PLAYBACK ON THE FRONT PASSENGER DISPLAY (ONLY VEHICLES WITH MBUX HYPERSCREEN)

Requirements:

- A data storage medium is connected to the multimedia system.

Multimedia system:



- ▶ Select a media source.

- ▶ **To adjust the volume:** select  in the menu line and press  or .
- ▶ **To set playback via vehicle loudspeakers:** press  in the menu line.
- ▶ **To connect Bluetooth® headphones to the front passenger display:** press  in the menu line and select the desired headphones.

THE FOLLOWING FUNCTIONS ARE AVAILABLE:


- Controlling media playback (→ page 633)
- Options for setting media playback (→ page 633)
- Starting a search in categories (→ page 634)
- Using the keyword search (→ page 634)

Music online

REQUIREMENTS

- There is an account for the music streaming service.
- A subscription for the music streaming service has been obtained.
- The data volume is available.
Depending on the country, data volume may need to be purchased.
- A fast Internet connection for data transmission free of interference.

 The functions and services are country-dependent. For more information, consult an authorized Mercedes-Benz Center.





Multimedia system:



ADDING A STREAMING PROVIDER THE FIRST TIME YOU START THE APPLICATION

- ▶ Select **Online Music**.
The overview of all supported streaming providers appears.
- ▶ Select a streaming provider.
A QR code is shown on the display.
- ▶ Scan the QR code with the mobile phone.
- ▶ Confirm the connection request on the mobile phone.

ADDING MORE STREAMING PROVIDERS

- ▶ Select **Online Music**.
The last active streaming provider is active.
- ▶ Select .
- ▶ Select **Music Services**.
The overview of all supported streaming providers appears.
- ▶ Select a streaming provider.
A QR code is shown on the display.
- ▶ Scan the QR code with the mobile phone.
- ▶ Confirm the connection request on the mobile phone.

LOGGING OUT FROM A STREAMING PROVIDER

- ▶ Select **Online Music**.
The last active streaming provider is active.

- ▶ Select .
- ▶ Select **Music Services**.
The overview of all supported streaming providers appears.
- ▶  next to the streaming provider.
- ▶ Tap on **Log Out**.

CALLING UP MUSIC ONLINE

Multimedia system:



- ▶ Select **Online Music**.

Music playback can be controlled with the Touch Control or by using the media application.

SEARCHING FOR MUSIC IN ONLINE MUSIC

Multimedia system:




SEARCHING FOR CATEGORIES IN ONLINE MUSIC

The media content of the streaming provider can be scanned through in the category search. The available categories and the symbol for the category search depend on the streaming provider.

- ▶ Start the category search.
The list of available categories appears.
- ▶ Select a category.

KEYWORD SEARCH IN ONLINE MUSIC

You can look for content using the keyword search with free text input.





- ▶ Select .
- A keyboard for character entry appears.
- ▶ Enter the term searched for.

 The more characters entered when using the keyword search, the more concrete the search results are.

- ▶ Select the desired entry from the result list.
- Depending on the selected hit, playback is started or a lower level in the search is opened.

CALLING UP ONLINE MUSIC SETTINGS

Multimedia system:

   Media  Online Music

- ▶ Select .
- ▶ Select **Music Services**.
- ▶ Select  next to a streaming provider.
- ▶ Select a setting.

 Information about the linked accounts can be displayed using the  gear icon next to the configured streaming provider. The available information depends on what is offered by the provider of the streaming service.

INFORMATION ABOUT DOLBY ATMOS®

The MBUX multimedia system enables playback of Dolby Atmos® content via the Burmester® sound system, thereby providing an even more immersive three-dimensional sound experience.

 The function is available with Amazon Music® or Apple Music® or by using a USB device with the corresponding file formats.

 Availability of this function depends on the respective equipment.

SWITCHING DOLBY ATMOS® ON OR OFF

Requirements:

- An account for the Amazon Music® or Apple Music® music streaming service is available.
- A subscription to the Amazon Music® or Apple Music® music streaming service has been obtained.
- Sufficient data volume is available.
Depending on the country, data volume may need to be purchased.
- A fast Internet connection for data transmission free of interference.

 The functions and services are country-dependent. For more information, consult an authorized Mercedes-Benz Center.





Multimedia system:

   Media

- ▶ Select **Online Music**.

The overview of all supported streaming providers appears.

- ▶ Select Amazon Music® or Apple Music®.

- ▶ Select .

- ▶ Tap  to switch on **Dolby Atmos®**.

or

- ▶ Tap  to switch off **Dolby Atmos®**.

Tracks which are present or available in Dolby Atmos® will be played accordingly in this format by the sound system.





< Radio

Switching on the radio

Multimedia system:



- ▶ Start the application on the multimedia system home screen.
The radio menu appears. You will hear the last station played on the last frequency band selected.

Radio overview



- ① Station logo
- ② Active frequency band
- ③ Station name or set frequency
- ④ Settings


- ⑤ Sound settings
- ⑥ Switches HD Radio™ on/off
- ⑦ Station list
- ⑧ Search

 The availability of the frequency bands is dependent on the equipment.

When the control menu is called up on the zero layer, the following functions are available:

- Selecting a radio station
- Setting radio stations from the station list
- Storing radio stations
- Frequency band
- Search function
- Creating favorites
- Configuring settings

-  Further information on:
- Overview of the zero layer (→ page 491).
 - Operating the zero layer (→ page 493).





You can watch an animation on this topic via the following link:

Switching the HD Radio™ function on/off

Multimedia system:



- ▶ Select **AM** or **FM**.

 HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents see DTS website. HD Radio and the HD, HD Radio, and "ARC" logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.

Setting the frequency band

Multimedia system:



THE FOLLOWING FREQUENCY BANDS ARE AVAILABLE:

- **AM**
- **FM**

- **SiriusXM**

- ▶ Select a frequency band or a favorite in the selection above the preview image.

Selecting a radio station

Multimedia system:



- ▶ Swipe to the left or right on the control element or select a radio station.

 You can also set the previous/next radio station on the zero layer using the control menu displayed (→ page 491).

Calling up the radio station list

Multimedia system:



- ▶ Select .

The station list appears.

- ▶ Swipe the station list up or down.
- ▶ Select a station.





Searching for radio stations using station names or frequency entry

Multimedia system:



- ▶ Select .
- ▶ Enter a station name or frequency.
- ▶ Select a station.

Selecting a recommended radio station

Requirements:

- The [Allow Music Suggestions](#) option is switched on (→ page 501).
- The multimedia system has gathered sufficient data in order to show station suggestions.

Multimedia system:



- ▶ Select .
- The recommended stations are shown.
- ▶ Select a suggested station.
- The selected station is played.

Storing radio stations

Multimedia system:



- ▶ Select a radio station.
- ▶ Select .

Managing favorites

Multimedia system:



MOVING STATIONS

- ▶ Press .
- The list of favorites appears.
- ▶ Press  to the far right of the station name.
- ▶ Select [Move](#).
- ▶ Move the station to the new position.

Displaying emergency warnings

Multimedia system:



 Availability of the function is dependent on the respective country.



- ▶ Activate or deactivate [Emergency Warnings](#).

Displaying radio text

Multimedia system:



- ▶ Activate or deactivate [Radio Text Information](#).

Showing or hiding lyrics

 The function is equipment-dependent.

Multimedia system:



SHOWING LYRICS

- ▶ Select [Show lyrics](#).
The lyrics, album cover, title and artist of the song currently playing on the radio are displayed.
Swipe up or down to go to the bottom or top section of the lyrics.
If no lyrics are available for the song currently playing on the radio, [Show lyrics](#) is grayed out.

HIDING LYRICS

- ▶ Select the cross at the top of the lyrics display.

or

- ▶ Select .
The radio menu appears.

Satellite radio

INFORMATION ON THE SATELLITE RADIO

SIRIUS XM® satellite radio offers more than 175 digital-quality radio channels providing 100% commercial-free music, sports, news and entertainment, for example. SIRIUS XM satellite radio employs a fleet of high-performance satellites to broadcast around the clock throughout the USA and Canada. The satellite radio program is available for a monthly fee. Information about this can be obtained from a Sirius XM® Service Center and at <https://www.siriusxm.com> (USA) or <https://www.siriusxm.ca> (Canada).

 Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All other marks, channel names and logos are the property of their respective owners. All rights reserved.


SATELLITE RADIO RESTRICTIONS

Satellite radio mode may be temporarily unavailable or interrupted for a variety of reasons. These include environmental or topographical conditions beyond the control of Mercedes-Benz USA, LLC. Thus, operation at certain locations may not be possible.

SETTING UP SATELLITE RADIO

Requirements:

- Satellite radio equipment is available.
- Registration with a satellite radio provider has been completed.
- If registration is not included when purchasing the system, your credit card details will be required to activate your account.





Multimedia system:



- ▶ Select **Service Information**.

The service information screen appears showing the radio ID and the current subscription status.

- ▶ Establish a telephone connection.

- ▶ Follow the service staff's instructions.

The activation process may take up to ten minutes.

You can also have the satellite service activated online. To do so, please visit <https://www.siriusxm.com> (USA) or <https://www.siriusxm.ca> (Canada).


SWITCHING ON SATELLITE RADIO

Multimedia system:



- ▶ Select **SiriusXM**.

OVERVIEW OF THE SATELLITE RADIO

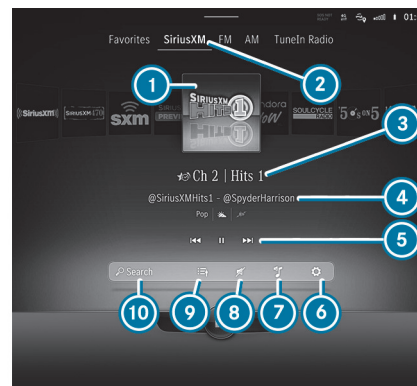

- ① Logo or album art (if available)
- ② Active frequency band
- ③ Channel name
- ④ Additional information provided by the station
- ⑤ Controls playback
- ⑥ Settings
- ⑦ Sound settings
- ⑧ Mutes volume
- ⑨ Station list
- ⑩ Search

SELECTING A SATELLITE RADIO CATEGORY

Multimedia system:



- ▶ Select .
- ▶ Select **Category**.
- ▶ Select a category.





SELECTING A SATELLITE RADIO CHANNEL

Multimedia system:



- ▶ Select .

- ▶ Select a channel.

SAVING OR DELETING A SATELLITE RADIO CHANNEL

Multimedia system:



STORING THE CURRENT CHANNEL

- ▶ Select .

MOVING A CHANNEL

- ▶ Press .

The list of favorites appears.

- ▶ Press  next to the station name.
- ▶ Move the station to the new position.

DELETING THE CURRENT CHANNEL

- ▶ Press .

SETTING PARENTAL CONTROL FOR RADIO

Multimedia system:



- ▶ Select **Parental Control**.

- ▶ Determine a four-digit character sequence and select **OK**.
All channels with adult content are locked.

UNLOCKING A CHANNEL

- ▶ Enter the four-digit character sequence and select **OK**.
All channels with adult content are unlocked.

MUSIC AND SPORT ALERTS FUNCTION

This function enables you to program an alert for your favorite artists, tracks or sporting events. Music alerts can be saved whilst a track is being played and sport alerts can be saved during a live game. You can also specify sport alerts via the menu option. The system then continuously searches through all the channels. If a match is found with a stored alert, you will be informed.

SETTING MUSIC AND SPORT ALERTS

Multimedia system:



ACTIVATING MESSAGES FOR A CATEGORY

- ▶ Select a category and activate .

ADDING MESSAGES FOR A CATEGORY

- ▶ Select a category and add a message .
- ▶ Select **Artist Alerts** or **Track Alerts** in the dialog window.

The message is set for the activated ☒ track and artist. If a match is found, a prompt appears asking whether you wish to change to the station.

DELETING MESSAGES IN A CATEGORY

- ▶ Select a category, mark the desired messages and delete .

or

- ▶ Do not mark any messages and delete all entries .

INFORMATION ABOUT SMART FAVORITES AND TUNESTART

From the station presets you can set up to eight stations as Smart Favorites. Smart Favorites stations are automatically saved to temporary storage in the





background. If you change to a Smart Favorites station, you can replay, pause or actively skip forward or back to broadcasts which you have missed. If Tune Start is activated and you change to another Smart Favorites station, the music track currently playing on the station is automatically restarted from the beginning of the track.

ADDING A CHANNEL TO SMART FAVORITES

Multimedia system:



- ▶ Press and hold on the station logo until the options appear.
- ▶ **To add a channel:** select [Add to Smart Favorites](#) in the menu.
- ▶ **To remove a channel:** select [Delete from Smart Favorites](#) in the menu.

ACTIVATING/DEACTIVATING TUNESTART

Multimedia system:



- ▶ Select [General](#).
- ▶ Switch [TuneStart](#) on or off.

DISPLAYING SATELLITE RADIO SERVICE INFORMATION

Multimedia system:



- ▶ Select [General](#).
- ▶ Select [Service Information](#).





< Sound

Sound settings

INFORMATION ABOUT THE SOUND SYSTEM

The sound system has a total output of 125 W and is equipped with seven speakers. It is available for all functions in the radio and media modes.

 The call can also be made from other audio sources. Replace Media with, for example, Radio in the menu path.

CALLING UP THE SOUND MENU

Multimedia system:



- ▶ Select one of the functions shown to make settings.

ADJUSTING TREBLE, MID-RANGE AND BASS SETTINGS

Multimedia system:



- ▶ Set **Treble**, **Mid** or **Bass**.

SWITCHING LOUDNESS NORMALIZATION ON OR OFF

Multimedia system:



The function compensates for differing loudness when changing between audio sources and within an audio source. Several levels are available for this purpose. The currently set level is displayed.

Loudness normalization can also be switched off.

- ▶ Switch on one level.

or

- ▶ Switch off loudness normalization.

SETTING THE BALANCE AND FADER

Multimedia system:



ADJUSTING THE BALANCE

- ▶ In the grid shown, move the volume distribution between the right and left speakers in the vehicle.

The volume is distributed between the right and left-hand speakers.

ADJUSTING THE FADER

- ▶ In the grid shown, move the volume distribution between the front and rear speakers in the vehicle.

The volume is distributed between the front and rear speakers.

SWITCHING THE GREETING TONE ON/OFF

Multimedia system:



SWITCHING ON THE GREETING TONE

If the **Greeting Tone** is switched on and you enter the vehicle, the vehicle will welcome you with a corresponding sound.

- ▶ Tap on  in order to switch on the **Greeting Tone**.



SWITCHING OFF THE GREETING TONE

- ▶ Tap on  in order to switch off the [Greeting Tone](#).

Burmester® 3D-surround sound system

INFORMATION ABOUT THE BURMESTER® 3D-SURROUND SOUND SYSTEM

The Burmester® 3D-surround sound system has a total output of 710 W and is equipped with 15 speakers. It is available for all functions in the radio and media modes.

-  The call can also be made from other audio sources. Replace Media with, for example, Radio in the menu path.

CALLING UP THE SOUND MENU IN THE BURMESTER® 3D-SURROUND SOUND SYSTEM

Multimedia system:



- ▶ Select one of the functions shown to make settings.

ADJUSTING THE TREBLE, MID AND BASS SETTINGS ON THE BURMESTER® 3D-SURROUND SOUND SYSTEM

Multimedia system:



- ▶ Set [Treble](#), [Mid](#) or [Bass](#).

SWITCHING LOUDNESS NORMALIZATION IN THE BURMESTER® 3D-SURROUND SOUND SYSTEM ON OR OFF

Multimedia system:



The function compensates for differing loudness when changing between audio sources and within an audio source. Several levels are available for this purpose. The currently set level is displayed.

Loudness normalization can also be switched off.

- ▶ Switch on one level.

or

- ▶ Switch off loudness normalization.

ADJUSTING THE BALANCE AND FADER IN THE BURMESTER® 3D-SURROUND SOUND SYSTEM

Multimedia system:



ADJUSTING THE BALANCE

- ▶ Move the volume distribution between the right and left sides of the vehicle in the grid shown.

The volume is distributed between the speakers on the left and right sides in the vehicle.

ADJUSTING THE FADER

- ▶ Move the volume distribution between the front and rear of the vehicle in the grid shown.

The volume is distributed between the speakers in the front and rear of the vehicle.





-  Setting 0 is recommended for high quality music and voice reproduction.

SETTING THE BALANCE AND FADER

- ▶ Move the volume distribution between the right and left side of the vehicle and the front and rear of the vehicle in the grid shown.
The volume is distributed between the left and right and front and rear loudspeakers in the vehicle.

SELECTING A SOUND PROFILE IN THE BURMESTER® 3D-SURROUND SOUND SYSTEM

Multimedia system:



SETTING AN EXISTING SOUND PROFILE

- ▶ Select a sound profile.

SETTING UP A PERSONAL SOUND PROFILE

- ▶ Select [Personal Sound Profile](#) and .
- ▶ Select [Reconfigure](#).
- ▶ Restart the set-up assistant.

SETTING UP A PERSONAL SOUND PROFILE FOR THE FIRST TIME:

- ▶ Select [Personal Sound Profile](#).
- ▶ Open the set-up assistant with [Start](#).
- ▶ Observe the messages on the display and select the preferred settings.
The personal sound profile is created with the selected settings and can be selected in the [Sound Profiles](#) menu.

CHANGING INDIVIDUAL SETTINGS OF THE PERSONAL SOUND PROFILE AT A LATER DATE:

- ▶ Select [Personal Sound Profile](#) and .
- ▶ Adjust the desired settings.

-  The availability of a [Personal Sound Profile](#) is dependent on the equipment.
The set-up assistant is available when the vehicle is stationary.

ADJUSTING THE SOUND FOCUS IN THE BURMESTER® 3D-SURROUND SOUND SYSTEM

Multimedia system:



- ▶ Select a seat or seat row for the sound focus.
The sound focus is activated.

or

- ▶ Select the seat or seat row again.
The sound focus is deactivated.

Advanced sound system

INFORMATION ABOUT THE ADVANCED SOUND SYSTEM

The Advanced sound system has a total output of 225 W and is equipped with eleven speakers. It is available for all functions in the radio and media modes.

-  The call can also be made from other audio sources. Replace Media with, for example, Radio in the menu path.





CALLING UP THE SOUND MENU IN THE ADVANCED SOUND SYSTEM

Multimedia system:



ADJUSTING SOUND SETTINGS

- ▶ Select one of the functions shown.

ADJUSTING TREBLE, MID-RANGE AND BASS SETTINGS IN THE ADVANCED SOUND SYSTEM

Multimedia system:



- ▶ Set **Treble**, **Mid** or **Bass**.

SWITCHING LOUDNESS NORMALIZATION IN THE ADVANCED SOUND SYSTEM ON OR OFF

Multimedia system:



SWITCHING OFF LOUDNESS NORMALIZATION

- ▶ Switch on one level.

or

- ▶ Switch off loudness normalization.

SETTING THE BALANCE/FADER IN THE ADVANCED SOUND SYSTEM

Multimedia system:



ADJUSTING THE BALANCE

- ▶ Move the volume distribution between the right and left sides of the vehicle in the grid shown.
The volume is distributed between the speakers on the left and right sides in the vehicle.

ADJUSTING THE FADER

- ▶ Move the volume distribution between the front and rear of the vehicle in the grid shown.
The volume is distributed between the speakers in the front and rear of the vehicle.

Sound Experience

INFORMATION ABOUT SOUND EXPERIENCE


Your journey will be an acoustic experience. For this purpose, the active Sound Experience accompanies certain situations in the vehicle with selected sounds.

IN THE VEHICLE INTERIOR, FOR EXAMPLE, THE FOLLOWING SITUATIONS ARE ACCOMPANIED BY SELECTED SOUNDS:

- Arrival in the vehicle
- Starting the drive system
- Vehicle acceleration
- Recovery of energy from the braking procedure
- Exiting the vehicle

IN THE EXTERIOR AREA, FOR EXAMPLE, THE FOLLOWING SITUATIONS ARE ACCOMPANIED BY SELECTED SOUNDS:

- Locking and unlocking your vehicle
- Plugging in and unplugging the vehicle plug
The sound when disconnecting the vehicle plug varies with the state of charge of your vehicle.
- Unlocking the vehicle plug
- Successful initiation of the charging process





- Malfunction when charging

In addition, your vehicle welcomes you with an ambient sound outside when the vehicle is stationary and unlocked.

 The availability of the exterior area sounds is dependent on the country.

CALLING UP SOUND EXPERIENCE

Multimedia system:

  >> Settings >> Vehicle >> Driving >> Sound Experience

SWITCHING SOUND EXPERIENCE ON OR OFF

▶ Switching [Sound Experience](#) on  or off 

CALLING UP SOUND EXPERIENCE

Multimedia system:

  >> Settings >> Vehicle >> Driving >> Sound Experience

SWITCHING SOUND EXPERIENCE ON OR OFF

▶ Switch [Sound Experience Inside](#) or [Sound Experience Outside](#) on or off.

 The availability of the Sound Experience Outside is country-dependent.

SELECTING SOUND EXPERIENCE STYLE

▶ Select a style.

Styles are already available, for example [Vivid Flux](#).

You can purchase additional styles through the Mercedes me Portal.

 The availability of styles that can be purchased is country-dependent.

AMG Sound Experience

INFORMATION ABOUT AMG SOUND EXPERIENCE

Your journey will be an acoustic experience. For this purpose, the active Sound Experience accompanies certain situations in the vehicle with selected sounds.

IN THE VEHICLE INTERIOR, FOR EXAMPLE, THE FOLLOWING SITUATIONS ARE ACCOMPANIED BY SELECTED SOUNDS:

- Arrival in the vehicle
- Starting the drive system
- Vehicle acceleration
- [RACE START](#)

IN THE EXTERIOR AREA, FOR EXAMPLE, THE FOLLOWING SITUATIONS ARE ACCOMPANIED BY SELECTED SOUNDS:

- Locking and unlocking your vehicle
- Plugging in and unplugging the vehicle plug
- Locking and unlocking the vehicle plug
- Successful start of the charging process

 The intensity and dynamics of the sounds vary with the set drive program.





-  You can choose between a comfortable (Balanced), a sporty (Sport) or a very sporty (Powerful) supporting characteristic of the driving sounds inside the vehicle. Use the steering wheel buttons (→ page 316) or the multimedia system (→ page 322) to set the supporting sound characteristics.

CALLING UP AMG SOUND EXPERIENCE

Multimedia system:

   Settings  Vehicle  Driving  Sound Experience

SWITCHING SOUND EXPERIENCE EVENTS INSIDE OR OUTSIDE ON OR OFF

- ▶ Switch [Sound Experience Events inside](#) or [Sound Experience Events outside](#) on  or off .

SELECTING SOUND EXPERIENCE STYLE

- ▶ Select a style, e.g. [Authentic](#).

-  The availability of the style is dependent on the equipment.





< Maintenance and care

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

ASSYST PLUS service interval display >

Maintenance Management >

Telediagnosics >

Engine compartment >

Refilling the windshield washer system >

Cleaning and care >



< ASSYST PLUS service interval display

Function of the ASSYST PLUS service interval display

The ASSYST PLUS service interval display on the driver's display informs you of the next regular service due date.

Depending on the operating conditions of the vehicle, the remaining time or distance until the next service due date will be displayed.

You can hide this service display using the back button  on the steering wheel.

You can obtain information concerning the servicing of your vehicle from a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center (→ page 106).

Displaying the service due date

Driver display:



The next service due date is displayed.

- ▶ **To exit the display:** press the back button  on the steering wheel.

Information on regular maintenance work

NOTE

Premature wear through failure to observe service due dates

Maintenance work which is not carried out at the right time or incompletely can lead to increased wear and damage to the vehicle.

- ▶ Adhere to the prescribed service intervals.
- ▶ Always have the prescribed maintenance work carried out at a qualified specialist workshop.

NOTE

Irreparable damage to the high-voltage battery due to maintenance work not being carried out

The high-voltage battery is subject to wear. Maintenance work which is not carried out in time can lead to irreparable damage to the high-voltage battery.

- ▶ Always observe the warning messages about the high-voltage battery and immediately consult a qualified specialist workshop.
- ▶ Have the necessary maintenance work on the high-voltage battery carried out at a qualified specialist workshop.



Notes on special service requirements

The prescribed service interval is based on normal operation of the vehicle. Have the maintenance work carried out more often than prescribed if operating conditions are difficult or the vehicle is subject to increased stress. This is the case for frequent operation in mountainous terrain or on poor road surfaces, for example.

In these or similar operating conditions, have the interior air filter changed more frequently. Check the tires more frequently if the vehicle is operated under increased stress. Further information can be obtained at a qualified specialist workshop.

The ASSYST PLUS service interval display is only an aid. It is the responsibility of the driver of the vehicle to have maintenance work carried out more often than prescribed due to actual operating conditions and/or stresses.

Battery disconnection periods

The ASSYST PLUS service interval display can calculate the service due date only when the battery is connected.

- Display and note down the service due date on the driver display before disconnecting the battery (→ page 653).





< Maintenance Management

Notes about Maintenance Management

If the Maintenance Management service is activated, relevant data is automatically transferred to the Mercedes-Benz Customer Center.

The customer center transmits the data to the service partner that you have entered on the Mercedes-Benz website at: <https://www.mercedes.me>. You will then receive individual recommendations regarding the maintenance of your vehicle.

 The calculation of the optimal transmission time of the maintenance request to the service partner is subject to technical limitations that may cause the maintenance recommendation to be perceived as too early or too late or not to be made at all. In this case, you can conveniently arrange a maintenance appointment with the customer center via the maintenance reminder in the multimedia system.

 Maintenance Management and the maintenance reminder in the multimedia system are not available in every country. Contact an authorized Mercedes-Benz Center to find out whether this function is available in your country.

Data transferred when using Maintenance Management

When the service is activated, relevant data is automatically transferred to determine the required scope of maintenance as well as malfunction detection and malfunction rectification.

Details on data transmission can be found in the data protection information for Mercedes-Benz connect services. These can be found at: <https://www.mercedes.me> under "My Account", "Data Protection & Legal Notice".

 Maintenance Management and the maintenance reminder in the multimedia system are not available in every country.





< Telediagnostics

Notes about Telediagnostics

 This service is not available in all countries.

The vehicle can detect if certain wear parts need to be replaced or if malfunctions have occurred in vehicle systems. If the Telediagnostics service is activated, relevant data is automatically transmitted to the manufacturer. If malfunction conditions are detected by the vehicle system self-diagnosis, the system transmits recommendations for action to the Mercedes-Benz customer center depending on the malfunction detected. The customer center transmits the data to the service partner that you have entered on the Mercedes-Benz website at: <https://www.mercedes.me>.

For selected malfunctions, the notification that a malfunction has been detected may appear in the multimedia system with a request to contact the Mercedes-Benz Customer Center. From this message, a call can be made directly to the customer center for assistance.

 The transmission of a notification to the multimedia system depends on the country, vehicle model and equipment and requires a fast data connection, over which the service provider has no influence.

 Reliable malfunction detection is subject to technical limitations. Therefore, only a limited selection of malfunctions can be detected

and recommendations for action transmitted to the customer center and the service partners. Mercedes-Benz AG is continuously working on the expansion of this service. The malfunction detection depends on the country, vehicle model and equipment.

Data transferred when using Telediagnostics

When the service is activated, relevant data is automatically transferred to determine the required scope of maintenance as well as malfunction detection and malfunction rectification.

Details on data transmission can be found in the data protection information for Mercedes-Benz connect services. These can be found at: <https://www.mercedes.me> under "My Account", "Data Protection & Legal Notice".

 The scope of the transmitted data depends on the vehicle model and its equipment. For technical reasons, not all data is available at all times.





< Engine compartment

Notes on the hood

Only the specialist personnel of a qualified specialist workshop should open the hood. Access by the customer is not permitted.

To open the hood, consult a qualified specialist workshop.

DANGER

Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

- ▶ Do not perform any maintenance work during the charging process.

WARNING

Risk of accident due to driving with the hood unlocked

The hood may open and block your view.

- ▶ Never release the hood when driving.
- ▶ Before every trip, ensure that the hood is locked.

WARNING

Risk of accident and injury when opening and closing the hood

The hood may suddenly drop into the end position.

There is a risk of injury for anyone in the hood's range of movement.

- ▶ Do not open or close the hood if there is a person in the hood's range of movement.

WARNING

Risk of injury due to overheated vehicle

IF YOU OPEN THE HOOD IN THE EVENT OF AN OVERHEATED VEHICLE OR FIRE IN THE ENGINE COMPARTMENT, THE FOLLOWING SITUATIONS MAY OCCUR:

- You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.
- ▶ In the event of overheating or fire in the engine compartment, keep the hood closed and call the fire service.
- ▶ Allow the overheated vehicle to cool down first if you need to open the hood.



**⚠ WARNING**

Risk of injury due to moving parts

Components in the engine compartment may continue to run or start unexpectedly even when the drive system is switched off.

Observe the following if you must open the hood:

- ▶ Switch off the vehicle.
- ▶ Never touch the danger zones surrounding moving components, e.g. the rotation area of the fan.
- ▶ Remove jewellery and watches.
- ▶ Keep items of clothing and hair away from moving parts.

⚠ WARNING

Risk of injury from using the windshield wipers when the hood is open

If the windshield wipers start moving when the hood is open, you could be trapped by the wiper linkage.

- ▶ Always switch off the windshield wipers and the vehicle first if you need to open the hood.

⚠ DANGER

Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

- ▶ Do not perform any maintenance work during the charging process.

⚠ WARNING

Risk of injury due to overheated vehicle


IF YOU OPEN THE HOOD IN THE EVENT OF AN OVERHEATED VEHICLE OR FIRE IN THE ENGINE COMPARTMENT, THE FOLLOWING SITUATIONS MAY OCCUR:

- You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.
- ▶ In the event of overheating or fire in the engine compartment, keep the hood closed and call the fire service.
- ▶ Allow the overheated vehicle to cool down first if you need to open the hood.

Notes on the coolant level

Checking and topping up coolant may only be carried out by the technical staff of a qualified specialist workshop. Access by customers is not permitted.

Contact a qualified specialist workshop for checking and topping up coolant.



**⚠ WARNING**

Risk of injury due to moving parts

Components in the engine compartment may continue to run or start unexpectedly even when the drive system is switched off.

Observe the following if you must open the hood:

- ▶ Switch off the vehicle.
- ▶ Never touch the danger zones surrounding moving components, e.g. the rotation area of the fan.
- ▶ Remove jewellery and watches.
- ▶ Keep items of clothing and hair away from moving parts.

⚠ WARNING

Risk of scalding from hot coolant

You may scald yourself if you open the cap when the drive system is at normal operating temperature.

- ▶ Allow the drive system to cool down before opening the cap.
- ▶ When opening the cap, wear protective gloves and safety glasses.
- ▶ Open the cap slowly to release pressure.

Keeping the air/water duct free

- ▶ Keep the area between the hood and the windshield free of deposits, e.g. ice, snow or leaves.





< Refilling the windshield washer system

⚠ WARNING

Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable.


- ▶ Avoid fire, open flames, smoking and the creation of sparks when using windshield washer concentrate.

- ▶ Add washer fluid.
- ▶ Close washer fluid filler flap ❶.

You can watch an animation on this topic via the following link:

Requirements:

- The vehicle is unlocked.

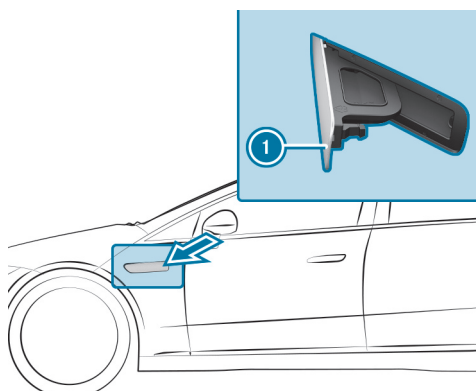

- ▶ Press on the rear area of washer fluid filler flap ❶.
Washer fluid filler flap ❶ will open.





< Cleaning and care

Information on washing the vehicle in a car wash

WARNING

Risk of accident due to reduced braking effect after washing the vehicle

The braking effect is reduced after washing the vehicle.

- ▶ After the vehicle has been washed, brake carefully while paying attention to the traffic conditions until the braking effect has been fully restored.



NOTE

Damage from automatic braking

IF ONE OF THE FOLLOWING FUNCTIONS IS ACTIVATED, THE VEHICLE WILL BRAKE AUTOMATICALLY IN CERTAIN SITUATIONS:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, switch off these systems, e.g. when towing or using a car wash.



NOTE

Damage due to unsuitable car wash

- ▶ Before driving into a car wash make sure that the car wash is suitable for the vehicle dimensions.
- ▶ Ensure there is sufficient ground clearance between the underbody and the guide rails of the car wash.
- ▶ Ensure that the clearance width of the car wash, in particular the width of the guide rails, is sufficient.





TO AVOID DAMAGE TO YOUR VEHICLE WHEN USING A CAR WASH, ENSURE THE FOLLOWING BEFOREHAND:

- Active Distance Assist DISTRONIC is deactivated.
- The HOLD function is switched off.
- The 360° camera or the reversing camera is switched off.
- The vehicle is locked and the door handles retracted.
- The side windows and sliding sunroof are completely closed.
- The exterior mirrors are folded in.
- The blower for the ventilation and heating is switched off.
- The windshield wiper switch is in position **0**.
- The key is at a minimum distance of 20 ft (6 m) away from the vehicle. Otherwise, the trunk lid or a door could open unintentionally. This also applies to the Digital Vehicle Key.
- For car washes with conveyor systems:
 - Neutral **N** is engaged.
 - The vehicle is locked from the inside.

 Removing the wax from the windshield and the wiper blades after washing the vehicle will help avoid smearing and reduce wiper noise.

Car wash mode

In car wash mode, the vehicle is prepared for driving into an automatic car wash. Car wash mode can be activated up to a speed of 12 mph (20 km/h) (→ page 663).

WHEN CAR WASH MODE IS ACTIVATED, THE **AUTOMATIC CAR WASH MODE ACTIVE** MESSAGE WILL APPEAR ON THE DRIVER DISPLAY. THE FOLLOWING ADJUSTMENTS WILL BE MADE:

- The outside mirrors will be folded in.
- To prevent the windshield washer system from starting up automatically, the rain sensor will be deactivated.
- Air-recirculation mode will be activated.
- The convenience door opening is not operational.
- Parking Assist PARKTRONIC will be deactivated.
- Active Brake Assist will be deactivated, if applicable.
- **Vehicles with 360° camera:** the front image will be activated after approximately eight seconds.
- **Vehicles with HANDS-FREE ACCESS:** kick detection will be deactivated.

If one of the settings cannot be selected, this is displayed by a **X** behind the respective setting.

Pressing **Switch Off** will cancel car wash mode. Car wash mode will automatically be deactivated above a speed of 12 mph (20 km/h).

You can also switch off car wash mode via the MBUX multimedia system (→ page 663).

THE FOLLOWING SETTINGS WILL BE RESET WHEN CAR WASH MODE IS DEACTIVATED:

- The outside mirrors will be folded out.
- The rain sensor will be activated.
- Air-recirculation mode will be deactivated.
- The convenience door opening will be operational again.





- Parking Assist PARKTRONIC will be reset to the previously selected setting.
- Active Brake Assist will be activated, if applicable.
- **Vehicles with 360° camera:** the front image will be deactivated at speeds above 11 mph (18 km/h).
- **Vehicles with HANDS-FREE ACCESS:** kick detection will be activated.

Switching car wash mode on/off

Requirements:

- The vehicle is stationary.
- The vehicle is switched on.

Multimedia system:



ACTIVATING CAR WASH MODE

- ▶ Select **Automatic Car Wash Mode**.
- ▶ Select **Activate**.

If one of the settings cannot be selected, this will be shown by a **X** next to the respective setting.

-  For an overview of the settings configured when you activate car wash mode (→ page 662).

DEACTIVATING CAR WASH MODE

- ▶ Select **Switch Off**.
- The settings of car wash mode will be reset.

-  Car wash mode will be automatically deactivated as soon as your speed exceeds 12 mph (20 km/h).

Brake care mode

-  Brake care mode is not available in Mercedes-AMG vehicles.

Brake care mode removes visible red rust. It cleans the brake disc while the vehicle is in motion. Activate brake care mode as soon as the first signs of red rust are visible.

Brake care mode is activated via the multimedia system (→ page 664).

Requirements for activation:

- The temperature of the brake disc is not elevated as a result of previous braking.
- Brake care mode has been activated and completed fewer than three times in the past two weeks.

If you have not been accelerating or braking, it will be active from a speed of 40 mph (65 km/h).

Brake care mode generates a slight brake pressure, which cleans the brake disc. This results in a minimal loss of speed. It may take several minutes to service the brakes. The process will be completed as soon as the necessary number of wheel revolutions has been reached. It will be paused if there is an interruption during brake servicing. Brake care mode will be resumed as soon as the initial situation is restored.



Brake care mode will automatically be deactivated in the following situations:

- The vehicle is switched off.
- The temperature of the brake discs is elevated significantly.
- The ESP® function intervenes.

 Brake care mode must be restarted after it has automatically been deactivated.

Switching brake care mode on or off

Multimedia system:

   Settings  Vehicle  Driving

- ▶ Activate or deactivate the function.

If the start requirements for brake care mode are not met, the button will be grayed out.

 Further information on brake care mode (→ page 663).

 Brake care mode is not available in Mercedes-AMG vehicles.

Information on using a power washer



WARNING

Risk of an accident when using power washers with round-spray nozzles

The water jet can cause externally invisible damage.

Components damaged in this way may unexpectedly fail.

- ▶ Do not use a power washer with round-spray nozzles.
- ▶ Have damaged tires or chassis parts replaced immediately.

TO AVOID DAMAGE TO YOUR VEHICLE, OBSERVE THE FOLLOWING WHEN USING A POWER WASHER:

- The key is at a minimum distance of 10 ft (3 m) away from the vehicle. Otherwise, the trunk lid or a door could open unintentionally. This also applies to the Digital Vehicle Key.
- Maintain a distance of at least 11.8 in (30 cm) to the vehicle.
- **Vehicles with decorative films:** Parts of your vehicle are covered with a decorative film. Maintain a distance of at least 27.6 in (70 cm) between the film-covered parts of the vehicle and the nozzle of the power washer. Move the nozzle of the power washer around while cleaning. The water temperature of the power washer must not exceed 140°F (60°C).
- Observe the information on the correct distance in the equipment manufacturer's operating instructions.
- Do not point the nozzle of the power washer directly at sensitive parts, e.g. tires, gaps, electrical components, batteries, illuminants or ventilation louvers.



Washing the vehicle by hand

Observe the relevant legal requirements (e.g. in some countries, washing by hand is permitted only in specially designated wash bays).

- ▶ Use a mild cleaning agent, e.g. car shampoo.
- ▶ Do not use acidic cleaning agents.
- ▶ Wash the vehicle with lukewarm water using a soft car sponge. When doing so, do not expose the vehicle to direct sunlight.
- ▶ Carefully hose the vehicle off with water and dry using a chamois.

 Observe the notes on the care of vehicle parts (→ page 667).

Notes on paintwork/matte finish paintwork care

To avoid damaging the paintwork and interfering with the driving assistance systems, please observe the following notes:

PAINT

- Insect remains: soak with insect remover and rinse off the treated areas afterwards.
- Bird droppings: soak with water and rinse off afterwards.
- Tree resin, oils, fuels and greases: remove by rubbing gently with a cloth soaked in petroleum ether or lighter fluid.
- Coolant and brake fluid: remove with a damp cloth and clean water.
- Tar stains: use tar remover.
- Wax: use silicone remover.

- Do not attach stickers, films or similar materials. Only have film attached to the bumper at a qualified specialist workshop.
- Remove dirt immediately, where possible. Do not use acidic solutions and acidic cleaning agents.

MATTE FINISH

- Only use care products approved for Mercedes-Benz.
- Do not attach stickers, films or similar materials. Only have film attached to the bumper at a qualified specialist workshop.
- Do not polish the vehicle or the light-alloy wheels.
- Only use car washes that correspond to the latest engineering standards.
- Do not use a car wash program with a final hot wax treatment.
- Do not use paint cleaners, buffing or polishing products, gloss preservers, e.g. wax.

IN THE EVENT OF PAINTWORK DAMAGE:

- Always have paintwork repairs carried out at a qualified specialist workshop.
- Make sure the radar sensors function (→ page 362).


Notes on cleaning decorative car films

Please observe the "Notes on paintwork/matt paintwork care" (→ page 665). These notes also apply for matt decorative car films.

To avoid damage, please observe the notes on cleaning decorative car films.

CLEANING

- When cleaning with a power washer, maintain a minimum distance of 27.6 in (70 cm) between the film-covered parts of the vehicle and the nozzle of the power washer.





- To clean, use lots of water and a mild cleaning agent without additional or abrasive products, e.g. a car shampoo approved for Mercedes-Benz.
- Do not use any acidic cleaning agents.
- Remove dirt immediately, if possible. Avoid hard rubbing to avoid damaging the decorative car film irreparably.
- In case of dirt embedded in the surface or a dull decorative car film: use the 'Paint Cleaner' cleaning agent recommended and approved for Mercedes-Benz.
- Insect remains: Soak with insect remover and rinse off the treated areas afterwards.
- Bird droppings: Soak with water and rinse off afterwards.
- Dry vehicles covered with car film after every wash using a soft, absorbent cloth to prevent water stains.

PREVENTING DAMAGE TO THE DECORATIVE CAR FILM

- The durability and color of decorative car films are affected by:
 - Solar radiation
 - Temperature, e.g. heat gun
 - Weather
 - Stone chips and dirt
 - Chemical cleaning products
 - Products containing grease
- Do not use polishes on matt decorative car films. Polishing results in the film-covered surface developing a shine.
- Do not use wax on matt or structured decorative car films. This may result in permanent stains.

Scratches, corrosive deposits, etched areas and damage caused by inadequate care cannot always be completely repaired. In such cases, please contact a qualified specialist workshop.

For more information about special care and cleaning products, please contact the manufacturer.

Laminated surfaces may exhibit optical differences to surfaces which were not protected by a decorative film when the decorative film is removed.



Have work or repairs on decorative car film carried out at a qualified specialist workshop, e.g. a Mercedes-Benz Service Center.

Information on window films



NOTE

Damage to electronic components due to excess fluids

When window films have been retrofitted, fluids such as cleaning agents or water may run down and get behind trim parts of the vehicle interior and cause damage to electronic components.

- Use cleaning agents as sparingly as possible.
- Immediately absorb any excess fluids.





Notes on car parts cleaning and care

WARNING

Risk of entrapment if the windshield wipers are switched on while the windshield is being cleaned

If the windshield wipers are set in motion while you are cleaning the windshield or wiper blades, you can be trapped by the wiper arm.

- ▶ Always switch off the windshield wipers and the drive system before cleaning the windshield or wiper blades.

NOTE

Damage caused by acidic cleaning agents

- ▶ Do not use acidic cleaning agents. Otherwise, the surfaces could be damaged.

To avoid damage to the vehicle, observe the notes on cleaning and care of the following car parts:

WINDOWS

NOTE

Damage to electronic components due to excess fluids

When cleaning the windows from the inside, fluids such as cleaning agents or water may run down and get behind trim parts of the vehicle interior and cause damage to electronic components.

- ▶ Use cleaning agents as sparingly as possible.
- ▶ Immediately absorb any excess fluids.

- Clean the windows on the inside and outside with a damp cloth and with a cleaning agent recommended for Mercedes-Benz.
- Do not use dry cloths or abrasive or solvent-based cleaning agents to clean the insides of windows.

 After changing the wiper blades or treating the vehicle with wax, clean the windshield thoroughly with cleaning agents recommended for Mercedes-Benz. Failure to observe the application instructions may result in damage, smear marks or dazzling spots.

 Remove external misting or dirt on the windshield in front of the multifunction camera. Otherwise, driving systems and driving safety systems may be impaired or unavailable (→ page 362).

WHEELS AND RIMS

- Use water and acid-free alloy wheel cleaners.





- Do not use acidic alloy wheel cleaners to remove brake dust. This could damage wheel bolts and brake components.
- To avoid corrosion of the brake disks and pads, drive the vehicle for a few minutes after cleaning before parking it. The brake disks and pads will warm up and dry out.

WIPER BLADES

- Move the wiper arms into the replacement position (→ page 33).
- With the wiper arms folded out, clean the wiper blades with a damp cloth.

 Note that the wiper blades are coated. The coating may leave residue on a cloth. Do not rub the wiper blades excessively or clean them too often.

EXTERIOR LIGHTING

- Clean the lenses with a wet sponge and mild cleaning agent (e.g. car shampoo).
- Use only cleaning agents or cleaning cloths that are suitable for plastic lenses.

VEHICLE SOCKET (HIGH-VOLTAGE BATTERY)

- Use clean water and a soft cloth to clean the vehicle socket.
- Do not use power washers or cleaning agents (such as soap).

SENSORS

- Clean the sensors in the front and rear part of the vehicle with car shampoo, plenty of water and a soft cloth (→ page 362).
- When using a power washer, maintain a minimum distance of 11.8 in (30 cm).

CAMERAS

- Open the camera cover with the multimedia system (→ page 424).
- Use clean water and a soft cloth to clean the camera lenses.
- Do not use a power washer.

 Remove external misting or dirt on the windshield in front of the multifunction camera. Otherwise, driving systems and driving safety systems may be impaired or unavailable (→ page 362).

Notes on care of the interior



WARNING

Risk of injury from plastic parts breaking off after the use of solvent-based care products

Care and cleaning products containing solvents can cause surfaces in the cockpit to become porous. When the airbags are deployed, plastic parts may break away.

- ▶ Do not use any care or cleaning products containing solvents to clean the cockpit.



**⚠ WARNING**

Risk of injury or fatal injuries from bleached seat belts
Bleaching or dyeing seat belts can severely weaken them.

This can, for example, cause seat belts to tear or fail in an accident.

- ▶ Never bleach or dye seat belts.

! NOTE

Property damage due to disinfectants

The interior includes a number of sensitive surfaces such as displays, plastics and leather.

Disinfectants can contain alcohol and other substances that penetrate and damage surfaces. Technology behind buttons and displays can also be damaged.

- ▶ Do not use disinfectant on interior surfaces.

To avoid damage to the vehicle, observe the following notes on cleaning and care:

SEAT BELTS

- Clean with lukewarm and soapy water.
- Do not use chemical cleaning agents.
- Do not dry by heating them to over 176°F (80°C) or exposing them to direct sunlight.

DISPLAY

- Switch off the display and let it cool down.

- Clean the surface carefully with a microfiber cloth and a suitable display care product (TFT-LCD).
- Do not use any other agents.

HEAD-UP DISPLAY

- Clean with a soft, non-static, lint-free cloth.
- Do not use cleaning agents.

PLASTIC TRIM

- Clean with a damp microfiber cloth.
- For heavy soiling: Use a cleaning agent recommended for Mercedes-Benz.
- Do not attach stickers, films or similar materials.
- Do not allow cosmetics, insect repellent or sun cream to come in contact with the plastic trim.

REAL WOOD AND TRIM ELEMENTS

- Clean with a microfiber cloth.
- Black piano-lacquer look: clean with a damp cloth and soapy water.
- For heavy soiling: Use a cleaning agent recommended for Mercedes-Benz.
- Do not use solvent-based cleaning agents, polishes or waxes.

HEADLINER

- Clean with a brush or dry shampoo.

CARPET

- Use a carpet and textile cleaning agent recommended for Mercedes-Benz.

IMITATION LEATHER STEERING WHEEL

- Clean the entire steering wheel with a damp cotton cloth and a 1% soap solution. Do not spot clean.





- Use cleaning and care products recommended for Mercedes-Benz.
- Do not use a microfiber cloth.
- Do not use oil-based cleaning and care products.

STEERING WHEEL MADE OF GENUINE LEATHER OR DINAMICA

NOTE

Damage caused by wrong cleaners

- Do not use solvent-based cleaning agents such as tar remover or wheel cleaner; neither should you use polishes or waxes. Otherwise you may damage the finish.

- Clean with a damp cloth and a 1% soap solution and then wipe with a dry cloth.
- For heavy soiling: Use a cleaning agent recommended for Mercedes-Benz.
- Leather care: Use a leather care agent that has been recommended for Mercedes-Benz.
- Do not allow the leather to become too damp.
- Do not use a microfiber cloth.

-  Leather is a natural product. It has natural surface characteristics, such as differences in structure, marks caused by growth and injury or subtle color differences. These surface characteristics are particular to leather, and are not material defects. Leather is also subject to a natural aging process, which changes the surface characteristics.

GENUINE LEATHER SEAT COVERS

- Vacuum up dirt such as crumbs or dust and then clean the seat covers with a damp cotton cloth and wipe down with a dry cloth. Regularly clean the seat covers.
- For heavy soiling: use a leather care agent recommended for Mercedes-Benz aftercare.
- Leather care: Use a leather care agent that has been recommended for Mercedes-Benz.
- Do not use a microfiber cloth.
- Do not allow the leather to become too damp.
- Do not use oil-based cleaning and care products.

-  Leather is a natural product. It has natural surface characteristics, such as differences in structure, marks caused by growth and injury or subtle color differences. These surface characteristics are particular to leather, and are not material defects. Leather is also subject to a natural aging process, which changes the surface characteristics. Waves or wrinkling in the seat cover may occur due to the stress on the seat; this is caused by the natural leather material. Regular cleaning and care of the leather reduces soiling, wear marks and aging damage and thus significantly extends its life span. Clothing that can leave stains (e.g. jeans) may discolour the leather.

DINAMICA SEAT COVERS

- Vacuum up dirt such as crumbs or dust and then use a damp cloth to clean.
- Do not use a microfiber cloth.



**IMITATION LEATHER SEAT COVERS**

- Vacuum up dirt such as crumbs or dust and then use a damp cotton cloth and a 1% soap solution to clean the entire seat cover. Do not spot clean.
- Use cleaning and care products recommended for Mercedes-Benz.
- Do not use a microfiber cloth.
- Do not use oil-based cleaning and care products.

CLOTH SEAT COVERS

- Vacuum up dirt such as crumbs or dust and then use a damp microfiber cloth and a 1% soap solution to clean the entire seat cover. Do not spot clean.
- Use cleaning and care products recommended for Mercedes-Benz.
- Do not use oil-based cleaning and care products.





< Breakdown assistance


This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Emergency	>
Flat tire	>
Battery (vehicle)	>
Tow starting or towing away	>
Electrical fuses	>




< Emergency

Removing the safety vest

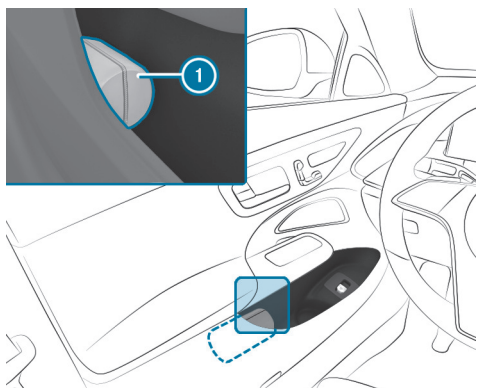

Safety vests can be stored in the door stowage compartments of all doors.

- ▶ To remove: open the safety vest bag ❶ and take out the safety vest.
- ▶ To replace: fold the safety vest, roll it up and insert it into the safety vest bag ❶.
- ▶ Then place the safety vest bag ❶ back into the door stowage compartment.

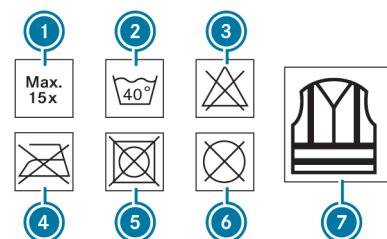

- ❶ Maximum number of washes
- ❷ Maximum wash temperature
- ❸ Do not bleach
- ❹ Do not iron
- ❺ Do not tumble dry
- ❻ Do not dry clean
- ❼ Class 2 safety vest

The requirements defined by the legal standard are only fulfilled if the safety vest is the correct size and is fully closed.

EXCHANGE THE SAFETY VEST IN THE FOLLOWING CASES:

- The reflective strips are damaged or dirty.
- The maximum permissible number of washes is exceeded.
- The fluorescence has faded, e.g. due to continuous exposure to sunlight.


DISPOSE OF THE SAFETY VEST IN AN ENVIRONMENTALLY FRIENDLY WAY:

- Please contact your local waste disposal company.



Warning triangle

REMOVING THE WARNING TRIANGLE

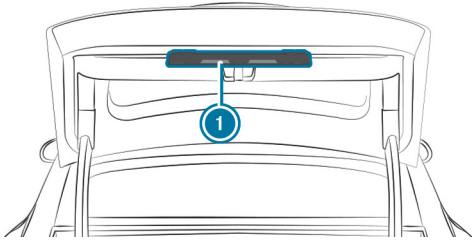


- ▶ Remove warning triangle ①.

SETTING UP THE WARNING TRIANGLE

- ▶ Fold the side reflectors upwards to form a triangle and attach using the upper snap fastener.
- ▶ Fold the legs down and out to the side.

First-aid kit (soft sided)

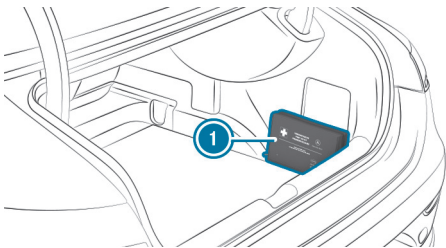

First-aid kit (soft sided) ① is located on the right-hand side of the trunk when the vehicle is delivered.



< Flat tire

Notes on flat tires

WARNING

Risk of accident due to a flat tire

A flat tire severely affects the driving characteristics as well as steering and braking.

Tires without run-flat characteristics:

- ▶ Do not drive on with a flat tire.
- ▶ Change the flat tire immediately with an emergency spare wheel or spare wheel. Alternatively, consult a qualified specialist workshop.

Tires with run-flat characteristics:

- ▶ Observe the information and warning notes on MOExtended tires (run-flat tires).

IN THE EVENT OF A FLAT TIRE, THE FOLLOWING OPTIONS ARE AVAILABLE DEPENDING ON YOUR VEHICLE'S EQUIPMENT:

- **Vehicles with MOExtended tires:** it is possible to continue the journey for a short period of time. Make sure you observe the notes on MOExtended tires (run-flat tires) (→ page 676).

- **Vehicles with a TIREFIT kit:** you can seal the tire so that it is possible to continue the journey for a short period of time. To do this, use the TIREFIT kit (→ page 677).
- **Vehicles with Mercedes-Benz connect:** you can make a call for breakdown assistance via the overhead control panel in the event of a flat tire (→ page 608).
- **All vehicles:** change the wheel (→ page 725).

-  The emergency spare wheel is available only in certain countries (→ page 732).

Vehicles with MOExtended tires are not equipped with a TIREFIT kit at the factory. When retrofitting your vehicle with tires that do not have run-flat capabilities, e.g. winter tires, you should also equip it with a TIREFIT kit. A TIREFIT kit may be obtained from a qualified specialist workshop.

Vehicles with a Mercedes-Benz emergency call system that are not equipped with a TIREFIT kit: in the event of a flat tire, consult the Mercedes-Benz emergency call system Customer Assistance Center.





Notes on MOExtended tires (run-flat tires)

WARNING

Risk of accident when driving in limp-home mode

When driving in emergency mode the handling characteristics are impaired.

- ▶ Do not exceed the specified maximum speed of the MOExtended tires.
- ▶ Avoid any abrupt steering and driving maneuvers as well as driving over obstacles (curbs, pot holes, off-road). This applies, in particular, to a loaded vehicle.
- ▶ Stop driving in the emergency mode if you notice:
 - Banging noise
 - Vehicle vibration
 - Smoke which smells like rubber
 - Continuous ESP® intervention
 - Cracks in the tire side walls
- ▶ After driving in emergency mode, have the rims checked by a qualified specialist workshop with regard to their further use.
- ▶ The defective tire must be replaced in every case.

With MOExtended tires (run-flat tires), you can continue to drive your vehicle even if there is a total loss of pressure in one or more tires. However, the tire affected must not show any clearly visible damage.

You can recognize MOExtended tires by the MOExtended marking which appears on the side wall of the tire.

Vehicles with tire pressure monitoring system: MOExtended tires may only be used in conjunction with an activated tire pressure monitoring system.

IF A PRESSURE LOSS WARNING MESSAGE APPEARS IN THE DRIVER'S DISPLAY, PROCEED AS FOLLOWS:

- Check the tire for damage.
- If driving on, observe the following notes.

DRIVING DISTANCE POSSIBLE IN EMERGENCY MODE AFTER THE PRESSURE LOSS WARNING:

Load condition	Driving distance possible in emergency mode
Partially laden	50 miles (80 km)
Fully laden	19 miles (30 km)


The driving distance possible in emergency mode may vary depending on the driving style. Observe the maximum permissible speed of 50 mph (80 km/h).

If a tire has gone flat and cannot be replaced with an MOExtended tire, you can use a standard tire as a temporary measure.

TIREFIT kit storage location

The TIREFIT kit is located under the trunk floor.



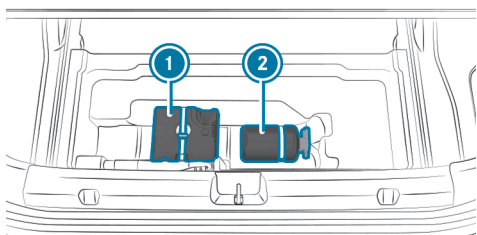

① Tire inflation compressor

② Tire sealant bottle

Depending on the model, the TIREFIT kit may also be located in other places under the trunk floor.

Using the TIREFIT kit

Requirements:

- Tire sealant bottle and tire inflation compressor are ready for use (→ page 61).
- TIREFIT sticker is displayed.
- Gloves are at hand.

You can use TIREFIT tire sealant to seal perforation damage of up to 0.16 in (4 mm), particularly in the tire tread. You can use TIREFIT in outside temperatures down to -4 °F (-20 °C).



WARNING

Risk of accident when using tire sealant

The tire sealant may be unable to seal the tire properly, especially in the following cases:

- There are large cuts or punctures in the tire (larger than damage previously mentioned)
 - The wheel rims have been damaged
 - After journeys with very low tire pressure or with flat tires
- Do not continue driving.
- Consult a qualified specialist workshop.





⚠ WARNING

Risk of injury and poisoning from tire sealant

The tire sealant is harmful and causes irritation. Do not allow it to come into contact with the skin, eyes or clothing, and do not swallow it. Do not inhale tire sealant fumes. Keep the tire sealant away from children.

If you come into contact with the tire sealant, observe the following:

- ▶ Rinse off the tire sealant from your skin immediately using water.
- ▶ If tire sealant gets into your eyes, thoroughly rinse out the eyes using clean water.
- ▶ If tire sealant has been swallowed, immediately rinse out the mouth thoroughly and drink plenty of water. Do not induce vomiting and seek medical attention immediately.
- ▶ Change out of any clothes contaminated with tire sealant immediately.
- ▶ If allergic reactions occur, seek medical attention immediately.

! NOTE


Overheating due to the tire inflation compressor running too long

- ▶ Do not run the tire inflation compressor for longer than ten minutes without interruption.


Observe the manufacturer's safety notes on the sticker on the tire inflation compressor.

Have the tire sealant bottle replaced at a qualified specialist workshop every five years.

- ▶ Do not remove any foreign objects that have pierced the tire.

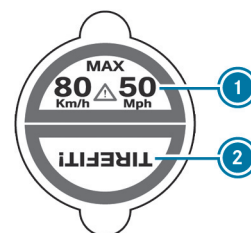


- ▶ Affix part ❶ of the TIREFIT sticker to the instrument cluster within the driver's field of vision.
- ▶ Affix part ❷ of the TIREFIT sticker near the valve on the wheel with the defective tire.

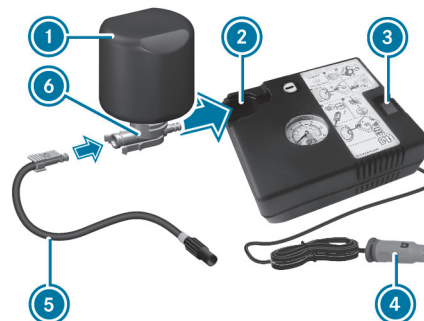


- ▶ Pull plug ❹ with cable and hose ❺ out of the tire inflation compressor housing.



- ▶ Push the plug of hose ⑤ into flange ⑥ of tire sealant bottle ① until the plug engages.
- ▶ Insert tire sealant bottle ① with the head pointing downwards into recess ② of the tire inflation compressor.

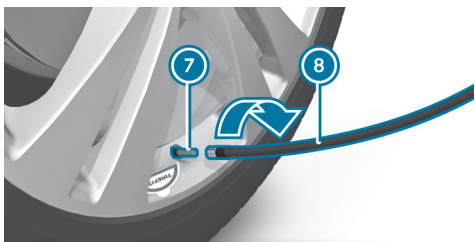

- ▶ Remove the valve cap from valve ⑦ on the defective tire.
- ▶ Screw the filling hose ⑧ onto the valve ⑦.

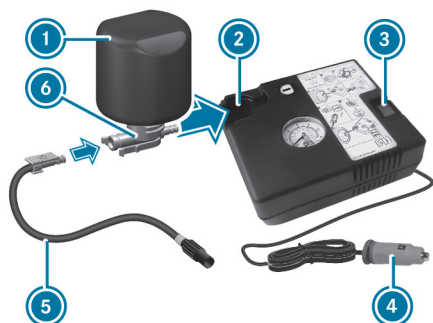

- ▶ Insert the plug ④ into a 12-V-socket in your vehicle (→ page 248).
- ▶ Switch on the vehicle.

- ▶ Switch on the tire inflation compressor using On/Off switch ③.
The tire will be inflated. First, tire sealant will be pumped into the tire.
The pressure may briefly rise to approximately 500 kPa (5.0 bar/73 psi).

Do not switch off the tire inflation compressor during this phase!

- ▶ Allow the tire inflation compressor to run for a maximum of ten minutes.
The tire should have reached a pressure of at least 200 kPa (2.0 bar/29 psi) by then.

If tire sealant leaks out, ensure that the affected area is cleaned as quickly as possible. It is preferable to use clean water.


If you get tire sealant on your clothing, have it cleaned with perchloroethylene at a dry cleaner's as soon as possible.

IF A TIRE PRESSURE OF 200 KPA (2.0 BAR/29 PSI) HAS NOT BEEN ATTAINED AFTER TEN MINUTES:

- ▶ Switch off the tire inflation compressor.
- ▶ Unscrew the filling hose from the valve of the defective tire.

Please note that tire sealant may leak out when you unscrew the filling hose.

- ▶ Drive the vehicle forwards or in reverse very slowly for approximately 33 ft (10 m).
- ▶ Inflate the tire again.
The tire pressure must be at least 200 kPa (2.0 bar/29 psi) after a maximum of ten minutes.



 **WARNING**

Risk of accident due to the specified tire pressure not being achieved

If the specified tire pressure is not achieved after the specified time, the tire is too badly damaged. The tire sealant cannot repair the tire in this instance.

The braking characteristics as well as the driving characteristics may be greatly impaired.

- ▶ Do not continue driving.
- ▶ Consult a qualified specialist workshop.

IF A TIRE PRESSURE OF 200 KPA (2.0 BAR/29 PSI) HAS BEEN ATTAINED AFTER TEN MINUTES:

- ▶ Switch off the tire inflation compressor.
- ▶ Unscrew the filling hose from the valve of the defective tire.

 WARNING

Risk of accident from driving with sealed tires

A tire temporarily sealed with tire sealant impairs the handling characteristics and is not suitable for higher speeds.

- ▶ Adapt your driving style accordingly and drive carefully.
- ▶ Do not exceed the maximum speed limit with a tire that has been repaired using tire sealant.

- ▶ Observe the maximum permissible speed of 50 mph (80 km/h) for a tire sealed with tire sealant.

 NOTE

Staining caused by leaking tire sealant

After use, excess tire sealant may leak out from the filling hose.

- ▶ Therefore, place the filling hose in the plastic bag that contained the TIREFIT kit.

**ENVIRONMENTAL NOTE**

Environmental pollution caused by environmentally irresponsible disposal

Tire sealant contains pollutants.

- ▶ Have the tire sealant bottle disposed of professionally, e.g. at an authorized Mercedes-Benz Center.

- ▶ Stow the tire sealant bottle and the tire inflation compressor.
- ▶ Pull away immediately.
- ▶ Stop driving after approximately ten minutes and check the tire pressure using the tire inflation compressor.
The tire pressure must now be at least 130 kPa (1.3 bar/19 psi).



**⚠ WARNING**

Risk of accident due to the specified tire pressure not being attained


If the specified tire pressure is not reached, the tire is too badly damaged. The tire sealant cannot repair the tire in this instance.

The braking and driving characteristics may be greatly impaired.

- ▶ Do not continue driving.
- ▶ Consult a qualified specialist workshop.


In cases such as the one mentioned above, contact an authorized Mercedes-Benz Center. Or call 1-800-FOR-MERCEdes (in the USA) or 1-800-387-0100 (in Canada).

- ▶ Correct the tire pressure if it is still at least 130 kPa (1.3 bar/19 psi). Refer to the Tire and Loading Information placard or tire pressure table on the B-pillar on the driver's side for the respective values.
- ▶ **To increase the tire pressure:** Switch on the tire inflation compressor.

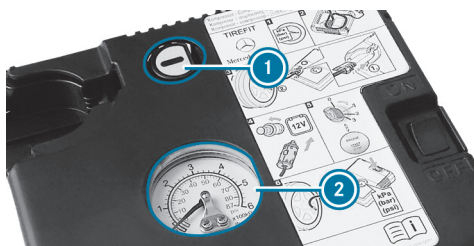

- ▶ **To reduce the tire pressure:** Press pressure release button ① next to manometer ②.

- ▶ When the tire pressure is correct, unscrew the filling hose from the valve of the sealed tire.
- ▶ Screw the valve cap onto the valve of the sealed tire.
- ▶ Pull the tire sealant bottle out of the tire inflation compressor. The filling hose should remain on the tire sealant bottle.
- ▶ Drive to the nearest qualified specialist workshop and have the tire, tire sealant bottle and filling hose replaced.





< Battery (vehicle)

Notes on the 12 V battery

WARNING

Risk of explosion due to electrostatic charge

Electrostatic charge can ignite the highly explosive gas mixture in the battery.

- ▶ To discharge any electrostatic charge that may have built up, touch the metal vehicle body before handling the battery.

The highly flammable gas mixture is created while the battery is charging and during starting assistance.

For safety reasons, Mercedes-Benz recommends that you only use batteries which have been tested and approved for your vehicle by Mercedes-Benz.



WARNING

Danger of chemical burns from the battery acid

Battery acid is caustic.

- ▶ Avoid contact with the skin, eyes or clothing.
- ▶ Do not lean over the battery.
- ▶ Do not inhale battery gases.
- ▶ Keep children away from the battery.
- ▶ Immediately rinse battery acid off thoroughly with plenty of clean water and seek medical attention immediately.



ENVIRONMENTAL NOTE

Environmental damage due to improper disposal of batteries

 Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.

- ▶  Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

Consult a qualified specialist workshop to disconnect the 12 V battery.



Comply with safety notes and take protective measures when handling batteries.



Risk of explosion.



Fire, open flame and smoking are prohibited when handling the battery. Avoid creating sparks.



Electrolyte or battery acid is corrosive. Avoid contact with your skin, eyes or clothing. Wear suitable protective clothing, in particular gloves, apron and face mask. Immediately rinse electrolyte or acid splashes off with clean water. Consult a doctor.



Wear safety glasses.



Keep children away.



Observe this Operator's Manual.

If you do not want to use the vehicle for a long period of time, consult a qualified specialist workshop.

Notes on the high-voltage battery



DANGER

Risk of fire and explosion from excessive internal pressure of the high-voltage battery

In the event of a vehicle fire, flammable gas can escape and ignite.

- ▶ If there is an unusual smell, smoke or burn marks, stop the charging process immediately.
- ▶ Leave the danger zone immediately. Secure the danger area at a sufficient distance.
- ▶ Call the fire service.

Observe the notes on charging the high-voltage battery (→ page 329).



Risk of explosion.



Fire, naked flames and smoking are prohibited when handling the battery. Avoid creating sparks.



Electrolyte or battery acid is corrosive. Avoid contact with the skin, eyes or clothing. Wear suitable protective clothing, in particular gloves, an apron and a face mask. Immediately rinse electrolyte or acid splashes off with clean water. Consult a doctor.



Wear safety glasses.



Keep children away.



Observe this Operator's Manual.





Starting assistance and charging the 12-V-battery

- ▶ Only have starting assistance provided by a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.
- ▶ Only have the battery charged at a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.

Replacing the 12-V-battery

- ▶ Only have the battery replaced at a qualified specialist workshop, e.g. at an authorized Mercedes-Benz Center.





< Tow starting or towing away

Overview of the permitted towing methods

 **NOTE**
Damage from automatic braking

THE VEHICLE WILL BRAKE AUTONOMOUSLY IN CERTAIN SITUATIONS IF THE FOLLOWING FUNCTIONS ARE SWITCHED ON:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, switch these systems off e.g. before towing it or in a car wash.

Mercedes-Benz recommends transporting your vehicle in the case of a breakdown, rather than towing it.

For towing with both axles on the ground, use a tow rope or tow bar. Do not use tow bar systems.

If you notice that the vehicle has lost coolant, do not have it towed. Have the vehicle transported instead.

 **NOTE**
Damage to the vehicle due to towing away incorrectly

 Observe the instructions and notes on towing away.

VEHICLES WITH REAR-WHEEL DRIVE

Permitted towing methods

Both axles on the ground	Yes, for a maximum of 30 miles (50 km) at 30 mph (50 km/h), only forwards with the driver in the cockpit
Front axle raised	No
Rear axle raised	Yes, for a maximum of 30 miles (50 km) at 30 mph (50 km/h)

4MATIC VEHICLES

Permitted towing methods

Both axles on the ground	Yes, for a maximum of 30 miles (50 km) at 30 mph (50 km/h), only forwards with the driver in the cockpit
Front axle raised	No
Rear axle raised	No





Towing the vehicle with both axles on the ground

- ▶ Observe the notes on the permitted towing methods (→ page 685).
- ▶ Make sure that the 12 V battery is connected and charged.

OBSERVE THE FOLLOWING POINTS WHEN THE 12 V BATTERY IS DISCONNECTED OR DISCHARGED:

- The drive system cannot be started.
- The electric parking brake cannot be released or applied.
- The selector lever cannot be put into position **N** or **P**.

ONLY TRANSPORT IS PERMITTED WHEN AT LEAST ONE OF THE FOLLOWING CONDITIONS OCCUR:

- If the selector lever cannot be put into position **N**.
 - If the 12 V battery is disconnected or discharged.
 - If the display in the instrument cluster is not working.
 - If the  **Towing Not Permitted See Operator's Manual** display message is displayed.
 - If the  **Check Coolant Level See Operator's Manual** display message is displayed.
 - If the  **Stop Switch Off Vehicle** display message is displayed.
- ▶ In such cases, transport the vehicle (→ page 688).

NOTE

Damage due to towing away at excessively high speeds or over long distances

The drivetrain could be damaged when towing at excessively high speeds or over long distances.

- ▶ A towing speed of 30 mph (50 km/h) must not be exceeded.
- ▶ A towing distance of 30 miles (50 km) must not be exceeded.

WARNING

Risk of accident when towing a vehicle with too much weight

IF THE VEHICLE TO BE TOWED IS HEAVIER THAN THE PERMISSIBLE GROSS MASS OF YOUR VEHICLE, THE FOLLOWING SITUATIONS CAN ARISE:


- The towing eye breaks off.
- The combination oscillates and can capsize.
- ▶ Before towing, check whether the vehicle to be towed exceeds the permissible gross mass.

If a vehicle is to be towed away, its permissible gross mass must not exceed the permissible gross mass of the towing vehicle.

- ▶ Information on the permissible gross mass of the vehicle can be found on the vehicle identification plate (→ page 800).

TOWING THE VEHICLE

- ▶ Installing the towing eye (→ page 691).





- ▶ Fastening the towing device.

NOTE

Damage due to incorrect connection of the tow bar

- ▶ Only connect the tow rope or tow bar to the towing eyes.

- ▶ Deactivating the automatic locking mechanism (→ page 179).
- ▶ Do not activate the HOLD function.
- ▶ Deactivating the tow-away alarm (→ page 204).
- ▶ Deactivating Active Brake Assist (→ page 402).
- ▶ Put the selector lever into position **N**.
- ▶ Release the electric parking brake.
- ▶ Remain in the cockpit during towing and observe the display messages.
- ▶ Do not switch off the vehicle while it is being towed. Do not operate the start/stop button after moving the selector lever to the **N** position.
- ▶ Do not open the driver's door or front passenger door, because otherwise the selector lever automatically switches to position **P**.

WARNING

Risk of accident due to restricted safety-relevant functions during towing

SAFETY-RELEVANT FUNCTIONS ARE RESTRICTED OR NO LONGER AVAILABLE IN THE FOLLOWING SITUATIONS:

- The vehicle is switched off.
- You pressed the start/stop button after moving the selector lever into position **N**.
- The brake system or power steering is malfunctioning.
- The energy supply or on-board electrical system is malfunctioning.
- ▶ Do not tow the vehicle in these situations.

- ▶ Transporting the vehicle (→ page 688).

NOTE

Damage to the drive system owing to incorrect towing

DO NOT TOW THE VEHICLE IN THE FOLLOWING SITUATIONS:

- The vehicle is switched off.
- The start/stop button has been operated after the selector lever was moved to position **N**.
- The brake system or the power steering is malfunctioning.
- The energy supply or the on-board electrical system is defective.
- ▶ Do not tow the vehicle in these situations.





! NOTE

Damage due to excessive tractive power

If you pull away sharply, the tractive power may be too high and the vehicles could be damaged.

- ▶ Pull away slowly and smoothly.

Loading up the vehicle for transport

Requirements:

- The vehicle is stationary.
 - The vehicle is switched off.
 - The driver display is in the initial state without any opened menus (→ page 453). Transport is also possible when a warning message is visible.
 - The 12 V battery is charged.
- ▶ If necessary, set the system language (→ page 522).
 - ▶ Observe the notes on towing away (→ page 62).
 - ▶ Connect the towing device to the towing eye in order to load up the vehicle.
 - ▶ Switch on the power supply (→ page 301).
 - ▶ Shift the transmission to position **N**.

- i The transmission may be locked in position **P** in the event of damage to the electrics. To shift to **N**, supply power to the on-board electrical system (→ page 59).

Vehicles with AIRMATIC


! NOTE

Possible vehicle damage when loading or unloading

The vehicle must be raised to transport level when loading or unloading.

If the transport settings are not shown or the display message **Vehicle Not Ready for Loading** appears, the vehicle must not be loaded or unloaded.

- ▶ If necessary, raise the vehicle to transport level again.
- ▶ Do not use a ramp to load or unload a vehicle that cannot be raised to transport level. Contact a qualified specialist workshop.

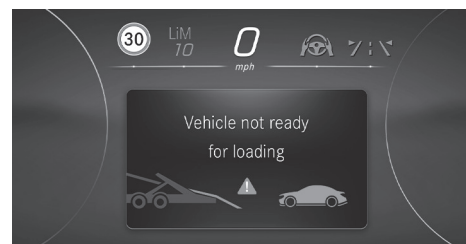



⚠ WARNING

Risk of accident due to activated transport level

If the vehicle is raised to transport level, driving and driving safety systems have only limited availability and the view from the vehicle is restricted.

Driving safety is severely restricted and there is a risk of an accident!

- ▶ Do not use transport level in normal road operation.
- ▶ Only activate and use transport level to load the vehicle and when not on public roads.
- ▶ Ensure that no persons or obstacles are located in the area surrounding the vehicle.

RAISING VEHICLE TO TRANSPORT LEVEL

Vehicles with AIRMATIC

- ▶ Press and hold the  button for at least five seconds.
- ▶ Press and hold the  button for at least one second.
The [For Transport Level Switch On Vehicle](#) display message is displayed.
- ▶ Select [Vehicle Transport](#).

i Noise certification mode is intended exclusively for the technical testing organization. This restricts the drive output of the vehicle and must not be used in customer operation.

- ▶ Switch on the vehicle (→ page 303).
The transport settings are displayed.
- ▶ Swipe down to select [Transport Level](#) and press .
The vehicle is raised and the [Vehicle raising... Do not drive onto ramp yet](#) display message is displayed for 5 seconds. The raising process can take up to 60 seconds and can be interrupted with the  button.
- ▶ Do not switch the vehicle off while it is being raised.

While the vehicle is being raised, you can already maneuver at a speed of maximum 25 mph (40 km/h).



- ▶ Before loading the vehicle, wait until the transport level has been reached and the [Transport Level](#) status is shown.

i When the vehicle is raised to transport level, the transport settings are also still displayed after a restart. Operation of the driver display is restricted.

IF THE VEHICLE IS AT TRANSPORT LEVEL, IT IS LOWERED AGAIN IN THE FOLLOWING SITUATIONS:

- When driving faster than 25 mph (40 km/h).






- The 12 V battery is discharged.

The vehicle is adjusted to the height of the last active level.

TRANSPORTING THE VEHICLE

- ▶ Load the vehicle correctly onto the transporter.
 - Ensure that all wheels are on the transportation surface.
 - Ensure that the vehicle is positioned parallel with the direction of travel.
- ▶ Put the selector lever into position **P**.
- ▶ Use the electric parking brake to secure the vehicle against rolling away.
- ▶ Stop the vehicle and switch off the power supply.
- ▶ Secure the vehicle only by the wheels.

4MATIC VEHICLES

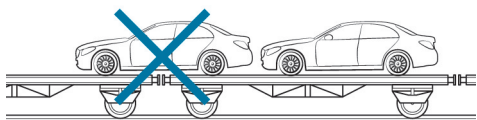

- ▶ Make sure that the front and rear axles come to rest on the same transport vehicle.

! NOTE

Damage to the drive train due to incorrect positioning of the vehicle

- ▶ Do not position the vehicle above the connection point of the transport vehicle.

UNLOADING VEHICLE Vehicles with AIRMATIC

- ▶ Make sure that the vehicle is raised to transport level before unloading. When the vehicle is raised, the status **Transport Level** is shown on the driver display.


LOWERING THE VEHICLE AFTER UNLOADING

- ▶ Switch on the power supply.
- ▶ Switch on the vehicle.
- ▶ In the transportation settings, select **Standard Level** with an upward swiping gesture and press **OK**.
The vehicle is set to the height of the last active level and the **Lowering Vehicle...** display message is displayed.
- ▶ After the vehicle has lowered, press the button **↶** for at least two seconds.
The transport settings are closed.







Towing eye storage location

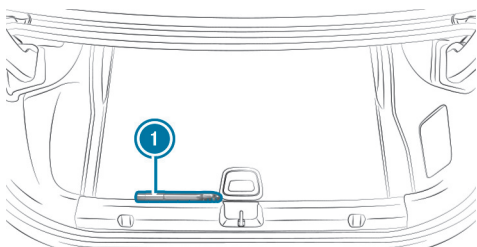

Towing eye ① is located under the trunk floor.

Installing and removing the towing eye

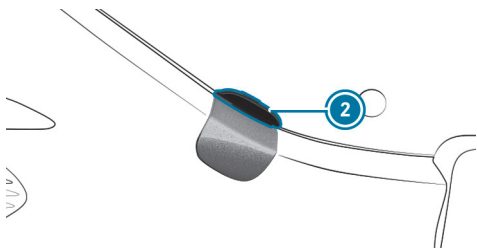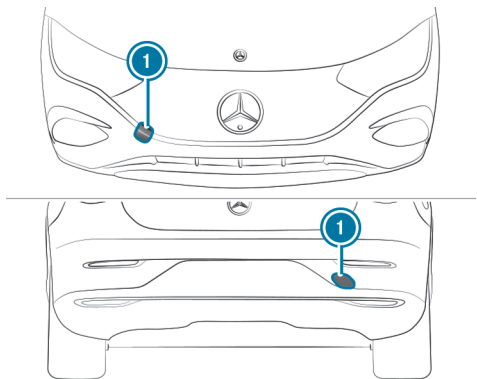

- ▶ Press the cover ① inwards at the top ② and remove.
- ▶ Screw in the towing eye in a clockwise direction as far as it will go.
- ▶ After removing the towing eye, reattach the cover ① in the bumper.

! NOTE


Damage to the vehicle as a result of incorrect use of the towing eye or trailer hitch

The vehicle could sustain damage if the towing eye or trailer hitch is used to pull on the vehicle during recovery situations.

- ▶ The towing eye and trailer hitch should only be used to tow the vehicle.
- ▶ Do not use the towing eye or trailer hitch to pull on the vehicle during recovery situations.

Tow-starting the vehicle

- ▶ If the drive system does not start, have the vehicle transported to a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.
- ▶ The drive system is not started by tow-starting the vehicle. Do not make any attempts to tow-start the vehicle.





< Electrical fuses

Notes on electrical fuses

WARNING

Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher amperage, the electric line could be overloaded.

This could result in a fire.

- ▶ Always replace faulty fuses with specified new fuses containing the correct amperage.

NOTE

Damage due to incorrect fuses

Using incorrect fuses can result in damage to electrical components or systems or their functions being considerably restricted.

- ▶ Use only fuses approved for Mercedes-Benz with the respective specified fuse rating.

Replace blown fuses with equivalent fuses, identifiable by their color and label. The fuse ratings and further information to be observed can be found in the fuse assignment diagram.

Fuse assignment diagram: on the fuse box in the rear (→ page 693).

NOTE

Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- ▶ When the fuse box is open, make sure that no moisture can enter the fuse box.
- ▶ When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

If the newly inserted fuse also blows, have the cause determined and rectified at a qualified specialist workshop.

ENSURE THE FOLLOWING BEFORE REPLACING A FUSE:

- The vehicle is secured against rolling away.
- All electrical consumers are switched off.
- The vehicle is switched off.

THE ELECTRICAL FUSES ARE LOCATED IN VARIOUS FUSE BOXES:

- Fuse box on the driver's side of the cockpit (→ page 693)
- Fuse box in the front passenger footwell (→ page 693)
- Fuse box in the rear (→ page 693)






Opening and closing the fuse box in the cockpit

Requirements:

- Observe the notes on electrical fuses (→ page 59).

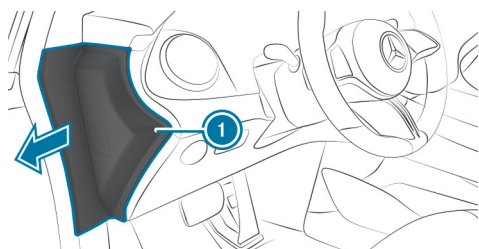

The fuse box is on the driver's side on the side of the cockpit under a cover.

- ▶ **To open:** open cover ① in the direction of the arrow and remove it.
- ▶ **To close:** reinsert cover ①.


Mercedes-Benz recommends you have the fuse box opened at a authorized Mercedes-Benz Center.

Opening and closing the fuse box in the front passenger footwell

Requirements

- Observe the notes on electrical fuses (→ page 59).

Right-hand drive vehicles: the fuse box is on the left side.

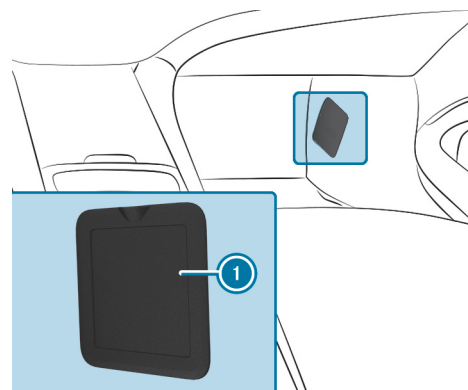

- ▶ **To open the fuse box:** remove cover ①.
- ▶ **To close the fuse box:** reinsert cover ①.

Opening and closing the fuse box in the rear passenger compartment

Requirements:

- Observe the notes on electrical fuses (→ page 59).

The fuse box is located in the center of the vehicle under the seat.

- ▶ To open and close it, consult an authorized Mercedes-Benz Center.





< Wheels and tires

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Notes on noise or unusual handling characteristics	>	Tire labeling	>
Notes on regularly inspecting wheels and tires	>	Definition of terms for tires and loading	>
Notes on snow chains	>	Changing a wheel	>
Turning snow chain mode on or off	>	Emergency spare wheel	>
Selecting the tire type	>		
Tire pressure	>		
Loading the vehicle	>		



< Notes on noise or unusual handling characteristics

Make sure there are no vibrations, noises or unusual handling characteristics when the vehicle is in motion. This may indicate that the wheels or tires are damaged. Hidden tire damage could also be causing the unusual handling characteristics.

If you suspect that a tire is defective, reduce your speed immediately and have the tires and wheels checked at a qualified specialist workshop.





< Notes on regularly inspecting wheels and tires

⚠ **WARNING**

Risk of injury through damaged tires

Damaged tires can cause tire pressure loss.

- ▶ Check the tires regularly for signs of damage and replace any damaged tires immediately.

⚠ **WARNING**

Risk of hydroplaning due to insufficient tire tread

Insufficient tire tread will result in reduced tire grip. There is a risk of an accident.

On a wet road surface the risk of hydroplaning is increased, in particular where speed is not adapted to suit the conditions.

- ▶ Check the tread depth and the condition of the tire contact surface across the entire width of all tires on a regular basis.

MINIMUM TREAD DEPTH FOR

- summer tires: 1/8in (3 mm)
- M+S tires: 1/6in (4 mm)
- ▶ For safety reasons, replace the tires before the legally-prescribed limit for the minimum tread depth is reached.
- ▶ Replace the tires immediately if the legally-prescribed limit for the minimum tread depth is reached.


CARRY OUT THE FOLLOWING CHECKS ON ALL WHEELS REGULARLY, AT LEAST ONCE A MONTH OR AS REQUIRED, FOR EXAMPLE, PRIOR TO A LONG JOURNEY OR DRIVING OFF-ROAD:

- Check the tire pressure (→ page 702).





- Visually inspect wheels and tires for damage.
- Check the valve caps.
- Visual check of the tire tread depth and the tire contact surface across the entire width.
The minimum tread depth for summer tires is $\frac{1}{8}$ in (3 mm) and for winter tires $\frac{1}{4}$ in (6 mm).

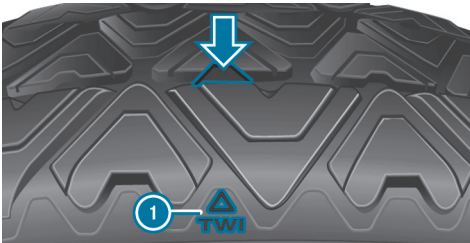

Six marks ① show where the bar indicators (arrow) are integrated into the tire tread. They are visible once a tire tread depth of approximately $\frac{1}{16}$ in (1.6 mm) has been reached.





< Notes on snow chains

WARNING

Risk of accident due to incorrectly installed snow chains

If you have installed snow chains on the front wheels, they may drag against the vehicle body or chassis components.

- ▶ Never install snow chains on the front wheels.
- ▶ Only install snow chains on the rear wheels in pairs.

NOTE

Damage to body or suspension parts caused by installed snow chains

Installing snow chains on the front wheels of 4MATIC models can damage body or suspension parts.

- ▶ Only install snow chains on the rear wheels of 4MATIC models.

NOTE


Damage to wheel trims caused by installed snow chains

Installing snow chains on aluminum wheels can damage the wheel trims.

- ▶ Remove the wheel trims from the aluminum wheels before installing snow chains.

OBSERVE THE FOLLOWING NOTES WHEN USING SNOW CHAINS:

- Snow chains are only permissible for certain wheel/tire combinations. You can obtain information about this from an authorized Mercedes-Benz Center.
- For safety reasons, only use snow chains that have been specifically approved for your vehicle by Mercedes-Benz, or snow chains of the same quality standard.
- Comply with the installation instructions of the snow chain manufacturer.
- If snow chains are installed, the maximum permissible speed is 30 mph (50 km/h).
- **Vehicles with Active Parking Assist:** Do not use Active Parking Assist when snow chains are installed.
- **Vehicles with AIRMATIC:** If snow chains are installed, only drive at raised vehicle level .
- **Vehicles with rear axle steering:** If snow chains are installed, only drive with Snow Chain mode active (→ page 700).





 You can deactivate ESP® to start off (→ page 369). This allows the wheels to spin, achieving increased tractive power.





< Turning snow chain mode on or off

Multimedia system:



- ▶ Turning **Snow Chain Mode** on or off.

When the function is active, the vehicle adjusts to snow chains having been mounted. Among other things, it limits the maximum steering angle of the rear wheels, and the turning circle increases.

Furthermore, some of the driving systems and driving safety systems are not available when snow chain mode is active.





< Selecting the tire type

Requirements:

- The "Navigation with Electric Intelligence" service is available and activated in the Mercedes me Portal.

 Further requirements for Navigation with Electric Intelligence (→ page 546).

Multimedia system:

   Settings  Vehicle  Driving  Tire Type

The setting in this menu optimizes the energy prognosis of Navigation with Electric Intelligence at the start of your journey. Charging stations are thus better selected, for example.

 After a wheel has been changed and you have traveled for several kilometers the menu for selecting the installed tire type appears automatically.

- ▶ Select the tire type, for example [Winter Tires](#).





< Tire pressure

Notes on tire pressure

WARNING

Risk of an accident due to tire pressure that is too low or too high

TIRES WITH PRESSURE THAT IS TOO HIGH OR TOO LOW POSE THE FOLLOWING DANGERS:

- The tires can burst.
- The tires can wear excessively and/or unevenly.
- The driving characteristics as well as the steering- and braking may be greatly impaired.
- ▶ Observe the recommended tire pressure and check the tire pressure of all tires including the spare wheel:
 - monthly
 - when the load changes
 - before leaving on a longer journey
 - when the operating conditions change, e.g. off-road driving
 - when driving at over 155 mph (250 km/h)
- ▶ Adjust the tire pressure if necessary.

HIGH OR LOW TIRE PRESSURE CAN:

- Shorten the service life of the tires.
- Cause increased tire damage.
- Adversely affect driving characteristics and thus driving safety, e.g. due to hydroplaning.

WARNING

Risk of accident due to too low a tire pressure

Tires with pressure that is too low can overheat and burst as a consequence.

In addition, they also suffer from irregular wear, which can significantly impair the braking properties and the handling characteristics.

- ▶ Avoid excessively low tire pressure.

LOW TIRE PRESSURE CAN CAUSE:

- Tire defects as a result of overheating
- Impaired handling characteristics
- Irregular wear
- Increased energy consumption



**⚠ WARNING**

Risk of accident due to too high a tire pressure

Tires with excessively high pressure can burst.

In addition, they also suffer from irregular wear, which can significantly impair the braking properties and the handling characteristics.

- ▶ Avoid excessively high tire pressures.

HIGH TIRE PRESSURE CAN CAUSE:

- Increased braking distance
- Impaired handling characteristics
- Irregular wear
- Impaired driving comfort
- Susceptibility to damage

⚠ WARNING

Risk of accident due to repeated pressure drop in the tires

The wheels, valves or tires could be damaged.

Too low a tire pressure can lead to the tires bursting.

- ▶ Examine the tires for foreign objects.
- ▶ Check whether the tire has a puncture or the valve has a leak.
- ▶ If you are unable to rectify the damage, contact a qualified specialist workshop.

YOU CAN FIND INFORMATION ON TIRE PRESSURE FOR THE VEHICLE'S FACTORY-INSTALLED TIRES ON THE FOLLOWING LABELS ON THE B-PILLAR ON THE DRIVER'S SIDE:

- Tire and Loading Information placard (→ page 708)
- Tire pressure table (→ page 704).

Observe the maximum tire pressure (→ page 715).

Use a suitable pressure gauge to check the tire pressure. The outer appearance of a tire does not permit any reliable conclusion about the tire pressure.

ONLY CORRECT TIRE PRESSURE WHEN THE TIRES ARE COLD. CONDITIONS FOR COLD TIRES:

- The vehicle has been parked with the tires out of direct sunlight for at least three hours.
- The vehicle has traveled less than 1 mile (1.6 km).

The vehicle's tires heat up when driving. As the temperature of the tires increases, so too does the tire pressure.

Vehicles with a tire pressure monitoring system: You can also see the tire pressure in the driver display (→ page 706).

The tire pressure recommended for increased load/speed in the tire pressure table can affect the ride comfort.





⚠ WARNING

Risk of accident due to unsuitable accessories on tire valves

If you mount unsuitable accessories onto tire valves, the tire valves may be overloaded and malfunction, which can cause tire pressure loss.

- ▶ Only screw standard valve caps or valve caps specifically approved by Mercedes-Benz for your vehicle onto the tire valve.

Tire pressure table

The tire pressure table is on the B-pillar on the driver's side.

i The data shown in the illustrations are sample data.

COLD TIRE PRESSURE			
normal load	300 psi	300 psi	
maximum load	330 psi	330 psi	
Warm tires up to: + 4 psi			

The tire pressure table shows the recommended tire pressure for all tires approved for this vehicle. The recommended tire pressures apply for cold tires under various operating conditions, i.e. load and/or speed of the vehicle.

If one or more tire sizes precede a tire pressure, the tire pressure shown is only valid for those tire sizes.

The load conditions "partially laden" and "fully laden" are defined in the table for different numbers of passengers and amounts of luggage. The actual number of seats may differ from this.

		100 kPa = 1 bar			
		kPa	psi	kPa	psi
R18		250	36	250	36
R19		250	36	250	36
M+S		250	36	250	36


Some tire pressure tables only show the rim diameter instead of the complete tire size, e.g. **R18**. The rim diameter is part of the tire size and can be found on the tire side wall (→ page 715).

BE SURE TO ALSO OBSERVE THE FOLLOWING FURTHER RELATED TOPICS:

- Notes on tire pressure (→ page 702)
- Tire and load information table (→ page 708)
- Maximum tire pressure (→ page 715)

Checking the tire pressure manually

- ▶ Read the tire pressure recommended for the current operating conditions from the tire and loading information placard or the tire pressure table. Observe the notes on tire pressure.
- ▶ Remove the valve cap of the tire to be checked.





- ▶ Press the tire pressure gauge securely onto the valve.
- ▶ Read the tire pressure.
- ▶ If the tire pressure is lower than the recommended value, increase the tire pressure to the recommended value.
- ▶ If the tire pressure is higher than the recommended value, release air. To do so, press down the metal pin in the valve, e.g. using the tip of a pen. Then check the tire pressure again using the tire pressure gauge.
- ▶ Screw the valve cap onto the valve.

Tire pressure monitoring system

FUNCTION OF THE TIRE PRESSURE MONITORING SYSTEM



DANGER

Risk of accident due to incorrect tire pressure

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.





When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.



The system checks the tire pressure and the temperature of the tires installed on the vehicle by means of a tire pressure sensor.

The tire pressure and the tire temperature are displayed on the driver display.

In the event of significant pressure loss or excessive temperature of the tires, you will be warned by display messages (→ page 876) or the  warning lamp on the driver display (→ page 894).

The tire pressure monitoring system serves solely as an aid. It is the driver's responsibility to set the tire pressure to the recommended cold tire pressure suitable for the operating situation.

In most cases, the tire pressure monitoring system will automatically update the new reference values after you have changed the tire pressure. You can, however, also update the reference values by restarting the tire pressure monitoring system manually (→ page 707).

SYSTEM LIMITS

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- Incorrect reference values were taught in.
- Sudden pressure loss caused, e.g. by a foreign object penetrating the tire.
- There is a malfunction caused by another radio signal source.

CHECKING THE TIRE PRESSURE WITH THE TIRE PRESSURE MONITORING SYSTEM

Requirements:

- The vehicle is switched on.


Driver display:



- ▶ Press  to confirm.

ONE OF THE FOLLOWING MESSAGES APPEARS:

- Current tire pressure of each wheel:

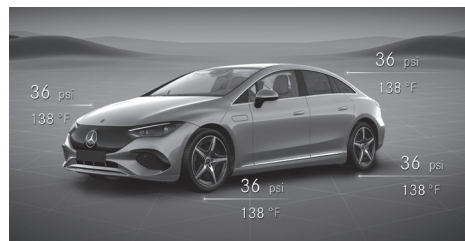

- **Tire pressure displayed after driving for a few minutes.:** Current values are not yet known to the system. The pressure/temperature values of each tire are displayed as soon as they are known to the system.
 - **Tire Pressure Monitor Active:** The teach-in process of the system is not yet complete. The tire pressures are already being monitored.
- ▶ Compare the current tire pressure with the recommended tire pressure for the current operating status (→ page 704). Additionally, observe the notes on cold tires (→ page 702).





-  The values displayed on the driver display may deviate from those of the tire pressure gauge because they relate to sea level. At high elevations, the tire pressure values indicated by a pressure gauge are higher than those shown on the driver display.

After you have driven for a few minutes, the system checks whether the current tire pressures are within the specified range. The current tire pressures are then accepted as reference values and monitored.

If the tire pressure values are not within the prescribed range, the message [Please Correct Tire Pressure](#) appears.

RESTARTING THE TIRE PRESSURE MONITORING SYSTEM

Requirements:

- The recommended tire pressure is correctly set for the respective operating condition on each of the four wheels (→ page 702).


RESTART THE TIRE PRESSURE MONITORING SYSTEM IN THE FOLLOWING SITUATIONS:

- The tire pressure has changed.
- The wheels or tires have been changed or newly installed.

Driver display:



- ▶ Show tire pressure: press **OK**.
- ▶ Show options: press **OK** again.
- ▶ Select [Tire Pressure](#) and confirm with **OK**.
The driver display shows the message [Use current pressures as new reference values?](#).
- ▶ Select [Yes](#) and confirm the restart with **OK**.
The driver display shows the message [Tire Pressure Monitor Restarted](#).
Current warning messages are deleted and the  yellow warning lamp goes out.





< Loading the vehicle

Notes on the Tire and Loading Information placard


⚠ WARNING

Risk of accident from overloaded tires

Overloaded tires may overheat and burst as a consequence. Overloaded tires can also impair the steering and handling characteristics and lead to brake failure.

- ▶ Observe the load rating of the tires.
- ▶ The load rating must be at least half the permissible axle load of the vehicle.
- ▶ Never overload the tires by exceeding the maximum load.


The Tire and Loading Information placard is on the B-pillar on the driver's side of the vehicle.

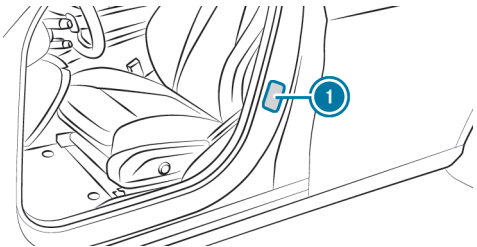

1 Tire and Loading Information placard

1		2		3	
		TIRE AND RENSEIGNEMENTS		LOADING INFORMATION LE CHARGEMENT	
SEATING CAPACITY NOMBRE DE PLACES		TOTAL	X	FRONT AVANT	X
				MIDDLE MI	X
				REAR ARRIÈRE	X
The combined weight of occupants and cargo should never exceed Le poids total des occupants et du chargement ne doit jamais dépasser				XXX kg or XXX lbs.*	
TIRE PNEU	SIZE DIMENSIONS	COLD TIRE PRESSURE PRESSION DES PNEUS À FROID		SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION VOIR LE MANUEL DE L'USAGER POUR PLUS DE RENSEIGNEMENTS	
FRONT AVANT	XXXX/XXXXXX	XXX KPA, XX PSI			
REAR ARRIÈRE	XXXX/XXXXXX	XXX KPA, XX PSI			
SPARE DE SECOURS	XXXX/XXXXXX	XXX KPA, XX PSI			

i The data shown in the illustration are sample data.





THE TIRE AND LOADING INFORMATION PLACARD SHOWS THE FOLLOWING INFORMATION:

- Maximum number of seats ② according to the maximum number of people permitted to travel in the vehicle.
- Maximum permissible load ③ comprises the gross weight of all vehicle occupants, luggage and additional load.
- Recommended tire pressure ① for cold tires. The recommended tire pressures are valid for the maximum permissible load and up to the maximum permissible vehicle speed.

PLEASE ALSO NOTE:

- Information on permissible weights and loads on the vehicle identification plate (→ page 800).
- Information on the tire pressure in the tire pressure table (→ page 704).

Steps for determining the correct load limit

The following steps were developed according to the regulations of Title 49, Code of U.S. Federal Regulations, Part 575, which are binding on all manufacturers, and the National Traffic and Motor Vehicle Safety Act of 1966.

- ▶ (1): Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
- ▶ (2): Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- ▶ (3): Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.

- ▶ (4): The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. $(1400 - 750 (5 \times 150) = 650 \text{ lbs.})$
- ▶ (5): Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- ▶ (6): If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

 Not all vehicles are permitted to tow a trailer. Towing a trailer is only permitted if a trailer-hitch is installed. Please consult an authorized Mercedes-Benz dealer if you have any questions about towing a trailer with your vehicle.

Even if you have calculated the total load carefully, you should still make sure that the maximum permissible gross weight and the maximum gross axle weight rating of your vehicle are not exceeded. Details can be found on the vehicle identification plate.

- ▶ Have your loaded vehicle – including driver, occupants and load – weighed on a vehicle weighbridge.
The measured values may not exceed the maximum permissible values stated on the vehicle identification plate.





Calculation example for determining the maximum payload

The following table shows examples of how to calculate total load capacities and payloads with varying seating configurations and different occupant numbers and weights. The following examples use a maximum payload of 1500 lbs

(680 kg). **This is for illustration purposes only.** Make sure you are using the actual maximum payload for your vehicle as stated in the Tire and Loading Information table of your vehicle (→ page 708).


The higher the weight of all the occupants, the lower the maximum luggage load.

STEP 1

	Example 1	Example 2
Combined maximum weight of occupants and payload (data from the Tire and Loading Information table)	1500 lbs (680 kg)	1500 lbs (680 kg)

STEP 2

	Example 1	Example 2
Number of persons in the vehicle (driver and passengers)	5	1
Distribution of vehicle occupants	Front: 2 Rear: 3	Front: 1
Weight of vehicle occupants	Occupant 1: 150 lbs (68 kg) Occupant 2: 180 lbs (82 kg) Occupant 3: 160 lbs (73 kg) Occupant 4: 140 lbs (63 kg) Occupant 5: 120 lbs (54 kg)	Occupant 1: 200 lbs (91 kg)
Total weight of all vehicle occupants	750 lbs (340 kg)	200 lbs (91 kg)





STEP 3


	Example 1	Example 2
Permissible payload (maximum permissible gross vehicle weight from the Tire and Loading Information table minus the total weight of all occupants)	1500 lbs (680 kg) - 750 lbs (340 kg) = 750 lbs (340 kg)	1500 lbs (680 kg) - 200 lbs (91 kg) = 1300 lbs (589 kg)





< Tire labeling

Overview of tire labeling

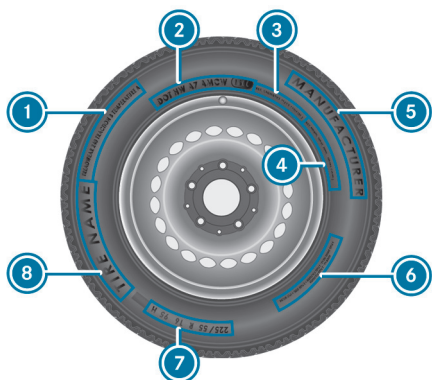


- ① Uniform Tire Quality Grading Standards
- ② DOT (Department of Transportation), (TIN) Tire Identification Number
- ③ Maximum tire load (→ page 714)
- ④ Maximum tire pressure (→ page 715)
- ⑤ Manufacturer
- ⑥ Tire characteristics (→ page 715)
- ⑦ Tire size designation, load-bearing capacity, speed rating and load index (→ page 715)
- ⑧ Tire name

i The data shown in the illustration is example data.

Tire quality grading

In accordance with the US Department of Transportation's "Uniform Tire Quality Grading Standards," tire manufacturers are required to grade their tires on the basis of the following three performance factors:

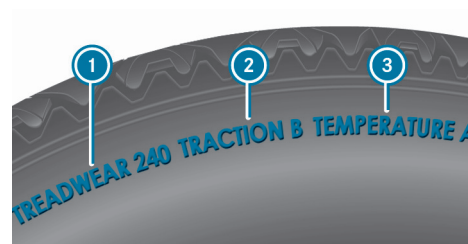

- ① Tread wear grade
- ② Traction grade
- ③ Temperature grade

i The data shown in the illustration is example data.

i The classification is not legally stipulated for Canada, but it is generally stated.

TREAD WEAR GRADE

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test



course. For example, a tire graded 150 would wear one and one-half (1½) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

TRACTION GRADE

DANGER

Risk of accident due to inadequate traction

The traction grade assigned to this tire is based on straight-ahead braking traction tests.

- ▶ Always adapt your driving style and drive at a speed to suit the prevailing traffic and weather conditions.

NOTE

Damage to the drivetrain from wheelspin

- ▶ Avoid wheelspin.

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

TEMPERATURE GRADE

WARNING

Risk of accident from tire overheating and tire failure

Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause excessive heat build-up and possible tire failure.


- ▶ Observe the recommended tire pressure.
- ▶ Regularly check the pressure of all the tires.
- ▶ Adjust the tire pressure, if necessary.

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

DOT, Tire Identification Number (TIN)

US tire regulations stipulate that every tire manufacturer or retreader must imprint a TIN in or on the side wall of each tire produced.



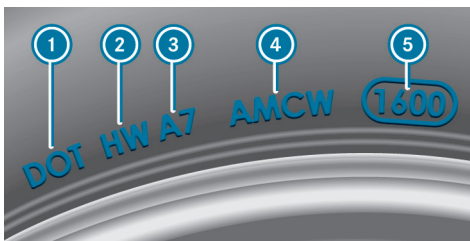

i The data in the illustration is shown as an example.

THE TIN IS A UNIQUE IDENTIFICATION NUMBER TO IDENTIFY TIRES, AND COMPRISES THE FOLLOWING:

- **DOT (Department of Transportation):** tire marking **1** indicating that the tire complies with the requirements of the US Department of Transportation.
- **Manufacturer identification code:** the manufacturer identification code **2** contains details of the tire manufacturer. New tires have a code with two symbols. Retreaded tires have a code with four symbols. Further information on retreaded tires (→ page 720).
- **Tire size:** the marking **3** states the tire size.
- **Tire type code:** the tire type code **4** can be used by the manufacturer as a code to describe specific characteristics of the tire.
- **Manufacturing date:** the manufacturing date **5** provides information about the age of a tire. The 1st and 2nd digits represent the calendar week and the 3rd and 4th digits state the year of manufacture (e.g. "3208" represents the 32nd week of 2008).

Information on the maximum tire load

⚠ WARNING

Risk of accident from overloaded tires

Overloaded tires may overheat and burst as a consequence. Overloaded tires can also impair the steering and handling characteristics and lead to brake failure.

- ▶ Observe the load rating of the tires.
- ▶ The load rating must be at least half the permissible axle load of the vehicle.
- ▶ Never overload the tires by exceeding the maximum load.



i The data in the illustration is shown as an example.

Maximum tire load **1** is the maximum permissible weight for which the tire is approved.

Do not overload the tires by exceeding the maximum permissible load limit. The maximum permissible load can be found on the vehicle's Tire and Loading Information table on the B-pillar on the driver's side (→ page 708).




Information on maximum tire pressure



 The data in the illustration is shown as an example.

Do not exceed the maximum tire pressure  permitted for the tire. Always observe the recommended tire pressure for your vehicle when adjusting the tire pressure (→ page 704).

Information on tire composition

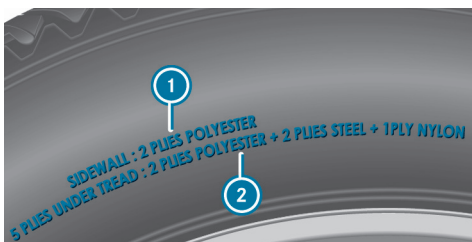

 The data in the illustration is shown as an example.

It describes the type of tire cord and the number of layers in the side wall  and under the tire tread .

Tire size, load-bearing capacity, speed rating and load index




WARNING

Risk of injury through exceeding the specified tire load-bearing capacity or the permissible speed rating

Exceeding the specified tire load rating or the permissible speed rating may lead to tire damage and to the tires bursting.

- Therefore, only use tire types and sizes approved for your vehicle model.
- Observe the tire load rating and speed rating required for your vehicle.

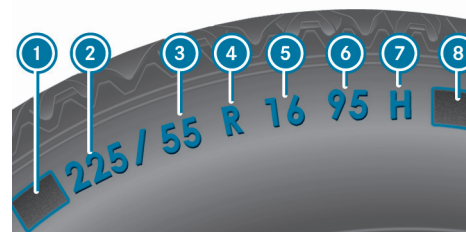

-  Preceding letter
-  Nominal tire width in millimeters
-  Aspect ratio in %
-  Tire code
-  Rim diameter
-  Load-bearing index
-  Speed rating
-  Load index



i The data in the illustration is shown as an example.

Information about interpreting tire data can be obtained from any qualified specialist workshop.

PRECEDING LETTER ①:

- None: passenger car tires according to European manufacturing standards.
- "P": passenger car tires according to US manufacturing standards.
- "LT": light truck tires according to US manufacturing standards.
- "T": compact emergency spare wheels with high tire pressure that are only designed for temporary use in an emergency.

ASPECT RATIO ③:

Ratio between tire height and tire width in percent (tire height divided by tire width).

TIRE CODE ④ (TIRE TYPE):

- "R": radial tire
- "D": bias ply tire
- "B": bias radial tire
- "ZR": radial tire with a maximum permissible speed above 149 mph (240 km/h) (optional)

RIM DIAMETER ⑤:

The diameter of the bead seat (not the diameter of the rim flange). The rim diameter is specified in inches (in).

LOAD-BEARING INDEX ⑥:

Numerical code that specifies the maximum load-bearing capacity of a tire (e.g. "91" corresponds to 1356 lbs (615 kg)).

The load-bearing capacity of the tire must be at least half the gross axle weight rating of your vehicle. Do not overload the tires by exceeding the maximum permissible payload.

SEE ALSO:

- Maximum permissible payload in the Tire and Loading Information table (→ page 708)
- Maximum tire load (→ page 714)
- Load index

SPEED RATING ⑦:

Specifies the maximum permissible speed of the tire.

i An electronic speed limiter prevents your vehicle from exceeding a speed of 130 mph (210 km/h).

Make sure that your tires have the required speed rating. You can obtain information on the required speed rating from a Mercedes-Benz service center.

SUMMER TIRES

Index	Speed rating
Q	up to 100 mph (160 km/h)
R	up to 106 mph (170 km/h)
S	up to 112 mph (180 km/h)
T	up to 118 mph (190 km/h)
H	up to 130 mph (210 km/h)
V	up to 149 mph (240 km/h)



Index	Speed rating
W	up to 168 mph (270 km/h)
Y	up to 186 mph (300 km/h)
ZR...Y ¹	up to 186 mph (300 km/h)
ZR...(..Y) ¹	over 186 mph (300 km/h)
ZR ¹	over 149 mph (240 km/h)

- Specifying the speed rating as the "ZR" index in the tire code  is optional for tires up to 186 mph (300 km/h).
- If your tire code  includes "ZR" and there is no speed rating , find out the maximum permissible speed from the tire manufacturer.
- If the load-bearing index  and speed rating  are in brackets, the maximum permissible speed of your tire is above 186 mph (300 km/h). To find out the maximum permissible speed, ask the tire manufacturer.

ALL-WEATHER TIRES AND WINTER TIRES

Index	Speed rating
Q M+S ²	up to 100 mph (160 km/h)
T M+S ²	up to 118 mph (190 km/h)
H M+S ²	up to 130 mph (210 km/h)
V M+S ²	up to 149 mph (240 km/h)


¹ "ZR" stated in the tire code.

² Or "M+S  " for winter tires.

Winter tires bear the snowflake symbol  and fulfill the requirements of the Rubber Manufacturers Association (RMA) and the Rubber Association of Canada (RAC) regarding the tire traction on snow.

LOAD INDEX :

- No specification given: standard load (SL) tire
- "XL" or "Extra Load": extra load tire or reinforced tire
- "Light Load": light load tire
- "C", "D", "E": a load range that depends on the maximum load the tire can carry at a certain pressure.





< Definition of terms for tires and loading

Tire structure and characteristics: describes the number of layers or the number of rubber-coated belts in the tire contact surface and the tire wall. These are made of steel, nylon, polyester and other materials.

Bar: metric unit for tire pressure. 14.5038 pounds per square inch (psi) and 100 kilopascal (kPa) is the equivalent of one bar.

DOT (Department of Transportation): DOT-marked tires fulfill the requirements of the US Department of Transportation.

Average weight of the vehicle occupants: the number of vehicle occupants for which the vehicle is designed, multiplied by 150 lb (68 kg).

Uniform tire quality grading standards: a uniform standard to grade the quality of tires with regard to tread quality, tire traction and temperature characteristics. The quality grading assessment is made by the manufacturer following specifications from the U.S. government. The quality grade of a tire is imprinted on the side wall of the tire.

Recommended tire pressure: the recommended tire pressure is the tire pressure specified for the tires fitted to the vehicle at the factory.

The tire and load information table contains the recommended tire pressure for cold tires, the maximum permissible load and the maximum permissible vehicle speed.

The tire pressure table contains the recommended tire pressure for cold tires under various operating conditions, i.e. loading and/or speed of the vehicle.

Increased vehicle weight due to optional equipment: the combined weight of all standard and optional equipment available for the vehicle, regardless of whether it is actually installed on the vehicle or not.

Rim: the part of the wheel on which the tire is mounted.

GAWR (Gross Axle Weight Rating): the GAWR is the maximum gross axle weight rating. The actual load on an axle must never exceed the gross axle weight rating. The gross axle weight rating can be found on the vehicle identification plate on the B-pillar on the driver's side.

Speed rating: the speed rating is part of the tire identification. It specifies the speed range for which a tire is approved.

GVW (Gross Vehicle Weight): the gross vehicle weight comprises the weight of the vehicle including fuel, tools, spare wheel, fitted accessories, occupants, luggage and the trailer tongue weight, if applicable. The gross vehicle weight must not exceed the gross vehicle weight rating GVWR as specified on the vehicle identification plate on the B-pillar on the driver's side.

GVWR (Gross Vehicle Weight Rating): the GVWR is the maximum permitted gross weight of the fully laden vehicle (weight of the vehicle including all accessories, occupants, fuel, luggage and the trailer tongue weight if applicable). The gross vehicle weight rating is specified on the vehicle identification plate on the B-pillar on the driver's side.

Maximum weight of the laden vehicle: the maximum weight is the sum of the unladen weight of the vehicle, the weight of the accessories, the maximum load and the weight of optional equipment installed at the factory.





Kilopascal (kPa): metric unit for tire pressure. 6.9 kPa corresponds to 1 psi. Another unit for tire pressure is bar. 100 kilopascal (kPa) equals 1 bar.

Load index: in addition to the load-bearing index, the load index may also be imprinted on the side wall of the tire. This specifies the load-bearing capacity of the tire more precisely.

Unladen weight: the weight of a vehicle with standard equipment including the maximum capacity of fuel, service fluids and coolant. It also includes the air conditioning system and optional equipment if these are installed in the vehicle, but does not include passengers or luggage.

Maximum tire load: the maximum tire load is the maximum permissible weight in kilograms or lbs for which a tire is approved.

Maximum permissible tire pressure: maximum permissible tire pressure for one tire.

Maximum load on one tire: maximum load per tire. This is calculated by dividing the maximum axle load of one axle by two.

PSI (pounds per square inch): standard unit of measurement for tire pressure.

Aspect ratio: ratio between tire height and tire width in percent.

Tire pressure: pressure inside the tire applying an outward force to every square inch of the tire. The tire pressure is specified in pounds per square inch (psi), in kilopascals (kPa) or in bar. The tire pressure should only be corrected when the tires are cold.

Cold tire pressure: the tires are cold when the vehicle has been parked for at least 3 hours without direct sunlight on the tires, or the vehicle has been driven for less than 1 mile (1.6 km).

Tire contact surface: the part of the tire that comes into contact with the road.

Tire bead: the purpose of the tire bead is to ensure that the tire sits securely on the wheel rim. There are several wire cores in the tire bead to prevent the tire from changing length on the wheel rim.

Side wall: the part of the tire between the tread and the tire bead.

Weight of optional equipment: the combined weight of the optional equipment weighing more than the replaced standard parts and more than 5 lbs (2.3 kg). This optional equipment, such as high-performance brakes, level control system, a roof luggage rack or high-performance batteries, is not included in the unladen weight and the weight of the accessories.

TIN (Tire Identification Number): a unique identification number which can be used by a tire manufacturer to identify tires, for example in a product recall, and thus identify the purchasers. The TIN is made up of the manufacturer's identity code, tire size, tire type code and the manufacturing date.

Load-bearing index: the load-bearing index is a code that contains the maximum load-bearing capacity of a tire.

Traction: traction is the grip resulting from friction between the tire and the road surface.

Wear indicator: narrow bars (tread wear bars) that are distributed over the tire contact surface. If the tire tread is level with the bars, the wear limit of 1/16 in (1.6 mm) has been reached.

Distribution of vehicle occupants: distribution of vehicle occupants over designated seat positions in a vehicle.

Maximum permissible payload weight: nominal load and luggage load plus 150 lb (68 kg) multiplied by the number of seats in the vehicle.





< Changing a wheel

Notes on selecting, installing and replacing tires

WARNING

Risk of accident due to incorrect wheel and tire dimensions

If wheels and tires of the wrong size are installed, the service brakes or components in the brake system and in the wheel suspension may be damaged.

- ▶ Always replace wheels and tires with ones that fulfill the specifications of the original part.

FOR WHEELS, PAY ATTENTION TO THE FOLLOWING:

- Designation
- Type

FOR TIRES, PAY ATTENTION TO THE FOLLOWING:

- Designation
- Manufacturer
- Type

WARNING

Risk of injury through exceeding the specified tire load-bearing capacity or the permissible speed rating

Exceeding the specified tire load rating or the permissible speed rating may lead to tire damage and to the tires bursting.

- ▶ Therefore, only use tire types and sizes approved for your vehicle model.
- ▶ Observe the tire load rating and speed rating required for your vehicle.



**! NOTE**

Vehicle and tire damage caused by non-approved tire types and sizes

For safety reasons, only use tires, wheels and accessories which have been specially approved by Mercedes-Benz for your vehicle.

THESE TIRES ARE SPECIFICALLY CONFIGURED FOR ACTIVE SAFETY SYSTEMS, E.G. ABS, ESP® AND 4MATIC, AND ARE MARKED AS FOLLOWS:

- MO = Mercedes-Benz Original
- MOE = Mercedes-Benz Original Extended (tires with run-flat characteristics, only for certain wheels)
- MO1 = Mercedes-Benz Original (only certain AMG tires)

Otherwise certain properties, e.g. driving characteristics, noise emissions, consumption, etc., could be adversely affected. Furthermore, other tire sizes could result in the tires rubbing against the body and axle components when loaded. This could result in damage to the tire or the vehicle.

Only use tires, wheels and accessories that have been checked and recommended by Mercedes-Benz.

! NOTE

Risk to driving safety from retreaded tires

Retreaded tires are neither tested nor recommended by Mercedes-Benz, since previous damage cannot always be detected on retreaded tires.

For this reason driving safety cannot be guaranteed.

- Do not use used tires if you have no information about their previous usage.

! NOTE

Possible wheel and tire damage when driving over obstacles

Large wheels have a smaller section width. As the section width decreases, the risk of wheels and tires being damaged when driving over obstacles increases.

- Avoid obstacles or drive especially carefully.
- Reduce your speed when driving over curbs, speed bumps, manhole covers and potholes.
- Avoid particularly high curbs.



**! NOTE**

Possible wheel and tire damage when parking on curbs or in potholes

Parking on curbs or in potholes can damage the wheels and tires.

- ▶ Only park on as level a surface as possible.
- ▶ Avoid curbs and potholes when parking.

! NOTE

Damage to electronic components caused by the use of tire-installing tools

Vehicles with tire pressure monitoring system: there are electronic components in the wheel.

Positioning tire-installing tools in the area of the valve may damage the electronic components.

- ▶ Tire-installing tools should not be positioned in the area of the valve.
- ▶ Always have tires changed at a qualified specialist workshop.

! NOTE

Damage to summer tires at low ambient temperatures

At low ambient temperatures, tears could form when driving with summer tires, causing permanent damage to the tires.

- ▶ At temperatures below 45 °F (7 °C) use  M+S tires.

Accessory parts which are not approved for your vehicle by Mercedes-Benz, or which are not used correctly, can impair the operating safety.

BEFORE PURCHASING AND USING NON-APPROVED ACCESSORIES, VISIT A QUALIFIED SPECIALIST WORKSHOP AND INQUIRE ABOUT:

- Suitability
- Legal provisions
- Factory recommendations

⚠ WARNING

Risk of accidents with sports tires


The special tire tread in combination with the optimized tire compound means that the risk of skidding or hydroplaning on wet roads is increased.

In addition, the tire grip is greatly reduced at a low outside temperature and tire running temperature.

- ▶ Switch on ESP® and adapt your driving style accordingly.
- ▶ Use  M+S tires at outside temperatures of less than 45°F (7°C).
- ▶ Only use tires suitable for the intended use.

OBSERVE THE FOLLOWING WHEN SELECTING, INSTALLING AND REPLACING TIRES:

- The use of certain tire types in certain regions and areas of operation can be advisable.





- Only use tires and wheels of the same type (summer tires, winter tires, MOExtended tires) and the same make.
- Only install wheels of the same size on one axle (left and right).
Only install a different size of wheel in the event of a flat tire, to enable you to drive to a specialist workshop.
- **Vehicles with a tire pressure monitoring system:** all installed wheels must be equipped with functioning sensors for the tire pressure monitoring system.
- At temperatures below 45 °F (7 °C), use winter tires or all-season tires marked M+S for all wheels.
Winter tires provide the best possible grip in wintry road conditions.
- For M+S tires, only use tires with the same tread.
- Observe the maximum permissible speed for the M+S tires installed.
If the tire's maximum speed is below that of the vehicle, this must be indicated by an appropriate label in the driver's field of vision.
- Drive the vehicle with new tires at moderate speeds for the first 60 miles (100 km).
- Replace the tires after six years at the latest, regardless of wear.
- **When replacing with tires that do not feature run-flat characteristics:** Vehicles with MOExtended tires are not equipped with a TIREFIT kit at the factory. Equip the vehicle with a TIREFIT kit after replacing with tires that do not feature run-flat characteristics, e.g. winter tires.

For more information on wheels and tires, contact a qualified specialist workshop.

VEHICLES WITH AMG DYNAMIC PLUS PACKAGE



WARNING

Risk of accident caused by non-approved tire types

If you use tire types that have not been adapted to changes made to the factory speed limit, this can have the following consequences:

- The tires are not suitable for high speeds and the corresponding driving dynamics.
- The tires wear unevenly and affect the roadworthiness of the vehicle.
- ABS, ESP® and cruise control operation are restricted.

This can jeopardize road safety.

- ▶ Only use tire types that have been approved for the maximum permissible speed set and the vehicle.

Notes on changing wheels



WARNING

Risk of injury through different wheel sizes

Rotating the front and rear wheels can severely impair the driving characteristics.

The wheel brakes or suspension components may also be damaged.

- ▶ Rotate front and rear wheels only if the wheels and tires are of the same dimensions.





Observe the instructions and safety notes on "Changing a wheel" (→ page 720).

THE WEAR PATTERNS ON THE FRONT AND REAR WHEELS DIFFER:

- front wheels wear more on the tire shoulder
- rear wheels have more wear in the center of the tire

Do not drive with tires that have too little tread depth. This significantly reduces traction on wet roads (hydroplaning).

On vehicles that have the same size front and rear wheels, switch the wheels according to the intervals in the tire manufacturer's warranty booklet in your vehicle documents. If this is not available, switch the tires every 3,000 to 6,000 miles (5,000 to 10,000 km), depending on the wear. Ensure the original rotational direction of the wheels.

After a wheel-change and a few kilometers of travel, the menu for selection of the installed tire type appears automatically (→ page 701).

The menu can also be called up by a qualified specialist workshop or by yourself.

Notes on wheel-changing when using the service 'Navigation with Electric Intelligence'

After you change a wheel and have driven for a few kilometres, the menu for selection of the installed tire type automatically appears (→ page 701).

The menu can also be called up by a qualified specialist workshop or by yourself.

Notes on storing wheels

WHEN STORING WHEELS, OBSERVE THE FOLLOWING NOTES:

- After removing wheels, store them in a cool, dry and preferably dark place.
- Protect the tires from contact with oil, grease or fuel.

Overview of the tire-change tool kit

With the exception of some country-specific variants, vehicles are not equipped with a tire-change tool kit. Consult a qualified specialist workshop to find out which tire-change tool kit is necessary and approved for a wheel change on your vehicle.


YOU REQUIRE THE FOLLOWING TOOLS, FOR EXAMPLE, TO CHANGE A WHEEL:

- Jack
- Chock
- Lug wrench
- Alignment bolt

The tire-change tool kit is located in the tool bag  in the trunk.

 When stowing the tool bag, ensure that it is adequately secured.



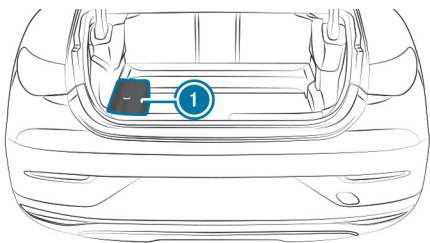

THE TOOL BAG CONTAINS:

- Jack
- Gloves
- Lug wrench
- Alignment bolt
- Folding chock
- Ratchet wrench for jack

Preparing the vehicle for a wheel change

Requirements:

- The vehicle is not on a slope.
- The vehicle is on solid, non-slippery and level ground.
- The required tire-change tool kit is available.

i If your vehicle is not equipped with the tire-change tool kit, consult a qualified specialist workshop to find out about suitable tools.

- ▶ Apply the electric parking brake manually.


- ▶ Move the front wheels to the straight-ahead position.
- ▶ Shift the transmission to position **P**.
- ▶ **Vehicles with AIRMATIC:** set the raised vehicle level for greater ground clearance.
- ▶ Switch off the vehicle.
- ▶ Make sure that the vehicle cannot be started.
- ▶ Place wedges or other suitable items under the front and rear of the wheel that is diagonally opposite the wheel you wish to change.
- ▶ Unload the vehicle.

Installing/removing the hub cap

Requirements

- The vehicle is prepared for a wheel change (→ page 725).

REMOVING

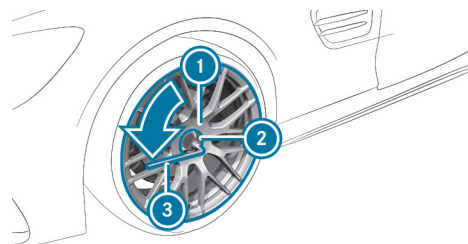

- ▶ Remove socket **2** and lug wrench **3** from the vehicle tool kit.



- ▶ Position socket ② on hub cap ①.
- ▶ Position the lug wrench ③ on the socket ②.
- ▶ Using lug wrench ③, turn the hub cap ① counterclockwise and remove it.

INSTALLING

- ▶ Before installing, check hub cap ① and the wheel area for dirt, and clean if necessary.
- ▶ Position hub cap ① and turn until it is in the right position.
- ▶ Position socket ② on hub cap ①.
- ▶ Position lug wrench ③ on socket ② and tighten hub cap ①.

Specified tightening torque: 18 lb-ft
(25 Nm)


Removing and installing wheel trim/hub caps

Requirements

- The vehicle is prepared for a wheel change (→ page 725).

WHEEL TRIM

On vehicles with aluminum wheels, the wheel trim covers the wheel bolts. Remove the wheel trim before unscrewing the wheel bolts.

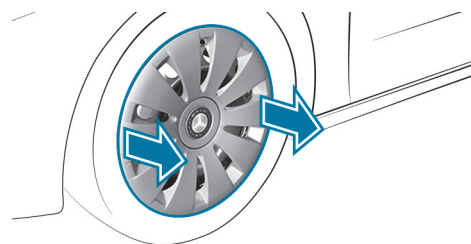

- ▶ **Removing:** use both hands to carefully grip the two wheel trim apertures and pull the wheel trim away.
- ▶ **Installing:** position the wheel trim and press it firmly until it engages.


Raising the vehicle for a wheel change

Requirements:

- There are no persons in the vehicle.
- The vehicle has been prepared for a wheel change (→ page 725).


IMPORTANT NOTES ON USING THE JACK:

- Use only a vehicle-specific jack that has been approved for Mercedes-Benz to raise the vehicle.
- The jack is only designed for raising and holding the vehicle for a short time while a wheel is being changed and not for maintenance work under the vehicle.
- The jack must be placed on a firm, level and non-slip surface. If necessary, use a large, flat, load-bearing, non-slip underlay.
- The foot of the jack must be positioned vertically under the jack support point.

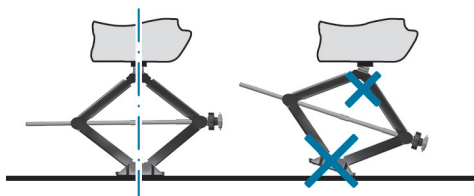


RULES OF CONDUCT WHEN THE VEHICLE IS RAISED:

- Do not put your hands or feet under the vehicle.
- Do not lie under the vehicle.
- Do not start the vehicle and do not release the electric parking brake.
- Do not open or close any doors or the trunk lid.

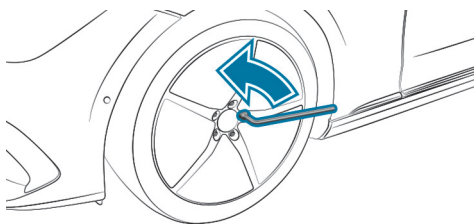

- Using the wheel wrench, loosen the wheel bolts on the wheel you wish to change by about one full turn. Do not unscrew the screws completely.

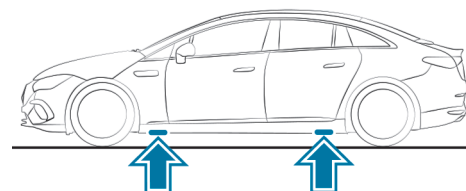

Position of the jack support points

! WARNING

Risk of injury from incorrect positioning of the jack

If you do not position the jack correctly at the appropriate jacking point of the vehicle, the jack could tip with the vehicle raised.

- Only position the jack at the appropriate jacking point of the vehicle. The base of the jack must be positioned vertically under the jacking point of the vehicle.

! NOTE

Damage to the vehicle due to using an unsuitable jack

If a jack is used which was not designed for the vehicle's jack support points, the vehicle and especially the high-voltage battery may suffer damage.

- Only use jacks that are specifically designed for the jack support points, or use a suitable adapter.






! NOTE

Risk of damage to the vehicle due to incorrect positioning of the jack

If the vehicle jack has not been positioned at the prescribed jack support points, the vehicle and especially the high-voltage battery may suffer damage.

- ▶ Only position the jack at the designated jack support points.

- ▶ Take the ratchet wrench out of the tire-change tool kit and place it on the hexagon nut of the jack in such a way that the lettering "AUF" is visible.

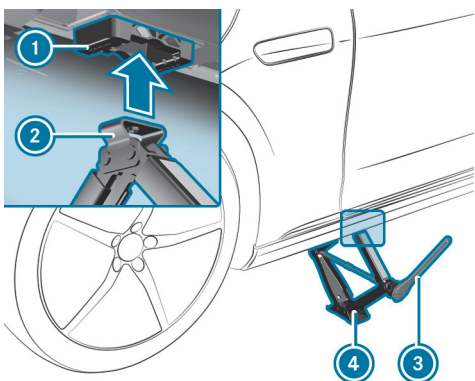

- ▶ Position support ② of jack ④ on jack support point ①.
- ▶ Turn ratchet wrench ③ clockwise until support ② sits completely on jack support point ① and the base of the jack lies evenly on the ground.
- ▶ Turn ratchet wrench ③ until the tire is raised a maximum of 1.2 in (3 cm) from the ground.

- ▶ Loosen and remove the wheel (→ page 728).

Removing a wheel

Requirements:

- The vehicle is raised (→ page 726).

During wheel change, avoid applying any force to the brake discs, since this could impair the level of comfort when braking.

! NOTE

Damage to the wheels' plastic elements when changing a wheel
Plastic elements on wheels may be damaged when removing and repositioning the wheel.


- ▶ Do not raise the wheels by the plastic elements when removing and repositioning.


! NOTE

Damage to threading from dirt on wheel bolts

- ▶ Do not place wheel bolts in sand or on a dirty surface.

- ▶ Unscrew the uppermost wheel bolt completely.



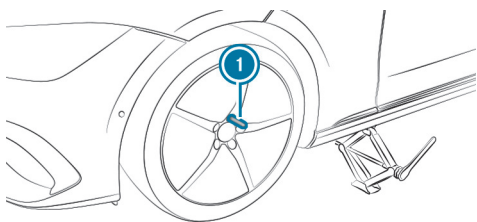

- ▶ Screw centering pin ❶ into the thread instead of the wheel bolt.
- ▶ Unscrew the remaining wheel bolts completely.
- ▶ Remove the wheel.

Installing a new wheel

Requirements:

- The wheel to be changed is removed and the alignment bolt is screwed in (→ page 728).

⚠ WARNING

Risk of accident from losing a wheel

Oiled, greased or damaged wheel bolt/wheel nut threads or wheel hub/wheel mounting bolt threads can cause the wheel bolts/wheel nuts to come loose.

- ▶ Never oil or grease the threads.
- ▶ In the event of damage to the threads, contact a qualified specialist workshop immediately.
- ▶ Have the damaged wheel bolts or damaged hub threads replaced.
- ▶ Do not continue driving.

- ▶ Observe the information on the choice of tires (→ page 720).


For tires with a specified running direction, an arrow on the side wall of the tire indicates the correct running direction. Observe the direction of rotation when assembling.

❗ NOTE

Damage to the wheels' plastic elements when changing a wheel

Plastic elements on wheels may be damaged when removing and repositioning the wheel.

- ▶ Do not raise the wheels by the plastic elements when removing and repositioning.





- ▶ Slide the wheel to be mounted onto the alignment bolt and push it on.

⚠ WARNING

Risk of injury from tightening wheel bolts and nuts

If you tighten the wheel bolts or wheel nuts when the vehicle is raised, the jack could tip.

- ▶ Only tighten wheel bolts or wheel nuts when the vehicle is on the ground.

- ▶ Observe the instructions and safety notes on "Wheel change" (→ page 720).
- ▶ For safety reasons, only use wheel bolts which have been approved for Mercedes-Benz and for the wheel in question.


! NOTE

Paintwork damage to the rim when tightening the first wheel bolt

If the wheel is too loose when tightening the first wheel bolt, there is a risk of damaging the paint finish on the rim.

- ▶ When tightening the first wheel bolt, be sure to hold the wheel sufficiently firmly against the wheel hub.

- ▶ Tighten the wheel bolts evenly in a diagonal pattern in the order indicated until they are hand-tight.

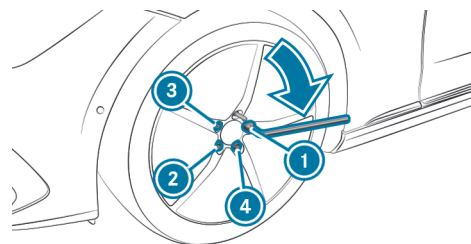

- ▶ Unscrew and remove the alignment bolt.
- ▶ Tighten the last wheel bolt until it is hand-tight.
- ▶ Lower the vehicle and tighten wheel bolts with the prescribed tightening torque (→ page 730).

Lowering the vehicle after a wheel change

Requirements:

- The new wheel has been installed (→ page 729).



**! NOTE**

Risk of the vehicle jack becoming trapped by the AIRMATIC system

If the AIRMATIC system has released air when jacking up the vehicle, there is a risk of the vehicle jack becoming trapped when the vehicle is lowered.

- ▶ Start the drive system. This causes the vehicle level to be adjusted.
- ▶ Remove the vehicle jack under the vehicle.


⚠ WARNING

Risk of accident due to incorrect tightening torque

The wheels could come loose if the wheel bolts or wheel nuts are not tightened to the prescribed torque.

- ▶ Ensure that the wheel bolts or wheel nuts are tightened to the prescribed tightening torque.
- ▶ If you are not sure, do not move the vehicle. Contact a qualified specialist workshop and have the tightening torque checked immediately.

- ▶ **To lower the vehicle:** place the ratchet wrench onto the hexagon nut of the jack so that the lettering "AB" are visible and turn counter-clockwise.

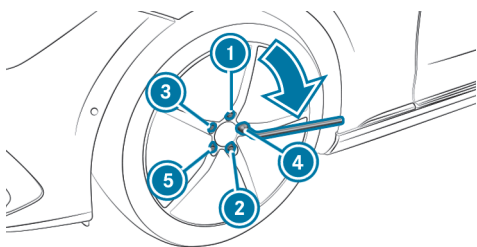

- ▶ Tighten the wheel bolts evenly in a diagonal pattern in the order indicated ① to ⑤ with an initial maximum force of 59 lb-ft (80 Nm).
- ▶ Tighten the wheel bolts evenly in a diagonal pattern in the indicated order ① to ⑤ with the specified tightening torque of 111 lb-ft (150 Nm).

ⓘ The following does not apply if the new wheel is an emergency spare wheel:

- ▶ **Vehicles with a tire pressure monitoring system:** restart the tire pressure monitoring system (→ page 707).





< Emergency spare wheel

Notes on the emergency spare wheel

⚠️ WARNING

Risk of accident caused by incorrect wheel and tire dimensions

The wheel or tire sizes and the tire type of the emergency spare wheel or spare wheel and the wheel to be replaced may differ. The emergency spare wheel or spare wheel can significantly impair driving characteristics of the vehicle.

To prevent hazardous situations:

- ▶ Drive carefully.
- ▶ Never install more than one emergency spare wheel or spare wheel that differs in size.
- ▶ Only use an emergency spare wheel or spare wheel briefly.
- ▶ Do not deactivate ESP®.
- ▶ Have the emergency spare wheel or spare wheel of a different size replaced at the nearest qualified specialist workshop. The new wheel must have the correct dimensions.

- ❶ The emergency spare wheel is secured in the emergency spare wheel bag in the trunk.

NOTES ON INSTALLING AN EMERGENCY SPARE WHEEL:


- The maximum permissible speed with an emergency spare wheel installed is 50 mph (80 km/h).
- Do not install snow chains on the emergency spare wheel.
- Replace the emergency spare wheel after six years at the latest, regardless of wear.
- Use the included wheel bolts for the emergency spare wheel.
- Check the tire pressure of the installed emergency spare wheel and adjust it as necessary.

- ❶ The specified tire pressure is indicated on the label of the emergency spare wheel.

- ❶ **Vehicles with tire pressure monitoring system:** if an emergency spare wheel is installed, the tire pressure monitoring system cannot function reliably. For a few minutes after an emergency spare wheel is installed, the system may still display the tire pressure of the removed wheel. Only restart the system when the emergency spare wheel has been replaced with a new wheel.

ALSO TAKE NOTE OF THE FOLLOWING TOPICS:

- Notes on tire pressure (→ page 702)





- [Tire and Load Information placard \(→ page 708\)](#)
- [Tire pressure table \(→ page 704\)](#)
- [Notes on installing tires \(→ page 720\)](#)
- [Installing an emergency spare wheel \(→ page 725\)](#)





< Technical data

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Notes on technical data	>
Vehicle electronics	>
Radio regulations	>
Vehicle identification plate, VIN and motor number overview	>
Operating fluids	>
Vehicle data	>



Notes on technical data

The data stated applies only to vehicles with standard equipment. You can obtain further information from a Mercedes-Benz Service Center.





< Vehicle electronics

Two-way radios

NOTES ON INSTALLING TWO-WAY RADIOS

WARNING

Risk of accident due to improper work on two-way radios

If two-way radios are manipulated or retrofitted incorrectly, the electromagnetic radiation from the two-way radios can interfere with the vehicle electronics and jeopardize the operating safety of the vehicle.

- ▶ You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

WARNING

Risk of accident due to improper operation of two-way radios

If you use two-way radios in the vehicle improperly, their electromagnetic radiation can disrupt the vehicle's electronics. This is the case in the following situations, in particular:

- The two-way radio is not connected to an exterior antenna.
- The exterior antenna is installed incorrectly or is not a low-reflection antenna.

This could jeopardize the operating safety of the vehicle.

- ▶ Have the low-reflection exterior antenna installed at a qualified specialist workshop.
- ▶ When operating two-way radios in the vehicle, always connect them to the low-reflection exterior antenna.






NOTE

Invalidation of the operating permit due to failure to comply with the instructions for installation and use

The operating permit may be invalidated if the instructions for installation and use of two-way radios are not observed.

- ▶ Only use approved frequency bands.
- ▶ Observe the maximum permissible output power in these frequency bands.
- ▶ Only use approved antenna positions.

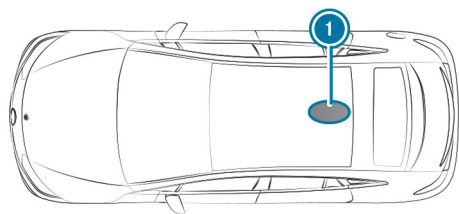

1 Rear roof area

Installing a roof antenna on a vehicle with a panorama roof with power tilt/sliding panel is not permitted.

Use Technical Specification ISO/TS 21609 (Road Vehicles – "EMCs for installation of aftermarket radio frequency transmitting equipment") when retrofitting two-way radios. Comply with the legal requirements for detachable parts.

If your vehicle is equipped with the pre-installation for a two-way radio, use the power supply and antenna connectors provided in the pre-installation. Observe the manufacturer's supplements when installing.

MOBILE PHONE TRANSMISSION OUTPUT

The maximum transmission output (PEAK) at the base of the antenna must not exceed the values in the following table.

FREQUENCY BAND AND MAXIMUM TRANSMISSION OUTPUT


Frequency band	Maximum transmission output
2-m- frequency band 144 - 174 MHz	50 W
Terrestrial Trunked Radio (TETRA) 380 - 460 MHz	10 W
Mobile phone 2G	2 W
Mobile phone 3G/4G/5G	0.5 W

THE FOLLOWING CAN BE USED IN THE VEHICLE WITHOUT RESTRICTIONS:

- two-way radios with a maximum transmission output of up to 100 mW
- two-way radios with transmitter frequencies in the 380 -410 MHz frequency band and a maximum transmission output of up to 2 W (TETRA)
- mobile phones (2G/3G/4G/5G)

THERE ARE NO RESTRICTIONS REGARDING THE POSITIONING OF THE ANTENNA ON THE OUTSIDE OF THE VEHICLE FOR THE FOLLOWING FREQUENCY BANDS:

- Terrestrial Trunked Radio (TETRA)





- 2G/3G/4G/5G





< Radio regulations

Regulatory radio identifiers / specific notes

The tables and sections contain the following regulatory radio information:

- Manufacturer information
- Required regulatory radio identifiers, listed by country/region:
 - Manufacturer's specifications
 - Model designations
 - Radio equipment approval numbers
- Specific information on wireless vehicle components

Further information and updates are available at the following web address:

<https://regulatoryradioinformation.corpinter.net/us>



OVERVIEW OF MANUFACTURERS

Manufacturer	Manufacturer information
ADC	ADC Automotive Distance Control Systems GmbH, Peter-Dornier-Straße 10, 88131 Lindau, Germany
Bosch	Robert Bosch GmbH, Daimlerstraße 6, 71229 Leonberg, Germany

Manufacturer	Manufacturer information
Bury	BURY SP. Z O.O., UL. WOJSKA POLSKIEGO 4, 39-300 Mielec, Poland
Continental Antenna	Continental Advanced Antenna GmbH, Römer-ring 1, 31137 Hildesheim, Germany
Continental Automotive	Continental Automotive GmbH, Siemensstraße 12, 93055 Regensburg, Germany
Continental Automotive Technologies	Continental Automotive Technologies GmbH, VDO-Straße 1, 64832 Babenhausen, Germany
Gentex	Gentex Corporation, 600 North Centennial Street, Zeeland MI 49464, USA
Harman Becker	Harman Becker Automotive Systems GmbH, Becker-Goehring-Straße 18, 76307 Karlsbad, Germany
HELLA	HELLA KGaA Hueck & Co., Rixbecker Straße 75, 59552 Lippstadt, Germany
Hirschmann	Hirschmann Car Communication GmbH, Stuttgarter Straße 45-51, 72654 Neckartenzlingen, Germany
Huf Baolong	Huf Baolong Electronics Bretten GmbH, Gewerbestraße 40, 75015 Bretten, Germany
HUF	HUF Hülsbeck & Fürst GmbH & Co. KG, Steeger Straße 17, 42551 Velbert, Germany



Manufacturer	Manufacturer information
MARQUARDT	MARQUARDT GmbH, Schloßstraße 16, 78604 Rietheim-Weilheim, Germany
Meta System	Meta System S.P.A., Via T. Galimberti 5, 42124 Reggio Emilia, Italy
Molex	Molex CVS Dabendorf GmbH, Märkische Straße 72, 15806 Zossen, Germany
Molex Technologies	Molex Technologies GmbH, Mizarstraße 3, 12529 Schönefeld, Germany
Panasonic	Panasonic Automotive Systems Europe GmbH, Robert-Bosch-Straße 27, 63225 Langen, Germany
Schrader	Schrader Electronics Ltd., 11 Technology Park, Belfast Road, Antrim BT41 1QS, Northern Ireland, United Kingdom
Sennheiser	Sennheiser electronic GmbH & Co. KG, Am Labor 1, 30900 Wedemark, Germany
Valeo	Valeo Telematik und Akustik GmbH, Max-Planck-Straße 28-32, 61381 Friedrichsdorf Germany
Veoneer	Veoneer Sweden AB, Wallentinsvägen 22, 44737 Vårgårda, Sweden
Vitesco	Vitesco Technologies GmbH, Siemensstrasse 12, 93055 Regensburg Germany
WITTE-Velbert	WITTE-Velbert GmbH & Co. KG, Hoefenstr. 3-15, 42551 Velbert, Germany

ALGERIA

Agréé par l'ANF
Référence du Certificat de conformité

Homologué par l'ARPCE
Référence du Certificat de conformité

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223GNS (locking system)	71/H/ANF/2021
Continental Automotive	CMKG1 (locking system)	122/H/ANF/2021
Continental Automotive	CMKG2 (locking system)	136/H/ANF/2023
Continental Automotive	MARS Keyless (locking system)	122/H/ANF/2021
HELLA	DM4 (locking system)	123/H/ANF/2021
Hirschmann	920287A (locking system)	106/H/ANF/2020
Hirschmann	920287B (locking system)	107/H/ANF/2020



Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920702A (locking system)	133/H/ANF/2022
Huf Baolong	TSSRE4A (tire pressure sensor)	198/H/ANF/2021
HUF	HUF13145 (locking system)	105/H/ANF/2022
MARQUARDT	DC12A (locking system)	188/H/ANF/2021
MARQUARDT	DC12B (locking system)	189/H/ANF/2021
MARQUARDT	DC12K (locking system)	190/H/ANF/2021
MARQUARDT	MS5 (locking system)	195/H/ANF/2021
MARQUARDT	MK1 (locking system)	193/H/ANF/2021
MARQUARDT	MK2 (locking system)	194/H/ANF/2021
MARQUARDT	3350.38 (locking system)	186/H/ANF/2021
Schrader	AG5SP4 (tire pressure sensor)	3681/1-73.OA 1639/DT/DG/ARPT/15
Schrader	AG3PF4 (tire pressure sensor)	652/1/DT/DG/ARPCE/2020
Schrader	BG3FP4 (tire pressure sensor)	56/H/ANF/2021
Schrader	GG4T (tire pressure sensor)	3994/1.69-DA/2098/DT/DG/ARPT/17
Schrader	DG6W2D4 (tire pressure sensor)	2695/1-NO.431396/DT/DG/ARPT/17
WITTE-Velbert	SDHTAG3NFC (locking system)	32/H/ANF/2021

ARGENTINA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	C-18005
ADC	ARS6-A (radar sensor)	H-28818
ADC	ARS441DP10 (radar sensor)	C-2377
Continental Antenna	RKE213E1 (antenna amplifier)	H-26206
Continental Antenna	RKE223E1 (antenna amplifier)	H-24637
Continental Automotive	CMKG1 (locking system)	H-24376
Continental Automotive	CMKG2 (locking system)	H-28998
Continental Automotive	MARS Keyless (locking system)	H-17929
Continental Automotive	D-WMI2020A (control unit)	H-23974
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	C-29127
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	C-29126
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	C-29128
Continental Automotive Technologies	NTG7Q PREMIUMPLUS LF2 (head unit)	C-29930
HELLA	DM4 (locking system)	H-17845



Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287A (locking system)	H-15694
Hirschmann	920287B (locking system)	H-15695
Hirschmann	920702A (locking system)	H-28310
Huf Baolong	TSSRE4A (tire pressure sensor)	H-27592
HUF	HUF13145 (locking system)	H-28067
HUF	HUF14632 (locking system)	H-15541
HUF	HUF4761 (locking system)	H-11545
MARQUARDT	DC12A (locking system)	H-17689
MARQUARDT	DC12B (locking system)	H-21034
MARQUARDT	DC12K (locking system)	H-21035
MARQUARDT	MS2 (locking system)	H-17598
MARQUARDT	MS4 (locking system)	H-23101
MARQUARDT	MS5 (locking system)	H-24933
MARQUARDT	MS7 (locking system)	H-29810
MARQUARDT	MK1 (locking system)	H-17213
MARQUARDT	MK2 (locking system)	H-17212
MARQUARDT	MK3 (locking system)	H-30378



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	3350.38 (locking system)	H-23166
MARQUARDT	MU3 (locking system)	H-30159
Schrader	AG5SP4 (tire pressure sensor)	H-4788
Schrader	AG3PF4 (tire pressure sensor)	H-23292
Schrader	BG3FP4 (tire pressure sensor)	H-25586
Schrader	GG4T (tire pressure sensor)	H-20495
Schrader	DG6W2D4 (tire pressure sensor)	H-20959
Vitesco	HFA30 (Handsfree-Access)	H-30148
WITTE-Velbert	SDHTAG3NFC (locking system)	H-24664

AUSTRALIA

REGULATORY RADIO IDENTIFIERS



Manufacturer	Model designation
ADC	ARS4-A (radar sensor)
ADC	ARS6-A (radar sensor)
ADC	ARS4-C (radar sensor)
ADC	ARS441DP10 (radar sensor)



Manufacturer	Model designation
Bosch	MRR1Rear (radar sensor)
Bosch	MRRe14FCR (radar sensor)
Bosch	F5CP12 (radar sensor)
Continental Antenna	RKE213E1 (antenna amplifier)
Continental Antenna	RKE223E1 (antenna amplifier)
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)
Continental Automotive	MARS Keyless (locking system)
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)
Hirschmann	920702A (locking system)
Huf Baolong	TSSRE4A (tire pressure sensor)
HUF	HUF13145 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)



Manufacturer	Model designation
MARQUARDT	MK3 (locking system)
MARQUARDT	3350.38 (locking system)
MARQUARDT	MU3 (locking system)
Schrader	AG5SP4 (tire pressure sensor)
Schrader	AG3PF4 (tire pressure sensor)
Schrader	BG3FP4 (tire pressure sensor)
Schrader	GG4T (tire pressure sensor)
Schrader	DG6W2D4 (tire pressure sensor)
Veoneer	77V12BSM (radar sensor)
Veoneer	77V12CRN (radar sensor)
Veoneer	77V125CRN (radar sensor)
Veoneer	MMRV1 (radar sensor)

BAHAMAS

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	URCA_TA_2014_082
ADC	ARS6-A (radar sensor)	URCA_TA_2023_211
ADC	ARS4-C (radar sensor)	URCA_TA_2019_167



Manufacturer	Model designation	Radio equipment approval number
Bosch	MRR1Rear (radar sensor)	URCA_TA/2017_184
Bosch	MRRre14FCR (radar sensor)	URCA_TA/2017_157
Bosch	FR5CPCCF (radar sensor)	URCA_TA_2019_195
Bosch	F5CP12 (radar sensor)	URCA_TA_2022_077
Continental Automotive	CMKG1 (locking system)	URCA_TA/2020_068
Continental Automotive	CMKG2 (locking system)	URCA_TA/2023_028
Continental Automotive	MARS Keyless (locking system)	URCA_TA/2017_119
Continental Antenna	RKE213E1 (antenna amplifier)	UCRA_TA/2016_009
Continental Antenna	RKE223E1GNS (antenna amplifier)	UCRA_TA/2020_032
HELLA	DM4 (locking system)	URCA_TA/2017_078
HELLA	RS6 (locking system)	URCA_TA_2023_174
Hirschmann	920287A (locking system)	URCA_TA/2019_053
Hirschmann	920287B (locking system)	URCA_TA/2019_052
Hirschmann	920702A (locking system)	URCA_TA/2022_043
HUF	HUF13145 (locking system)	URCA_TA_2022_057
HUF	HUF14632 (locking system)	URCA_TA/2015_087
HUF	HUF4761 (locking system)	URCA_TA/2015_087
Huf Baolong	TSSRE4A (tire pressure sensor)	URCA_TA/2017_094

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12A (locking system)	URCA_TA_2017_042
MARQUARDT	DC12B (locking system)	URCA_TA_2019_128
MARQUARDT	DC12K (locking system)	URCA_TA_2019_129
MARQUARDT	MS2 (locking system)	URCA_TA/2017_021
MARQUARDT	MS4 (locking system)	URCA_TA_2019_141
MARQUARDT	MS5 (locking system)	URCA_TA_2020_141, URCA_TA_2022_228
MARQUARDT	MK1 (locking system)	URCA_TA/2015_031
MARQUARDT	MK2 (locking system)	URCA_TA/2015_033
MARQUARDT	MK3 (locking system)	URCA_TA_2024_025
MARQUARDT	3350.38 (locking system)	URCA_TA/2019_250
MARQUARDT	MU3 (locking system)	URCA_TA/2023_245
MARQUARDT	MUB1 (locking system)	URCA_TA/2024_060
Schrader	AG5SP4 (tire pressure sensor)	URCA_TA_TA/2015_009
Schrader	AG3PF4 (tire pressure sensor)	URCA_TA_2019_101
Schrader	BG3FP4 (tire pressure sensor)	URCA_TA_2021_001
Schrader	GG4T (tire pressure sensor)	URCA_TA_2020_046
Schrader	DG6W2D4 (tire pressure sensor)	URCA_TA_2019_247
Valeo	ARTEMIS-SUB-01 (tire pressure sensor)	URCA_TA_2024_056



Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	URCA_TA_2019_169
Veoneer	77V12CRN (radar sensor)	URCA_TA_2019_168
Veoneer	77V125CRN (radar sensor)	URCA_TA_2021_027
Veoneer	MMRV1 (radar sensor)	URCA_TA/2015_063
Vitesco Technologies	HFA30 (Handsfree-Access)	URCA_TA_2023_247
WITTE-Velbert	SDHTAG3NFC (locking system)	URCA_TA_2020_056

BELARUS

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation
ADC	ARS4-A (radar sensor)
ADC	ARS4-C (radar sensor)
Bosch	MRR1Rear (radar sensor)
Bosch	MRRe14FCR (radar sensor)
Bosch	FR5CPCCF (radar sensor)
Bosch	F5CP12 (radar sensor)
Continental Antenna	RKE213E1 (antenna amplifier)
Continental Antenna	RKE223E1GNS (antenna amplifier)

Manufacturer	Model designation
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)
Continental Automotive	MARS Keyless (locking system)
Harman Becker	HERMES 3.0 (communication module)
HELLA	DM4 (locking system)
HUF	HUF13145 (locking system)
MARQUARDT	DC12A (locking system)
MARQUARDT	DC12B (locking system)
MARQUARDT	DC12K (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system)
MARQUARDT	3350.38 (locking system)
MARQUARDT	MU3 (locking system)
MARQUARDT	MUB1 (locking system)

**Manufacturer****Model designation**

Veoneer	77V12BSM (radar sensor)
Veoneer	77V12CRN (radar sensor)
Veoneer	77V125CRN (radar sensor)
Veoneer	MMRV1 (radar sensor)
WITTE-Velbert	SDHTAG3NFC (locking system)

BOTSWANA**REGULATORY RADIO IDENTIFIERS****Manufacturer****Model designation****Radio equipment approval number**

ADC	ARS4-A (radar sensor)	BOCRA/TA/2018/2026
ADC	ARS6-A (radar sensor)	BOCRA/TA/2022/7599
ADC	ARS4-C (radar sensor)	BOCRA/TA/2020/5186
Bosch	MRRe14FCR (radar sensor)	BOCRA/TA/2019/4674
Bosch	FR5CPCCF (radar sensor)	BOCRA/TA/2019/4975
Bosch	MRR1Rear (radar sensor)	BOCRA/TA/2017/3788
Bosch	F5CP12 (radar sensor)	BOCRA/TA/2022/7110
Continental Antenna	RKE213E1 (antenna amplifier)	BOCRA/TA/2019/4387
Continental Antenna	RKE223E1GNS (antenna amplifier)	BOCRA/TA/2019/5050

Manufacturer**Model designation****Radio equipment approval number**

Continental Automotive	CMKG1 (locking system)	BOCRA/TA/2019/5075
Continental Automotive	CMKG2 (locking system)	BOCRA/TA/2023/8144
Continental Automotive	MARS Keyless (locking system)	BOCRA/TA/2019/4661
HELLA	DM4 (locking system)	BOCRA/TA/2019/4662
HELLA	RS6 (locking system)	BOCRA/TA/2023/8610
Hirschmann	920287A (locking system)	BOCRA/TA/2019/4724
Hirschmann	920287B (locking system)	BOCRA/TA/2019/4723
Hirschmann	920702A (locking system)	BOCRA/TA/2022/7099
HUF	HUF13145 (locking system)	HUF13145
HUF	HUF4761 (locking system)	BOCRA/TA/2019/4664
MARQUARDT	DC12A (locking system)	BOCRA/TA/2019/4389
MARQUARDT	DC12B (locking system)	BOCRA/TA/2019/4388
MARQUARDT	DC12K (locking system)	BOCRA/TA/2019/4390
MARQUARDT	MS2 (locking system)	BOCRA/TA/2019/5135
MARQUARDT	MS4 (locking system)	BOCRA/TA/2019/4758
MARQUARDT	MS5 (locking system)	BOCRA/TA/2020/5473
MARQUARDT	MK1 (locking system)	BOCRA/TA/2019/4359
MARQUARDT	MK2 (locking system)	BOCRA/TA/2019/4360
MARQUARDT	3350.38 (locking system)	BOCRA/TA/2019/4687



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MU3 (locking system)	BOCRA/TA/2023/8771
Veoneer	77V12BSM (radar sensor)	BOCRA/TA/2019/4975
Veoneer	77V12CRN (radar sensor)	BOCRA/TA/2019/4980
Veoneer	77V125CRN (radar sensor)	BOCRA/TA/2021/6191
WITTE-Velbert	SDHTAG3NFC (locking system)	BOCRA/TA/2020/5342

BRAZIL

Note on two-way radio systems in the vehicle:

These systems are not protected against harmful interference and must not cause interference in properly approved systems.

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	02217-14-06068
ADC	ARS441DP10 (radar sensor)	06783-19-02496
Bury	A167 820 19 03 /A247 820 84 02 (mobile phone charger)	20280-23-04457
Bury	A247 820 86 02 (mobile phone charger)	20288-23-04457
Continental Antenna	RKE223E1 (antenna amplifier)	03691-15-05298

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	07359-21-12817
Continental Antenna	RKE213E1 (antenna amplifier)	3691-15-5298
Continental Automotive	CMKG1 (locking system)	00325-20-02149
Continental Automotive	CMKG2 (locking system)	01334-23-02149
Continental Automotive	MARS Keyless (locking system)	03189-17-02856
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	12520-23-06353
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	12525-23-06353
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	12522-23-06353
Continental Automotive Technologies	NTG7Q PREMIUMPLUS LF2 (head unit)	17830-23-06353
HELLA	DM4 (locking system)	04689-17-05364
Hirschmann	920287A (locking system)	1855-12-5762
Hirschmann	920287B (locking system)	1787-12-8058
Huf Baolong	TSSRE4A (tire pressure sensor)	08539-19-03616
HUF	HUF13145 (locking system)	HUF13145
HUF	HUF14632 (locking system)	03627-15-06643



Manufacturer	Model designation	Radio equipment approval number
--------------	-------------------	---------------------------------

HUF	HUF4761 (locking system)	00053-13-06643
-----	--------------------------	----------------

MARQUARDT	DC12A (locking system)	01333-17-02930
-----------	------------------------	----------------

MARQUARDT	DC12B (locking system)	01395-11-02930
-----------	------------------------	----------------

MARQUARDT	DC12K (locking system)	01392-11-02930
-----------	------------------------	----------------

MARQUARDT	MS2 (locking system)	00616-17-02930
-----------	----------------------	----------------

MARQUARDT	MS4 (locking system)	06218-19-02930
-----------	----------------------	----------------

MARQUARDT	MS5 (locking system)	11149-20-02930
-----------	----------------------	----------------

MARQUARDT	3350.38 (locking system)	03149-19-02930
-----------	--------------------------	----------------

MARQUARDT	MK1 (locking system)	03756-15-02930
-----------	----------------------	----------------

MARQUARDT	MK2 (locking system)	03757-15-02930
-----------	----------------------	----------------

Molex Technologies	HUB-8 (mobile phone charger)	19286-23-12116
--------------------	------------------------------	----------------

Molex Technologies	HUB-9d / HUB-9e (mobile phone charger)	19287-23-12116
--------------------	--	----------------

Vitesco Technologies	HFA30 (Handsfree-Access)	18924-23-15869
----------------------	--------------------------	----------------

WITTE-Velbert	SDHTAG3NFC (locking system)	03034-20-07018
---------------	-----------------------------	----------------

Further specific information

Rear Seat Entertainment System:

This system is not protected against harmful interference and must not cause interference in properly approved systems.

This product is approved by ANATEL in accordance with the procedures set out in Resolution 242/2000 and complies with the relevant technical requirements. Further information can be found on the <https://www.anatel.gov.br>

Charging unit for the wireless charging of mobile devices (WMI):

This device operates in secondary mode, that is to say it has no protection against harmful interference, not even from the same type of stations, and must not cause interference with systems operating on a primary basis.

This product is permitted in accordance with the procedure defined in Directive 242/2000 by the Brazilian telecommunications agency ANATEL and meets the applicable technical requirements.

More information is available on the ANATEL website. www.anatel.gov.br

BRUNEI DARUSSALAM

REGULATORY RADIO IDENTIFIERS



Manufacturer	Model designation	Radio equipment approval number
--------------	-------------------	---------------------------------

ADC	ARS4-C (radar sensor)	DTA-004005
-----	-----------------------	------------

ADC	ARS6-A (radar sensor)	DTA-020359
-----	-----------------------	------------

Bosch	FR5CPCCF (radar sensor)	DTA-004222
-------	-------------------------	------------

Bosch	LRR3 (radar sensor)	DTA-011039
-------	---------------------	------------

Bosch	MRR1Rear (radar sensor)	DTA-006601
-------	-------------------------	------------



		
Manufacturer	Model designation	Radio equipment approval number
Bosch	MRRre14FCR (radar sensor)	DTA-006678
Bosch	F5CP12 (radar sensor)	DTA-018042
Continental Antenna	RKE213E1 (antenna amplifier)	DTA-006665
Continental Antenna	RKE223E1GNS (antenna amplifier)	DTA-004998
Continental Automotive	CMKG1 (locking system)	DTA-005043
Continental Automotive	CMKG2 (locking system)	DTA-023993
Continental Automotive	MARS Keyless (locking system)	DTA-017264
HELLA	DM4 (locking system)	DTA-020187
HELLA	RS6 (locking system)	AA-000081
Hirschmann	920287A (locking system)	DTA-001661
Hirschmann	920287B (locking system)	DTA-000794
Hirschmann	920702A (locking system)	DTA-018051
Huf Baolong	TSSRE4A (tire pressure sensor)	DTA-011045
Huf Baolong	TSSSG4G6b (tire pressure monitor control unit)	DTA-003757
HUF	HUF13145 (locking system)	DTA-017926
HUF	HUF14632 (locking system)	DTA-006138

		
Manufacturer	Model designation	Radio equipment approval number
HUF	HUF4761 (locking system)	DTA-000615
MARQUARDT	DC12A (locking system)	DTA-019403
MARQUARDT	DC12B (locking system)	DTA-000068
MARQUARDT	DC12K (locking system)	DTA-000066
MARQUARDT	MS2 (locking system)	LPD-38890
MARQUARDT	MS4 (locking system)	DTA-003525
MARQUARDT	MS5 (locking system)	DTA-005850
MARQUARDT	MS7 (locking system)	DTA-032943
MARQUARDT	MK1 (locking system)	DTA-011312
MARQUARDT	MK2 (locking system)	DTA-011313
MARQUARDT	MK3 (locking system)	DTA-031059
MARQUARDT	3350.38 (locking system)	DTA-032673
MARQUARDT	MU3 (locking system)	DTA-029861
MARQUARDT	MUB1 (locking system)	DTA-032674
Schrader	AG5SP4 (tire pressure sensor)	DTA-005291
Schrader	AG3PF4 (tire pressure sensor)	DTA-003581
Schrader	BG3FP4 (tire pressure sensor)	DRQ-D-JATI-07-2000-109000



Manufacturer	Model designation	Radio equipment approval number
--------------	-------------------	---------------------------------

Schrader	DG6W2D4 (tire pressure sensor)	DTA-025258
Schrader	GG4T (tire pressure sensor)	DTA-025258
Schrader	BG3FP4 (tire pressure sensor)	DTA-025258
Schrader	MFR (tire pressure monitor control unit)	DTA-003893
Schrader	MFR3 (tire pressure monitor control unit)	DRQ-D-MAJU-02-2011-111083
Valeo	ARTEMIS-SUB-01 (locking system)	DTA-031587
Veoneer	77V12BSM (radar sensor)	DTA-004000
Veoneer	77V12CRN (radar sensor)	DTA-003999
Veoneer	77V125CRN (radar sensor)	DTA-010423
Veoneer	77GHz MMRV1 (radar sensor)	DTA-006216
Vitesco Technologies	HFA30 (Handsfree-Access)	DTA-030296
WITTE-Velbert	SDHTAG3NFC (locking system)	DTA-005628

EURASIAN ECONOMIC UNION

REGULATORY RADIO IDENTIFIERS



Manufacturer



Model designation

ADC	ARS4-A (radar sensor)
ADC	ARS4-C (radar sensor)
ADC	ARS441DP10 (radar sensor)
Bosch	FR5CPCCF (radar sensor)
Bosch	LRR3 (radar sensor)
Bosch	MRR1Rear (radar sensor)
Bosch	MRRe14FCR (radar sensor)
Bosch	F5CP12 (radar sensor)
Continental Antenna	RKE213E1 (antenna amplifier)
Continental Antenna	RKE223E1GNS (antenna amplifier)
Continental Automotive	MARS Keyless (locking system)
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)
HELLA	DM4 (locking system)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)
Hirschmann	920702A (locking system)



	
Manufacturer	Model designation
Huf Baolong	TSSRE4A (tire pressure sensor)
HUF	HUF13145 (locking system)
HUF	HUF4761 (locking system)
HUF	HUF14632 (locking system)
MARQUARDT	DC12A (locking system)
MARQUARDT	DC12B (locking system)
MARQUARDT	DC12K (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MS7 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system)
MARQUARDT	3350.38 (locking system)
MARQUARDT	MU3 (locking system)
MARQUARDT	MUB1 (locking system)
Schrader	AG5SP4 (tire pressure sensor)

	
Manufacturer	Model designation
Schrader	AG3PF4 (tire pressure sensor)
Schrader	BG3FP4 (tire pressure sensor)
Schrader	GG4T (tire pressure sensor)
Schrader	DG6W2D4 (tire pressure sensor)
Veoneer	77GHz MMRV1 (radar sensor)
Veoneer	77V12BSM (radar sensor)
Veoneer	77V12CRN (radar sensor)
Veoneer	77V125CRN (radar sensor)
WITTE-Velbert	SDHTAG3NFC (locking system)

GHANA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
		NCA APPROVED
ADC	ARS4-C (radar sensor)	ZRO-1H-7E3-152
ADC	ARS6-A (radar sensor)	7E6-M1-16C-SRD
ADC	ARS441DP10 (radar sensor)	ZRO-1H-7E3-152
Bosch	FR5CPCCF (radar sensor)	ZRO-M8-7E3-230
Bosch	F5CP12 (radar sensor)	7E6-M1-X9B-SRD



Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	ZRO-M8-7E3-X53
Continental Antenna	RKE223E1GNS (antenna amplifier)	ZRO-M8-7E3-225
Continental Automotive	CMKG1 (locking system)	ZRO-M8-7E3-277
Continental Automotive	CMKG2 (locking system)	7M-7E7-X25-DSR
Continental Automotive	MARS Keyless (locking system)	BR3-1M-GE2-16A
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	7M-7E7-X09-DSR
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	7M-7E7-X05-DSR
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	7M-7E7-X03-DSR
HELLA	DM4 (locking system)	BR3-1M-GE2-157
Hirschmann	920287A (locking system)	ZRO-M8-7E3-X45
Hirschmann	920287B (locking system)	ZRO-M8-7E3-X47
HUF	HUF13145 (locking system)	7E6-M1-X14-SRD
HUF	HUF4761 (locking system)	EX6-6M-GE2-16C
LEOPOLD KOSTAL	KK1 (locking system)	ZRO-M8-7E3-X49
MARQUARDT	DC12A (locking system)	ZRO-M8-7E3-X50
MARQUARDT	DC12B (locking system)	ZRO-M8-7E3-X51
MARQUARDT	DC12K (locking system)	ZRO-M8-7E3-X52

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	BR3-1M-GE-129
MARQUARDT	MS4 (locking system)	ZRO-1H-7E3-26E
MARQUARDT	MS5 (locking system)	SRO-1M-7E4-11B
MARQUARDT	MK1 (locking system)	ZRO-M8-7E3-X4A
MARQUARDT	MK2 (locking system)	ZRO-M8-7E3-X4C
MARQUARDT	MK3 (locking system)	HS-7E7-262-DSR
MARQUARDT	3350.38 (locking system)	ZRO-M8-7E3-X3C
MARQUARDT	MU3 (locking system)	HS-7E7-XE5-DSR
Valeo	ARTEMIS-SUB-01 (locking system)	7M-7E7-272-DSR
Veoneer	77V12BSM (radar sensor)	ZRO-1H-7E3-142
Veoneer	77V12CRN (radar sensor)	ZRO-M8-7E3-230
Veoneer	77V125CRN (radar sensor)	7E5-7M-X72-RDR
Vitesco Technologies	HFA30 (Handsfree-Access)	7M-7E7-134-DSR
WITTE-Velbert	SDHTAG3NFC (locking system)	SRO-1M-7E4-X59





INDONESIA
REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS3-A (radar sensor)	97128/SDPPI/2024 7163 
ADC	ARS3-B (radar sensor)	97129/SDPPI/2024 7163 
ADC	ARS4-B (radar sensor)	97127/ SDPPI/ 2024 7163 
ADC	ARS4-C (radar sensor)	68676/SDPPI/2020 7163 
ADC	ARS4-A (radar sensor)	90362/SDPPI/2023 7163 
ADC	ARS6-A (radar sensor)	84770/SDPPI/2022 7163 
ADC	ARS441DP10 (radar sensor)	89748/SDPPI/2023 7163 

Manufacturer	Model designation	Radio equipment approval number
Bosch	LRR3 (radar sensor)	74264/SDPPI/2021 7163 
Bosch	MRR1Rear (radar sensor)	74267/SDPPI/2021 7163 
Bosch	MRRevo14F (radar sensor)	74265/SDPPI/2021 7163 
Bosch	MRR14FCR (radar sensor)	74266/SDPPI/2021 7163 
Bosch	FR5CPCCF (radar sensor)	67882/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 





Manufacturer	Model designation	Radio equipment approval number
Bosch	F5CP12 (radar sensor)	86858/SDPPI/2022 84754  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
Continental Antenna	RKE213E1 (antenna amplifier)	76621/SDPPI/2021 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
Continental Antenna	RKE223E1GNS (antenna amplifier)	86957/ SDPPI/ 2022 10325  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG1 (locking system)	87836/SDPPI/2023 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
Continental Automotive	CMKG2 (locking system)	88721/SDPPI/2023 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
Continental Automotive	MARS Keyless (locking system)	69379/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 





Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	D-WMI2020A (control unit)	66678/SDPPI/2020 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Continental Automotive	NTG7 MID (Headunit) Production: Hungary	92192/SDPPI/2023 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Continental Automotive	NTG7 HIGH (Headunit) Production: Hungary	92190/SDPPI/2023 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	NTG7 PREMIUM (Headunit) Production: Hungary	92188/SDPPI/2023 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Continental Automotive	NTG7 PREMIUM PLUS (Headunit) Production: Hungary	92195/SDPPI/2023 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	88477/SDPPI/2023 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya





Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	88579/SDPPI/2023 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	88478/SDPPI/2023 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Harman Becker	NTG6N ENTRY/MID (Headunit) Production: Germany	64019/SDPPI/2019 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya

Manufacturer	Model designation	Radio equipment approval number
Harman Becker	NTG6N HIGH (Headunit) Production: Germany	64018/SDPPI/2019 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Harman Becker	NTG6N ENTRY/MID (Headunit) Production: Hungary	63775/SDPPI/2019 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Harman Becker	NTG6N HIGH (Headunit) Production: Hungary	63774/SDPPI/2019 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya





Manufacturer	Model designation	Radio equipment approval number
Harman Becker	NTG7 MID (Headunit)	65544/SDPPI/2020 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Harman Becker	NTG7 HIGH (Headunit)	70513/SDPPI/2020 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Harman Becker	NTG7 PREMIUM (Headunit)	65543/SDPPI/2020 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya

Manufacturer	Model designation	Radio equipment approval number
Harman Becker	NTG7 PREMIUM PLUS (Headunit)	70512/SDPPI/2020 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Harman Becker	NTG7 RSU (control unit)	66387/SDPPI/2020 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
HELLA	DM4 (locking system)	69378/SDPPI/2020 7163 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Huf Baolong	TSSRE4A (tire pressure sensor)	72438/SDPPI/2021 7163





Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287A (locking system)	71369 /SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
Hirschmann	920287B (locking system)	72974 /SDPPI/2021 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
Hirschmann	920702A (locking system)	82675/SDPPI/2022 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF14632 (locking system)	78368/SDPPI/2021 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
HUF	HUF4761 (locking system)	26742/SDPPI/2015 3533  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
HUF	HUF13145 (NFC reader)	83988/SDPPI/2022  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
LEOPOLD KOSTAL	KK1 (locking system)	41121/SDPPI/2018 5125





Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12A (locking system)	67373/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
MARQUARDT	DC12B (locking system)	80676/SDPPI/2022 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
MARQUARDT	DC12K (locking system)	80621/SDPPI/2022 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	67372/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
MARQUARDT	MS4 (locking system)	64126/SDPPI/2019 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
MARQUARDT	MS5 (locking system)	90695/SDPPI/2023 7163 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 





Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	75282/ SDPPI/ 2021 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
MARQUARDT	MK2 (locking system)	75285/ SDPPI/ 2021 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
MARQUARDT	3350.38 (locking system)	82980/SDPPI/2022 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
Molex	WCH-302b (control unit)	71668/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
Molex	WCH-302d (control unit)	71220/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
Molex	WCH-302e (control unit)	71669/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 





Manufacturer	Model designation	Radio equipment approval number
Panasonic	DAIRSE (control unit)	63550/SDPPI/2019 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya
Schrader	GG4T (tire pressure sensor)	72023/SDPPI/2020 9338
Schrader	AG5SP4 (tire pressure sensor)	75465/SDPPI/2021 7163
Schrader	BG3FP4 (tire pressure sensor)	72765/SDPP/2021 7163
Schrader	DG6W2D4 (tire pressure sensor)	57058/SDPPI/2018 3612
Schrader	MC34MA4 (tire pressure monitor control unit)	25626/SDPPI/2015 3612
Schrader	AG3PF4 (tire pressure sensor)	62396/SDPPI/2020 7163

Manufacturer	Model designation	Radio equipment approval number
Schrader	GG4T (tire pressure sensor)	72023/SDPPI/2020 7163
Veoneer	77GHz MMRV1 (radar sensor)	74749/SDPPI/2021 7163
Veoneer	77V12CRN (radar sensor)	66830/SDPPI/2020 7163
Veoneer	77V125CRN (radar sensor)	78366/SDPPI/2021 7163
Veoneer	77V12BSM (radar sensor)	66792/SDPPI/2020 7163
WITTE-Velbert	SDHTAG3NFC (locking system)	67233/SDPPI/2020 10325 Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya





ISRAEL

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Approval number of the Ministry of Communications:		
ADC	ARS4-A (radar sensor)	55-09697
ADC	ARS6-A (radar sensor)	55-14225
ADC	ARS4-C (radar sensor)	55-07525
Bosch	FR5CPCCF (radar sensor)	55-08783
Bosch	LRR3 (radar sensor)	55-08334
Bosch	MRR1Rear (radar sensor)	55-08333
Bosch	MRR14FCR (radar sensor)	55-08395
Bosch	F5CP12 (radar sensor)	55-12854
Bosch	MBCI2LS3PR1 (head unit)	51-91228
Bosch	MBCI2LS4PR1 (head unit)	51-91226
Continental Antenna	RKE213E1 (antenna amplifier)	55-13929
Continental Antenna	RKE223E1GNS (antenna amplifier)	51-97825
Continental Automotive	D-WMI2017B (control unit)	51-75654
Continental Automotive	D-WMI2017A (control unit)	51-75367
Continental Automotive	D-WMI2016A (control unit)	55-08177

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	D-WMI2020A (control unit)	55-08179
Continental Automotive	RKE213E1 (Antennenverstärker)	55-13929
Continental Automotive	RKE223E1GNS (Antennenverstärker)	51-97825
Continental Automotive	CMKG1 (Schließsystem)	51-87871
Continental Automotive	CMKG2 (Schließsystem)	51-92059
Continental Automotive	MARS Keyless (Schließsystem)	55-13749
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	51-90718
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	51-90717
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	51-90719
Harman Becker	NTG7 HIGH-IL (Headunit)	51-89476
Harman Becker	NTG7 PREMIUMPLUS-IL (Headunit)	51-89475
HELLA	DM4 (locking system)	55-14271
HELLA	RS6 (locking system)	51-98663



Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287A (locking system)	51-62759
Hirschmann	920287B (locking system)	51-49357
Hirschmann	920702A (locking system)	55-12320
Huf Baolong	TSSRE4A (tire pressure sensor)	63-63571
Huf Baolong	TSSSG4G6b (tire pressure monitor control unit)	63-66757
HUF	HUF13145 (locking system)	55-14153
LEOPOLD KOSTAL	KK1 (locking system)	51-87872
MARQUARDT	DC12A (locking system)	55-13847
MARQUARDT	DC12B (locking system)	55-12215
MARQUARDT	DC12K (locking system)	55-12214
MARQUARDT	MS2 (locking system)	51-85192
MARQUARDT	MS5 (locking system)	51-86840
MARQUARDT	3350.38 (locking system)	55-14331
MARQUARDT	MK1 (locking system)	51-94449
MARQUARDT	MK2 (locking system)	51-94450
MARQUARDT	MK3 (locking system)	56-03260
MARQUARDT	MU3 (locking system)	51-97974
Schrader	AG3PF4 (tire pressure sensor)	51-78338

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4 (tire pressure sensor)	51-73152
Schrader	BG3FP4 (tire pressure sensor)	51-77898
Schrader	DG6W2D4 (tire pressure sensor)	51-64111
Schrader	GG4T (tire pressure sensor)	55-09441
Schrader	MC34MA4 (tire pressure monitor control unit)	51-29611
Schrader	MFR (tire pressure monitor control unit)	55-06040
Schrader	MFR3 (tire pressure monitor control unit)	51-79817
Veoneer	77V12BSM (radar sensor)	55-08176
Veoneer	77V12CRN (radar sensor)	55-08301
WITTE-Velbert	SDHTAG3NFC (locking system)	55-12216
Vitesco	HFA30 (Handsfree-Access)	56-01011

JAMAICA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)
Continental Automotive	RKE213E1 (antenna amplifier)



Manufacturer	Model designation
Continental Automotive	RKE223E1GNS (antenna amplifier)
Continental Automotive	MARS Keyless (locking system)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)
Hirschmann	920702A (locking system)
HELLA	DM4 (locking system)
HUF	HUF13145 (locking system)
LEOPOLD KOSTAL	KK1 (locking system)
MARQUARDT	DC12A (locking system)
MARQUARDT	DC12B (locking system)
MARQUARDT	DC12K (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system)
MARQUARDT	MU3 (locking system)
MARQUARDT	3350.38 (locking system)

Manufacturer	Model designation
WITTE-Velbert	SDHTAG3NFC (locking system)
Valeo	ARTEMIS-SUB-01 (locking system)
Vitesco	HFA30 (Handsfree-Access)

JAPAN

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	TMWK2211004648KR
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	003-230113
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	003-230112
Sennheiser	M3IETW2R (Earbud)	201-190814 (R)
Sennheiser	M3IETW2L (Earbud)	201-190815 (L)
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	020-180077
Vitesco	HFA30 (Handsfree-Access)	209-J00495





CANADA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	IC: 7812D-CMKG2
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	IC: NTG7QMIDLF2
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	IC: NTG7QHIGLF2
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	IC: NTG7QPREF2
Sennheiser	M3IETW2R (Earbud)	IC:2099A-M3IETW2R
Sennheiser	M3IETW2L (Earbud)	IC:2099A-M3IETW2L
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	IC:2099A-BTT100
Sennheiser	M3IETW2 C (Charging Case)	CAN ICS-3(B)/NMB-3(B)
Vitesco	HFA30 (Handsfree-Access)	28616-HFA30

KUWAIT

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF13145 (locking system)	Ref. 5873
Continental Automotive	CMKG2 (locking system)	Ref. 6716
Sennheiser	M3IETW2 (Momentum True Wireless 2)	Ref. 4870

Manufacturer	Model designation	Radio equipment approval number
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	Ref. 4871
Vitesco	HFA30 (Handsfree-Access)	Ref. 7272

MALAYSIA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS6-A (radar sensor)	HIDF15000153
ADC	ARS4-C (radar sensor)	HIDF15000153
Bosch	FR5CPCCF (radar sensor)	CIDF15000490
Bosch	LRR3 (radar sensor)	CIDF15000490
Bosch	MRR1Rear (radar sensor)	CIDF15000490
Bosch	MRRe14FCR (radar sensor)	CIDF15000490
Bosch	MRRevo14F (radar sensor)	CIDF15000490
Bosch	F5CP12 (radar sensor)	RGLN/30A/0522/S(22-2490)
Continental Antenna	RKE213E1 (antenna amplifier)	HIDF15000153
Continental Antenna	RKE223E1GNS (antenna amplifier)	HIDF16000136
Continental Automotive	CMKG1 (locking system)	HIDF15000153



Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	HIDF15000153
Continental Automotive	MARS Keyless (locking system)	CIDF15000578
Continental Automotive	UWBTRX1 (locking system)	HIDF15000153
Continental Automotive	D-WMI2020A (control unit)	RGEZ/12A/1019/S(19-4128)
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	RCCT/92G/0423/S(23-0350)
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	CCT/91G/0323/S(23-1291)
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	RGQB/05A/0323/S(23-1293)
HELLA	DM4 (locking system)	RDDK/41A/0717/S(17-2269)
HELLA	RS6 (locking system)	CIDF15000578
Hirschmann	920287A (locking system)	RAUU/63A/0311/S(11-0432)
Hirschmann	920287B (locking system)	RAUU/22C/0615/S(15-1864)
Hirschmann	920702A (locking system)	HIDF15000153
Huf Baolong	TSSRE4A (tire pressure sensor)	HIDF15000153
HUF	HUF13145 (locking system)	RFBY/09A/0422/S(22-1843)
HUF	HUF14632 (locking system)	RAYN/25A/0715/S(15-2385)



Manufacturer	Model designation	Radio equipment approval number
HUF	HUF4761 (locking system)	RAAU/16B/1112/S(12-2053)
LEOPOLD KOSTAL	KK1 (locking system)	HIDF15000153
MARQUARDT	DC12A (locking system)	RDDK/33A/0317/S(17-0669)
MARQUARDT	DC12B (locking system)	RAUU/62A/0311/S(11-0263)
MARQUARDT	DC12K (locking system)	RAUU/62A/0311/S(11-0264)
MARQUARDT	MS2 (locking system)	RDDK/31A/0217/S(17-0405)
MARQUARDT	MS4 (locking system)	RDDK/25B/1019/S(19-0943)
MARQUARDT	MS5 (locking system)	RGLO/02A/0720/S(20-2580)
MARQUARDT	MK1 (locking system)	CIDF19000029
MARQUARDT	MK2 (locking system)	CIDF19000029
MARQUARDT	3350.38 (locking system)	CIDF19000029
Meta System	ITS/TPS (interior protection)	RAVG/18Q/0212/S(11-2068)
Meta System	MUW II (interior protection)	RAVG/17Q/0212/S(11-2067)
Schrader	AG5SP4 (tire pressure sensor)	RCDD/03A/0615/S(19-2094)
Schrader	AG3PF4 (tire pressure sensor)	RBEF/28A/0419/S/(19-1542)
Schrader	BG3FP4 (tire pressure sensor)	RBEF/51A/0121/S/(20-5642)
Schrader	GG4T (tire pressure sensor)	RBEF/09A/1017/S(17-3183)



Manufacturer	Model designation	Radio equipment approval number
Schrader	DG6W2D4 (tire pressure sensor)	RBEF/09A/1017/S(17-3183)
Schrader	MFR (tire pressure monitor control unit)	RAQP/62A/0419/S(19-1694)
Schrader	MFR3 (tire pressure monitor control unit)	RAQP/62A/0419/S(19-1694)
Veoneer	77GHz MMRV1 (radar sensor)	HIDF15000153
Veoneer	77V12BSM (radar sensor)	HIDF15000153
Veoneer	77V12CRN (radar sensor)	HIDF15000153
Veoneer	77V125CRN (radar sensor)	HIDF15000153
WITTE-Velbert	SDHTAG3NFC (locking system)	RDDK/43B/0420/S(20-1749)
Vitesco	HFA30 (Handsfree-Access)	RGZK/03A/1223/S(23-5530)

MOROCCO

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
		AGREE PAR L'ANRT MAROC
ADC	ARS4-A (radar sensor)	MR 9490 ANTR 2014-07-23
ADC	ARS6-A (radar sensor)	MR 00033936 ANRT 2022-08-03

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-C (radar sensor)	MR 20231 ANRT 2019-06-27
ADC	ARS441DP10 (radar sensor)	MR 20231 ANRT 2019-06-27
Bosch	FR5CPCCF (radar sensor)	MR 20575 ANRT 2019-07-29
Bosch	LRR3 (radar sensor)	MR 5371 ANRT 2010 2019-12-05
Bosch	MRR1Rear (radar sensor)	MR 9186 ANTR 2014-04-22
Bosch	MRRe14FCR (radar sensor)	MR 13900 ANTR 2017-05-04
Bosch	F5CP12 (radar sensor)	MR00032137ANRT2022
Continental Antenna	RKE213E1 (antenna amplifier)	MR 10631 ANTR 2015-07-16
Continental Antenna	RKE223E1GNS (antenna amplifier)	MR 21174 ANTR 2019-10-14
Continental Automotive	CMKG1 (locking system)	MR 21701 ANTR 2019-12-05
Continental Automotive	CMKG2 (locking system)	MR 36542 ANRT 2023-02-01
Continental Automotive	MARS Keyless (locking system)	MR 13681 ANTR 2017-04-04
HELLA	DM4 (locking system)	MR 14426 ANTR 2017-07-28
Hirschmann	920287A (locking system)	MR 6700 ANTR 2011-11-16
Hirschmann	920287B (locking system)	MR 7260 ANTR 2012-06-13
Hirschmann	920702A (locking system)	MR 32214 ANTR 2022-03-08
Huf Baolong	TSSRE4A (tire pressure monitor control unit)	MR 14320 ANTR 2017-07-07



Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSSG4G6b (tire pressure monitor control unit)	MR 19561 ANTR 2019-04-26
HUF	HUF13145 (locking system)	MR 32395 ANRT 2022-03-24
HUF	HUF14632 (locking system)	MR 10506 ANTR 2015-06-22
HUF	HUF4761 (locking system)	MR 7829 ANTR 2013-02-14
LEOPOLD KOSTAL	KK1 (locking system)	MR 10697 ANTR 2015-08-05
MARQUARDT	DC12A (locking system)	MR 13429 ANTR 2017-03-03
MARQUARDT	DC12B (locking system)	MR 6698 ANTR 2021-11-04
MARQUARDT	DC12K (locking system)	MR 6699 ANTR 2021-11-04
MARQUARDT	MS2 (locking system)	MR 13300 ANTR 2017-02-15
MARQUARDT	MS4 (locking system)	MR 19199 ANTR 2019-03-25
MARQUARDT	MS5 (locking system)	MR 23805 ANRT 2020-04-22
MARQUARDT	MS7 (locking system)	MR 00001197 ANTR 2024-03-25
MARQUARDT	MK1 (locking system)	MR 10645 ANTR 2015-07-21
MARQUARDT	MK2 (locking system)	MR 10987 ANTR 2015-10-22
MARQUARDT	MK3 (locking system)	MR 00041098 ANTR 2023-12-25
MARQUARDT	MU3 (locking system)	MR 00039580 ANTR 2023-08-08
MARQUARDT	3350.38 (locking system)	MR 18817 ANTR 2019-02-12

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MUB1 (locking system)	MR 00000864 ANTR 2024-02-29
Schrader	AG5SP4 (tire pressure monitor control unit)	MR 10216 ANRT 2015
Schrader	AG3PF4 (tire pressure sensor)	MR 19241 ANRT 2019
Schrader	BG3FP4 (tire pressure sensor)	MR00026829ANRT2020
Schrader	MFR (tire pressure monitor control unit)	MR 10927 ANRT 2015
Schrader	MFR3 (tire pressure monitor control unit)	MR 19527 ANRT 2019
Schrader	GG4T (tire pressure sensor)	MR 14777 ANRT 2017-09-20
Schrader	DG6W2D4 (tire pressure sensor)	MR 16355 ANRT 2018-04-19
Schrader	MC34MA4 (tire pressure monitor control unit)	MR 6706 ANRT 2011-11-17
Veoneer	77GHz MMRV1 (radar sensor)	MR 10436 ANRT 2015-05-25
Veoneer	77V12BSM (radar sensor)	MR 20097 ANRT 2019-06-14
Veoneer	77V12CRN (radar sensor)	MR 20149 ANRT 2019-06-19
Veoneer	77V125CRN (radar sensor)	MR 27966 ANRT 2021-03-29
Valeo	ARTEMIS-SUB-01 (radar sensor)	MR 00000073 ANRT 2024-01-05
WITTE-Velbert	SDHTAG3NFC (locking system)	MR 23310 ANRT 2020-03-10



MEXICO

REGULATORY RADIO IDENTIFIERS

		
Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	IFETEL: RCPCOAR14-1191
ADC	ARS6-A (radar sensor)	IFETEL: SYCOAR22-17289
ADC	ARS4-C (radar sensor)	IFETEL: RLVCOR19-1062
ADC	ARS441DP10 (radar sensor)	IFETEL: RLVCOR19-1062
Bosch	LRR3 (radar sensor)	IFETEL: RCPBOLR09-0828
Bosch	MRR1Rear (radar sensor)	IFETEL: RCPBOMR14-0922
Bosch	MRRe14FCR (radar sensor)	IFETEL: RCPBOMR17-0598
Continental Antenna	RKE213E1 (antenna amplifier)	IFETEL: RLVKARK15-1741
Continental Antenna	RKE223E1 (antenna amplifier)	IFETEL: RLVKORK19-2174
Continental Automotive	CMKG1 (locking system)	IFETEL: RCPCCOM19-2315
Continental Automotive	CMKG2 (locking system)	IFETEL: COCCOM22-31003
Continental Automotive	MARS Keyless (locking system)	IFETEL: RLVDAMA18-1827
Continental Automotive	UWBTRX1 (locking system)	IFETEL: MECOCM22-17609
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	IFETEL: MEMENT23 - 12200
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	IFETEL: MEMENT23 - 11923

		
Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	IFETEL: MEMENT23 - 12204
Gentex	MUAHL 5 (convenience system)	IFETEL: RCPGEMU15-0448
HELLA	DM4 (locking system)	IFETEL: RLVHEDM17-10
Hirschmann	920287A (locking system)	IFETEL: RLVHI9211-0472
Hirschmann	920287B (locking system)	IFETEL: RLVHI9212-0608
Hirschmann	920702A (locking system)	IFETEL: RLVHI9222-2674
Huf Baolong	TSSRE4A (tire pressure sensor)	IFETEL: RLVHUTS17-0806
HUF	HUF13145 (locking system)	IFETEL: RCPHUHU22-2505
HUF	HUF14632 (locking system)	IFETEL: RLVHUHU15-1204
HUF	HUF4761 (locking system)	IFETEL: RLVHUHU12-1587
LEOPOLD KOSTAL	KK1 (locking system)	IFETEL: RLVKOKK15-0891
MARQUARDT	DC12A (locking system)	IFETEL: RLVMEDC17-0348
MARQUARDT	DC12B (locking system)	IFETEL: RLVMAADC11-0446
MARQUARDT	DC12K (interior protection)	IFETEL: RLVMAADC11-0446
MARQUARDT	MS2 (locking system)	IFETEL: RLVMAAMS17-0222
MARQUARDT	MS4 (locking system)	IFETEL: RLVMAAMS19-0449



		
Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS5 (locking system)	IFETEL: RLVMEMS20-0957
MARQUARDT	MK1 (locking system)	IFETEL: RLVMAAMK15-1042
MARQUARDT	MK2 (locking system)	IFETEL: RLVMAAMK15-1043
MARQUARDT	3350.38 (locking system)	IFETEL: RCPMA3319-0530
Schrader	AG5SP4 (tire pressure sensor)	IFETEL: RCPSCAG15-0627
Schrader	AG3PF4 (tire pressure sensor)	IFETEL: RLVSCAG19-0705
Schrader	BG3FP4 (tire pressure sensor)	IFETEL: RLVSCBG21-0750
Schrader	MFR (tire pressure monitor control unit)	IFETEL: RLVSCMF15-0959
Schrader	MFR3 (tire pressure monitor control unit)	IFETEL: RLVSCMF19-0777
Schrader	GG4T (tire pressure sensor)	IFETEL: RLVSCGG17-1665
Schrader	DG6W2D4 (tire pressure sensor)	IFETEL: RLVSCDG18-04
Schrader	MC34MA4 (tire pressure monitor control unit)	IFETEL: RCPSCMR14-062
Sennheiser	M3IETW2R (Earbud)	IFETEL: RCPSEM320-0435-A1
Sennheiser	M3IETW2L (Earbud)	IFETEL: RCPSEM320-0435
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	IFETEL: RCPSEBT18-1407

		
Manufacturer	Model designation	Radio equipment approval number
WITTE-Velbert	SDHTAG3NFC (locking system)	IFETEL: RCPWISD20-0943
Vitesco	HFA30 (Handsfree-Access)	IFETEL: ROVIHF24-02919

MONGOLIA

REGULATORY RADIO IDENTIFIERS

		
Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG1 (locking system)	A19000633
Continental Automotive	CMKG2 (locking system)	A23000900
Continental Automotive	MARS Keyless (locking system)	A18000328
HELLA	DM4 (locking system)	A18000329
Hirschmann	920702A (locking system)	A22000649
HUF	HUF13145 (locking system)	A22000674
MARQUARDT	DC12A (locking system)	A19000400
MARQUARDT	DC12B (locking system)	A19000371
MARQUARDT	DC12K (locking system)	A19000372
MARQUARDT	MS2 (locking system)	A18000289



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS4 (locking system)	A19000516
MARQUARDT	MS5 (locking system)	A20000085
MARQUARDT	MK1 (locking system)	A19000374
MARQUARDT	MK2 (locking system)	A19000374
MARQUARDT	MK3 (locking system)	A24001205
MARQUARDT	MU3 (locking system)	A23001102
MARQUARDT	3350.38 (locking system)	A19000401
WITTE-Velbert	SDHTAG3NFC (locking system)	A20000067
Valeo	ARTEMIS-SUB-01 (radar sensor)	A24001183
Vitesco	HFA30 (Handsfree-Access)	A23001126

NIGER

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	029/ARCEP/DG/19
Continental Automotive	MARS Keyless (locking system)	083/ARCEP/DG/19
HELLA	DM4 (locking system)	082/ARCEP/DG/19

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287A (locking system)	097/ARCEP/DG/19
Hirschmann	920287B (locking system)	098/ARCEP/DG/19
HUF	HUF4761 (locking system)	053/ARCEP/DG/19
LEOPOLD KOSTAL	KK1 (locking system)	037/ARCEP/DG/19
MARQUARDT	DC12A (locking system)	010/ARCEP/DG/19
MARQUARDT	DC12B (locking system)	008/ARCEP/DG/19
MARQUARDT	DC12K (locking system)	009/ARCEP/DG/19
MARQUARDT	MS2 (locking system)	014/ARCEP/DG/19
MARQUARDT	MS4 (locking system)	HOMO-0096/ARCEP/DG/2019
MARQUARDT	MK1 (locking system)	034/ARCEP/DG/19
MARQUARDT	MK2 (locking system)	035/ARCEP/DG/19
MARQUARDT	3350.38 (locking system)	015/ARCEP/DG/19
MARQUARDT	MU1 (locking system)	HOMO-0095/ARCEP/DG/2019

NIGERIA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation
ADC	ARS4-A (radar sensor)
ADC	ARS6-A (radar sensor)
ADC	ARS4-C (radar sensor)



Manufacturer	Model designation
Bosch	FR5CPCCF (radar sensor)
Bosch	MRR1Rear (radar sensor)
Bosch	MRRe14FCR (radar sensor)
Bosch	F5CP12 (radar sensor)
Continental Antenna	RKE213E1 (antenna amplifier)
Continental Antenna	RKE223E1GNS (antenna amplifier)
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)
Continental Automotive	MARS Keyless (locking system)
HELLA	DM4 (locking system)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)
Hirschmann	920702A (locking system)
HUF	HUF13145 (locking system)
HUF	HUF14632 (locking system)
HUF	HUF4761 (locking system)
LEOPOLD KOSTAL	KK1 (locking system)
MARQUARDT	DC12A (locking system)
MARQUARDT	DC12B (locking system)

Manufacturer	Model designation
MARQUARDT	DC12K (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system)
MARQUARDT	MU3 (locking system)
MARQUARDT	3350.38 (locking system)
Schrader	AG3PF4 (tire pressure sensor)
Schrader	BG3FP4 (tire pressure sensor)
Schrader	MFR3 (tire pressure monitor control unit)
Veoneer	77V12BSM (radar sensor)
Veoneer	77V12CRN (radar sensor)
Veoneer	77V125CRN (radar sensor)
WITTE-Velbert	SDHTAG3NFC (locking system)
Vitesco	HFA30 (Handsfree-Access)





OMAN

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	TRA/TA-R/2016/14 D080134
ADC	ARS6-A (radar sensor)	TRA/TA-R/14181/22 D172338
ADC	ARS4-C (radar sensor)	TRA/TA-R/7769/19 D172338
Bosch	FR5CPCCF (radar sensor)	TRA/TA-R/7983/19 D172338
Bosch	LRR3 (radar sensor)	TRA/TA-R/1049/09
Bosch	MRR1Rear (radar sensor)	TRA/TA-R/1849/14
Bosch	MRR14FCR (radar sensor)	TRA/TA-R/4353/17
Bosch	F5CP12 (radar sensor)	TRA/TA-R/13339/22
Continental Antenna	RKE213E1 (antenna amplifier)	TRA/TA-R/2715/15 D090258
Continental Antenna	RKE223E1GNS (antenna amplifier)	TRA/TA-R/8337/19 D172338
Continental Automotive	CMKG1 (locking system)	TRA/TA-R/8642/19 D172338
Continental Automotive	CMKG2 (locking system)	TRA/TA-R/15164/23 D100428

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	MARS Keyless (locking system)	TRA/TA-R/4158/17 D080134
HELLA	DM4 (locking system)	TRA/TA-R/4548/17 D080134
Hirschmann	920287A (locking system)	TRA/TA-R/0210/11 D080353
Hirschmann	920287B (locking system)	TRA/TA-R/0655/12 D080353
Hirschmann	920702A (locking system)	TRA/TA-R/13300/22 D172338
Huf Baolong	TSSRE4A (tire pressure sensor)	TRA/TA-R/4516/17 D100428
Huf Baolong	TSSSG4G6b (tire pressure sensor)	TTRA/TA-R/7506/19
HUF	HUF13145 (locking system)	TRA/TA-R/13465/22
HUF	HUF14632 (locking system)	TRA/TA-R/2665/15
HUF	HUF4761 (locking system)	TRA/TA-R/0920/12
LEOPOLD KOSTAL	KK1 (locking system)	TRA/TA-R/3129/16
MARQUARDT	DC12A (locking system)	TRA/TA-RD/4056/17 D100428
MARQUARDT	DC12B (locking system)	TRA/TA-R/0227/11 D080353





Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12K (locking system)	TRA/TA-R/0228/11 D080353
MARQUARDT	MS2 (locking system)	TRA/TA-R/4136/17 D080134
MARQUARDT	MS4 (locking system)	TRA/TA-R/7316/19 D172249
MARQUARDT	MS5 (locking system)	TRA/TA-R/17887/24 D172338
MARQUARDT	MK1 (locking system)	TRA/TA-R/2848/15 D080353
MARQUARDT	MK2 (locking system)	TRA/TA-R/2900/15 D080353
MARQUARDT	MK3 (locking system)	TRA/TA-R/17223/23 D080354
MARQUARDT	MU3 (locking system)	TRA/TA-R/16494/23 D172338
MARQUARDT	3350.38 (locking system)	TRA/TA-R/7051/19 D172249
MARQUARDT	MUB1 (locking system)	TRA/TA-R/17721/24 D172338
Schrader	AG5SP4 (tire pressure sensor)	TTRA R/2380/15 D080134
Schrader	AG3PF4 (tire pressure sensor)	TRA R/7287/19 D172338

Manufacturer	Model designation	Radio equipment approval number
Schrader	BG3FP4 (tire pressure sensor)	TRA/TA-R/10694/20 D172338
Schrader	MFR (tire pressure monitor control unit)	TRA/TA-R/7464/19 D090258
Schrader	MFR3 (tire pressure monitor control unit)	TRA/TA-R/7467/19 D090258
Schrader	GG4T (tire pressure sensor)	TRA/TA-R/4686/17 D080134
Schrader	DG6W2D4 (tire pressure sensor)	TRA/TA-R/5511/18 D172249
Sennheiser	M3IETW2R (Earbud)	TRA/TA-R/10988/21
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	TRA/TA-R/10976/21
Veoneer	77GHz MMRV1 (radar sensor)	TRA/TA-R/2706/15
Veoneer	77V12BSM (radar sensor)	TRA/TA-R/7706/19 D172338
Veoneer	77V12CRN (radar sensor)	TRA/TA-R/7707/19 D172338
Veoneer	77V125CRN (radar sensor)	TRA/TA-R/11335/21 D172338
WITTE-Velbert	SDHTAG3NFC (locking system)	TRA/TA-R/9150/20



Manufacturer	Model designation	Radio equipment approval number
Valeo	ARTEMIS-SUB-01 (radar sensor)	TRA/TA-R/17293/23 D172338
Vitesco	HFA30 (Handsfree-Access)	TRA/TA-R/17028/23 172338D

PAKISTAN

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	TAC NO: 9.9014/2019
ADC	ARS4-C (radar sensor)	TAC NO: 9.9389/2019
Bosch	FR5CPCCF (radar sensor)	TAC NO: 9.198/2020
Bosch	F5CP12 (radar sensor)	TAC NO: 9.243/2023
Continental Antenna	RKE213E1 (antenna amplifier)	TAC NO: 9.142/2016
Continental Antenna	RKE223E1GNS (antenna amplifier)	TAC NO: 9.100169/2019
Continental Automotive	CMKG1 (locking system)	TAC NO: 9.100175/2019
Continental Automotive	CMKG2 (locking system)	TAC NO: 9.153/2023
Continental Automotive	MARS Keyless (locking system)	TAC NO: 9.213/2017
Continental Automotive	D-WMI2020A (control unit)	TAC NO: 9.9836/2019

Manufacturer	Model designation	Radio equipment approval number
HELLA	DM4 (locking system)	TAC NO: 9.409/2017
Hirschmann	920287A (locking system)	TAC NO: 9.845/2013
Hirschmann	920287B (locking system)	TAC NO: 9.846/2013
Hirschmann	920702A (locking system)	TAC NO: 9.412/2022
HUF Baolong	TSSRE4A (tire pressure sensor)	TAC NO: 9.620/2017
HUF Baolong	TSSRG4G6B (tire pressure monitor control unit)	TAC NO: 9.9345/2019
HUF	HUF14632 (locking system)	TAC NO: 9.598/2015
HUF	HUF4761 (locking system)	TAC NO: 9.790/2013
LEOPOLD KOSTAL	KK1 (locking system)	TAC NO: 9.118/2016
MARQUARDT	DC12A (locking system)	TAC NO: 9.131/2017
MARQUARDT	DC12B (locking system)	TAC NO: 9.829/2013
MARQUARDT	DC12K (locking system)	TAC NO: 9.830/2013
MARQUARDT	MS2 (locking system)	TAC NO: 9.133/2017
MARQUARDT	MS4 (locking system)	TAC NO: 9.100171/2019
MARQUARDT	MS5 (locking system)	TAC NO: 9.322/2024
MARQUARDT	MK1 (locking system)	TAC NO: 9.486/2015
MARQUARDT	MK2 (locking system)	TAC NO: 9.497/2015



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK3 (locking system)	TAC NO: 9.1175/2023
MARQUARDT	MU3 (locking system)	TAC NO: 9.1168/2023
MARQUARDT	MUB1 (locking system)	TAC NO: 9.269/2024
Schrader	AG3PF4 (tire pressure sensor)	TAC NO:9.039/2016
Schrader	AG5SP4 (tire pressure sensor)	TAC NO:9.9167/2019
Schrader	BG3FP4 (tire pressure sensor)	TAC NO:9.68/2021
Schrader	GG4T (tire pressure sensor)	TAC NO:9.538/2017
Schrader	DG6W2D4 (tire pressure sensor)	TAC NO: 9.789/2018
Veoneer	77GHz MMRV1 (radar sensor)	TAC NO: 9.9284/2019
Veoneer	77V12BSM (radar sensor)	TAC NO: 9.9391/2019
Veoneer	77V12CRN (radar sensor)	TAC NO: 9.9391/2019
Veoneer	77V125CRN (radar sensor)	TAC NO: 9.477/2021
WITTE-Velbert	SDHTAG3NFC (locking system)	TAC NO: 9.527/2020
Vitesco	HFA30 (Handsfree-Access)	TAC NO: 9.1058/2023

PARAGUAY

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	 2019-05-I-0271
ADC	ARS6-A (radar sensor)	 2022-08-I-0513
ADC	ARS4-C (radar sensor)	 2019-11-I-0602
ADC	ARS4-C (radar sensor)	 2019-11-I-0602
Bosch	FR5CPCCF (radar sensor)	 2019-09-I-0508
Bosch	MRR14FCR (radar sensor)	 2017-06-I-0000162
Bosch	MRR1Rear (radar sensor)	 2019-05-I-000236
Bosch	F5CP12 (radar sensor)	 2022-05-I-0329
Continental Antenna	RKE213E1 (antenna amplifier)	 2021-02-I-00101 y 2016-02-I-0000038



Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1GNS (antenna amplifier)	 2019-12-I-0656
Continental Automotive	CMKG1 (locking system)	 2020-02-I-0110
Continental Automotive	CMKG2 (locking system)	 2023-03-I-0153
Continental Automotive	MARS Keyless (locking system)	 2017-05-I-0000136
Continental Automotive	D-WMI2016A	 2019-03-I-0170
Continental Automotive	D-WMI2017A	 2019-03-I-000171
Continental Automotive	D-WMI2017B	 2019-03-I-000172
Continental Automotive	D-WMI2020A	 2019-11-I-0600
HELLA	DM4 (locking system)	 2022-06-I-0388 y 2017-08-I-0000261

Hirschmann	920287A (locking system)	 2016-5-I-000134 y 2011-06-I-0059
Hirschmann	920287B (locking system)	 2017-04-I-0000119 y 2012-05-I-0096
Hirschmann	920702A (locking system)	 2022-03-I-0149
Huf Baolong	TSSRE4A (tire pressure sensor)	 2022-08-I-0528
HUF	HUF13145 (locking system)	 2022-04-I-0235
HUF	HUF14632 (locking system)	 2020-06-I-0284 y 2015-08-I-0000226
HUF	HUF4761 (locking system)	 2017-12-I-0000409 y 2012-10-I-0178
LEOPOLD KOSTAL	KK1 (locking system)	 2015-06-I-0000181
MARQUARDT	DC12A (locking system)	 2020-12-I-0898 y 2015-06-I-0000181



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12B (locking system)	 2021-05-I-0304; 2016-5-I-000144 y 2011-06-I-0067
MARQUARDT	DC12K (locking system)	 2021-05-I-0305; 2016-5-I-000143 y 2011-06-I-0068
MARQUARDT	MS2 (locking system)	 2017-04-I-0000101
MARQUARDT	MS4 (locking system)	 2019-10-I-0581
MARQUARDT	MS5 (locking system)	 2020-08-I-0604
MARQUARDT	MK1 (locking system)	 2020-07-I-0390 y 2015-07-I-0000200
MARQUARDT	MK2 (locking system)	 2020-07-I-0391 y 2015-07-I-0000201
MARQUARDT	MK3 (locking system)	 2024-03-I-0256
MARQUARDT	MU3 (locking system)	 2023-08-I-0590

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	3350.38 (locking system)	 2024-02-I-0190 y 2019-04-I-000216
Schrader	AG5SP4 (tire pressure sensor)	 2015-04-I-0000150
Schrader	AG3PF4 (tire pressure sensor)	 2019-05-1-000261
Schrader	BG3FP4 (tire pressure sensor)	 2021-02-I-0063
Schrader	GG4T (tire pressure sensor)	 2020-02-1-0044
Schrader	DG6W2D4 (tire pressure sensor)	 2019-11-1-0632
Veoneer	77GHz MMRV1 (radar sensor)	 2020-07-I-0510
Veoneer	77V12BSM (radar sensor)	 2019-07-I-0399
Veoneer	77V12CRN (radar sensor)	 2019-07-I-0398
Veoneer	77V125CRN (radar sensor)	 2021-04-I-0188



Manufacturer	Model designation	Radio equipment approval number
Vitesco	HFA30 (Handsfree-Access)	 2023-11-I-0808
Valeo	ARTEMIS-SUB-01 (radar sensor)	 2024-01-I-0074
WITTE-Velbert	SDHTAG3NFC (locking system)	 2020-06-I-0326

Further specific information

Charging unit for the wireless charging of mobile devices (WMI):

D-WMI2020A:

This vehicle is equipped with the following radio frequency component approved by CONATEL – Paraguay: Wireless interface for mobile devices, Continental brand, model D-WMI2020A, manufactured by Continental Automotive GmbH.

Radio equipment approval number: 2019-11-I-0600

Rear Seat Entertainment System:

DAIRSE:

Importer: Condor S.A.C.I Casa Central, J.B. Gorostiaga 315 y Guaraníes, Asunción, Paraguay, (595 21) 569 7000, sac@condor.com.py

PHILIPPINES

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	ESD-1409466C
ADC	ARS4-C (radar sensor)	ESD-1920226C
Bosch	FR5CPCCF (radar sensor)	ESD-1920531C
Bosch	MRR1Rear (radar sensor)	ESD-1408917C
Bosch	MRRe14FCR (radar sensor)	ESD-1716172C
Bosch	F5CP12 (radar sensor)	ESD-RCE-2229495
Continental Antenna	RKE213E1 (antenna amplifier)	ESD-1511856C
Continental Antenna	RKE223E1GNS (antenna amplifier)	ESD-1921015C
Continental Automotive	CMKG1 (locking system)	ESD-2021556C
Continental Automotive	CMKG2 (locking system)	ESD-RCE-2332806
Continental Automotive	MARS Keyless (locking system)	ESD-1714865C
HELLA	DM4 (locking system)	ESD-1715539C
Hirschmann	920287A (locking system)	ESD-1105246C
Hirschmann	920287B (locking system)	ESD-1206044C
Hirschmann	920702A (locking system)	ESD-RCE-2229632



Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSRE4A (tire pressure sensor)	ESD-1715393C
HUF	HUF13145 (locking system)	ESD-RCE-2229722
HUF	HUF14632 (locking system)	ESD-1511236C
HUF	HUF4761 (locking system)	ESD-1206521C
LEOPOLD KOSTAL	KK1 (locking system)	ESD-1510698C
MARQUARDT	DC12A (locking system)	ESD-1714489C
MARQUARDT	DC12B (locking system)	ESD-1105216C
MARQUARDT	DC12K (locking system)	ESD-1105215C
MARQUARDT	MS2 (locking system)	ESD-1715652C
MARQUARDT	MS4 (locking system)	ESD-1919133C
MARQUARDT	MS5 (locking system)	ESD-2022426C
MARQUARDT	MK1 (locking system)	ESD-1510644C
MARQUARDT	MK2 (locking system)	ESD-1510645C
MARQUARDT	MK3 (locking system)	ESD-REC-2436842
MARQUARDT	MU3 (locking system)	ESD-REC-2436843
MARQUARDT	3350.38 (locking system)	ESD-1919198C
MARQUARDT	MUB1 (locking system)	ESD-REC-2436916



Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4 (tire pressure sensor)	ESD-1715393C
Schrader	AG3PF4 (tire pressure sensor)	ESD-1919585C
Schrader	BG3FP4 (tire pressure sensor)	ESD-RCE-2124846
Schrader	GG4T (tire pressure sensor)	ESD-1715977C
Schrader	DG6W2D4 (tire pressure sensor)	ESD-1817081C
Veoneer	77GHz MMRV1 (radar sensor)	ESD-1510921C
Vitesco	HFA30 (Handsfree-Access)	ESD-RCE-2335375
Valeo	ARTEMIS-SUB-01 (radar sensor)	ESD-RCE-2436285
WITTE-Velbert	SDHTAG3NFC (locking system)	ESD-2022599C

ZAMBIA

REGULATORY RADIO IDENTIFIERS



Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1 (antenna amplifier)	ZMB/ZICTA/TA/2019/3/11
Continental Automotive	MARS Keyless (locking system)	ZMB/ZICTA/TA/2019/3/3



		
Manufacturer	Model designation	Radio equipment approval number
HELLA	DM4 (locking system)	ZMB/ZICTA/TA/2019/3/4
Hirschmann	920287A (locking system)	ZMB/ZICTA/TA/2019/7/12
Hirschmann	920287B (locking system)	ZMB/ZICTA/TA/2019/7/11
HUF	HUF4761 (locking system)	ZMB/ZICTA/TA/2018/12/18
LEOPOLD KOSTAL	KK1 (locking system)	ZMB/ZICTA/TA/2019/3/48
MARQUARDT	DC12A (locking system)	ZMB/ZICTA/TA/2019/5/16
MARQUARDT	DC12B (locking system)	ZMB/ZICTA/TA/2019/5/17
MARQUARDT	DC12K (locking system)	ZMB/ZICTA/TA/2019/5/18
MARQUARDT	MS2 (locking system)	ZMB/ZICTA/TA/2018/9/30
MARQUARDT	MS4 (locking system)	ZMB/ZICTA/TA/2019/7/123
MARQUARDT	MK1 (locking system)	ZMB/ZICTA/TA/2019/3/20
MARQUARDT	MK2 (locking system)	ZMB/ZICTA/TA/2019/3/21
MARQUARDT	3350.38 (locking system)	ZMB/ZICTA/TA/2019/3/6
MARQUARDT	MU1 (locking system)	ZMB/ZICTA/TA/2019/7/124
Valeo	ARTEMIS-SUB-01 (radar sensor)	ZMB/ZICTA/TA/2024/1/08

SENEGAL

AGREE PAR ARTP SENEGAL
 Numéro d'agrément : XXXXXX/AG/ER

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	072504/AG/ER
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	072486/AG/ER
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	072487/AG/ER
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	072488/AG/ER
Continental Automotive Technologies	NTG7Q PREMIUMPLUS LF2 (head unit)	072689/AG/ER
MARQUARDT	MK3 (locking system)	072784/AG/ER
MARQUARDT	MU3 (locking system)	072676/AG/ER
Valeo	ARTEMIS-SUB-01 (radar sensor)	072776/AG/ER



SERBIA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	011 20
ADC	ARS6-A (radar sensor)	038 22
ADC	ARS4-C (radar sensor)	011 19
Bosch	FR5CPCCF (radar sensor)	011 19
Bosch	LRR3 (radar sensor)	011 19
Bosch	MRR1Rear (radar sensor)	011 17
Bosch	MRRe14FCR (radar sensor)	005 17
Continental Antenna	RKE213E1 (antenna amplifier)	005 21
Continental Antenna	RKE223E1GNS (antenna amplifier)	005 22
Continental Automotive	CMKG1 (locking system)	005 20
Continental Automotive	CMKG2 (locking system)	005 23
Continental Automotive	MARS Keyless (locking system)	005 20
Continental Automotive	NTG7 MID	005 23
Continental Automotive	NTG7 HIGH	005 23
Continental Automotive	NTG7 PREMIUM	005 23

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	NTG7 PREMIUM PLUS	005 23
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	005 23
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	005 23
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	005 23
HELLA	DM4 (locking system)	005 20
Hirschmann	920287A (locking system)	005 18
Hirschmann	920287B (locking system)	005 18
Hirschmann	920702A (locking system)	005 22
Huf Baolong	TSSRE4A (tire pressure sensor)	005 20
HUF	HUF13145 (locking system)	005 22
HUF	HUF14632 (locking system)	005 21
HUF	HUF4761 (locking system)	005 21
LEOPOLD KOSTAL	KK1 (locking system)	005 18
MARQUARDT	DC12A (locking system)	005 20
MARQUARDT	DC12B (locking system)	005 20
MARQUARDT	DC12K (locking system)	005 20



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	011 17
MARQUARDT	MS4 (locking system)	005 19
MARQUARDT	MS5 (locking system)	005 24
MARQUARDT	MK1 (locking system)	005 21
MARQUARDT	MK2 (locking system)	005 21
MARQUARDT	MK3 (locking system)	005 24
MARQUARDT	MU3 (locking system)	005 23
MARQUARDT	3350.38 (locking system)	005 22
MARQUARDT	MUB1 (locking system)	005 24
Meta System	MUW II (interior protection)	011 19
Schrader	AG5SP4 (tire pressure sensor)	005 15
Schrader	AG3PF4 (tire pressure sensor)	005 15
Schrader	BG3FP4 (tire pressure sensor)	005 20
Schrader	GG4T (tire pressure sensor)	005 17
Schrader	DG6W2D4 (tire pressure sensor)	005 18
Schrader	MC34MA4 (tire pressure monitor control unit)	011 11



Manufacturer	Model designation	Radio equipment approval number
Valeo	ARTEMIS-SUB-01 (radar sensor)	011 18
Veoneer	77GHz MMRV1 (radar sensor)	005 24
Veoneer	77V12BSM (radar sensor)	011 19
Veoneer	77V12CRN (radar sensor)	011 19
Veoneer	77V125CRN (radar sensor)	038 21
Vitesco	HFA30 (Handsfree-Access)	011
WITTE-Velbert	SDHTAG3NFC (locking system)	005 20

SINGAPORE

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
		Complies with IMDA Standards
ADC	ARS4-A (radar sensor)	DA103365
ADC	ARS6-A (radar sensor)	DA103365
ADC	ARS4-C (radar sensor)	DA103365
Bosch	FR5CPCCF (radar sensor)	DA103365
Bosch	LRR3 (radar sensor)	DA103365



Manufacturer	Model designation	Radio equipment approval number
Bosch	MRR1Rear (radar sensor)	DA103365
Bosch	MRR14FCR (radar sensor)	DA103365
Bosch	F5CP12 (radar sensor)	N3827-22
Continental Antenna	RKE213E1 (antenna amplifier)	DA105282
Continental Antenna	RKE223E1GNS (antenna amplifier)	DA107248
Continental Automotive	CMKG1 (locking system)	DA103365
Continental Automotive	CMKG2 (locking system)	DB106440
Continental Automotive	MARS Keyless (locking system)	DA105282
Continental Automotive	UWBTRX1 (locking system)	DB107091
Continental Automotive	D-WMI2020A (control unit)	DA103365
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	DA105282
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	DA105282
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	DA105282
Harman Becker	HERMES 3.0 (communication module)	DB107091
HELLA	DM4 (locking system)	DA103365 N3308-22
Hirschmann	920287A (locking system)	DA103365

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287B (locking system)	DA103365
Hirschmann	920702A (locking system)	DA105282
HUF	HUF13145 (locking system)	N2197-22
HUF Baolong	TSSRE4A (tire pressure sensor)	DA30668
HUF Baolong	TSSSG4G6b (tire pressure sensor)	DA28467
HUF	HUF14632 (locking system)	DA105282
HUF	HUF4761 (locking system)	DA103365
LEOPOLD KOSTAL	KK1 (locking system)	DA103365
MARQUARDT	DC12A (locking system)	DA103787
MARQUARDT	DC12B (locking system)	DA103365
MARQUARDT	DC12K (locking system)	DA103365
MARQUARDT	MS2 (locking system)	DA103787
MARQUARDT	MS4 (locking system)	DA103787
MARQUARDT	MS5 (locking system)	DB107091
MARQUARDT	MK1 (locking system)	DA103365
MARQUARDT	MK2 (locking system)	DA103365
MARQUARDT	MK3 (locking system)	DA103787
MARQUARDT	MU3 (locking system)	DA103787



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	3350.38 (locking system)	DB107091
Meta System	ITS/TPS (interior protection)	DA103365
Meta System	MUW II (interior protection)	DA103365
Schrader	AG5SP4 (tire pressure sensor)	DA103787
Schrader	AG3PF4 (tire pressure sensor)	DA107968
Schrader	BG3FP4 (tire pressure sensor)	DA103365
Schrader	GG4T (tire pressure sensor)	DA105282
Schrader	DG6W2D4 (tire pressure sensor)	DA105282
Veoneer	77GHz MMRV1 (radar sensor)	DA103365
Veoneer	77V12BSM (radar sensor)	DA103365
Veoneer	77V12CRN (radar sensor)	DA103365
Veoneer	77V125CRN (radar sensor)	DA103365
Visteo	HFA30 (Handsfree-Access)	N4949-23
WITTE-Velbert	SDHTAG3NFC (locking system)	DA107248

SOUTH AFRICA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	TA-2014/1637
ADC	ARS6-A (radar sensor)	TA-2022/1837
ADC	ARS4-C (radar sensor)	TA-2019/1595
Bosch	FR5CPCCF (radar sensor)	TA-2019/1200
Bosch	MRR1Rear (radar sensor)	TA-2014/212
Bosch	MRRe14FCR (radar sensor)	TA-2017/2013
Bosch	LRR3 (radar sensor)	TA-2009/464
Bosch	F5CP12 (radar sensor)	TA-2022/0153
Continental Antenna	RKE213E1 (antenna amplifier)	TA-2015/1438
Continental Antenna	RKE223E1 (antenna amplifier)	TA-2020/043
Continental Automotive	CMKG1 (locking system)	TA-2019/5405
Continental Automotive	CMKG2 (locking system)	TA-2022/3611_CMKG2
Continental Automotive	MARS Keyless (locking system)	TA-2016/3500
Continental Automotive	UWBTRX1 (locking system)	TA-2021/3460
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	TA-2023/0091



		
Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	TA-2023/0111
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	TA-2023/0090
Gentex	MUAHL 5 (convenience system)	TA-2015/1386
HELLA	DM4 (locking system)	TA-2017/2518
Hirschmann	920287A (locking system)	TA-2011/374
Hirschmann	920287B (locking system)	TA-2013/1262
Hirschmann	920702A (locking system)	TA-2022/0162
Huf Baolong	TSSRE4A (tire pressure sensor)	TA-2017/1393
Huf Baolong	TSSSG4G6b (tire pressure sensor)	TA-2019/1440
HUF	HUF13145 (locking system)	TA-2022/0375
HUF	HUF14632 (locking system)	TA-2015/1077
HUF	HUF4761 (locking system)	TA-2012/1543
LEOPOLD KOSTAL	KK1 (locking system)	TA-2015/595
Meta System	ITS Master (interior protection)	TA-2011/1636
Meta System	ITS Sensor (interior protection)	TA-2011/1227

		
Manufacturer	Model designation	Radio equipment approval number
Meta System	MUW II (interior protection)	TA-2019/261
MARQUARDT	DC12A (locking system)	TA-2017/312
MARQUARDT	DC12B (locking system)	TA-2011/370
MARQUARDT	DC12K (locking system)	TA-2012/1542
MARQUARDT	MS2 (locking system)	TA-2016/3314
MARQUARDT	MS4 (locking system)	TA-2019/843
MARQUARDT	MS5 (locking system)	TA-2020/5765
MARQUARDT	MK1 (locking system)	TA-2015/179
MARQUARDT	MK2 (locking system)	TA-2015/180
MARQUARDT	MU3 (locking system)	TA-2023/1835
MARQUARDT	3350.38 (locking system)	TA-2018/3985
Schrader	AG5SP4 (tire pressure sensor)	TA-2015/072
Schrader	AG3PF4 (tire pressure sensor)	TA-2019-133
Schrader	BG3FP4 (tire pressure sensor)	TA-2020/7731
Schrader	MFR (tire pressure monitor control unit)	TA-2019/273
Schrader	MFR3 (tire pressure monitor control unit)	TA-2019-273
Schrader	GG4T (tire pressure sensor)	TA-2017/3884



Manufacturer	Model designation	Radio equipment approval number
Schrader	DG6W2D4 (tire pressure sensor)	TA-2017/2933
Schrader	MC34MA4 (tire pressure monitor control unit)	TA-2011/1370
Veoneer	77GHz MMRV1 (radar sensor)	TA-2015/2087
Veoneer	77V12BSM (radar sensor)	TA-2019/1380
Veoneer	77V12CRN (radar sensor)	TA-2019/1382
Veoneer	77V125CRN (radar sensor)	TA-2021/0150
Visteo	HFA30 (Handsfree-Access)	TA-2023/2469
WITTE-Velbert	SDHTAG3NFC (locking system)	TA-2020/055

SOUTH KOREA

REGULATORY RADIO IDENTIFIERS



Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1 (antenna amplifier)	R-C-Ca3-RKE223E1
Continental Automotive	CMKG2 (locking system)	R-R-TeH-CMKG2
Continental Automotive Technologies	NTG7Q LF2 (head unit)	R-R-TeH- NTG7QLF2



Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSRE4A (tire pressure sensor)	R-CRM-HHFTSSRE4A
Huf Baolong	TSSSG4G6 (tire pressure monitor control unit)	R-REM-HHFTSSSG4G6
HUF	HUF14632 (locking system)	MSIP-CRM-HHF-HUF-14632
Schrader	MFR (tire pressure monitor control unit)	MSIP-REM-SRD-MFR
Schrader	MFR3 (tire pressure monitor control unit)	KCC R-R-SRD-MFR3A
Schrader	MC34MA4 (tire pressure monitor control unit)	KCC-REM-SRD-MRXMC34MA4
Schrader	AG5SP4 (tire pressure sensor)	MSIP-CRM-SRD-AG5SP4
Schrader	AG3PF4 (tire pressure sensor)	R-C-SRD-AG3PF4
Schrader	BG3FP4 (tire pressure sensor)	R-C-SRD-BG3FP4
Schrader	GG4T (tire pressure sensor)	MSIP-CRM-SRD-GG4T
Schrader	DG6W2D4 (tire pressure sensor)	R-CRM-SRD-DG6W2D4
Visteo	HFA30 (Handsfree-Access)	R-R-vT2-HFA30





THAILAND

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	130111-23-0132 

TOGO

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1 (antenna amplifier)	No. 024/19
Continental Automotive	MARS Keyless (locking system)	No. 040/19
HELLA	DM4 (locking system)	No. 039/19
Hirschmann	920287A (locking system)	No. 089/19
Hirschmann	920287B (locking system)	No. 088/19
HUF	HUF4761 (locking system)	No. 041/19
LEOPOLD KOSTAL	KK1 (locking system)	No. 060/19
MARQUARDT	DC12A (locking system)	No. 055/19
MARQUARDT	DC12B (locking system)	No. 057/19
MARQUARDT	DC12K (locking system)	No. 056/19
MARQUARDT	MS2 (locking system)	No. 008/19
MARQUARDT	MS4 (locking system)	No. 101/19

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	No. 021/19
MARQUARDT	MK2 (locking system)	No. 022/19
MARQUARDT	3350.38 (locking system)	No. 016/20

UKRAINE

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
		
ADC	ARS4-A (radar sensor)	UA RF: 1CONT0004
ADC	ARS6-A (radar sensor)	UA RF: 1CONT0013
Continental Antenna	RKE213E1 (antenna amplifier)	UKR.355-123/19
Continental Antenna	RKE223E1GNS (antenna amplifier)	UA.R.TR.052.682-19
Continental Automotive	CMKG1 (locking system)	UA1.001.021175-20-TE
Continental Automotive	CMKG2 (locking system)	UA.032.CT.0105-23
Continental Automotive	MARS Keyless (locking system)	RTS.UKR.355-34/18
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	UA.TR.052
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	UA.TR.052





Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	UA.TR.052
HELLA	DM4 (locking system)	UA.TR.109
Hirschmann	920287A (locking system)	UKR.355-7/20
Hirschmann	920287B (locking system)	UKR.355-8/20
Huf Baolong	TSSRE4A (tire pressure sensor)	UA 1.001.018568-19-TE
Huf Baolong	TSSSG4G6b (tire pressure monitor control unit)	UA 1.001.019289-19-TE
HUF	HUF13145 (locking system)	UKR.355-113/19
HUF	HUF14632 (locking system)	UKR.355-113/19
HUF	HUF4761 (locking system)	UA1.001.018653-19-TE
LEOPOLD KOSTAL	KK1 (locking system)	10094.006682-19
MARQUARDT	DC12A (locking system)	UA.R.TR.052.307-19
MARQUARDT	DC12B (locking system)	UA.R.TR.052.308-19
MARQUARDT	DC12K (locking system)	UA.R.TR.052.309-19
MARQUARDT	MS2 (locking system)	UA1.001.019129-19-TE
MARQUARDT	MS4 (locking system)	UA.R.TR.052.528-19
MARQUARDT	MS5 (locking system)	632.16-CET



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	UA1.001.019233-19-TE
MARQUARDT	MK2 (locking system)	UA1.001.019234-19-TE
MARQUARDT	MK3 (locking system)	UA.TR.001.0355.30.01316-23
MARQUARDT	MU3 (locking system)	UA.TR.001.0355.30.01276-23
MARQUARDT	3350.38 (locking system)	UA1.001.018888-19-TE
Schrader	AG5SP4 (tire pressure sensor)	UA.TR. 032
Schrader	AG3PF4 (tire pressure sensor)	UA-TR-001
Schrader	BG3FP4 (tire pressure sensor)	UA-TR-109
Schrader	GG4T (tire pressure sensor)	UA.TR. 028
Schrader	DG6W2D4 (tire pressure sensor)	UA.TR. 028
WITTE-Velbert	SDHTAG3NFC (locking system)	UA.R.TR.052.120-20

UZBEKISTAN

REGULATORY RADIO IDENTIFIERS



Manufacturer	Model designation
Continental Automotive	RKE213E1 (antenna amplifier)
Continental Automotive	RKE223E1GNS (antenna amplifier)



Manufacturer

Model designation

Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)
Continental Automotive	MARS Keyless (locking system)
HELLA	DM4 (locking system)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)
Hirschmann	920702A (locking system)
HUF	HUF13145 (locking system)
LEOPOLD KOSTAL	KK1 (locking system)
MARQUARDT	DC12A (locking system)
MARQUARDT	DC12B (locking system)
MARQUARDT	DC12K (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MS7 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)



Manufacturer

Model designation

MARQUARDT	MK3 (locking system)
MARQUARDT	MU3 (locking system)
MARQUARDT	3350.38 (locking system)
MARQUARDT	MUB1 (locking system)
Visteo	HFA30 (Handsfree-Access)
Valeo	ARTEMIS-SUB-01 (locking system)
WITTE-Velbert	SDHTAG3NFC (locking system)

UNITED ARAB EMIRATES

TDRA

 هيئة تنظيم الاتصالات والحكومة الرقمية
 TELECOMMUNICATIONS AND DIGITAL
 GOVERNMENT REGULATORY AUTHORITY




REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	TA RTTE: Er558296/17, DA40068/15 
ADC	ARS4-C (radar sensor)	TA RTTE: ER77062/19, DA40068/15 
Bosch	FR5CPCCF (radar sensor)	TA RTTE: ER74533/19, DA36758/14 
Bosch	NRCS2P (radar sensor)	TA RTTE: ER88778/20, DA36758/14 
Continental Antenna	RKE213E1 (antenna amplifier)	TRA ER64693/18, DA65993/17
Continental Antenna	RKE223E1GNS (antenna amplifier)	TRA ER76442/19, DA65993/17
Continental Automotive	CMKG1 (locking system)	TRA ER77964/20, DA0018994/09
Continental Automotive	CMKG2 (locking system)	TRA ER17713/23, DA36975/14 
Continental Automotive	MARS Keyless (locking system)	TRA ER56005/17, DA44932/15

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	UWBTRX1 (locking system)	TRA ER11321/22, DA36975/14
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	TDRA ER17731/23, DA76163/18 
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	TDRA ER17730/23, DA76163/18 
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	TDRA ER17732/23, DA76163/18 
Gentex	MUAHL 5 (convenience system)	TRA ER41849/15, DA35176/14
Harman Becker	HERMES 3.0 (communication module)	TRA ER03601/21, DA0028019/10 
HELLA	DM4 (locking system)	TRA ER56616/17, DA44932/15
Hirschmann	920287A (locking system)	TRA ER52213/17, DA35219/14
Hirschmann	920287B (locking system)	TRA ER42011/15, DA35219/14
Hirschmann	920702A (locking system)	TRA ER10723/22, DA35219/14





Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSRE4A (tire pressure sensor)	TRA ER57806/17, DA36976/14
Huf Baolong	TSSSG4G6b (tire pressure monitor control unit)	TRA ER7307/19, DA0086237/12
HUF	HUF13145 (locking system)	TRA ER08607/22, DA36976/14 
HUF	HUF14632 (locking system)	TRA ER63716/18, DA36976/14
HUF	HUF4761 (locking system)	TRA ER55496/17, DA36976/14
HUF	HUF13145 (locking system)	TRA ER08607/22 DA36976/14 
LEOPOLD KOSTAL	KK1 (locking system)	TRA ER62622/18, DA0105247/13
MARQUARDT	DC12A (locking system)	TRA ER53465/17, DA0018994/09
MARQUARDT	DC12B (locking system)	TRA ER0067828/11, DA0018994/09
MARQUARDT	DC12K (locking system)	TRA ER0067829/11, DA0018994/09
MARQUARDT	MS2 (locking system)	TRA ER52668/17, DA0018994/09
MARQUARDT	MS4 (locking system)	TRA ER71616/19, DA0018994/09

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS5 (locking system)	TRA ER80720/20, DA0018994/09
MARQUARDT	MS7 (locking system)	TRA ER29729/24, DA0018994/09
MARQUARDT	MK1 (locking system)	TRA ER64145/18, DA0018994/09
MARQUARDT	MK2 (locking system)	TRA ER64146/18, DA0018994/09
MARQUARDT	MK3 (locking system)	TRA ER26811/23, DA0018994/09
MARQUARDT	MU3 (locking system)	TRA ER25917/23, DA0018994/09
MARQUARDT	MUB1 (locking system)	TRA ER29344/24, DA0018994/09
MARQUARDT	MU3 (locking system)	TRA ER25917/23, DA0018994/09
Schrader	AG5SP4 (tire pressure sensor)	TRA ER37156/15, DA0047074/10
Schrader	AG3PF4 (tire pressure sensor)	TRA ER70533/19, DA0047074/10
Schrader	BG3FP4 (tire pressure sensor)	TRA ER96175/21, DA0047074/10
Schrader	GG4T (tire pressure sensor)	TRA ER57985/17, DA0047074/10
Schrader	DG6W2D4 (tire pressure sensor)	TRA ER960528/18, DA0047074/10





Manufacturer	Model designation	Radio equipment approval number
Schrader	MC34MA4 (tire pressure monitor control unit)	TRA ER37066/15, DA0047074/10
Sennheiser	M3IETW2L (Earbud)	ER78231/20
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	ER64728/18
Veoneer	77GHz MMRV1 (radar sensor)	TA RTTE: ER96352/21; 0020858/10 
Veoneer	77V12BSM (radar sensor)	TA RTTE: ER72324/19; 0020858/10 
Veoneer	77V12CRN (radar sensor)	TA RTTE: ER72323/19; 0020858/10 
Veoneer	77V125CRN (radar sensor)	TA RTTE: ER95775/21; 0020858/10 
Visteo	HFA30 (Handsfree-Access)	TRA ER25428/23
WITTE-Velbert	SDHTAG3NFC (locking system)	TRA ER79695/20, DA0018994/09

UNITED KINGDOM

REGULATORY RADIO IDENTIFIERS

UK CA	
Manufacturer	Model designation
ADC	ARS4-A (radar sensor)
Continental Antenna	RKE213E1 (antenna amplifier)
Continental Antenna	RKE223E1GNS (antenna amplifier)
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)
Continental Automotive	MARS Keyless (locking system)
Continental Automotive	UWBTRX1 (locking system)
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)
HUF	HUF13145 (locking system)
Huf Baolong	TSSRE4A (tire pressure sensor)
HELLA	DM4 (locking system)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)
Hirschmann	920702A (locking system)
LEOPOLD KOSTAL	KK1 (locking system)



Manufacturer	Model designation
MARQUARDT	DC12B (locking system)
MARQUARDT	DC12K (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system)
MARQUARDT	MU3 (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MS7 (locking system)
MARQUARDT	3350.38 (locking system)
MARQUARDT	MUB1 (locking system)
Schrader	AG5SP4 (tire pressure sensor)
Schrader	AG3PF4 (tire pressure sensor)
Schrader	BG3FP4 (tire pressure sensor)
Schrader	GG4T (tire pressure sensor)
Schrader	DG6W2D4 (tire pressure sensor)



Manufacturer	Model designation
Visteo	HFA30 (Handsfree-Access)
WITTE-Velbert	SDHTAG3NFC (locking system)

Further specific information

Charging unit for the wireless charging of mobile devices (WMI):

D-WMI2016A, D-WMI2017A, D-WMI2017B:

Restrictions or requirements in the United Kingdom: A minimum distance of 3.9 in (10 cm) must be maintained between all persons and the device at all times. The device must not be installed or operated together with other antennas or transmitters.

D-WMI2020A:

Restrictions or requirements in the United Kingdom: A minimum distance of 0 in (0 cm) must be maintained between all persons and the device at all times. The device must not be installed or operated together with other antennas or transmitters.

UNITED STATES

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	FCC ID: KR5CMKG2
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	FCC ID: NTG7QMIDLF2



Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	FCC ID: NTG7QHIGLF2
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	FCC ID: NTG7QPRELF2
HUF	HUF13145 (locking system)	FCC ID: YGOHUF13145
Sennheiser	M3IETW2R (Earbud)	FCC ID: DMOM3IETW2R
Sennheiser	M3IETW2L (Earbud)	FCC ID: DMOM3IETW2L
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	FCC ID: DMOBTT100
Visteo	HFA30 (Handsfree-Access)	FCC ID: 2A6TC-HFA30
WITTE-Velbert	SDHTAG3NFC (locking system)	FCC ID: DMOBTT100

Information on installation clearances

Charging unit for the wireless charging of mobile devices (WMI):

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 0 cm (in contact) between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un Environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 0 cm (in contact) de distance entre la source de rayonnement et votre corps. Ce transmetteur ne doit pas être placé au même endroit ou utilisé simultanément avec un autre transmetteur ou antenne.

Rear Seat Entertainment System:

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device must be installed and used at a distance of at least 6 cm from the body.

This device complies with ISSED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with ISSED radiation exposure limits established for an uncontrolled environment. This equipment must be installed and operated with a minimum distance of 5 cm between the radiation source and your body. Cet équipement est conforme aux limites d'exposition aux rayonnements ISSED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 5 cm de distance entre la source de rayonnement et votre corps.

Radar sensors:



ARS4-C (ADC), ARS4-B (ADC), ARS4-A (ADC), FR5CPCCF (Bosch), MRR1REAR (Bosch), MRREVO14F (Bosch), LRR3 (Bosch), 77V12BSM (Veoneer), 77V12CRN (Veoneer), MMRV1 (Veoneer)

Radiofrequency radiation exposure Information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

BT Audio Transmitter (BTT100):

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 9 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Infotainment system head unit (NTG7Q):

This device complies with FCC/ISED radiation exposure limits set forth in an uncontrolled environment and meets the FCC radio frequency Exposure Guidelines and RSS-102 of the ISED radio frequency Exposure rules. This device is installed in the vehicle at a distance minor to 20 cm to the closest passenger.

This device complies with FCC/ISED radiation exposure limits set forth in an uncontrolled environment and meets the FCC radio frequency Exposure Guidelines and RSS-102 of the ISED radio frequency Exposure rules. This device is installed in the vehicle at a distance minor to 20 cm to the closest passenger. Le présent appareil est conforme à l'exposition de la fréquence de la FCC/ISED définies pour un environnement non contrôlé et répond aux directives d'exposition de la fréquence de la FCC radiofréquence (RF) et RSS-102 de fréquence radio (RF) ISED règles d'éposition. Cet appareil sera installé à une distance minimale de 20 cm de l'utilisateur final.

VIETNAM

REGULATORY RADIO IDENTIFIERS

		
Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	SUNTECH VN C00082015
ADC	ARS6-A (radar sensor)	SUNTECH VN C00082015
ADC	ARS4-C (radar sensor)	SUNTECH VN C00082015
Bosch	FR5CPCCF (radar sensor)	SUNTECH VN C00082015
Bosch	MRR1Rear (radar sensor)	SUNTECH VN C00082015
Bosch	MRRe14FCR (radar sensor)	SUNTECH VN C00082015



Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	Suntech Vietnam Technology Company Limited C0274151118AF04A2
Continental Antenna	RKE223E1GNS (antenna amplifier)	Suntech Vietnam Technology Company Limited B1522011121AF04A3
Continental Automotive	CMKG1 (locking system)	Suntech Vietnam Technology Company Limited C0001070120AF04A2
Continental Automotive	CMKG2 (locking system)	Mercedes-Benz Vietnam Company Limited C0104060423AF04A3
Continental Automotive	MARS Keyless (locking system)	Mercedes-Benz Vietnam Company Limited B0748240419AF04A2
HELLA	DM4 (locking system)	Mercedes-Benz Vietnam Company Limited C0204030321AF04A3
HELLA	RS6 (locking system)	SUNTECH VN C00082015
Hirschmann	920702A (locking system)	Mercedes-Benz Vietnam Company Limited B0424070422AF04A3
Huf Baolong	TSSRE4A (tire pressure sensor)	C0112200717AF04A2



Manufacturer	Model designation	Radio equipment approval number
HUF	HUF13145 (tire pressure sensor)	C1071050922AF04A3
LEOPOLD KOSTAL	KK1 (locking system)	Mercedes-Benz Vietnam Company Limited C0313140421AF0403
MARQUARDT	DC12A (locking system)	Suntech Vietnam Technology Company Limited C0208030321AF04A3
MARQUARDT	DC12B (locking system)	Suntech Vietnam Technology Company Limited C0076210121AF04A3
MARQUARDT	DC12K (locking system)	Suntech Vietnam Technology Company Limited C0077210121AF04A3
MARQUARDT	MS2 (locking system)	Suntech Vietnam Technology Company Limited C0075210121AF04A3
MARQUARDT	MS4 (locking system)	Suntech Vietnam Technology Company Limited C0913110821AF04A3
MARQUARDT	MS5 (locking system)	Suntech Vietnam Technology Company Limited C0141140520AF04A2
MARQUARDT	MK1 (locking system)	Suntech Vietnam Technology Company Limited C0049150121AF04A3



Manufacturer	Model designation	Radio equipment approval number
--------------	-------------------	---------------------------------

MARQUARDT	MK2 (locking system)	Suntech Vietnam Technology Company Limited C0050150121AF04A3
-----------	----------------------	---

MARQUARDT	MU3 (locking system)	CÔNG TY TNHH MERCEDES-BENZ Mercedes-Benz Vietnam Company Limited C0547201223AF04A3
-----------	----------------------	--

MARQUARDT	3350.38 (locking system)	Suntech Vietnam Technology Company Limited C0131030221AF04A3
-----------	--------------------------	---

Schrader	AG5SP4 (tire pressure sensor)	Suntech Vietnam Technology Company Limited C0002050119AF042A
----------	-------------------------------	---

Schrader	AG3PF4 (tire pressure sensor)	Suntech Vietnam Technology Company Limited C0120220519AF04A2
----------	-------------------------------	---

Schrader	GG4T (tire pressure sensor)	Suntech Vietnam Technology Company Limited C0170191017AF04A2
----------	-----------------------------	---

Schrader	DG6W2D4 (tire pressure sensor)	Suntech Vietnam Technology Company Limited C0078070518AF04A2
----------	--------------------------------	---

Veoneer	77GHz MMRV1 (radar sensor)	Mercedes-Benz Vietnam Company Limited
---------	----------------------------	---------------------------------------



Manufacturer	Model designation	Radio equipment approval number
--------------	-------------------	---------------------------------

Veoneer	77V12BSM (radar sensor)	Mercedes-Benz Vietnam Company Limited
---------	-------------------------	---------------------------------------

Veoneer	77V12CRN (radar sensor)	Mercedes-Benz Vietnam Company Limited
---------	-------------------------	---------------------------------------

Veoneer	77V125CRN (radar sensor)	Mercedes-Benz Vietnam Company Limited
---------	--------------------------	---------------------------------------

WITTE-Velbert	SDHTAG3NFC (locking system)	Mercedes-Benz Vietnam Company Limited A0847130820AF04A3
---------------	-----------------------------	--

Information about the specific absorption rate (SAR)

INFORMATION ABOUT THE SPECIFIC ABSORPTION RATE

The values have been determined and tested in accordance with the Décret n° 2019-1186 guideline regarding the indication of the specific absorption rate (SAR) of wireless vehicle components.

Further information and updates are available at the following web address:

<https://regulatoryradioinformation.corpinter.net/us>





INFORMATION ABOUT THE SPECIFIC ABSORPTION RATE



Vehicle components	SAR value in W/kg	Applicable limit value
ECE DE003 & ECE DE004 compensators	< 0.2 W/kg	2 W/kg
DAI RSE	1.8 W/kg	2 W/kg
D-WMI2020A	0.018 W/kg	4 W/kg
HERMES communication module	< 0.4 W/kg	2 W/kg
RAMSES communication module	0.036 W/kg	2 W/kg
NRCS2P	0.003 W/kg	2 W/kg
NTG6	0.199 W/kg	4 W/kg
NTG7	0.08 W/kg	2 W/kg
NTG7RSU	0.07 W/kg	2 W/kg
Gen20x.i2 LS3+	2.2 W/kg	4 W/kg
Gen20x.i2 LS4+	2.5 W/kg	4 W/kg
SM-T230NZ tablet PC	0.7 W/kg	4 W/kg
Radio data transmission telephone system	0.24 W/kg	2 W/kg






< Vehicle identification plate, VIN and motor number overview

VEHICLE IDENTIFICATION PLATE

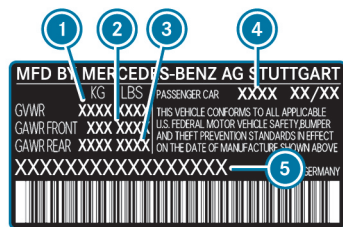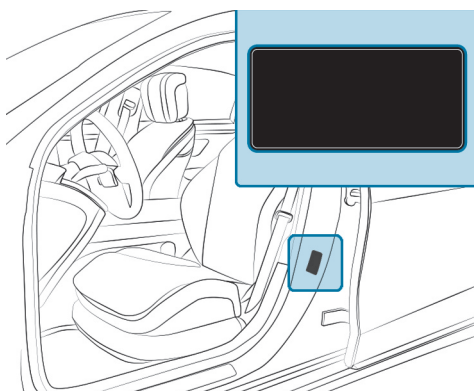

Vehicle identification plate (USA only)

- ① Permissible gross mass
- ② Maximum permissible front axle load
- ③ Maximum permissible rear axle load
- ④ Paint code
- ⑤ VIN (vehicle identification number)

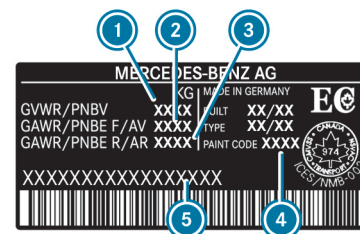

Vehicle identification plate (Canada only)


- ① Permissible gross mass
- ② Maximum permissible front axle load
- ③ Maximum permissible rear axle load
- ④ Paint code
- ⑤ VIN (vehicle identification number)

The permissible gross mass is made up of the vehicle weight, all vehicle occupants and the load. The maximum gross axle weight rating is the maximum weight that can be carried on one axle (front or rear axle).

Do not exceed the permissible gross mass or the maximum gross axle weight rating for the front or rear axle.




VIN BELOW THE RIGHT FRONT SEAT

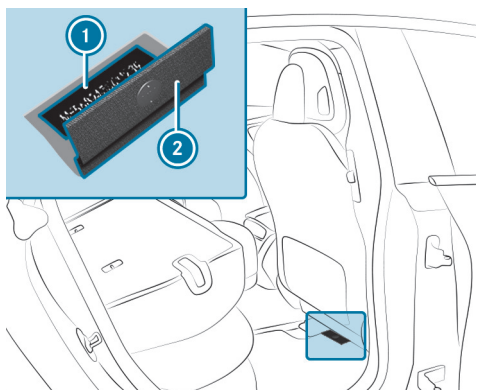


- ① Imprinted VIN (vehicle identification number)
- ② Floor covering

VIN AT THE LOWER EDGE OF THE WINDSHIELD

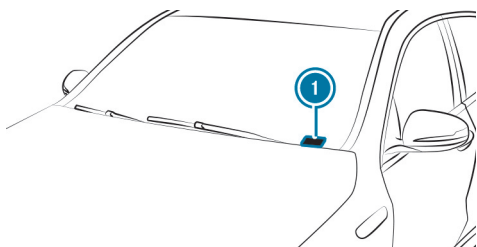

- ① VIN (vehicle identification number) as a label





< Operating fluids

Notes on operating fluids

WARNING

Risk of injury due to harmful operating fluids

Operating fluids can be toxic.

- ▶ When using, storing and disposing of operating fluids, observe the imprints on the respective original containers.
- ▶ Always keep operating fluids in the sealed original container.
- ▶ Always keep children away from operating fluids.

ENVIRONMENTAL NOTE

Pollution of the environment due to irresponsible disposal of operating fluids

Incorrect disposal of operating fluids can cause considerable damage to the environment.

- ▶ Dispose of operating fluids in an environmentally responsible manner.

OPERATING FLUIDS INCLUDE THE FOLLOWING:

- Lubricants

- Coolant
- Brake fluid
- Windshield washer fluid
- Climate control system refrigerant

Use only products approved by Mercedes-Benz. Damage to the vehicle caused by the use of products that have not been approved is not covered by the Mercedes-Benz warranty or goodwill gestures.

You can identify operating fluids approved by Mercedes-Benz by the following inscriptions on the container:

- MB-Freigabe (e.g. MB-Freigabe 229.51)
- MB-Approval (e.g. MB-Approval 229.51)

FURTHER INFORMATION ON APPROVED OPERATING FLUIDS IS AVAILABLE AT THE FOLLOWING LOCATIONS:

- in the Mercedes-Benz Specifications for Operating Fluids in accordance with the details on the label
 - at <https://operatingfluids.mercedes-benz.com>
- At a qualified specialist workshop

Notes on brake fluid

Please observe the notes on operating fluids (→ page 802).



WARNING

Risk of an accident due to vapor pockets forming in the brake system

The brake fluid constantly absorbs moisture from the air. This lowers the boiling point of the brake fluid. If the boiling point is too low, vapor pockets may form in the brake system when the brakes are applied hard.

This causes the braking effect to be impaired.

- ▶ Have the brake fluid renewed at the specified intervals.

Have the brake fluid regularly replaced at a qualified specialist workshop. Only use a brake fluid according to MB-Freigabe or MB-Approval 331.0 approved by Mercedes-Benz.

Coolant

NOTES ON COOLANT

Observe the notes on operating fluids (→ page 802).

WARNING

Risk of fire- and injury from antifreeze

If antifreeze comes into contact with hot component parts in the engine compartment, it may ignite.

- ▶ Allow the drive system to cool down before you add anti-freeze.
- ▶ Make sure that no antifreeze spills out next to the filler opening.
- ▶ Thoroughly clean the antifreeze from component parts before starting the vehicle.

NOTE

Damage caused by incorrect coolant

- ▶ Only use coolant that has been premixed with the required antifreeze protection.

INFORMATION ON COOLANT IS AVAILABLE AT THE FOLLOWING LOCATIONS:

- In the Mercedes-Benz Specification for Operating Fluids 320.1
 - At <https://operatingfluids.mercedes-benz.com>
- At a qualified specialist workshop




! NOTE

Overheating at high outside temperatures

If an inappropriate coolant is used, the cooling system is not sufficiently protected against overheating and corrosion at high outside temperatures.

- ▶ Only use coolant approved for Mercedes-Benz.
- ▶ Observe the instructions in the Mercedes-Benz Specifications for Operating Fluids 320.1.

Have the coolant regularly replaced at a qualified specialist workshop.

PROPORTION OF ANTIFREEZE PROTECTION-CONCENTRATE IN THE COOLING SYSTEM:

- A minimum of 50 % (antifreeze protection down to about -35°F (-37°C))
- A maximum of 55 % (antifreeze protection down to -49°F (-45°C))

COOLANT FILLING QUANTITY

Missing values were not available by the editorial deadline.

COOLANT

All models	Quantity
Cooling circuit (drive system)	
Cooling circuit (high-voltage battery)	

COOLANT FILLING QUANTITY (MERCEDES-AMG VEHICLES)
COOLANT

USA: Mercedes-AMG EQE 4MATIC+ Canada: Mercedes-AMG EQE 53 4MATIC+	Quantity
Cooling circuit (drive system)	12.7 US qt (12.0 liters)
Cooling circuit (high-voltage battery)	13.7 US qt (13.0 liters)

Notes on windshield washer fluid

Observe the notes on operating fluids (→ page 802).

⚠ WARNING

Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable. If it comes into contact with hot components, it may ignite.

- ▶ Make sure that windshield washer concentrate is not spilled near to the filler opening.

! NOTE

Damage to the exterior lighting due to unsuitable windshield washer fluid

Unsuitable windshield washer fluid may damage the plastic surface of the exterior lighting.

- ▶ Only use windshield washer fluid which is also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.



! NOTE

- Blocked spray nozzles caused by mixing windshield washer fluids
- ▶ Do not mix MB SummerFit and MB WinterFit with other windshield washer fluids.

Do not use distilled or de-ionized water. Otherwise, the fill level sensor may be triggered erroneously.

RECOMMENDED WINDSHIELD WASHER FLUID:

- above freezing point: e.g. MB SummerFit
- below freezing point: e.g. MB WinterFit

For the correct mixing ratio, refer to the information on the antifreeze container.

Mix washer fluid with windshield washer fluid all year round.

WINDSHIELD WASHER SYSTEM

WASHER FLUID RESERVOIR CAPACITY

Model	Filling volume
All models	Maximum 3.9 US qt (3.7 l)

Refrigerant

NOTES ON REFRIGERANT

Observe the notes on operating fluids (→ page 802).

! NOTE


- Damage due to incorrect refrigerant
- If a non-approved refrigerant is used, the climate control system may be damaged.
- ▶ Use only R-1234yf refrigerant.


! NOTE

- Damage to the climate control system due to incorrect refrigerant compressor oil
- ▶ Only use refrigerant compressor oil that has been approved by Mercedes-Benz.
 - ▶ Do not mix the approved refrigerant compressor oil with a different refrigerant compressor oil.

Work on the climate control system may be carried out only at a qualified specialist workshop. All applicable regulations, as well as SAE standard J639, must be adhered to.

The information label on the climate control system for the refrigerant type and the refrigerant compressor oil (PAG oil) is located on the inside of the hood.



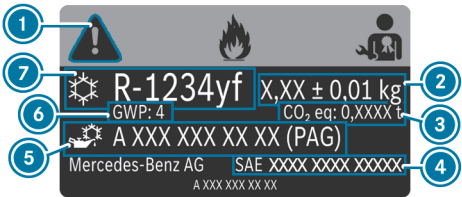

Information label

- 1 Hazard and service warning symbols
- 2 Refrigerant filling capacity
- 3 CO₂ equivalent of the refrigerant used
- 4 Applicable standards
- 5 PAG oil part number
- 6 GWP (global warming potential) of the refrigerant used
- 7 Refrigerant type

SYMBOLS 1 INDICATE THE FOLLOWING:

- Possible dangers
- Maintenance work to be carried out at a qualified specialist workshop

FILLING CAPACITY FOR REFRIGERANT AND PAG OIL

REFRIGERANT FILLING CAPACITY

Model	Refrigerant
All models	40.6 ± 0.4 oz (1,150 ± 10 g)

FILLING QUANTITY FOR PAG OIL

Model	PAG oil
All models	5.6 ± 0.4 oz (160 ± 10 g)

FILLING QUANTITY FOR REFRIGERANT AND PAG OIL (MERCEDES-AMG VEHICLES)

REFRIGERANT FILLING CAPACITY

Model	Refrigerant
USA: Mercedes-AMG EQE 4MATIC+	40.6 ± 0.4 oz (1,150 ± 10 g)
Canada: Mercedes-AMG EQE 53 4MATIC+	

FILLING QUANTITY FOR PAG OIL

Model	PAG oil
USA: Mercedes-AMG EQE 4MATIC+	5.6 ± 0.4 oz (160 ± 10 g)
Canada: Mercedes-AMG EQE 53 4MATIC+	





< Vehicle data

Vehicle dimensions

THE HEIGHTS SPECIFIED MAY VARY AS A RESULT OF THE FOLLOWING FACTORS:

- Tires
- Load
- Condition of the suspension
- Special equipment

VEHICLE DIMENSIONS

All models	
Vehicle length	196.7 in (4995 mm)
Vehicle width including outside mirrors	82.8 in (2103 mm)
Wheelbase	122.8 in (3120 mm)
Vehicle height	59.5 in (1511 mm)
Turning radius	41.0 ft (12.5 m)


Vehicle dimensions (Mercedes-AMG vehicles)

THE HEIGHTS SPECIFIED MAY VARY AS A RESULT OF THE FOLLOWING FACTORS:

- Tires
- Load
- Condition of the suspension
- Special equipment

VEHICLE DIMENSIONS

USA: Mercedes-AMG EQE 4MATIC+ Canada: Mercedes-AMG EQE 53 4MATIC+	
Vehicle length	195.4 in (4964 mm)
Vehicle width including outside mirrors	82.8 in (2103 mm)
Vehicle height	58.9 in (1495 mm)
Wheelbase	122.8 in (3120 mm)
Turning radius	38.6 ft (11.76 m)





Weights and loads

Bear in mind that items of special equipment will increase the curb weight and reduce the payload. Vehicle-specific weight information can be found on the vehicle identification plate.

Also observe the notes on loading the vehicle (→ page 230).

Weights and loads (Mercedes-AMG vehicles)

Bear in mind that items of special equipment will increase the curb weight and reduce the payload. Vehicle-specific weight information can be found on the vehicle identification plate.

Also observe the notes on loading the vehicle (→ page 230).

Maximum design speeds (Mercedes-AMG vehicles)

NOTE

Tires for vehicles with AMG DYNAMIC PLUS Package

The maximum permissible speed for vehicles with **AMG DYNAMIC PLUS Package** is designed only for specific tires.

- ▶ Drive at the maximum permissible speed only with summer tires.
- ▶ Please also observe the notes on the approved tire types. You could otherwise fail to recognize dangers.

Vehicles with AMG DYNAMIC PLUS Package: please see the notice in the section "Tires and wheels" in addition(→ page 720).

The maximum design speed can differ from the stated figures in practice. It depends on the operating conditions, the special equipment and the size of the tires.

Missing values were not available by the editorial deadline.

MAXIMUM DESIGN SPEED

Model

USA: Mercedes-AMG EQE 4MATIC+

Canada: Mercedes-AMG EQE 53 4MATIC+

Only with AMG DYNAMIC PLUS Package:

USA: Mercedes-AMG EQE 4MATIC+

Canada: Mercedes-AMG EQE 53 4MATIC+

High-voltage battery

Missing values were not available by the editorial deadline.

ENERGY CONTENT AND CHARGING TIMES (EQE 350+)

EQE 350+

Type	Lithium-ion
Usable energy content	96 kWh
Range	

**EQE 350+**

Charging time – mode 3
with 9.6 kW charging capacity

Approx. 11 h 30 min

Charging time – mode 4
with 170 kW charging power

Approx. 32 min

ENERGY CONTENT AND CHARGING TIMES (EQE 350 4MATIC)**EQE 350 4MATIC**

Type

Lithium-ion

Usable energy content

90.56 kWh

Range

Charging time – mode 3
with 9.6 kW charging capacity

Approx. 10 h 45 min

Charging time – mode 4
with 170 kW charging power

Approx. 32 min

ENERGY CONTENT AND CHARGING TIMES (EQE 500 4MATIC)**EQE 500 4MATIC**

Type

Lithium-ion

Usable energy content

90.56 kWh

Range

Charging time – mode 3
with 9.6 kW charging capacity

Approx. 10 h 45 min

Charging time – mode 4
with 170 kW charging power

Approx. 32 min

Mode 3 charging time applies to AC charging from 0% to 100% of the usable energy content.

Mode 4 charging time applies to DC charging from 10% to 80% of the usable energy content.

The time it takes to charge the battery depends on the state of health of the battery, the ambient temperature and the charging power of the battery. The charging capacity, in turn, depends on the supply voltage, the current and the type of power supply.

The rated voltage range for your vehicle can be found on the information label in the socket flap (→ page 329).

High-voltage battery (Mercedes-AMG vehicles)

Missing values were not available by the editorial deadline.

ENERGY CONTENT AND CHARGING TIMES**USA: Mercedes-AMG EQE 4MATIC+****Canada: Mercedes-AMG EQE 53 4MATIC+**

Type

Lithium-ion

Usable energy content

90.5 kWh

Range

Charging time – mode 3
with 7.4 kW charging capacity

Approx. 10 h 45 min

Charging time – mode 4
with 170 kW charging power

Approx. 32 min



Mode 3 charging time applies to AC charging from 0% to 100% of the usable energy content.

Mode 4 charging time applies to DC charging from 10% to 80% of the usable energy content.

The time it takes to charge the battery depends on the state of health of the battery, the ambient temperature and the charging power of the battery. The charging capacity, in turn, depends on the supply voltage, the current and the type of power supply.

The rated voltage range for your vehicle can be found on the information label in the socket flap (→ page 329).





◀ Display messages and warning/indicator lamps

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Display messages



Warning and indicator lamps





< Display messages

Introduction

INFORMATION ABOUT DISPLAY MESSAGES

Display messages appear on the driver display.

Display messages with graphical symbols are simplified in the Operator's Manual and may differ from the symbols on the driver display. The driver display shows high-priority display messages in red. Certain display messages will be accompanied by a warning tone.

Please act in accordance with the display messages and follow the additional notes in the Operator's Manual.

FOR SOME DISPLAY MESSAGES, SYMBOLS WILL ALSO BE SHOWN:

- ⓘ Further information
- ✕ Hide display message

You can select the respective symbol by swiping left or right on the left-hand Touch Control. Press ⓘ to display further information on the central display. Press ✕ to hide the display message.

You can hide display messages to be acknowledged by pressing the back button ↩ or with the left-hand Touch Control. The display messages will then be stored in the message memory.

Rectify the cause of a display message as quickly as possible.

High-priority display messages cannot be hidden. The driver display will show these display messages continuously until the cause of the display message has been rectified.

CALLING UP SAVED DISPLAY MESSAGES

Driver display:



The **Message Memory: XX** message appears on the driver display.

- ▶ Scroll through the display messages by swiping upwards or downwards on the left-hand Touch Control.
- ▶ **To exit the display:** press the ↩ back button.





Occupant safety

Display messages

Possible causes/consequences and ► Solutions



Restraint System Malfunction Service
Required

* The restraint system is malfunctioning (→ page 123).



DANGER

Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- After an accident, switch off the vehicle immediately.

RECOGNITION OF A RESTRAINT SYSTEM MALFUNCTION:

- The  restraint system warning lamp does not light up when the vehicle is switched on
- The  restraint system warning lamp lights up continuously or repeatedly during a journey
- Consult a qualified specialist workshop immediately.



Front Left Malfunction Service Required

* The restraint system is malfunctioning (→ page 123).





Display messages

Possible causes/consequences and ► Solutions

 DANGER

Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- After an accident, switch off the vehicle immediately.

RECOGNITION OF A RESTRAINT SYSTEM MALFUNCTION:

- The  restraint system warning lamp does not light up when the vehicle is switched on
- The  restraint system warning lamp lights up continuously or repeatedly during a journey
- Consult a qualified specialist workshop immediately.



Front Right Malfunction Service Required

* The restraint system is malfunctioning (→ page 123).





Display messages

Possible causes/consequences and ► Solutions

 DANGER

Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- After an accident, switch off the vehicle immediately.

RECOGNITION OF A RESTRAINT SYSTEM MALFUNCTION:

- The  restraint system warning lamp does not light up when the vehicle is switched on
- The  restraint system warning lamp lights up continuously or repeatedly during a journey
- Consult a qualified specialist workshop immediately.



Second Row of Seats, Left Malfunction
Service Required

* The restraint system is malfunctioning (→ page 123).





Display messages

Possible causes/consequences and ► Solutions

⚠ DANGER

Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- After an accident, switch off the vehicle immediately.

RECOGNITION OF A RESTRAINT SYSTEM MALFUNCTION:

- The  restraint system warning lamp does not light up when the vehicle is switched on
- The  restraint system warning lamp lights up continuously or repeatedly during a journey
- Consult a qualified specialist workshop immediately.



Second Row of Seats, Center Malfunction
Service Required

* The restraint system is malfunctioning (→ page 123).





Display messages

Possible causes/consequences and ► Solutions

⚠ DANGER

Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- After an accident, switch off the vehicle immediately.

RECOGNITION OF A RESTRAINT SYSTEM MALFUNCTION:

- The  restraint system warning lamp does not light up when the vehicle is switched on
- The  restraint system warning lamp lights up continuously or repeatedly during a journey
- Consult a qualified specialist workshop immediately.



* The restraint system is malfunctioning (→ page 123).

Second Row of Seats, Right Malfunction
Service Required





Display messages

Possible causes/consequences and ► Solutions

 DANGER

Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- After an accident, switch off the vehicle immediately.

RECOGNITION OF A RESTRAINT SYSTEM MALFUNCTION:

- The  restraint system warning lamp does not light up when the vehicle is switched on
- The  restraint system warning lamp lights up continuously or repeatedly during a journey
- Consult a qualified specialist workshop immediately.



Left Window Airbag Malfunction Service
Required

* The restraint system is malfunctioning (→ page 123).

 WARNING

Risk of injury or fatal injury due to a malfunction in the window curtain airbag

The window curtain airbag might be triggered unintentionally or might not be triggered at all in the event of an accident.

- Have the window curtain airbag checked and repaired immediately at a qualified specialist workshop.

- Consult a qualified specialist workshop immediately.



Display messages

Possible causes/consequences and ► Solutions



Right Window Airbag Malfunction Service
Required

* The restraint system is malfunctioning (→ page 123).

**WARNING**

Risk of injury or fatal injury due to a malfunction in the window curtain airbag

The window curtain airbag might be triggered unintentionally or might not be triggered at all in the event of an accident.

- Have the window curtain airbag checked and repaired immediately at a qualified specialist workshop.

- Consult a qualified specialist workshop immediately.

Front Passenger Airbag Disabled See
Operator's Manual

* The front passenger air bag and the front passenger knee air bag have been disabled even though an adult or a person of adult build is on the front passenger seat. If additional forces are applied to the seat, the weight the system detects may be too low.

**WARNING**

Risk of injury or fatal injury due to a disabled front passenger airbag

If the front passenger airbag is disabled, the front passenger airbag will not be deployed in the event of an accident and cannot perform its intended protective function.

A person in the front passenger seat could then, for example, come into contact with the vehicle's interior, especially if the person is sitting too close to the cockpit.

- Make sure, both before and during the journey, that the status of the front passenger airbag is correct.

- Stop the vehicle immediately in accordance with the traffic conditions.
- Make sure that no objects are trapped under the front passenger seat.
- Check the status of automatic front passenger air bag shutoff (→ page 125).
- If necessary, consult a qualified specialist workshop immediately.





Display messages

Possible causes/consequences and ► Solutions

Front Passenger Airbag Enabled See
Operator's Manual

*** THE FRONT PASSENGER AIR BAG AND THE FRONT PASSENGER KNEE AIR BAG WILL BE ENABLED WHILE THE VEHICLE IS IN MOTION IN THE FOLLOWING SITUATIONS:**

- Even when a child, a small adult or an object weighing less than the system weight threshold is located on the front passenger seat
- Even when the front passenger seat is not occupied

The system may detect objects or forces that are adding to the weight applied to the seat.

 WARNING

Risk of injury or death when using a child restraint system while the front passenger airbag is enabled

If you secure a child in a child restraint system on the front passenger seat and the front passenger airbag is enabled, the front passenger airbag can deploy in the event of an accident.

The child could be struck by the airbag.

- Ensure, both before and during the journey, that the status of the front passenger airbag is correct.

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

- Stop the vehicle immediately in accordance with the traffic conditions.
- Make sure that no objects are trapped under the front passenger seat.
- Check the status of automatic front passenger air bag shutoff (→ page 125).
- If necessary, consult a qualified specialist workshop immediately.

Occupant Presence Reminder Inoperative

*** The occupant presence reminder is malfunctioning**

- Consult a qualified specialist workshop.





Display messages

Possible causes/consequences and ► Solutions



Do Not Leave People or Animals in the Vehicle

* The occupant presence reminder suspects that there are persons or animals in the rear passenger compartment of the vehicle.

- Do not leave any persons or animals behind when leaving the vehicle.

SmartKey

Display messages

Possible causes/consequences and ► Solutions



Replace Key Battery

* The key battery is discharged.

- Replace the battery (→ page 166).



Key Not Detected (white display message)

* The key is currently undetected.

- Change the location of the key in the vehicle.
- Try to start the vehicle.
- If the key is still not detected, place it in the slot for starting with the key (→ page 304).
- Start the vehicle.



Key Not Detected (red display message)

* The key can no longer be detected during a journey and may no longer be in the vehicle.


IF THE KEY IS NO LONGER IN THE VEHICLE AND YOU SWITCH OFF THE VEHICLE:

- You will no longer be able to start the vehicle.
- You will not be able to lock the vehicle centrally.
- Ensure that the key is in the vehicle.





Display messages	Possible causes/consequences and ► Solutions
	If the key is in the vehicle and is still not detected: ► Stop the vehicle immediately in accordance with the traffic conditions. ► Place the key in the slot for starting the engine with the key (→ page 304). The key battery is at low capacity or is flat. ► Check the battery using the indicator lamp (→ page 163). ► Replace the key battery, if necessary (→ page 166).
 Initializing Key Please Wait	* The vehicle is processing in order to teach in the new key. ► Wait until processing is complete.
 Don't Forget Your Key	* A warning tone will also sound. This message reminds you to take your key with you when you leave the vehicle.
Place the Key in the Marked Space See Operator's Manual	* Key detection is malfunctioning. ► Change the location of the key in the vehicle. ► Place the key in the slot for starting the engine with the key (→ page 304).
Searching for Key in Stowage Tray or Digital Vehicle Key in Inductive Charging Bracket... See Operator's Manual	* The key has not been detected. ► Place the key in the marked space (→ page 304). If the key is still not detected: ► Consult a qualified specialist workshop. * The Digital Vehicle Key has not been detected.





Display messages

Possible causes/consequences and ► Solutions

- Place the Digital Vehicle Key in the marked space (→ page 304).

If the Digital Vehicle Key is still not detected:

- Consult a qualified specialist workshop.



Key Not Detected

* The key or the Digital Vehicle Key is currently undetected.

- Change the location of the key or the Digital Vehicle Key in the vehicle.
- Try to start the vehicle.
- If the key is still not detected, place the key in the marked space (→ page 304).
- If the Digital Vehicle Key is still not detected, place the Digital Vehicle Key in the marked space (→ page 304).
- Start the vehicle.



Key Not Detected Place Digital Vehicle
Key in Mobile Phone Cradle

* The key or the Digital Vehicle Key is no longer detected during a journey and may no longer be in the vehicle.

IF THE KEY OR THE DIGITAL VEHICLE KEY IS NO LONGER IN THE VEHICLE AND YOU SWITCH OFF THE VEHICLE:

- You will no longer be able to start the vehicle.
- You will not be able to lock the vehicle centrally.
- Ensure that the key or the Digital Vehicle Key is in the vehicle.

If the key or the Digital Vehicle Key is in the vehicle and is still not detected:

- Stop the vehicle immediately in accordance with the traffic conditions.
- Place the key in the marked space (→ page 304).
- Place the Digital Vehicle Key in the marked space (→ page 304).

The key battery is at low capacity or is flat.



Display messages	Possible causes/consequences and ► Solutions
	► Check the battery using the indicator lamp (→ page 163). ► Replace the key battery, if necessary (→ page 166). The state of charge of the rechargeable battery of the end device with the Digital Vehicle Key is too low. ► Immediately charge the rechargeable battery of the Digital Vehicle Key end device. Otherwise, it may not be possible to restart the vehicle after it has been switched off. If the key or the Digital Vehicle Key is still not detected: ► Consult a qualified specialist workshop.
 Replace SmartKey See Operator's Manual	* If the Digital Vehicle Key is not renewed, the vehicle cannot be unlocked/locked or started. ► The system will automatically renew the Digital Vehicle Key. When renewal is complete, the message will disappear and the Digital Vehicle Key will be available again.
 Take SmartKey With You	* A warning tone will also sound. This message reminds you to take your key with you when you leave the vehicle. This also applies to the Digital Vehicle Key.
 Digital Vehicle Key Charge Device	* The state of charge of the rechargeable battery of the end device with the Digital Vehicle Key is too low. ► Immediately charge the rechargeable battery of the Digital Vehicle Key end device.
 Initializing Key Please Wait	* The vehicle is processing in order to teach in the new Digital Vehicle Key. ► Wait until processing is complete.






Display messages	Possible causes/consequences and ► Solutions
 Key Does Not Belong to Vehicle	* The vehicle cannot be unlocked/locked or started. ► Use the Digital Vehicle Key belonging to the vehicle.
 Obtain a New Key	* Have the key replaced. ► Consult a qualified specialist workshop.

Lights

Display messages	Possible causes/consequences and ► Solutions
 Malfunction See Operator's Manual	* The exterior lighting is malfunctioning. ► Consult a qualified specialist workshop.
 Automatic Driving Lights Inoperative	* The light sensor for automatic driving lights is malfunctioning. ► Consult a qualified specialist workshop.
 Switch On Headlights	* You are driving without low-beam headlamps. ► Turn the light switch to the  or AUTO position.
 Switch Off Lights	* You are leaving the vehicle and the lights are still switched on. ► Turn the light switch to the AUTO position.





Display messages	Possible causes/consequences and ► Solutions
DIGITAL LIGHT Functions Limited	* The DIGITAL LIGHT system is malfunctioning. The lighting system will continue to work even without the functions of the DIGITAL LIGHT system. ► Consult a qualified specialist workshop.
Adaptive Highbeam Assist Plus Currently Unavailable See Operator's Manual	* Adaptive Highbeam Assist Plus is temporarily unavailable. The system limits have been reached (→ page 265). Once the cause of the problem is no longer present, the system will be available again. The Adaptive Highbeam Assist Plus Now Available display message will appear. ► Drive on. ► Operate the high beam manually until Adaptive High Beam Assist Plus is available again.
Adaptive Highbeam Assist Plus Inoperative	* Adaptive Highbeam Assist Plus is malfunctioning. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop. ► Until then, operate the high beam manually.
Adaptive Highbeam Assist Currently Unavailable See Operator's Manual	* Adaptive Highbeam Assist is temporarily unavailable. The system limits have been reached (→ page 263). Once the cause of the problem is no longer present, the system will be available again. The Adaptive Highbeam Assist Now Available display message will appear. ► Drive on ► Operate the high beam manually until Adaptive High Beam Assist is available again.
Adaptive Highbeam Assist Inoperative	* Adaptive Highbeam Assist is malfunctioning. ► Drive on





Display messages	Possible causes/consequences and ► Solutions
	or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop. ► Until then, operate the high beam manually.
 Parking Light Front Left	* The front left parking light is malfunctioning. ► Consult a qualified specialist workshop.
 Parking Light Front Right	* The front right parking light is malfunctioning. ► Consult a qualified specialist workshop.
 Check Left Low Beam	* The left low beam is malfunctioning. ► Consult a qualified specialist workshop.
 Check Right Low Beam	* The right low beam is malfunctioning. ► Consult a qualified specialist workshop.
 Check Left Cornering Light	* The left cornering light is malfunctioning. ► Consult a qualified specialist workshop.
 Check Right Cornering Light	* The right cornering light is malfunctioning. ► Consult a qualified specialist workshop.





Display messages

Possible causes/consequences and ► Solutions



Tail Light Left

- * The left tail light is malfunctioning.
- Consult a qualified specialist workshop.



Tail Light Right

- * The right tail light is malfunctioning.
- Consult a qualified specialist workshop.



Check Left High Beam

- * The left high beam is malfunctioning.
- Consult a qualified specialist workshop.



Check Right High Beam

- * The right high beam is malfunctioning.
- Consult a qualified specialist workshop.



Check Left Daytime Running Light

- * The left daytime running lights are malfunctioning.
- Consult a qualified specialist workshop.



Check Right Daytime Running Light

- * The right-hand daytime running lights are malfunctioning.
- Consult a qualified specialist workshop.



Turn Signal Indicator, Front Left

- * The front left turn signal lamp is malfunctioning.
- Consult a qualified specialist workshop.





Display messages

Possible causes/consequences and ► Solutions



Turn Signal Indicator, Rear Left

- * The rear left turn signal lamp is malfunctioning.
- Consult a qualified specialist workshop.



Turn Signal Indicator, Front Right

- * The front right turn signal lamp is malfunctioning.
- Consult a qualified specialist workshop.



Turn Signal Indicator, Rear Right

- * The rear right turn signal lamp is malfunctioning.
- Consult a qualified specialist workshop.



Turn Signal Indicator, Left Mirror

- * The turn signal lamp on the left mirror is malfunctioning.
- Consult a qualified specialist workshop.



Turn Signal Indicator, Right Mirror

- * The turn signal lamp on the right mirror is malfunctioning.
- Consult a qualified specialist workshop.



Brake Light Left

- * The left brake light is malfunctioning.
- Consult a qualified specialist workshop.



Brake Light Right

- * The right brake light is malfunctioning.
- Consult a qualified specialist workshop.





Display messages	Possible causes/consequences and ► Solutions
 Center Brake Light	* The third brake light is malfunctioning. ► Consult a qualified specialist workshop.
 Reversing Light	* The backup light is malfunctioning. ► Consult a qualified specialist workshop.
 Rear Fog Light	* The rear fog light is malfunctioning. ► Consult a qualified specialist workshop.
 License Plate Light	* The license plate lamp is malfunctioning. ► Consult a qualified specialist workshop.
Hazard Warning Light Malfunction	* The hazard warning lamp switch is malfunctioning. ► Consult a qualified specialist workshop.
Indicator Lamp in Driver's Display Inoperative Service Required	* An indicator lamp on the driver's display is defective. ► Consult a qualified specialist workshop.





Climate control

Display messages	Possible causes/consequences and ► Solutions
 Currently Not Available Charging of the High-voltage Battery Not Completed	* The high-voltage battery is charging. Pre-entry climate control cannot be switched on. ► Wait until the charging process has achieved a minimum state of charge.
 Currently Not Available Charge High-voltage Battery	* The charge of the high-voltage battery is too low. Pre-entry climate control cannot be switched on. ► Charge the high-voltage battery (→ page 329).
 Pre-entry Climate Control Available Again via SmartKey after Vehicle Start	* You have attempted to switch on pre-entry climate control more than three times with the vehicle switched off. ► Start the vehicle for ten seconds. Pre-entry climate control is operational again.
 Pre-entry Climate Control via SmartKey Currently Not Available. High-voltage Battery Low	* The charge of the high-voltage battery is too low. Pre-entry climate control cannot be switched on. ► Charge the high-voltage battery (→ page 329). When the high-voltage battery is sufficiently charged, pre-entry climate control will be operational again.





Drive system

Display messages

Possible causes/consequences and ► Solutions



Cooling System Malfunction Stop Immediately Switch Off Vehicle

* The coolant is too hot.

- Stop the vehicle immediately in accordance with the traffic conditions and switch off the drive system.



WARNING

Risk of injury due to overheated vehicle

IF YOU OPEN THE HOOD IN THE EVENT OF AN OVERHEATED VEHICLE OR FIRE IN THE ENGINE COMPARTMENT, THE FOLLOWING SITUATIONS MAY OCCUR:

- You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.
- In the event of overheating or fire in the engine compartment, keep the hood closed and call the fire service.
- Allow the overheated vehicle to cool down first if you need to open the hood.

- Wait until the drive system has cooled down.
- Make sure that the air supply to the vehicle radiator is not obstructed.
- Avoiding high loads on the drive system, drive to the nearest qualified specialist workshop.



Towing Not Permitted See Operator's Manual


* The drive system is malfunctioning.

- Have the vehicle transported using only a transporter or trailer (→ page 685).





Display messages	Possible causes/consequences and ► Solutions
 Acoustic Presence Indicator Inoperative To Switch Off Vehicle Press and Hold Start/Stop Button for at Least 3 Seconds or Press 3 Times	* The sound generator (acoustic vehicle warning system) is malfunctioning. No vehicle noises are being produced. The vehicle may not be heard by other road users. ► Drive with particular care. ► Consult a qualified specialist workshop.
Cannot Start Vehicle See Operator's Manual	* You have pressed the start/stop button while the vehicle is in motion. ► To switch off the drive system while the vehicle is in motion (→ page 303).
 Check Coolant Level See Operator's Manual	* It is not possible to start the vehicle. A malfunction has occurred in the drive system. ► Switch the vehicle off and lock it. ► After waiting for a short time, unlock the vehicle and start it again. ► If the display message appears again and the vehicle does not start, consult a qualified specialist workshop. NOTE Damage to the drive system due to insufficient coolant ► Avoid long journeys with insufficient coolant. ► Have the cooling system of the drive system checked at a qualified specialist workshop.
 Socket Flap Blocked Open Manually	* The cooling system has detected a component malfunction. ► Avoiding high loads on the drive system, drive to the nearest qualified specialist workshop.
	* The socket flap is not opening automatically. An obstruction may be hindering the opening process.





Display messages	Possible causes/consequences and ► Solutions
	► Make sure that no objects are in the opening area. ► Open the socket flap again.
Close Socket Flap Manually Automatic Reversing Function Active	* The socket flap is not closing automatically. An obstruction may be hindering the closing process. ► Make sure that no objects are in the closing area. ► Close the socket flap again.
Close Socket Flap Manually Automatic Not Functioning	* The socket flap is not closing automatically. The motor of the socket flap may be defective. ► Close the socket flap manually. ► Consult a qualified specialist workshop.
 Charging Cable Connected	* You cannot pull away while the charging cable is connected. ► Disconnect the charging cable from the vehicle.
Not Possible to Unlock Charging Cable See Operator's Manual	* The charging cable connector cannot be removed from the vehicle socket. ► If the charging cable is under strain, relieve the strain on the charging cable connector by carefully pulling on the charging cable. ► Press the charging interruption button (→ page 340). If the charging cable connector cannot be removed after that: ► Consult a qualified specialist workshop.
Vehicle Currently Not Charging... Charging Station Fault	* A malfunction has occurred in the charging station or the RFID card is not recognized. ► Start the charging process at a different charging station. or ► Use an alternative authentication method or payment method.





Display messages	Possible causes/consequences and ► Solutions
Charging Fault Change Charging Mode See Operator's Manual	* A temporary malfunction has occurred in the charging station. ► Wait until the malfunction has passed. - or ► Start the charging process at a different charging station. - or ► Use an alternative authentication method or payment method.
AC Charging Inoperative Service Required	* The charging process cannot be started due to a malfunction. ► Consult a qualified specialist workshop.
DC Charging Inoperative Service Required	* The charging process cannot be started due to a malfunction. ► Consult a qualified specialist workshop.
Authentication Failed Use Different Authentication Method or Charging Station	* Plug-and-Charge is not expected to be available at this charging station. ► Use an alternative authentication method or payment method. - or ► Start the charging process at a different charging station.
Reduced Drive Power See Operator's Manual	* The drive system is outside the normal operating temperature range, e.g. due to extremely low or high outside temperatures. Drive system power output is reduced. The yellow  reduced-power warning lamp is on. Once the operating temperature of the drive system returns to normal (e.g. after a short trip), the full output will be available again. The display message and the yellow  reduced-power warning lamp will go out. ► Drive on carefully. * The high-voltage battery is not charged sufficiently. Drive system power output is reduced. The yellow  reduced-power warning lamp is on.





Display messages	Possible causes/consequences and ► Solutions
	► Drive on carefully. ► Charge the high-voltage battery immediately. * If the drive system power output is still reduced, there is a malfunction in the drive system. ► Drive on carefully. ► Consult a qualified specialist workshop.
Charge high-voltage battery if the vehicle will be parked for an extended period at low outside temperatures.	* Due to a possible drop in temperature of the high-voltage battery, the starting ability or the range may drop significantly until the vehicle is restarted. ► Charge the high-voltage battery (→ page 329).
Wait in READY State Battery Is Warming Up See Operator's Manual	* Operational readiness is established  and the transmission position  is engaged. The high-voltage battery is warmed up to the operating temperature. This process can take a few minutes and may be prolonged if defrosting of the windshield  is activated. The heating process ends when transmission position  is engaged. However, when you are driving, the output will be significantly limited until the high-voltage battery has reached its operating temperature.
Preparing Drive System...	* The insulation of the drive system is being tested. This process can last for up to ten seconds.
 Battery Too Low Stop Vehicle Charge Immediately	* The charge level of the high-voltage battery is so low that it is no longer possible to drive the vehicle. The drive system can no longer be restarted. When the drive system is restarted, the message Battery Too Low Stop Vehicle Charge Immediately will appear again. ► Stop the vehicle immediately in accordance with the traffic conditions. ► Charge the high-voltage battery (→ page 329).





Display messages

Possible causes/consequences and ► Solutions



Battery Overheated Stop! Everyone Get Out! Outdoors if Possible

* The high-voltage battery has overheated. There is a risk of fire.

- Stop the vehicle immediately in accordance with the traffic conditions.
- If possible, stop the vehicle in the open air and ensure that all vehicle occupants get out.



Supporting vehicle functions may activate automatically, e.g. air-recirculation mode as part of climate control.

- Do not continue driving.
- If smoke is present, leave the danger zone and call the fire service immediately.
- Consult a qualified specialist workshop even if there are no external signs of a fire.



Malfunction

* The drive system is malfunctioning. A warning tone will also sound.

- Consult a qualified specialist workshop.



Malfunction Service Required

* The drive system is malfunctioning.

- Consult a qualified specialist workshop.



Have High-Voltage System Checked See Operator's Manual

* A function restriction has occurred in the drive system.

- Consult a qualified specialist workshop.

Do Not Restart Vehicle Service Required

* It is not possible to restart the drive system due to a malfunction.

- Do not switch off the drive system; drive on to the nearest qualified specialist workshop.





Display messages

Possible causes/consequences and ► Solutions



Drive Power and Range Reduced See Operator's Manual

- * A malfunction has occurred in the high-voltage battery.

Output and range will be severely restricted.

- Switch the vehicle off and lock it.
- After waiting for a short time, unlock the vehicle and start it again.

If the display message appears again:

- Drive on carefully.
- Fully charge the high-voltage battery (→ page 329).

If the output and range are still reduced, there is a malfunction in the drive system.

- Drive on carefully.
- Consult a qualified specialist workshop.

Cannot Start Vehicle See Operator's Manual

- * It is not possible to start the vehicle.

A malfunction has occurred in the drive system.

- Switch the vehicle off and lock it.
- After waiting for a short time, unlock the vehicle and start it again.
- If the display message appears again and the vehicle does not start, consult a qualified specialist workshop.

Drive Malfunction Achievable Speed Limited Stop Soon

- * The drive system is malfunctioning.

The maximum vehicle speed is restricted. The drive system will shut off within a few kilometers.

- Stop the vehicle immediately in accordance with the traffic conditions and switch off the drive system. Do not continue driving.
- Do not tow the vehicle; stop towing if necessary.





Display messages	Possible causes/consequences and ► Solutions
	► Consult a qualified specialist workshop.
Drive Malfunction Achievable Speed Severely Limited See Operator's Manual	* The drive system is malfunctioning. The maximum vehicle speed is restricted. ► Consult a qualified specialist workshop.
 Reserve Level Charge High-Voltage Battery	* The charge level of the high-voltage battery has dropped into the reserve range. ► Charge the high-voltage battery (→ page 329).
 Malfunction	* The drive system is malfunctioning. The output of your vehicle is restricted. ► Consult a qualified specialist workshop.
 Stop Switch Off Vehicle	* The drive system is malfunctioning. ► Stop the vehicle immediately in accordance with the traffic conditions and switch off the drive system. Do not continue driving. ► Do not tow the vehicle; stop towing if necessary. ► Consult a qualified specialist workshop.
 Malfunction Service Required	* The drive system is malfunctioning. ► Consult a qualified specialist workshop.
 Performance Extremely Limited	* A malfunction has occurred in the high-voltage battery. Output and range will be severely restricted. ► Switch the vehicle off and lock it.





Display messages

Possible causes/consequences and ► Solutions

- After waiting for a short time, unlock the vehicle and start it again.

If the display message appears again:

- Drive on carefully.
- Fully charge the high-voltage battery (→ page 329).

If the output and range are still reduced, there is a malfunction in the drive system.

- Drive on carefully.
- Consult a qualified specialist workshop.

High-Voltage Battery Fault No Start in
Approx. XXX mi Service Required (yellow
display message)

- * A malfunction has occurred in the high-voltage battery.
- It will no longer be possible to start the electric drive system after the distance displayed has been covered.
- Have the necessary maintenance work on the high-voltage battery carried out at a qualified specialist workshop.

High-Voltage Battery Fault No Start in
Approx. XXX mi Service Required (red display message)

- * A malfunction has occurred in the high-voltage battery.
- It will no longer be possible to start the electric drive system after the distance displayed has been covered.
- Have the necessary maintenance work on the high-voltage battery carried out immediately at a qualified specialist workshop.

High-Voltage Battery Fault Do Not
Restart Service Required

- * A malfunction has occurred in the high-voltage battery.
- It will no longer be possible to restart the drive system once it has been switched off.
- Do not switch off the drive system; drive on to the nearest qualified specialist workshop.





Vehicle

Display messages

Possible causes/consequences and ► Solutions



- * The driver display is inoperative due to a failed software update.

The display message will be shown every time the engine is started.



WARNING

Risk of accident if the driver's display fails

If the driver's display fails or malfunctions, you may not be aware of any functional limitations to safety-critical systems. This may affect the operating safety of the vehicle.

- Park the vehicle safely as soon as possible and notify a qualified specialist workshop.

If the operating safety of your vehicle is impaired, park the vehicle immediately and safely. Contact a qualified specialist workshop.
If the driver display fails, you may not recognize e.g. function restrictions affecting systems relevant to safety or the speed display. The operating safety of the vehicle may be impaired (→ page 526).

- Have the vehicle checked by a qualified specialist workshop immediately.

Vehicle Ready to Drive Shutdown Occurs When Locked or After a Few Minutes

- * You are leaving the vehicle in a ready-to-drive state.

- Get out of the vehicle, secure it against rolling away and take the key with you.
- If you do not leave the vehicle, switch off the electrical consumers, e.g. the seat heating. Otherwise, the 12 V battery may discharge and starting the engine may be possible only with the help of a second battery (jump start).



Add Washer Fluid

- * The washer fluid level in the washer fluid reservoir has dropped below the minimum.

- Add washer fluid (→ page 32).

Windshield Wiper Malfunction

- * The windshield wiper is malfunctioning.

- Restart the vehicle.





Display messages	Possible causes/consequences and ► Solutions
	If the display message still appears: ► Consult a qualified specialist workshop.
Head-up Display Currently Unavailable See Operator's Manual	* THE HEAD-UP DISPLAY IS TEMPORARILY UNAVAILABLE. POSSIBLE CAUSES: • Malfunctions in the power supply • Signal interference ► Stop in accordance with the traffic conditions and switch the vehicle off and on again. ► If the display message still appears, consult a qualified specialist workshop.
Head-up Display Inoperative	* The head-up display has an internal error. ► Consult a qualified specialist workshop.
Head-up Display Brightness Currently Reduced See Operator's Manual	* THE BRIGHTNESS OF THE HEAD-UP DISPLAY IS REDUCED. POSSIBLE CAUSES: • Dirt on the windshield in the camera's field of vision • Faulty exterior brightness signals ► Switch on the windshield wipers. ► Clean the windshield if necessary. ► Switch the vehicle off and then back on ► If the display message still appears, consult a qualified specialist workshop.
	* The steering is malfunctioning. Steering capability is significantly impaired.
Steering Malfunction Stop Immediately See Operator's Manual	





Display messages

Possible causes/consequences and ► Solutions



WARNING

Risk of accident if steering capability is impaired

If the steering does not function as intended, the vehicle's operating safety is jeopardized.

- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop.

- Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving.
- Consult a qualified specialist workshop.



Steering Malfunction Increased Physical Effort See Operator's Manual

* The power steering assistance is malfunctioning.



WARNING

Risk of an accident due to altered steering characteristics

If the power assistance of the steering fails partially or completely, you will need to use more force to steer.

- If safe steering is possible, drive on carefully.
- Visit or consult a qualified specialist workshop immediately.

- If safe steering is possible, drive on carefully.
- Visit or consult a qualified specialist workshop immediately.





Display messages	Possible causes/consequences and ► Solutions
 Steering Malfunction Drive Carefully Service Required	* A power steering malfunction has occurred. Steering characteristics may be impaired as a result. ► Drive on carefully. ► Consult a qualified specialist workshop.
 Rear Axle Steering Currently Malfunctioning	* The rear-axle steering is temporarily unavailable. The turning circle may become wider. ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. If the display message does not disappear: ► Drive on carefully. ► Consult a qualified specialist workshop.
 Rear Axle Steering Malfunction Service Required	* The rear-axle steering is malfunctioning. The rear axle has no steering capability. The steering wheel may be at an angle when you drive in a straight line. ► Adapt your speed and drive on carefully. ► Consult a qualified specialist workshop immediately.
 Rear Axle Steering Malfunction Stop Immediately	* The rear-axle steering is malfunctioning. The rear axle has no steering capability. The steering wheel may be at a significant angle when you drive in a straight line. Depending on the steering wheel's angled position, the steering wheel will also vibrate and a continuous warning tone will sound.





Display messages

Possible causes/consequences and ► Solutions

**WARNING**

Risk of accident if steering capability is impaired

If the steering does not function as intended, the vehicle's operating safety is jeopardized.

- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop.

- Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving.
- When stopping, bear the greater width of the vehicle in mind.
- Consult a qualified specialist workshop.

Snow Chain Mode Maximum Speed
Exceeded

- * The maximum permissible speed for snow chain mode has been exceeded.

- Drive more slowly.

Ambient Lighting Warning Support Inoper-
ative

- * The ambient lighting may not provide full visual warning support.

- Lock the vehicle and unlock it again after a few minutes.
- If the display message appears regularly, contact a qualified specialist workshop.



- * The hood is open.





Display messages

Possible causes/consequences and ► Solutions

**WARNING**

Risk of accident due to driving with the hood unlocked

The hood may open and block your view.

- Never release the hood when driving.
- Before every trip, ensure that the hood is locked.

- Stop the vehicle immediately in accordance with the traffic conditions.
- Do not continue driving.
- Consult a qualified specialist workshop.



- * At least one door is open.

- Close all doors.



- * The trunk lid is open.

- Close the trunk lid.



Rear Left Backrest Not Latched

- * The seat backrest of the corresponding seat is not engaged.

- Fold the seat backrest back until it engages.



Rear Right Backrest Not Latched

- * The seat backrest of the corresponding seat is not engaged.

- Fold the seat backrest back until it engages.





Display messages	Possible causes/consequences and ► Solutions
 Washer Fluid Flap Open	* The washer fluid filler flap is open. ► Close washer fluid filler flap (→ page 32).

Transmission

Display messages	Possible causes/consequences and ► Solutions
Shift to P Only When Vehicle Is Stationary	* It is possible to select the park position P only if the vehicle is stationary. ► Depress the brake pedal to stop. ► Shift the transmission to park position P when the vehicle is stationary.
Depress Brake to Shift from P	* You have attempted to shift the transmission out of park position P and into another transmission position. ► Depress the brake pedal. ► Select transmission position D, R or neutral N.
To Deselect P or N Depress Brake and Start Vehicle	* You have attempted to shift the transmission out of park position P or neutral N and into another transmission position. ► Depress the brake pedal. ► Start the vehicle. ► Change the transmission position.
Depress Brake to Shift to D or R	* You have attempted to select transmission position D or R. ► Depress the brake pedal. ► Select transmission position D or R.
Depress Brake to Shift to R	* You have attempted to select transmission position R.



Display messages	Possible causes/consequences and ► Solutions
	► Depress the brake pedal. ► Select transmission position R.
Service Required Apply Parking Brake to Park	* A malfunction has occurred in the emergency power supply to park position P. ► Consult a qualified specialist workshop. ► Until then, always select park position P manually before you switch off the vehicle. ► Before leaving the vehicle, apply the electric parking brake.
Risk of Vehicle Rolling Away Driver's Door Open Position P Not Selected	* The driver's door is not fully closed and transmission position D, R or neutral N is selected. The vehicle may roll away. ► Select park position P when switching off the vehicle.
Risk of Vehicle Rolling Away Apply Parking Brake When Parking	* The transmission is malfunctioning. Park position P cannot be selected. ► Park the vehicle safely. ► Use the electric parking brake to secure the vehicle against rolling away. ► On gradients, turn the front wheels so that the vehicle will roll towards the curb if it starts moving.
Risk of Vehicle Rolling Away N Activated Manually No Automatic Change to P	* While the vehicle was at a standstill or driving at very low speed, neutral N was engaged with the drive system or the vehicle switched on.





Display messages

Possible causes/consequences and ► Solutions

**NOTE**

Damage to the vehicle due to rolling away

When the vehicle is switched off or the driver's door is opened, automatic engagement of park position **P** is deactivated.

The vehicle may roll away.

- Be ready to brake.
- Do not leave the vehicle unattended.

- Depress the brake pedal until the vehicle comes to a standstill.
- Engage park position **P** when the vehicle is stationary with the brake pedal depressed.
- To continue driving with the brake pedal depressed, select transmission position **D** or **R**.

N Automatically Activated Please Shift to Transmission Position Again

- * Neutral **N** was automatically engaged when the vehicle was rolling or being driven.



When you open the driver's door in neutral **N**, park position **P** will be engaged automatically.

- Engage park position **P** when the vehicle is stationary with the brake pedal depressed.
- To continue driving with the brake pedal depressed, select transmission position **D** or **R**.

N is Engaged Shift to Desired Drive Range

- * The accelerator pedal was depressed while the vehicle was rolling or moving in neutral **N**.

- To accelerate the vehicle, select transmission position **D** or **R**.

To shift to N, hold selector lever longer in N position

- * Selector lever not held for long enough in position **N**.

It will be possible to change from park position **P** to neutral **N** only if the selector lever is held in **N** for an extended period of time.





Display messages	Possible causes/consequences and ► Solutions
	If the selector lever is not held for long enough, park position P will remain engaged. ► When changing from park position P to neutral N, hold the selector lever in position N for an extended period of time.
Reversing Not Possible Service Required	* The transmission is malfunctioning. It is not possible to select transmission position R. ► Consult a qualified specialist workshop.
Transmission Malfunction Stop	* The transmission is malfunctioning. The transmission shifts to neutral N automatically. ► Stop the vehicle immediately in accordance with the traffic conditions. ► Depress the brake pedal. ► Engage park position P. ► Consult a qualified specialist workshop.
Service Required Do Not Change Transmission Position	* The transmission is malfunctioning. It is no longer possible to change the transmission position. ► If transmission position D is selected, consult a qualified specialist workshop and do not change the transmission position. ► For all other transmission positions, park the vehicle safely. ► Consult a qualified specialist workshop or breakdown service.
Auxiliary Battery Malfunction (white display message)	* There is a malfunction in the auxiliary battery. ► Consult a qualified specialist workshop. ► Until then, always select park position P manually before you switch off the vehicle. ► Before leaving the vehicle, apply the electric parking brake.





Brakes

Display messages

Possible causes/consequences and ► Solutions



(USA only)



(Canada only)

[Parking Brake See Operator's Manual](#)

- * The yellow  indicator lamp is lit. The electric parking brake is malfunctioning.

To apply:

- Switch the vehicle off and then back on
- Apply the electric parking brake manually (→ page 358).

If it is not possible to apply the electric parking brake:

- Consult a qualified specialist workshop.
- Where necessary, also secure the parked vehicle against rolling away.

- * The yellow  indicator lamp and the red  (USA only) or  (Canada only) indicator lamp are lit. The electric parking brake is malfunctioning.

To release:

- Switch the vehicle off and then back on
- Release the electric parking brake manually (→ page 358).

or

- Release the electric parking brake automatically (→ page 357).

If it is still not possible to release the electric parking brake:

- Do not continue driving. Consult a qualified specialist workshop.

- * The yellow  indicator lamp is lit and the red  (USA only) or  (Canada only) indicator lamp is flashing. The electric parking brake is malfunctioning.

The electric parking brake could not be applied or released.

- Switch the vehicle off and then back on

To apply:



Display messages

Possible causes/consequences and ► Solutions

- Release and then apply the electric parking brake manually (→ page 358).

To release:

- Apply and then release the electric parking brake manually.

If the electric parking brake cannot be applied or the red  (USA only) or  (Canada only) indicator lamp continues to flash:

- Do not continue driving. Consult a qualified specialist workshop.
- Where necessary, also secure the parked vehicle against rolling away.

* The yellow  indicator lamp is lit and the red  indicator lamp (USA only) or  indicator lamp (Canada only) flashes for approximately ten seconds after the electric parking brake has been applied or released. It then remains lit or goes out. The electric parking brake is malfunctioning.

If the state of charge is too low:

- Charge the 12 V battery (→ page 59).

To apply:

- Apply the electric parking brake manually.

If it is not possible to apply the electric parking brake:

- Consult a qualified specialist workshop.
- Where necessary, also secure the parked vehicle against rolling away.

To release:

- If the conditions for automatic release are fulfilled and the electric parking brake is not released automatically, release the electric parking brake manually (→ page 358).

If it is still not possible to release the electric parking brake:



Display messages

Possible causes/consequences and ► Solutions

- Do not continue driving. Consult a qualified specialist workshop.



(USA only)



(Canada only)

Release Parking Brake

- * The red  indicator lamp (USA only) or  indicator lamp (Canada only) is flashing.

THE ELECTRIC PARKING BRAKE IS APPLIED WHILE YOU ARE DRIVING:

- A condition for automatic release of the electric parking brake has not been fulfilled (→ page 357).
- You are performing emergency braking using the electric parking brake (→ page 359).
- Check the conditions for automatic release of the electric parking brake.
- Release the electric parking brake manually.



(USA only)



(Canada only)

Switch on Vehicle to Release the Parking Brake

- * The red  (USA only) or  (Canada only) indicator lamp is lit.

You have attempted to release the electric parking brake with the vehicle switched off.

- Switch on the vehicle.



(USA only)



(Canada only)

Brake Immediately

- * A malfunction has occurred while the HOLD function was activated.

A horn may also sound at regular intervals.

You cannot start the vehicle system.

- Immediately depress the brake pedal firmly until the display message disappears.
You cannot start the vehicle system again.





Display messages

Possible causes/consequences and ► Solutions



(USA only)



(Canada only)

Malfunction See Operator's Manual

* The brake force boosting function is impaired.

The hill start assist may be impaired.



WARNING

Risk of an accident due to a brake system malfunction

If the brake system is malfunctioning, braking characteristics may be impaired.

- Drive on carefully.
- Have the brake system checked immediately at a qualified specialist workshop.

- Adjust your speed and drive on carefully, leaving a suitable distance to the vehicle in front.
- Consult a qualified specialist workshop.



(USA only)



(Canada only)

Malfunction Stop

* The brake force boosting function is impaired and the braking characteristics may be affected.



WARNING

Risk of accident and injury if brake force boosting is malfunctioning

If brake force boosting is malfunctioning, increased brake pedal force may be necessary for braking. The braking characteristics may be impaired. The braking distance can increase in emergency braking situations.

- Stop in a safe location immediately. Do not continue driving.
- Consult a qualified specialist workshop.

- Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving.
- Consult a qualified specialist workshop.





Display messages	Possible causes/consequences and ► Solutions
 (USA only)  (Canada only) Check Brake Fluid Level	* There is insufficient brake fluid in the brake fluid reservoir. ⚠ WARNING Risk of an accident due to low brake fluid level If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Do not add brake fluid. ► Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ► Do not add brake fluid. ► Consult a qualified specialist workshop.
Check Brake Pads See Operator's Manual	* The brakepads have reached the wear limit. ► Consult a qualified specialist workshop.

Driving and driving safety systems

Display messages	Possible causes/consequences and ► Solutions
  Currently Unavailable See Operator's Manual (ABS and ESP*)	* ABS and ESP* are temporarily unavailable. Other driving systems and driving safety systems (e.g. BAS) may also be temporarily unavailable. The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation.



Display messages

Possible causes/consequences and ► Solutions

**WARNING**

Risk of skidding if ABS and ESP* are malfunctioning

The wheels may lock during braking and ESP* does not perform any vehicle stabilization.

The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off.

- Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 19 mph (30 km/h).
- If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.

- Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 19 mph (30 km/h).
- If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.



Inoperative See Operator's Manual (ABS and ESP*)

* ABS and ESP* are malfunctioning.

Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning.

The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation.





Display messages

Possible causes/consequences and ► Solutions

**WARNING**

Risk of skidding if ABS and ESP® are malfunctioning

The wheels may block during braking and ESP® does not perform any vehicle stabilization.

The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off.

- Drive on carefully.
- Have ABS and ESP® checked immediately at a qualified specialist workshop.

- Drive on carefully.
- Consult a qualified specialist workshop immediately.



Currently Unavailable See Operator's Manual (ESP®)

* ESP® is temporarily unavailable.

Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning.


**WARNING**

Risk of skidding if ESP is malfunctioning®

If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off.

- Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 19 mph (30 km/h).
- If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.

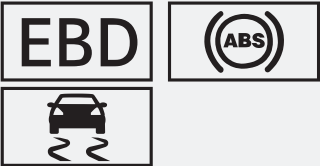

Display messages	Possible causes/consequences and Solutions
	▶ Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 19 mph (30 km/h). ▶ If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.
 Inoperative See Operator's Manual (ESP*)	* ESP* is malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation.  WARNING Risk of skidding if ESP* is malfunctioning If ESP* is malfunctioning, ESP* cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off. ▶ Drive on carefully. ▶ Have ESP* checked at a qualified specialist workshop.
 Inoperative See Operator's Manual (EBD, ABS and ESP*)	* EBD, ABS and ESP* are malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning.





Display messages

Possible causes/consequences and ► Solutions

**WARNING**

Risk of skidding if EBD, ABS and ESP® are malfunctioning

The wheels may block during braking and ESP® does not perform any vehicle stabilization.

The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off.

- Drive on carefully.
- Have the brake system checked immediately at a qualified specialist workshop.

- Drive on carefully.
- Consult a qualified specialist workshop immediately.

HOLD

Off

- * The HOLD function is deactivated because the vehicle is slipping or a condition for activation is not fulfilled.

- Reactivate the HOLD function later or check the activation conditions for the HOLD function (→ page 371).

Restricted Mode Activated Drive Power
Reduced

- * Valet Service Mode is activated. Vehicle acceleration is restricted (→ page 372).
- * Beginner Driver Mode is activated. Vehicle acceleration is restricted (→ page 373).



ATTENTION ASSIST: Take a Break!

- * ATTENTION ASSIST has detected fatigue or an increasing lack of concentration on the part of the driver (→ page 374).
- If necessary, take a break.



ATTENTION ASSIST Nodding Off Take a
Break!

- * ATTENTION ASSIST has detected indicators of microsleep (→ page 374).
- A warning tone will also sound.



Display messages	Possible causes/consequences and ► Solutions
	► Take a break immediately. ► Press the left-hand Touch Control and acknowledge the display message.
 --- mph	* Cruise control cannot be activated because not all activation conditions are fulfilled. ► Observe the activation conditions for cruise control (→ page 377).
Cruise Control Inoperative	* Cruise control is malfunctioning. ► Consult a qualified specialist workshop.
Cruise Control Off	* Cruise control has been deactivated. If there is an additional warning tone, cruise control has been deactivated automatically (→ page 376).
Traffic Sign Assist Currently Unavailable See Operator's Manual	* Traffic Sign Assist is temporarily unavailable. Once the cause of the problem is no longer present, the system will be available again. ► Continue driving in compliance with the traffic regulations.
Traffic Sign Assist Inoperative	* Traffic Sign Assist is malfunctioning. ► Continue driving in compliance with the traffic regulations. or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
 Malfunction Do Not Exceed 50 mph	* AIRMATIC is functioning only to a limited extent. The vehicle's handling characteristics may be affected.





Display messages

Possible causes/consequences and ► Solutions

**NOTE**

The tires on the front axle or the fenders could be damaged by large steering movements

- Avoid large steering movements while driving and listen for scraping sounds.
- If you hear scraping sounds, pull over and stop the vehicle in accordance with the traffic conditions, and set a higher vehicle level if possible.

- Drive in a manner appropriate for the current level, but do not exceed 50 mph (80 km/h).
- Consult a qualified specialist workshop.



Malfunction Do Not Exceed 50 mph

- * AMG RIDE CONTROL + is malfunctioning. The vehicle's handling characteristics may be affected.

- Do not drive at speeds greater than 50 mph (80 km/h).
- Consult a qualified specialist workshop.

AMG Ride Control Function Limited See Operator's Manual

- * At least one of the main functions of AMG RIDE CONTROL + is malfunctioning.

The system is outside the operating temperature range or the on-board electrical system voltage is too low.

Once the cause of the problem is no longer present, the system will be available again.

**NOTE**

The vehicle's suspension and damping behavior is restricted. The vehicle body may tilt heavily to the side during cornering.

- Drive on carefully.
- Reduce speed considerably before taking a bend.
- Avoid sudden steering movements.





Display messages	Possible causes/consequences and ► Solutions
	► Drive on carefully. ► Reduce speed considerably before taking a bend. ► Avoid sudden steering movements.
 STOP Vehicle Level Too Low	* You have pulled away despite the vehicle level being too low. ► Stop the vehicle in accordance with the traffic conditions. The vehicle will be raised to the selected vehicle level. ► Wait until the display message disappears before pulling away. If the display message does not disappear and a warning tone also sounds, AIRMATIC is malfunctioning: ► Do not drive at speeds greater than 50 mph (80 km/h) and consult a qualified specialist workshop immediately.  NOTE The tires on the front axle or the fenders could be damaged by large steering movements ► Avoid large steering movements while driving and listen for scraping sounds. ► If you hear scraping sounds, pull over and stop the vehicle in accordance with the traffic conditions, and set a higher vehicle level if possible.
 Lowering	* THE VEHICLE LEVEL WILL LOWER FOR THE FOLLOWING REASONS: • You have selected a different drive program. • You have exceeded the speed limit. • You have changed the vehicle level by pressing the button.





Display messages

Possible causes/consequences and ► Solutions



Rising

- * Your vehicle is adjusting to the level you have selected.



Do Not Exceed 12mph

- * AIRMATIC is functioning only to a limited extent.

The current level is too high. The vehicle's handling characteristics may be affected.

- Do not drive at speeds greater than 12 mph (20 km/h).
- Consult a qualified specialist workshop.



Slow Down

- * You are driving too fast for the selected vehicle level.

- Drive more slowly and then select the desired vehicle level again.



Compressor Is Cooling

- * Due to frequent level changes within a short space of time, the compressor first needs to cool down in order to set the selected vehicle level.

- Drive on in a manner appropriate for the current level. Make sure that there is sufficient ground clearance.
When the compressor has cooled down, the vehicle will continue rising to the selected vehicle level.

RACE START Not Possible See Operator's
Manual

* **POSSIBLE CAUSES:**

- The activation conditions have not been fulfilled (→ page 417).

RACE START Canceled

* **POSSIBLE CAUSES:**

- you released the accelerator pedal during RACE START.
- you depressed the brake pedal during RACE START.
- You can try RACE START again at the next start.





Driver assistance systems

Display messages	Possible causes/consequences and ► Solutions
 --- mph	* Active Distance Assist DISTRONIC cannot be activated because not all activation conditions are fulfilled. ► Comply with the activation conditions of Active Distance Assist DISTRONIC (→ page 382).
 Suspended	* If you depress the accelerator pedal beyond the setting of Active Distance Assist DISTRONIC, the system will switch to passive mode (→ page 379).
 Off	* Active Distance Assist DISTRONIC was deactivated. If a warning tone also sounds, Active Distance Assist DISTRONIC has deactivated automatically (→ page 382).
Active Distance Assist Currently Unavailable See Operator's Manual	* Active Distance Assist DISTRONIC is temporarily unavailable. The ambient conditions are outside the system limits (→ page 379). As soon as the ambient conditions are within the system limits, the system will become available again. ► Drive on carefully. or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Distance Assist Inoperative	* Active Distance Assist DISTRONIC is malfunctioning. Other driving systems and driving safety systems may also be malfunctioning. ► Drive on carefully. or





Display messages	Possible causes/consequences and ► Solutions
	► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Active Distance Assist Now Available	* Active Distance Assist DISTRONIC is operational again. ► Switch on Active Distance Assist DISTRONIC (→ page 382).
Active Brake Assist Functions Currently Limited See Operator's Manual	* FOR VEHICLES WITH THE DRIVING ASSISTANCE PACKAGE, THE FOLLOWING FUNCTIONS MAY BE TEMPORARILY UNAVAILABLE OR ONLY PARTIALLY AVAILABLE: • Active Brake Assist with cross-traffic function • Evasive Steering Assist • PRE-SAFE® PLUS Vehicles with Blind Spot Assist: PRE-SAFE® PLUS is temporarily unavailable. The ambient conditions are outside the system limits (→ page 397). Vehicles without the Driving Assistance Package: Active Brake Assist is temporarily unavailable. ► Drive on carefully. - As soon as the ambient conditions are within the system limits, the system will become available again. or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Brake Assist Functions Limited See Operator's Manual	* FOR VEHICLES WITH THE DRIVING ASSISTANCE PACKAGE, THE FOLLOWING FUNCTIONS MAY BE TEMPORARILY UNAVAILABLE OR ONLY PARTIALLY AVAILABLE: • Active Brake Assist with cross-traffic function • Evasive Steering Assist • PRE-SAFE® PLUS





Display messages

Possible causes/consequences and ► Solutions

Vehicles without the Driving Assistance Package: Active Brake Assist is temporarily unavailable or only partially available.

- Drive on carefully.

or

- Stop the vehicle in accordance with the traffic conditions and restart the vehicle.
- If the display message does not disappear: consult a qualified specialist workshop.

Active Steering Assist Currently Unavailable See Operator's Manual

* Active Steering Assist is temporarily unavailable.

The ambient conditions are outside the system limits (→ page 388).

As soon as the ambient conditions are within the system limits, the system will become available again.

- Drive on
- Check the tire pressure if necessary.

Active Steering Assist Inoperative

* Active Steering Assist is malfunctioning. Active Distance Assist DISTRONIC remains available.

- Drive on

or

- Stop the vehicle in accordance with the traffic conditions and restart the vehicle.
- If the display message does not disappear: consult a qualified specialist workshop.



* Active Steering Assist has reached the system limits (→ page 388).

You have not steered independently for a considerable period of time.

- Take over the steering and drive on in accordance with the traffic conditions.

Active Steering Assist Currently Unavailable Due to Multiple Emergency Stops

* Active Steering Assist is temporarily unavailable due to multiple emergency stops.

- Take over the steering and stop in accordance with the traffic conditions.
- Switch the vehicle off and then back on
Active Steering Assist is available once more.





Display messages	Possible causes/consequences and ► Solutions
 Initiating Emergency Stop Active Emergency Stop Assist Currently Unavailable See Operator's Manual	* Your hands are not on the steering wheel. Active Steering Assist will initiate an emergency stop (→ page 388). ► Put your hands on the steering wheel. Information on canceling an emergency stop (→ page 390).
Active Emergency Stop Assist Inoperative	* Active Emergency Stop Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 390). As soon as the ambient conditions are within the system limits, the system will become available again. ► Drive on or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle. * Vehicles without the Driving Assistance Package: Active Emergency Stop Assist is temporarily unavailable due to multiple emergency stops. ► Take over the steering and stop in accordance with the traffic conditions. ► Switch the vehicle off and then back on Active Emergency Stop Assist will be available once more.
Active Lane Change Assist Currently Unavailable See Operator's Manual	* Active Lane Change Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 392). As soon as the ambient conditions are within the system limits, the system will become available again.





Display messages	Possible causes/consequences and ► Solutions
	► Drive on or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Lane Change Assist Inoperative	* Active Lane Change Assist is malfunctioning. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Automatic Lane Change Currently Unavailable See Operator's Manual	* The automatic lane change is temporarily unavailable. The ambient conditions are outside the system limits (→ page 392). As soon as the ambient conditions are within the system limits, the system will become available again. ► Drive on or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Automatic Lane Change Inoperative	* The automatic lane change is malfunctioning. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Active Stop & Go Assist Currently Unavailable See Operator's Manual	* Active Stop-and-Go Assist is temporarily unavailable. Active Distance Assist DISTRONIC and Active Steering Assist are still available.





Display messages

Possible causes/consequences and ► Solutions

The ambient conditions are outside the system limits (→ page 379).

As soon as the ambient conditions are within the system limits, the system will become available again.

► Drive on

Active Stop & Go Assist Inoperative See Operator's Manual

* Active Stop-and-Go Assist is malfunctioning.

Active Stop-and-Go Assist has been deactivated. Active Distance Assist DISTRONIC and Active Steering Assist are still available.

► Drive on

or

► Stop the vehicle in accordance with the traffic conditions and restart the vehicle.

► If the display message does not disappear: consult a qualified specialist workshop.

Blind Spot Assist and Exiting Warning Currently Unavailable See Operator's Manual

* Blind Spot Assist is temporarily unavailable.

The system limits have been reached (→ page 406).

Once the cause of the problem is no longer present, the system will be available again.

► Drive on

or

► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.

Blind Spot Assist and Exit Warning Inoperative

* Blind Spot Assist or the exit warning is malfunctioning.

► Drive on

or

► Stop the vehicle in accordance with the traffic conditions and restart the vehicle.

► If the display message does not disappear: consult a qualified specialist workshop.





Display messages	Possible causes/consequences and ► Solutions
Active Blind Spot Assist and Exit Warning Currently Unavailable See Operator's Manual	* Active Blind Spot Assist is temporarily unavailable. The system limits have been reached (→ page 406). Once the cause of the problem is no longer present, the system will be available again. ► Drive on or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Blind Spot Assist and Exit Warning Inoperative	* Active Blind Spot Assist or the exit warning is malfunctioning. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Active Lane Keeping Assist Currently Unavailable See Operator's Manual	* Active Lane Keeping Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 410). As soon as the ambient conditions are within the system limits, the system will become available again. ► Drive on
Active Lane Keeping Assist Inoperative	* Active Lane Keeping Assist is malfunctioning. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.





Display messages

Possible causes/consequences and ► Solutions

Active Lane Keeping Assist Limited Range of Functions See Operator's Manual

* Active Lane Keeping Assist is available but restricted.

► Drive on

or

- Stop the vehicle in accordance with the traffic conditions and restart the vehicle.
- If the display message does not disappear: consult a qualified specialist workshop.



Initiating Emergency Stop

* Your hands are not on the steering wheel. The Active Lane Keeping Assist will initiate an emergency stop (→ page 410).

► Put your hands on the steering wheel.

Information on canceling an emergency stop (→ page 390).



Temporarily Unavailable Sensors Dirty

* **FRONT AND CORNER RADAR SENSORS (HEREAFTER "SENSORS") ARE MALFUNCTIONING. POSSIBLE CAUSES:**

- The sensors are dirty
- Heavy rain or snow
- Extended country driving without other traffic, e.g. in the desert

Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. The brake system, steering and drive system will continue to function normally.

► Drive on carefully.

Once the causes of the problem are no longer present, the driving systems and driving safety systems will be available again and the corresponding symbols will be switched off.

If the display message does not disappear:


- Stop the vehicle in accordance with the traffic conditions.
- Clean all sensor covers from the outside (→ page 362).
- Restart the vehicle.





Display messages

Possible causes/consequences and ► Solutions

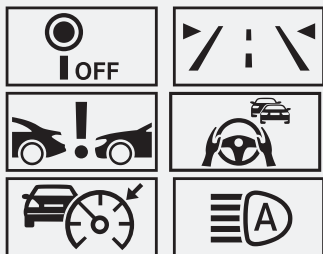

Camera View Reduced See Operator's Manual

* **THE VIEW OF THE MULTIFUNCTION CAMERA IS RESTRICTED. POSSIBLE CAUSES:**

- Dirt on the windshield in the field of vision of the multifunction camera
- Heavy rain, snow or fog
- Mist on the inside or outside of the windshield: in certain weather conditions, mist can form on the inside or outside of the windshield during cold times of year in particular.

 This mist on the windshield will be removed automatically within a short time with the aid of a heater. The restriction is temporary.

Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. The brake system, steering and drive system will continue to function normally.

- Drive on carefully.
- To remove mist from the outside, wipe once (→ page 271).
- To remove the mist from the inside, press  (→ page 288).

Once the causes of the problem are no longer present, the driving systems and driving safety systems will be available again and the corresponding symbols will be switched off.

If the display message does not disappear even after a driving time of about 15 minutes:

- Stop the vehicle in accordance with the traffic conditions.
- Clean the windshield, especially in the position of the multifunction camera (→ page 362).
- Restart the vehicle.

The camera view of the driver is currently obstructed Affected functions: See operator's manual

* **THE VIEW OF THE DRIVER CAMERA IS REDUCED. POSSIBLE CAUSES:**

- Objects or stickers are projecting into the driver camera's field of vision.
- The driver camera is dirty.





Display messages	Possible causes/consequences and ► Solutions
	► Keep the driver camera's field of vision free. ► Clean the driver camera if necessary. Please comply with the notes on caring for the interior relating to the display (→ page 668).
Change the steering wheel/ seat position until 6 dots are visible on the upper edge of the screen.	* The driver camera cannot capture your line of sight. ► Change the steering wheel and seat position until six dots are visible at the top edge of the screen. The display message will appear again if the driver camera is again unable to detect your line of sight after 30 minutes. The display message will no longer appear if you acknowledge the display message and the driver camera cannot detect your line of sight during the entire journey.
Driver Camera Inoperative See Operator's Manual	* The driver camera is malfunctioning. ► Consult a qualified specialist workshop.
PRE-SAFE Inoperative See Operator's Manual	* The PRE-SAFE® functions are malfunctioning. ► Consult a qualified specialist workshop.
PRE-SAFE Pulse Side Inoperative See Operator's Manual	* The PRE-SAFE® Impulse Side system is malfunctioning or inoperative after having already been triggered. ► Consult a qualified specialist workshop.
PRE-SAFE PLUS Inoperative See Operator's Manual	* The PRE-SAFE® PLUS system is malfunctioning. ► Drive on - or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.





Parking assistance systems

Display messages	Possible causes/consequences and ► Solutions
PARKTRONIC Inoperative See Operator's Manual	* Parking Assist PARKTRONIC is malfunctioning. Once the cause of the problem is no longer present, the system will be available again. ► Continue driving while paying attention to the vehicle's surroundings. or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message still appears, consult a qualified specialist workshop.
Active Parking Assist and PARKTRONIC Inoperative See Operator's Manual	* Active Parking Assist and Parking Assist PARKTRONIC are malfunctioning. Once the cause of the problem is no longer present, the system will be available again. ► Continue driving while paying attention to the vehicle's surroundings. or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message still appears, consult a qualified specialist workshop.
Active Parking Assist Limited Availability of Maneuvering Assistance See Operator's Manual	* Active Parking Assist's maneuvering assistant is temporarily unavailable or only partially available. ► Clean all sensors of the parking and camera system (→ page 667). ► If the display message still appears, consult a qualified specialist workshop.





Mercedes-Benz emergency call system

Display messages	Possible causes/consequences and ► Solutions
 Inoperative	* The Mercedes-Benz emergency call system is malfunctioning. The Mercedes me connect system is also malfunctioning. ► Consult a qualified specialist workshop.

Battery

Display messages	Possible causes/consequences and ► Solutions
 12 V On-board Electrical System Service Required	* The 12 V on-board electrical system is malfunctioning. ► Consult a qualified specialist workshop immediately.
 Stop Vehicle See Operator's Manual	* The 12 V battery is no longer being charged and the state of charge is too low.  NOTE Possible damage to the drive system if you continue driving ► Do not continue driving. ► Consult a qualified specialist workshop. ► Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ► Switch off the vehicle. ► Consult a qualified specialist workshop.





Display messages	Possible causes/consequences and ► Solutions
 Switch on vehicle to charge the 12 V battery	* The vehicle is off and the state of charge of the 12 V battery is too low. ► Switch off electrical consumers that are not required. ► Drive for 30–60 mins. - or ► Charge the vehicle at a charging station (→ page 329).
 Stop Vehicle To Charge the 12 V Battery Do Not Switch Off Vehicle	* The state of charge of the 12 V battery is too low. ► Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ► Leave the vehicle running ► If the display message disappears: drive on. ► If the display message does not disappear: consult a qualified specialist workshop.

Tire pressure monitor

Display messages	Possible causes/consequences and ► Solutions
Tire Pressure Monitor Currently Unavailable	* There is interference from a powerful radio signal source. As a result, no signals from the tire pressure sensor are being received. The tire pressure monitoring system is temporarily unavailable. The tire pressure monitoring system will restart automatically as soon as the cause has been rectified. ► Drive on
Tire Pressure Monitor Inoperative	* The tire pressure monitoring system is malfunctioning.





Display messages

Possible causes/consequences and ► Solutions

 WARNING

There is a risk of an accident if the tire pressure monitoring system is malfunctioning

The tire pressure monitoring system cannot issue a warning if there is pressure loss in one or more of the tires.

Tires with insufficient tire pressure may impair the driving characteristics as well as steering and braking.

- Have the tire pressure monitoring system checked at a qualified specialist workshop.

- Consult a qualified specialist workshop.

Tire Pressure Monitor Inoperative Tire Pressure Sensors Missing



Wheel Sensor(s) Missing

- * The wheels installed do not have suitable tire pressure sensor. The tire pressure monitoring system is deactivated.
 - Install wheels with suitable tire pressure sensors.
- * There is no signal from the tire pressure sensor in at least one wheel. No pressure value is displayed for the affected tire.
 - Have the faulty tire pressure sensor replaced at a qualified specialist workshop.



Check Tires

- * The tire pressure in one or more tires has dropped significantly.
- The wheel position is displayed. A warning tone will also sound.





Display messages

Possible causes/consequences and ► Solutions

**WARNING**

Risk of an accident due to insufficient tire pressure

- The tires can burst.
- The tires can wear excessively and/or unevenly.
- The driving characteristics as well as the steering and braking may be greatly impaired.

You could then lose control of the vehicle.

- Observe the recommended tire pressures.
- Adjust the tire pressure if necessary.

- Stop the vehicle in accordance with the traffic conditions.
- Check the tire pressure (→ page 702) and the tires.



Please Correct Tire Pressure

* The tire pressure is too low in at least one of the tires, or the difference in tire pressure between the individual wheels is too great.

- Check the tire pressure and add air, if necessary.
- When the tire pressure is correct, restart the tire pressure monitor (→ page 707).



Warning Tire Malfunction

* The pressure in one or more tires has dropped suddenly. The wheel position is displayed.





Display messages

Possible causes/consequences and ► Solutions

**WARNING**

Risk of an accident from driving with a flat tire

- The tires can overheat and be damaged.
- The driving characteristics as well as the steering and braking characteristics may be greatly impaired.

You could then lose control of the vehicle.

- Do not drive with a flat tire.
- Do not exceed the maximum permissible driving distance in emergency mode and the maximum permissible speed with a flat MOExtended tire.
- Observe the notes on flat tires.

Notes on flat tire (→ page 60).

- Stop the vehicle in accordance with the traffic conditions.
- Check the tires.



Tires Overheated

* At least one tire is overheating. The affected tires are displayed in red. At temperatures close to the limit value, the tires will be displayed in yellow.

**WARNING**

Risk of an accident from driving with overheated tires

Overheated tires can burst.

- Reduce speed so that the tires cool down.

- Reduce your speed so that the tires cool down.





Display messages

Possible causes/consequences and ► Solutions



Reduce Speed

* At least one tire is overheating. The affected tires are displayed in red. At temperatures close to the limit value, the tires will be displayed in yellow.

**WARNING**

Risk of an accident from driving with overheated tires

Overheated tires can burst.



Reduce speed so that the tires cool down.



Reduce your speed so that the tires cool down.





< Warning and indicator lamps

Overview of indicator and warning lamps


Some systems will perform a self-test when the vehicle is switched on. Some indicator and warning lamps may briefly light up or flash. This behavior is non-critical. These indicator and warning lamps indicate a malfunction only if they light up or flash after the vehicle has been started or during a journey.

The indicator and warning lamps are located in the highlighted display sections.

DRIVER DISPLAY



DRIVER DISPLAY WITH DRIVER CAMERA

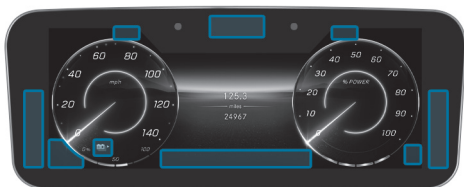

INDICATOR AND WARNING LAMPS

OCCUPANT SAFETY


-  Restraint system (→ page 883)
-  Seat belt (→ page 883)
-  Occupant presence reminder (white) (→ page 883)
-  Occupant presence reminder (yellow) (→ page 883)

DRIVE SYSTEM

-  Reduced power (→ page 884)
-  System error (→ page 884)
-  Electrical malfunction (→ page 884)

VEHICLE

-  Power steering (yellow) (→ page 885)
-  Power steering (red) (→ page 885)
-  Rear-axle steering (yellow) (→ page 885)




 Rear-axle steering (red) (→ page 885)

BRAKES

 Electric parking brake (yellow) (→ page 887)

 USA: electric parking brake (red) (→ page 887)

 Canada: electric parking brake (red) (→ page 887)

 USA: Recuperative Brake System (→ page 887)

 Canada: brakes (yellow)(→ page 887)

 USA: brakes (red) (→ page 887)

 Canada: brakes (red) (→ page 887)

DRIVING AND DRIVING SAFETY SYSTEMS

 ABS (→ page 889)

 ESP® (→ page 889)

 ESP® OFF (→ page 889)

 ESP® OFF (→ page 889)

 ESP® SPORT (→ page 889)

 ATTENTION ASSIST (→ page 889)

 Traffic Sign Assist (→ page 889)

 Distance warning (→ page 889)

 Active Brake Assist (→ page 889)

 Active Brake Assist (→ page 889)

 Active Brake Assist (→ page 889)

 AIRMATIC (→ page 889)

 AMG RIDE CONTROL + (→ page 889)

MERCEDES-BENZ EMERGENCY CALL SYSTEM

 Mercedes-Benz emergency call system (→ page 894)

TIRE PRESSURE MONITOR

 Tire pressure monitor (→ page 894)

EXTERIOR LIGHTING

 Parking lamps (→ page 256)

 Low beam (→ page 256)


 High beam (→ page 257)

 Turn signal lights (→ page 257)

 Rear fog light (→ page 256)

SYMBOLS ON THE CENTRAL DISPLAY

 Drive Away Assist (→ page 440)

 Rear cross traffic warning (→ page 441)




Close-range braking (→ page 442)

Occupant safety

Warning/indicator lamp

Possible causes/consequences and ► Solutions



Restraint system warning lamp

* The restraint system red warning lamp is lit while the vehicle is on.
The restraint system is malfunctioning (→ page 123).



DANGER

Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- After an accident, switch off the vehicle immediately.

- Drive on carefully.
- Note the messages on the driver display.
- Consult a qualified specialist workshop immediately.



Seat belt warning lamp flashes

* The red seat belt warning lamp flashes and an intermittent warning tone sounds.
The driver or front passenger has not fastened his/her seat belt while the vehicle is in motion.

- Fasten your seat belt (→ page 123).
There are objects on the front passenger seat.
- Remove the objects from the front passenger seat.





Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Seat belt warning lamp lights up	* The red seat belt warning lamp lights up for six seconds once the vehicle has started. In addition, an intermittent warning tone may sound. The red seat belt warning lamp reminds the driver and front passenger to fasten their seat belts. ► Fasten your seat belt (→ page 123). If you have placed objects on the front passenger seat, the red seat belt warning lamp may remain lit.
 Occupant presence reminder warning lamp (white)	* The white occupant presence reminder warning lamp is lit. The occupant presence reminder is deactivated. ► Switch on the occupant presence reminder, see (→ page 161).
 Occupant presence reminder warning lamp (yellow)	* The yellow occupant presence reminder warning lamp is lit. The occupant presence reminder is malfunctioning ► Note the messages on the driver display.

Drive system

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Reduced warning lamp power	* The yellow reduced-power warning lamp is on. Drive system power output is reduced. ► Note the messages on the driver display.
 System malfunction warning lamp	* The red system error warning lamp is lit while the vehicle is in a state of operational readiness READY. There is a malfunction in the drive system. ► Note the messages on the driver display.





Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Electrical malfunction warning lamp	* The red electrical malfunction warning lamp is on. There is a malfunction with the electrics. ► Note the messages on the driver display.

Vehicle

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Power steering warning lamp (yellow)	* The yellow power steering warning lamp is lit while the vehicle is running. The power assistance or the steering itself is malfunctioning. ► Note the messages on the driver display.
 Power steering warning lamp (red)	* The red power steering warning lamp is lit while the vehicle is running. The power assistance or the steering itself is malfunctioning.  WARNING Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardized. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Note the messages on the driver display.





Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Rear axle steering warning lamp (yellow)	* The yellow rear axle steering warning lamp is lit while the vehicle is running. The rear axle steering is malfunctioning. ► Note the messages on the driver's display.
 Rear axle steering warning lamp (red)	* The red rear axle steering warning lamp is lit while the vehicle is running. The rear axle steering is malfunctioning.  WARNING Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardized. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Note the messages on the driver's display.





Brakes

Warning/indicator lamp	Possible causes/consequences and Solutions
 Electric parking brake indicator lamp (red) (USA only)  Electric parking brake indicator lamp (red) (Canada only)  Electric parking brake indicator lamp (yellow)	* The red electric parking brake indicator lamp flashes or is lit. The yellow electric parking brake indicator lamp is also lit up in the event of a malfunction. ▶ Note the messages on the driver display.
 RBS warning lamp (USA only)  Brakes warning lamp (yellow) (Canada only)	* The yellow  warning lamp (USA only) or the yellow  brake warning lamp (Canada only) is lit while the vehicle is running.  WARNING Risk of an accident due to a brake system malfunction If the brake system is malfunctioning, braking characteristics may be impaired. ▶ Drive on carefully. ▶ Have the brake system checked immediately at a qualified specialist workshop. The Hill Start Assist may be malfunctioning. ▶ Adjust your speed and drive on carefully, leaving a suitable distance to the vehicle in front. ▶ If the driver's display shows a display message, observe it. ▶ Consult a qualified specialist workshop.





Warning/indicator lamp

Possible causes/consequences and ► Solutions



Brakes warning lamp (USA only)



Brakes warning lamp (Canada only)

* The red brakes warning lamp is lit while the vehicle is running.

POSSIBLE CAUSES:

- The brake force boosting is malfunctioning and the braking characteristics may be affected.
 - There is insufficient brake fluid in the brake fluid reservoir.
- Note the messages on the driver display.

**WARNING**

Risk of accident and injury if brake force boosting is malfunctioning

If brake force boosting is malfunctioning, increased brake pedal force may be necessary for braking. The braking characteristics may be impaired. The braking distance can increase in emergency braking situations.

- Stop in a safe location immediately. Do not continue driving.
- Consult a qualified specialist workshop.

**WARNING**

Risk of an accident due to low brake fluid level

If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired.

- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop.
- Do not add brake fluid.





Driving and driving safety systems

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Suspension warning lamp (yellow)	* The yellow AMG RIDE CONTROL + warning lamp is lit. There is a malfunction in the AMG RIDE CONTROL +. ► Note the messages on the driver display.
 ESP® warning lamp flashes	* The yellow ESP® warning lamp flashes while the vehicle is in motion. One or more wheels have reached their grip limit (→ page 366). ► Adapt your driving style to suit the road and weather conditions.
 ESP® warning lamp lights up	* The yellow ESP® warning lamp is lit while the vehicle is running. ESP® is malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. ► Note the messages on the driver display. ⚠ WARNING Risk of skidding if ESP® is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have ESP® checked at a qualified specialist workshop. ► Drive on carefully. ► Consult a qualified specialist workshop immediately.





Warning/indicator lamp

Possible causes/consequences and ► Solutions



ESP® OFF warning lamp

* The yellow ESP® OFF warning lamp is lit while the vehicle is running.
ESP® is deactivated.

Other driving systems and driving safety systems may also be inoperative.

**WARNING**

Risk of skidding when driving with ESP® deactivated

ESP® does not act to stabilize the vehicle. The availability of further driving safety systems is also limited.

- Drive on carefully.
- Deactivate ESP® only for as long as the situation requires.

If ESP® cannot be activated, ESP® is malfunctioning.

- Have ESP® checked immediately at a qualified specialist workshop.

- Observe the notes on deactivating ESP® (→ page 366).

**ESP OFF**

* The yellow ESP® OFF warning lamps are lit while the vehicle is running.
ESP® is deactivated.

Other driving systems and driving safety systems may also be inoperative.





Warning/indicator lamp

Possible causes/consequences and ► Solutions

**WARNING**

Risk of skidding when driving with ESP® deactivated

ESP® does not act to stabilize the vehicle. The availability of further driving safety systems is also limited.

- Drive on carefully.
- Deactivate ESP® only for as long as the situation requires.

If ESP® cannot be activated, ESP® is malfunctioning.

- Have ESP® checked immediately at a qualified specialist workshop.

- Observe the notes on deactivating ESP® (→ page 367).



ESP SPORT

* ESP® SPORT is activated while the vehicle is running.

When ESP® SPORT is activated, ESP® will stabilise the vehicle only to a limited extent.

**WARNING**

Risk of skidding if ESP® SPORT is used incorrectly

When you activate ESP® SPORT, there is an increased risk of skidding and having an accident.

- Activate ESP® SPORT only in the circumstances described below.

- Observe the notes on activating ESP® SPORT (→ page 367).



ATTENTION ASSIST warning lamp

* The ATTENTION ASSIST warning lamp is lit.
ATTENTION ASSIST is malfunctioning.

- Consult a qualified specialist workshop.



Warning/indicator lamp

Possible causes/consequences and ► Solutions



Traffic Sign Assist warning lamp

- * The Traffic Sign Assist warning lamp is lit. Traffic Sign Assist is malfunctioning.

► Note the messages on the driver display.



Distance warning lamp

- * The red distance warning lamp lights up while the vehicle is in motion. The distance to the vehicle in front is too small for the speed selected.

If there is an additional warning tone, you are approaching an obstacle at too high a speed.

- Be prepared to brake immediately.
- Increase the distance.

Function of Active Brake Assist (→ page 397).



Active Brake Assist warning lamp

- * The Active Brake Assist warning lamp is on. Due to dirty sensors or a malfunction, the system is not available or the range of functions is restricted.

► Note the messages on the driver display.



Active Brake Assist warning lamp

- * The Active Brake Assist warning lamp is on. The system is switched off or the range of functions has been automatically restricted.

This may be the case if the driver is not wearing a seat belt or another driving system has been activated.

► Observe the notes on Active Brake Assist (→ page 397).



Active Brake Assist warning lamp

- * The Active Brake Assist warning lamp is on. After you drive off, the system's range of functions will be restricted due to the teach-in process.

Depending on the ambient conditions, the teach-in process may take a few minutes.

► Observe the notes on Active Brake Assist (→ page 397).



Suspension warning lamp (yellow)

- * The yellow AIRMATIC warning lamp is lit. A malfunction has occurred in AIRMATIC.

► Note the messages on the driver display.



Warning/indicator lamp

Possible causes/consequences and ► Solutions



Suspension warning lamp (red)

- * The red AIRMATIC warning lamp is lit.
A malfunction has occurred in AIRMATIC.

**NOTE**

The vehicle's driving characteristics will have changed significantly.

- Consult a qualified specialist workshop.

- Note the messages on the driver display.
- Consult a qualified specialist workshop.



ABS warning lamp

- * The yellow ABS warning lamp is lit while the vehicle is running.
ABS is malfunctioning.

If an additional warning tone sounds, EBD is malfunctioning.

Other driving systems and driving safety systems may also be malfunctioning.

- Note the messages on the driver display.

**WARNING**

There is a risk of skidding if EBD or ABS is malfunctioning

The wheels may lock during braking.

The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off.

- Drive on carefully.
- Have the brake system checked immediately at a qualified specialist workshop.





Warning/indicator lamp	Possible causes/consequences and ► Solutions
	► Drive on carefully. ► Consult a qualified specialist workshop.

Mercedes-Benz emergency call system

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Mercedes-Benz emergency call system warning lamp	* The Mercedes-Benz emergency call system is malfunctioning. The Mercedes me connect system is also malfunctioning. ► Consult a qualified specialist workshop.

Tire pressure monitor

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Tire pressure monitoring system warning lamp flashes	* The yellow tire pressure monitor warning lamp (pressure loss/malfunction) flashes for approximately one minute and then remains lit. The tire pressure monitoring system is malfunctioning. ⚠ WARNING There is a risk of an accident if the tire pressure monitoring system is malfunctioning The tire pressure monitoring system cannot issue a warning if there is pressure loss in one or more of the tires. Tires with insufficient tire pressure may impair the driving characteristics as well as steering and braking. ► Have the tire pressure monitoring system checked at a qualified specialist workshop. ► Consult a qualified specialist workshop.





Warning/indicator lamp

Possible causes/consequences and ► Solutions



Tire pressure monitoring system warning lamp lights up

* The yellow tire pressure monitoring system warning lamp (pressure loss/malfunction) is lit.
The tire pressure monitoring system has detected a loss of pressure in at least one tire.

**WARNING**

Risk of an accident due to insufficient tire pressure

- The tires can burst.
- The tires can wear excessively and/or unevenly.
- The driving characteristics as well as the steering and braking may be greatly impaired.

You could then lose control of the vehicle.

- Observe the recommended tire pressures.
- Adjust the tire pressure if necessary.

- Stop the vehicle in accordance with the traffic conditions.
- Check the tire pressure and the tires.





< Index

Searching for something specific? Click on the relevant initial letter here and look it up.
Incidentally, you can also use your PDF reader's search function at any time.

0-9 >	G >	N >	U >
A >	H >	O >	V >
B >	I >	P >	W >
C >	J >	Q >	Z >
D >	K >	R >	
E >	L >	S >	
F >	M >	T >	



 0-9

(SmartKey) battery 

4MATIC 



< A

A/C function	Access data	Activation
Activating/deactivating (operating unit) >	Setting (Bluetooth®) >	Toll system >
switching on/off (MBUX) >	Accident prevention >	Active Blind Spot Assist
ABS >	Accident, emergency call >	Activating/deactivating >
Acceleration increase	Acoustic presence indicator >	Brake application >
Notes >	Acoustic vehicle alerting system >	Exit warning >
Accelerator pedal >	Activating/deactivating the acoustic locking verification signal >	Function >



Active Brake Assist

Function	>
Setting	>

Active Distance Assist DISTRONIC

Activating/deactivating	>
Active Emergency Stop Assist	>
Active Lane Change Assist	>
Active Speed Limit Assist	>
Calling up a speed	>

Function

Increasing/decreasing the speed	>
Route-based speed adaptation	>
Storing a speed	>

Active Emergency Stop Assist

Active headlamps

Active Lane Change Assist

Activating/deactivating	>
Function	>

Active Lane Keeping Assist

Activating/deactivating	>
Function	>
Setting the sensitivity	>

Active light function

Active Parking Assist

Automatic braking function	>
Cross traffic warning	>
Drive Away Assist	>



Exiting a parking space	>	Active Steering Assist		Adaptive Highbeam Assist Plus	
Function	>	Activating/deactivating	>	Activating/deactivating	>
Maneuvering brake function	>	Active Emergency Stop Assist	>	Adjusting bass, mid-range and treble settings	
Memory Parking Assist	>	Active Lane Change Assist	>	Advanced sound system	>
Parking	>	Function	>	Adjusting mid-range, treble and bass settings	
Pausing	>	Active Stop-and-Go Assist	>	Advanced sound system	>
Remote Parking Assist	>	Adaptive cruise control	>	Adjusting the balance/fader	
Active Service System PLUS	>	Adaptive Highbeam Assist		Advanced sound system	>
Active Speed Limit Assist	>	Activating/deactivating	>	Burmester® 3D-surround sound system	>



Adjusting the bass, mid-range and treble

Burmester® 3D-surround sound system >

Adjusting the mid-range, treble and bass

Burmester® 3D-surround sound system >

Adjusting the sound focus

Burmester® 3D-surround sound system >

Adjusting treble, mid-range and bass settings

Advanced sound system >

Burmester® 3D-surround sound system >

Advanced sound system

Adjusting the balance/fader >

Adjusting treble, mid-range and bass settings >

Calling up the sound menu >

Information >

Switching loudness normalization on/off >

After-sales service >

Air bag

Inflating >

Overview >

PASSENGER AIR BAG indicator lamp >

Warning lamp >

Air conditioning menu

Air distribution >

Calling up >

Fragrance system >

Front air conditioning >

Ionization >



Rear passenger compartment climate control Selecting climate modes	Air suspension Air vents Adjusting Air-conditioning menu Climate control Air/water duct Airflow Adjusting Setting	AIRMATIC Vehicle level Alarm system All-wheel drive Alternative route Ambient lighting AMG Active Sound, Vehicle sound Selecting sound characteristic (steering-wheel button)
Air distribution Adjusting Overview Setting Air freshener system Air inlet Air pressure		



AMG adaptive sport suspension system +

Setting the vehicle level >

AMG ceramic high-performance composite brake system >

AMG DYNAMIC PLUS package, Power increase >

AMG DYNAMIC SELECT

Setting drive programs >

AMG Performance

Information >

AMG RIDE CONTROL +

Function >

Selecting the suspension setting >

AMG steering wheel buttons

Setting >

AMG steering-wheel buttons

Function >

AMG TRACK PACE

Configuring >

Drag Race >

Function >

Telemetry display >

Track Race >

Android Auto

Connecting a mobile phone (wired) >

Connecting a mobile phone (wireless) >

Ending >

Information >



Sound settings >	Anti-theft protection	Transferred vehicle data >
Transferred vehicle data >	Immobilizer >	Apps, Mercedes me
Android smartphone >	Apple CarPlay® , Smartphone	Mercedes me calls >
Animals >	Connecting an iPhone® (cable) >	Mercedes-Benz Connect >
Anti-collision	Connecting an iPhone® (wireless) >	Remote Parking Assist >
Drive Away Assist >	Ending >	Selecting (MBUX multimedia system) >
Anti-lock braking system >	Notes >	Assistance system >
Anti-theft alarm system >	Overview >	Assistant display
	Sound settings >	Menu (driver display) >



ASSYST PLUS

Battery disconnection periods 

Displaying the service due date 

Maintenance work 

Service interval display 

Service requirements 

ATA

Deactivating the alarm 

Function 

Interior protection 

Interior protection function 

Tow-away alarm function 

Tow-away protection 

ATTENTION ASSIST

Function 

Setting 

Attention assistant 

Augmented reality

MBUX route guidance 

Authorization

Setting 

Authorized Mercedes-Benz Service Center 

Authorized workshop 

Automatic car wash 

Automatic car wash mode 

Automatic climate control 



Automatic distance control		Automatic measures after an accident	
Automatic driving lights		Automatic seat adjustment	
Automatic emergency call		Automatic transmission	
Automatic front passenger air bag shut-off		Autonomous braking	
Function		AVAS	
Information (child restraint system on the front passenger seat)			
PASSENGER AIR BAG indicator lamp			
Automatic lane change			
Active Lane Change Assist			



< B

Bad weather light	>	Replacing	>	Notes on wearing correctly	>
BAS	>	Starting assistance	>	Releasing	>
Basic information	>	Battery (high-voltage on-board electrical system)	>	To adjust the height	>
Battery		Beginner driver mode		Blind Spot Assist	
High-voltage battery	>	Activating/deactivating	>	Activating/deactivating	>
Battery (12 V battery)		Function	>	Function	>
Charging	>	Belt		Bluetooth®	
Notes	>	Fastening	>	Activating/deactivating	>



Connecting a mobile phone >	Brake force distribution >	EBD (Electronic Brakeforce Distribution) >
Information >	Brake pads >	Electric parking brake >
Setting up an Internet connection >	Brakes	Handbrake >
Brake Assist	ABS (Anti-lock Braking System) >	HOLD function >
Active Brake Assist >	Active Brake Assist >	Limited braking effect (salt-treated roads) >
Brake Assist System >	AMG ceramic high-performance composite brake system >	New/replaced brake pads/brake discs >
Brake Assist System >	BAS (Brake Assist System) >	Notes on breaking in a new vehicle >
Brake disks >	Brake care mode >	Parking brake >
Brake fluid >	Driving tips >	Post-collision brake >



Recuperation	>	Towing methods	>	Information	>
Braking assistance		Transporting the vehicle	>	Selecting the sound profile	>
Active Brake Assist	>	Breakdown (Roadside Assistance)	>		
Brake Assist System	>	Burmester® 3D-surround sound system			
Breakdown		Adjusting the balance/fader	>		
Changing a wheel	>	Adjusting the sound focus	>		
Flat tire	>	Adjusting treble, mid-range and bass settings	>		
Overview of aids	>	Automatic loudness normalization	>		
Tow-starting	>	Calls up the sound menu	>		



< C

Call list

Deleting	>
Making a call	>
Overview	>
Selecting options	>
Calling the Mercedes-Benz Customer Center	>
Calling up a web page	>

Calling up the sound menu

Advanced sound system	>
Calls, Telephone operation	
Accepting	>
Activating functions during a call	>
Calls with several participants	>
Declining	>
Ending a call	>

Incoming call during an existing call	>
Making	>
Mercedes-Benz Connect	>
Telephone	>
Using the international dialing code	>
Via the overhead control panel	>

Calls up the sound menu

Burmester® 3D-surround sound system	>
-------------------------------------	---



Camera

360° camera	>
Activating using GPS (reversing camera)	>
Button	>
Care	>
Cleaning	>
Driver camera	>
Function	>
Information	>

Managing activation points	>
Opening the camera cover (rear view camera)	>
Rear view camera	>
Select view	>

Car key >

Car wash

Automatic car wash	>
Automatic car wash mode	>
Power washer	>

Washing by hand	>
-----------------	---

Car-to-X-Communication

Display on map	>
Overview	>
Sending hazard warnings	>

Care

Air/water duct	>
Automatic car wash	>
Automatic car wash mode	>



Brake care mode	>	Plastic trim	>	Care of the headliner	>
Camera	>	Power washer	>	Care of the plastic trim	>
Decorative foil	>	Seat belt	>	Care of the steering wheel	>
Display	>	Steering wheel	>	Caring for rims	>
Exterior lighting	>	Vehicle interior	>	Center air bag (driver's seat backrest)	
Genuine wood/trim elements	>	Vehicle parts	>	Inflating	>
Head-up display	>	Vehicle socket for the high-voltage battery	>	Information	>
Headliner	>	Washing by hand	>	Central display	
Paint	>	Wheels/rims	>	Operating	>



Central locking system

Button



SmartKey



Change of address



Change of ownership



Changing a wheel

Preparation



Raising the vehicle



Charge level display



Charge level/charge display



Charging

12 V battery



At time of departure



Charge level display



Charging cable control panel



Charging station, mode 3



Configuring weekly profile



Ending the charging process (alternating current, mode 2/3)



Ending the charging process (direct current, mode 4)



Indicator lamps on vehicle socket



Mains socket, mode 2



Maximum charging current (mains socket)



Notes on charging the high-voltage battery



Notes on the high-voltage battery



Rapid charging station, mode 4



Recuperation



Starting the charging process (alternating current, mode 2/3)





	Starting the charging process (direct current, mode 4)	>		Charging process			Child seat	
	Stowing the charging cable	>		Paying	>		Adjusting the vehicle seat	>
	USB port	>		Charging settings	>		Basic instructions	>
	Wallbox, mode 3	>		Charging stations			Front passenger seat	>
Charging cable				Showing on the map	>		Installing ISOFIX	>
	Control panel	>		Checking the coolant level	>		Rearward-facing	>
	Stowing	>		Child safety lock			Risks/dangers	>
Charging near destination				Rear door	>		Securing on the rear seat with the seat belt	>
	Route	>		Side windows (rear passenger compartment)	>		Securing to the front passenger seat with the seat belt	>



The most important information in brief	Classic menu display content	Decorative foil
Top Tether	Selecting	Genuine wood/trim elements
Children	Clean varnish	Paint
Avoiding dangers in the vehicle	Cleaning	Power washer
Basic instructions	Air/water duct	Sensors
Special seat belt retractor	Automatic car wash	Vehicle interior
Chock	Automatic car wash mode	Vehicle parts
City lighting	Brake care mode	Vehicle socket for the high-voltage battery
	Camera	Washing by hand



Cleaning carpet	>	Air distribution settings	>	Defrosting windows	>
Cleaning the seat cover	>	Air vents (front)	>	Demisting the windshield	>
Climate control , Air conditioning system		Air vents (rear passenger compartment)	>	Filling capacity for refrigerant and PAG oil	>
Activating/deactivating	>	Airflow	>	Fine particle status display	>
Activating/deactivating (rear operating unit)	>	Automatic control	>	Fragrance system	>
Activating/deactivating the A/C function (control panel)	>	Automatically controlling (rear operating unit)	>	Immediate pre-entry climate control	>
Adjusting	>	Coolant and PAG oil filling capacity (Mercedes-AMG vehicle)	>	Inserting/removing the flacon (fragrance system)	>
Air conditioning menu	>	Defrosting a window	>	Ionization	>
Air distribution	>	Defrosting the windshield	>	Notes	>



Operating unit	>
Pre-entry climate control for departure time	>
Pre-entry climate control when the vehicle is unlocked	>
Rear passenger compartment operating unit	>
Rear window defroster	>
Rear window heating	>
Refrigerant	>
Resetting the climate control settings	>
Switching air-recirculation mode on/off	>

Switching the A/C function on/off (MBUX)	>
Synchronization function	>
Temperature	>
Ventilation with convenience opening	>
Windshield heater	>
Climate control settings	
Resetting	>
COC papers, CERTIFICATE OF CONFORMITY	>

Cockpit

Overview (central display)	>
Overview (MBUX Hyperscreen)	>

Collision detection (parked vehicle)

Information	>
Setting	>

Combination switch

Lights	>
Windshield wipers	>



Comfort	Composition of the tire	Information
Information	Connection status	Making a call
Communication module	Displaying	Name format
Disconnecting automatically from the Internet	Overview	Note about suggestions
Setting up an Internet connection	Contacts, Address book, Phone book	Options
Commuter route	Calling up	Selecting options for suggestions
Compass	Deleting	Storing
Components relevant to radio regulation	Importing	Content sharing menu
Declaration of conformity	Importing (overview)	Calling up



Controlling media playback Sharing MBUX display content	Filling capacity (Mercedes-AMG vehicles) Notes	Cover Cross traffic (warning) Crosswind Assist Cruise control Activating/deactivating Calling up a speed Function Requirements: Setting a speed
Control element (MBUX multimedia system) Setting acoustic feedback Control elements: Convenience closing Convenience opening Coolant Capacity	Cooling Copyright License Copyrights Trademarks Cornering light function Correct use	



Storing a speed



Cup holder

Rear passenger compartment



Customer Assistance Center (CAC)





< **D**

Damage

Limited protection

Damping system ADS PLUS

AIRMATIC

Dashcam

Configuring settings

Selecting a USB device

Starting/stopping an individual recording

Starting/stopping loop recording

Data processing in the vehicle

Data protection

Granting authorization

Data protection rights

Data storage

Data protection rights

Electronic control units

Event Data Recorder

MBUX multimedia system/Mercedes me connect

Online services

Daytime running lamps, Daytime running lamp mode

Activating/deactivating

Deactivating the alarm

Dealership



Declaration of conformity

Components relevant to radio regulation >

Decorative foil >

Definitions

Tires and loading >

Defrost function >

Deployed components

Limited protection >

Deployment situations >

Destination

Editing a suggestion >

Editing intermediate destinations >

Editing the previous destinations >

Saving as a favorite >

Destination entry

Accepting a destination suggestion >

Entering an intermediate destination >

Entering geo-coordinates >

Selecting a contact >

Selecting a received destination >

Selecting from favorites >

Selecting from the map >

Selecting previous destinations >

Destination entry (multimedia system)

Notes >

Selecting a POI >

Detecting inattentiveness >



Diagnostics connection	>	City lighting	>	Digital Vehicle Key	
Digital Extras	>	Cornering light function	>	Function	>
DIGITAL LIGHT		Dynamic low beam	>	Managing	>
Activating/deactivating	>	Extended range fog lamps	>	Problem	>
Active headlamps	>	Highway mode	>	Removing	>
Adaptive Highbeam Assist	>	Overview	>	Setting up	>
Adaptive Highbeam Assist Plus	>	Topographical compensation	>	Unlocking setting	>
Assistance functions	>	Digital Operator's Manual	>	Dinghy towing	
Bad weather light	>			Pulling/towing	>



Direct commands

Voice commands for MBUX voice assistant >

DIRECT SELECT lever

Engaging drive position >

Engaging neutral >

Engaging park position automatically >

Engaging reverse gear >

Function >

Selecting park position >

Disconnect device (high-voltage on-board electrical system) >

Display

Care >

Display (driver's display)

Overview of displays >

Overview of displays (Mercedes-AMG vehicles) >

Display (MBUX multimedia system)

Settings >

Display message

Calling up on driver display >

Notes >

Display messages

 - - - mph >

 - - - mph >

 12 V On-board Electrical System Service Required >

 Acoustic Presence Indicator Inoperative >

 Add Washer Fluid >



 ATTENTION ASSIST Nodding Off Take a Break! >

 ATTENTION ASSIST: Take a Break! >

 Automatic Driving Lights Inoperative >

 Battery Overheated Stop! Everyone Get Out! Outdoors if Possible >

 Battery Too Low Stop Vehicle Charge Immediately >

 Brake Immediately >

 Brake Light Left >

 Brake Light Right >

 Camera View Reduced See Operator's Manual >

 Center Brake Light >

 Charging Cable Connected >

 Check Brake Fluid Level >

 Check Coolant Level See Operator's Manual >

 Check Left Cornering Light >

 Check Left Daytime Running Light >

 Check Left High Beam >

 Check Left Low Beam >

 Check Right Cornering Light >

 Check Right Daytime Running Light >

 Check Right High Beam >

 Check Right Low Beam >

 Check Tires >

 Compressor Is Cooling >

 Cooling System Malfunction Stop Immediately Switch Off Vehicle >

 Currently Not Available Charge High-voltage Battery >

 Currently Not Available Charging of the High-voltage Battery Not Completed >

 Currently Unavailable See Operator's Manual (ABS and ESP®) >



 Currently Unavailable See Operator's Manual (ESP®) >

 Digital Vehicle Key Charge Device >

 Do Not Exceed 12mph >

 Do Not Leave People or Animals in the Vehicle >

 Don't Forget Your Key >

 Drive Power and Range Reduced See Operator's Manual >

 Front Left Malfunction Service Required >

 Front Right Malfunction Service Required >

 Have High-Voltage System Checked See Operator's Manual >

 Initializing Key Please Wait >

 Initializing Key Please Wait >

 Initiating Emergency Stop >

 Inoperative See Operator's Manual (ABS and ESP®) >

 Inoperative See Operator's Manual (EBD, ABS and ESP®) >

 Inoperative See Operator's Manual (ESP®) >

 Inoperative >

 Key Does Not Belong to Vehicle >

 Key Not Detected (red display message) >

 Key Not Detected (white display message) >

 Key Not Detected Place Digital Vehicle Key in Mobile Phone Cradle >

 Key Not Detected >

 Left Window Airbag Malfunction Service Required >

 License Plate Light >

 Lowering >

 Malfunction Do Not Exceed 50 mph >

 Malfunction See Operator's Manual >

 Malfunction See Operator's Manual >



Malfunction Service Required >	Parking Brake See Operator's Manual >	Rear Axle Steering Malfunction Stop Immediately >
Malfunction Service Required >	Parking Light Front Left >	Rear Fog Light >
Malfunction Stop >	Parking Light Front Right >	Rear Left Backrest Not Latched >
Malfunction >	Performance Extremely Limited >	Rear Right Backrest Not Latched >
Malfunction >	Please Correct Tire Pressure >	Reduce Speed >
>	Pre-entry Climate Control Available Again via SmartKey after Vehicle Start >	Release Parking Brake >
Obtain a New Key >	Pre-entry Climate Control via SmartKey Currently Not Available. High-voltage Battery Low >	Replace Key Battery >
Off >	Rear Axle Steering Currently Malfunctioning >	Replace SmartKey See Operator's Manual >
Off >	Rear Axle Steering Malfunction Service Required >	Reserve Level Charge High-voltage Battery >



Restraint System Malfunction
Service Required >

Reversing Light >

Right Window Airbag Malfunc-
tion Service Required >

Rising >

Second Row of Seats, Left
Malfunction Service Required >

Second Row of Seats, Right
Malfunction Service Required >

Slow Down >

Steering Malfunction Drive
Carefully Service Required >

Steering Malfunction
Increased Physical Effort See Opera-
tor's Manual >

Steering Malfunction Stop
Immediately See Operator's Manual >

Stop Switch Off Vehicle >

STOP Vehicle Level Too Low >

Stop Vehicle See Operator's
Manual >

Stop Vehicle To Charge the 12
V Battery Do Not Switch Off Vehicle >

Suspended >

Switch Off Lights >

Switch On Headlights >

Switch on vehicle to charge
the 12 V battery >

Switch on Vehicle to Release
the Parking Brake >

Tail Light Left >

Tail Light Right >

Take SmartKey With You >

Temporarily Unavailable Sen-
sors Dirty >

Tires Overheated >

Towing Not Permitted See
Operator's Manual >

Turn Signal Indicator, Front
Left >

Turn Signal Indicator, Front
Right >



Turn Signal Indicator, Left Mirror >	Active Blind Spot Assist and Exit Warning Inoperative >	Active Lane Change Assist Inoperative >
Turn Signal Indicator, Rear Left >	Active Brake Assist Functions Currently Limited See Operator's Manual >	Active Lane Keeping Assist Currently Unavailable See Operator's Manual >
Turn Signal Indicator, Rear Right >	Active Brake Assist Functions Limited See Operator's Manual >	Active Lane Keeping Assist Inoperative >
Turn Signal Indicator, Right Mirror >	Active Distance Assist Currently Unavailable See Operator's Manual >	Active Lane Keeping Assist Limited Range of Functions See Operator's Manual >
Warning Tire Malfunction >	Active Distance Assist Inoperative >	Active Parking Assist and PARKTRONIC Inoperative See Operator's Manual >
Washer Fluid Flap Open >	Active Distance Assist Now Available >	Active Parking Assist Limited Availability of Maneuvering Assistance See Operator's Manual >
Wheel Sensor(s) Missing >	Active Emergency Stop Assist Currently Unavailable See Operator's Manual >	Active Steering Assist Currently Unavailable Due to Multiple Emergency Stops >
AC Charging Inoperative Service Required >	Active Emergency Stop Assist Inoperative >	Active Steering Assist Currently Unavailable See Operator's Manual >
Active Blind Spot Assist and Exit Warning Currently Unavailable See Operator's Manual >	Active Lane Change Assist Currently Unavailable See Operator's Manual >	Active Steering Assist Inoperative >



Active Stop & Go Assist Currently Unavailable See Operator's Manual >	Automatic Lane Change Currently Unavailable See Operator's Manual >	Charging Fault Change Charging Mode See Operator's Manual >
Active Stop & Go Assist Inoperative See Operator's Manual >	Automatic Lane Change Inoperative >	Check Brake Pads See Operator's Manual >
Adaptive Highbeam Assist Currently Unavailable See Operator's Manual >	Auxiliary Battery Malfunction (white display message) >	Close Socket Flap Manually Automatic Not Functioning >
Adaptive Highbeam Assist Inoperative >	Blind Spot Assist and Exit Warning Inoperative >	Close Socket Flap Manually Automatic Reversing Function Active >
Adaptive Highbeam Assist Plus Currently Unavailable See Operator's Manual >	Blind Spot Assist and Exiting Warning Currently Unavailable See Operator's Manual >	Cruise Control Inoperative >
Adaptive Highbeam Assist Plus Inoperative >	Cannot Start Vehicle See Operator's Manual >	Cruise Control Off >
Ambient Lighting Warning Support Inoperative >	Change the steering wheel/ seat position until 6 dots are visible on the upper edge of the screen. >	DC Charging Inoperative Service Required >
AMG Ride Control Function Limited See Operator's Manual >	Charge high-voltage battery if the vehicle will be parked for an extended period at low outside temperatures. >	Depress Brake to Shift from P >
Authentication Failed Use Different Authentication Method or Charging Station >		Depress Brake to Shift to D or R >



Depress Brake to Shift to R >	Head-up Display Brightness Currently Reduced See Operator's Manual >	Not Possible to Unlock Charging Cable See Operator's Manual >
DIGITAL LIGHT Functions Limited >	Head-up Display Currently Unavailable See Operator's Manual >	Occupant Presence Reminder Inoperative >
Do Not Restart Vehicle Service Required >	Head-up Display Inoperative >	PARKTRONIC Inoperative See Operator's Manual >
Drive Malfunction Achievable Speed Limited Stop Soon >	High-Voltage Battery Fault No Start in Approx. XXX mi Service Required (red display message) >	Place the Key in the Marked Space See Operator's Manual >
Drive Malfunction Achievable Speed Severely Limited See Operator's Manual >	High-Voltage Battery Fault No Start in Approx. XXX mi Service Required (yellow display message) >	PRE-SAFE Inoperative See Operator's Manual >
Driver Camera Inoperative See Operator's Manual >	Hight-Voltage Battery Fault Do Not Restart Service Required >	PRE-SAFE PLUS Inoperative See Operator's Manual >
Front Passenger Airbag Disabled See Operator's Manual >	Indicator Lamp in Driver's Display Inoperative Service Required >	PRE-SAFE Pulse Side Inoperative See Operator's Manual >
Front Passenger Airbag Enabled See Operator's Manual >	N Automatically Activated Please Shift to Transmission Position Again >	Preparing Drive System... >
Hazard Warning Light Malfunction >	N is Engaged Shift to Desired Drive Range >	RACE START Canceled >



RACE START Not Possible See Operator's Manual >	Service Required Do Not Change Transmission Position >	To shift to N, hold selector lever longer in N position >
Reduced Drive Power See Operator's Manual >	Shift to P Only When Vehicle Is Stationary >	To Switch Off Vehicle Press and Hold Start/Stop Button for at Least 3 Seconds or Press 3 Times >
Restricted Mode Activated Drive Power Reduced >	Snow Chain Mode Maximum Speed Exceeded >	Traffic Sign Assist Currently Unavailable See Operator's Manual >
Reversing Not Possible Service Required >	Socket Flap Blocked Open Manually >	Traffic Sign Assist Inoperative >
Risk of Vehicle Rolling Away Apply Parking Brake When Parking >	The camera view of the driver is currently obstructed Affected functions: See operator's manual >	Transmission Malfunction Stop >
Risk of Vehicle Rolling Away Driver's Door Open Position P Not Selected >	Tire Pressure Monitor Currently Unavailable >	Vehicle Currently Not Charging... Charging Station Fault >
Risk of Vehicle Rolling Away N Activated Manually No Automatic Change to P >	Tire Pressure Monitor Inoperative >	Vehicle Ready to Drive Shutdown Occurs When Locked or After a Few Minutes >
Searching for Key in Stowage Tray or Digital Vehicle Key in Inductive Charging Bracket... See Operator's Manual >	Tire Pressure Monitor Inoperative Tire Pressure Sensors Missing >	Wait in READY State Battery Is Warming Up See Operator's Manual >
Service Required Apply Parking Brake to Park >	To Deselect P or N Depress Brake and Start Vehicle >	Windshield Wiper Malfunction >



Displaying road names/house numbers	Emergency key	Door operating unit
Distance control	Extending/retracting door handles	Function seat
Distance warning	Opening (from the inside)	DOT, Tire Identification Number (TIN)
DISTRONIC	Opening/closing the comfort doors	Drag Race
Dolby Atmos®	Power closing function	Drinking and driving
Calling up Dolby Atmos®	Setting convenience doors	Drive Away Assist
Information	Unlocking (inside)	Drive position
Door, Comfort doors	Door handles	Drive program display
Child safety lock (rear door)	Extending/retracting	



Drive programs

AMG DYNAMIC SELECT	
Function	
Selecting	

Drive system

Manual switch-off	
-------------------	---

Driver camera

Function	
Switching on/off	

Driver display

Identifying malfunctions	
Service due date	
Service menu	
Sport menu	
Track Pace menu	

Driver's display, Instrument cluster

Assistant display	
Classic menu	

Head-up display	
Menus	
Navigation menu	
Notes	
Operating	
Status displays	
Supersport menu	
Understated menu	
Warning/indicator lamps	



Driver's seat

Adjusting (Seat Comfort)	>
Adjusting electrically	>
Easy entry and exit feature	>
Seat heating	>

Driving safety system

ABS (Anti-lock Braking System)	>
Active Brake Assist	>
Active Lane Change Assist	>

Active Lane Keeping Assist	>
Active Steering Assist	>
ATTENTION ASSIST	>
BAS (Brake Assist System)	>
Blind Spot Assist / Active Blind Spot Assist	>
Cameras	>
Cruise control	>
EBD (Electronic Brakeforce Distribution)	>
ESP® (Electronic Stability Program)	>

Hill Start Assist	>
HOLD function	>
Overview	>
Radar and ultrasonic sensors	>
STEER CONTROL	>
Traffic Sign Assist	>
Your responsibility	>

Driving system

AMG RIDE CONTROL +	>
--------------------	---



Driving tips

Acoustic presence indicator (sound generator)	>
AMG ceramic high-performance composite brake system	>
AMG DYNAMIC PLUS package	>
Drinking and driving	>
Electric mode	>
General driving tips	>
Notes on breaking in a new vehicle	>
Rear axle steering	>

Recuperation



Drowsiness detection



Duplicate key



DYNAMIC BODY CONTROL

Suspension



Dynamic handling control system



Dynamic low beam

Overview



DYNAMIC SELECT

Calling up the fuel consumption indicator	>
Configuring drive program I	>
Displaying vehicle data	>
Drive program display	>
Drive programs	>
Function	>
Selecting the drive program	>



< E

E-mails	>	ECO Assist		Emergency braking	>
Easy entry feature		Function	>	Manually applying/releasing	>
Adjusting	>	ECO display	>	Releasing automatically	>
Function	>	Electric Intelligence		Electrical fuses	>
Easy exit feature		Route with charging stations	>	Electronic Stability Program	>
Adjusting	>	Electric mode, Notes	>	Emergency	
Function	>	Electric parking brake		Emergency guide	>
EBD, Electronic Brakeforce Distribution	>	Applying automatically	>	First-aid kit (soft sided)	>



Overview of aids	>	Emergency key		Emergency Tensioning Devices	
Reflective safety vest	>	Door	>	Inflating	>
Warning triangle	>	Emergency operation mode		ENERGIZING Coach	
Emergency braking		Start the vehicle	>	Calling up	>
Active Brake Assist	>	Emergency release		Function	>
Brake Assist System	>	Trunk lid (from inside)	>	ENERGIZING COMFORT	
Carrying out	>	Emergency shutoff (high-voltage on-board electrical system)	>	Overview of programs	>
Electric parking brake/handbrake	>	Emergency start (drive system)	>	Starting the program	>
		Emergency stop assistant	>		



Energy flow display

Function/notes

Engine

Emergency operation mode

Engine number

Parking (start/stop button)

Engine number

Engine start

Emergency operation mode

Entering characters

Function/notes

On the touchscreen

Environmentally friendly driving

ESC, Electronic Stability Control

ESP®

Activating/deactivating

Crosswind Assist

ESP® SPORT

Function

Setting (steering-wheel button)

Event Data Recorder

Exit warning

Blind Spot Assist / Active Blind Spot Assist

Exiting a parking space

Active Parking Assist

Drive Away Assist

PARKTRONIC



Exterior lighting

Care



Exterior mirrors

Parking position





< F

Factory settings

MBUX reset function >

Fatigue detection >

Favorites

Adding a destination >

Calling up >

Deleting >

Home address >

Moving >

Renaming >

Work address >

Favourites

Overview >

Film coverings

On camera/sensors >

Fine particle status display >

Fingerprint sensor

MBUX multimedia system >

First aid

First-aid kit (soft sided) >

First-aid kit (soft sided) >

Fitting

Snow chains >



Fitting accessories

Limited protection



Flacon



Flat tire

Changing a wheel



MOExtended



Notes



TIREFIT kit



Flat towing

Pulling/towing



Floor mats



Fog lamp



Fog light (extended range)



Foil covering

Radar and ultrasonic sensors



Fragrance



Fragrance system

Activating/deactivating



Adjusting



Inserting/removing the flacon



Perfume vial



Free software



Frequencies

Two-way radio





Front air bag

Inflating

Front headlamps

Front passenger air bag

Disabling/enabling

**Front passenger air bag shutoff,
PASSENGER AIR BAG OFF**

Information (child restraint system
on the front passenger seat)

Front passenger display

Information

Operating

Front passenger seat

Adjusting (Seat Comfort)

Adjusting electrically

Fuel consumption indicator

Function in the event of an accident

Function seat

Fuses

Cockpit

Fuse assignment diagram

Notes

Passenger footwell

Rear passenger compartment



< G

G-meter (driver display, Sport menu) >

Gallery app

Operating >

Garage door opener

Clearing the memory >

Opening/closing a door >

Problem >

Garage door openers

Programming buttons >

Synchronizing the rolling code >

General driving tips >

Genuine parts >

Global search

Function >

Overview >

Glove box

Opening/closing >

Grab handles >

Greeting tone

Switching the greeting tone on/off >



< H

Handbrake	>	Hazard warnings		Function	>	
Handling characteristics			Car-to-X-Communication	>	Memory function	>
Unusual	>	Head restraint		Operating	>	
HANDS-FREE ACCESS	>		Adjusting (rear passenger compartment)	>	Switching on/off	>
hands-free system	>		Adjusting manually (front)	>	Headlamp flashing	>
Haptic accelerator pedal , Pressure point	>		Removing/installing (rear passenger compartment)	>	Headlamp range control	>
Hazard warning lights	>	Head-up display		Headlamps	>	
			Care	>		



Heating

Activating/deactivating	>
Center console	>
Climate control	>
Rear window	>
Seat	>
Steering wheel	>
Windshield	>

Help call

Mercedes-Benz emergency call system	>
-------------------------------------	---

High beam



High-voltage battery

Charge level display	>
Charging at time of departure	>
Charging cable control panel	>
Charging duration	>
Charging station, mode 3	>

Configuring weekly profile



Disconnect device



Ending the charging process (alternating current, mode 2/3)



Ending the charging process (direct current, mode 4)



Energy flow display



General notes on charging



Mains socket, mode 2



Maximum charging current (mains socket)



Notes





Range	>	High-voltage on-board electrical system	Switching on/off	>
Range maximization	>	Charging cable control panel	Home screen	
Rapid charging station, mode 4	>	Disconnect device	Central display	>
Recuperation	>	Indicator lamps on vehicle socket	Hood	
Starting the charging process (alternating current, mode 2/3)	>	Manual switch-off	Opening/closing	>
Starting the charging process (direct current, mode 4)	>	Highway mode		>
Stowing the charging cable	>	Hill Start Assist		>
Type	>	HOLD function		
Wallbox, mode 3	>	Function		>



< I

Identification plate

Engine	>
Refrigerant	>
Vehicle	>

Immediate pre-entry climate control >

Immobilizer >

Incorrect behavior by vehicle occupants

Limited protection	>
--------------------	---

Indicator/warning lamps

Overview	>
PASSENGER AIR BAG	>

Individual drive program

Configuring	>
-------------	---

Inside rearview mirror >

Installing

Tires/wheels	>
--------------	---

Intelligent Light System

Activating/deactivating	>
-------------------------	---

Interior lighting

Adjusting	>
Ambient lighting	>
Switch-off delay time	>

Interior protection >



Intermediate destination

- Editing >
- Starting the automatic service station search >

Internet

- Calling up a web page >
- Calling up the web browser settings >
- Calling up web browser options >
- Deleting a bookmark >
- Deleting browser data >

- Managing bookmarks >
- Setting up a Wi-Fi hotspot >
- Smartphone integration >
- Web browser >
- Web browser in the background >

Internet connection

- Canceling permission (mobile phone) >
- Disconnecting automatically (communication module) >
- Displaying the connection status >

- Establishing >
- Information >
- Overview of connection status >
- Restrictions >
- Setting access data (Bluetooth®) >
- Setting up (communication module) >
- Setting up (Wi-Fi) >
- Setup (Bluetooth®) >

Ionization

>



iPhone®

Smartphone integration



ISOFIX child seat anchor

Installing





 J

Jack

Storage location



Jump-start connection





 K

Key	Knee bag
Problem	
Replacement key	
KEYLESS-GO	
Deactivating	
Locking/unlocking the vehicle	
Problem	
Unlocking setting	



< L

Lane Change Assist	>	Level control		Interior lighting	>
Lane Keeping Assist	>	AIRMATIC	>	Lights	
Lane recognition		AMG RIDE CONTROL +	>	Active headlamps	>
Active Lane Change Assist	>	License plate (front)	>	Adaptive Highbeam Assist	>
Active Lane Keeping Assist	>	License plate assembly (front)	>	Adaptive Highbeam Assist Plus	>
Language		Light switch	>	Assistance functions	>
Notes	>	Lighting		Automatic driving lights	>
Setting	>	Dynamic low beam	>	Bad weather light	>



City lighting	>	Interior lighting	>	Turn signals	>
Combination switch	>	Locator lighting	>	Limited Warranty	>
Cornering light function	>	Reading lamp	>	Live Traffic Information	
DIGITAL LIGHT	>	Rear fog light	>	Displaying the traffic map	>
Dynamic low beam	>	Responsibility for lighting systems	>	Displaying traffic incidents	>
Fog light (extended range)	>	Switch-off delay time	>	Information from the service provider	>
Hazard warning lights	>	Switching on the daytime running lamps	>	Load index	
High beam	>	Switching the Intelligent Light System on/off	>	Tires	>
Highway mode	>	Topographical compensation	>		



Load-bearing capacity	Loading information table	Loud sound
Tires	Loads	PRE-SAFE® Sound
Loading	Locator lighting	Low-beam headlamps
Definitions	Locking/unlocking	Activating/deactivating
Notes	Automatic locking (MMS)	Lubricants
Roof luggage rack	Doors (from the inside)	Luggage
Stowage space under the trunk floor	Emergency key	Luggage rack
Tie-down eyes	KEYLESS-GO	Lumbar support
Loading guidelines	NFC function	



< M

Maintaining safe distance

Active Distance Assist DISTRONIC >

Maintenance

Vehicle >

Maintenance Management

Notes >

Transferred data >

Maintenance work, Information on regular performance >

Malfunction

Driver display >

Restraint system >

Malfunction message

Driver's display >

Maneuvering

Drive Away Assist >

Maneuvering brake function >

Maneuvering assistant

Activating/deactivating >

Cross traffic warning >

Drive Away Assist >

Maneuvering brake function >

Maneuvering brake function >

Maneuvering support >



Map, Traffic map

Avoiding an area	>
Avoiding an area (overview)	>
Changing an area	>
Charging stations	>
Deleting an area	>
Displaying online map contents	>
Displaying the compass	>
Displaying the map version	>

Displaying the range	>
Displaying the satellite map	>
Displaying the traffic map	>
Displaying weather information	>
Map data	>
Moving	>
Route overview after start	>
Selecting additional information	>
Selecting POI symbols	>

Setting the map scale	>
Setting the map scale automatically	>
Updating	>

Map functions >

Message programs >

Maximum full-stop braking >

Maximum permissible load

Calculation example	>
Determining	>



Maximum speeds		>	MBUX Interior Assistant		Display settings	>	
Maximum tire load		>		Camera & parking	>	Drive programs	>
Maximum tire pressure		>		Driver camera	>	ENERGIZING COMFORT program (overview)	>
MB Apps			MBUX multimedia system		ENERGIZING seat kinetics	>	
	Calling up a user account	>		Adjusting the volume	>	Factory setting	>
	Calling up Digital Extras	>		Air conditioning menu	>	Fingerprint sensor	>
	Unlinking the user account	>		Authorization	>	Global search	>
MBUX				Calling up the zero layer	>	Home screen	>
	Dashcam	>		Configuring display settings	>	Language settings	>



MB Apps >	Steering wheel heater / seat heating >	Online voice commands >
Memory Park Assist >	Switching the sound on/off >	Online voice control >
Operating the zero layer >	Touchscreen >	Operable functions >
Overview >	Zero layer >	Operating safety >
Overview (Mercedes-AMG vehicles) >	MBUX Voice Assistant	Setting >
Set collision detection >	E-mails >	Speech quality >
Setting route-based speed adaptation >	Function >	Voice commands >
Snow chain mode >	Language setting >	Voice prompting >
Starting the ENERGIZING COMFORT program >	Media voice commands >	



Mechanical key

Inserting/removing 

Media

General information 

Media mode

Adding a favorite song 

Connecting Bluetooth® audio equipment 

Connecting USB devices 

Controlling media playback 

Copyright and trademarks 

Information 

Notes about the search function in categories 

Overview of the media menu 

Playing back similar music tracks 

Removing a favorite song 

Starting a search in categories 

Starting and operating playback 

Starting media playback 

Supported formats and data storage media 

Surprise mix 

Using the keyword search 

Medical aids 

Memory function

Head-up display 

Outside mirrors 

Seat 

Steering wheel 



Memory Parking Assist

Exiting a parking space 

Function 

Parking 

Recording 

Setting 

Menus (driver display)

Service 

Sport 

Track Pace 

Menus (driver's display), Steering-wheel buttons

Assistant display 

Classic menu 

Navigation 

Notes 

Operating 

Supersport 

Understated menu 

Mercedes me and Apps

Mercedes me calls

Information 

Mercedes-Benz app

Activating Digital Extras 

Mercedes-Benz Charge, Paying

Charging stations display 

Mercedes-Benz Connect

Accident/breakdown management 



Information	>	Mercedes-Benz emergency call system, Call for help, Emergency call	Messages, Short messages
Transferred data	>	Automatic emergency call	Calling a message sender
Mercedes-Benz Connect calls		Availability	Deleting
Arranging a service appointment	>	Data transfer	Dictating
Calling the Mercedes-Benz Customer Center after automatic accident/breakdown detection	>	Manual emergency call	Forwarding
Calls via the overhead control panel	>	Overview	MBUX voice commands
Mercedes-Benz Customer Center	>	Self-diagnosis	Overview
Transferred data	>	Mercedes-Benz GenuineParts	Read-aloud function
		Message memory	Reading



Replying >	Mobile phone	MOExtended tires, Run-flat tires >
Sending >	Authorizing, Remote Parking Assist >	Multimedia system >
Setting the displayed text messages >	Canceling permission for Internet connection >	Music online
Using a phone number or URL >	Smartphone integration >	Adding providers >
Mirror heater >	Telephone >	Calling up >
Mirrors	Wireless charging (front) >	Calling up the settings >
Outside mirrors >	Model type >	Requirements: >
Rearview mirror >	Modification	Search function >
	Limited protection >	



< N

Navigation

- Activating >
- Destination entry >
- Electric Intelligence >
- Information >
- MBUX voice commands >
- Menu (driver display) >
- Overview >

Route with charging stations >

Updating the map data >

Navigation announcements

- Activating/deactivating >
- Repeating >
- Switching audio fadeout on/off >
- To adjust the volume >

Near-Field Communication (NFC)

Unlocking/locking the vehicle (Digital Vehicle Key) >

Neutral >

Nodding off >

Notes on breaking in a new vehicle >

Notifications Center

- Calling up a notification >
- Editing a notification >



Message types	
Overview	
Selecting actions	



< O

Objects in the vehicle interior

Limited protection >

Occupant presence reminder

Activating/deactivating >

Function >

Occupant safety

Air bag >

Basic information >

Child seat >

Information on the child restraint system >

Information on the correct seat position >

Occupant presence reminder >

Pets in the vehicle >

PRE-SAFE® >

On-board diagnostics interface >

On-board electronics

Two-way radios >

Online services >

Open Source Software >

Opening the trunk lid using your foot

HANDS-FREE ACCESS >

Opening/closing a door >

Opening/closing a garage door >



Operating fluids

Brake fluid	
coolant	
Notes	
Refrigerant (air conditioning system)	
Windshield washer fluid	

Operating safety

Operating the

(NFC function)	
----------------	---

Operator's Manual digital

Outside mirrors

Automatic anti-glare mode	
Blind Spot Assist / Active Blind Spot Assist	
Folding in/out	
Memory function	
Setting	
Warning lamp	

Overhead control panel



< P

Paint code	>	Parking Assist		Function	>
Panic alarm , Alarm		Active Parking Assist	>	Parking assistance systems	
Activating/deactivating	>	Memory Parking Assist	>	Active Parking Assist	>
Park position	>	PARKTRONIC	>	Drive Away Assist	>
Parking		Remote Parking Assist	>	Maneuvering brake function	>
Active Parking Assist	>	Parking Assist PARKTRONIC		Memory Parking Assist	>
PARKTRONIC	>	Activating/deactivating	>	PARKTRONIC	>
		Adjusting warning tones	>	Remote Parking Assist	>



Parking brake	>	Storing the position of the front-passenger outside mirror using reverse gear	>	Payload	
Parking lamps	>	Parking service		Calculation example	>
Parking lights	>	Displaying a parking option on the map	>	Determining the maximum	>
Parking option		Selecting parking options	>	Permitted towing methods	
Displaying on the map	>	Parking space		Overview	>
Selecting	>	Finding	>	Pets in the vehicle	>
Parking position		PARKTRONIC	>	Photos	
Exterior mirrors	>	PASSENGER AIR BAG		Gallery app	>
Storing the front-passenger outside mirror using the memory button	>	Status display, front passenger air bag	>		



PIN protection

System PIN protection



POI

Selecting



POI symbols

Selecting



Post-collision brake



Power (driver display, Sport menu)



Power closing function

Door



Trunk lid



Power display

Function/notes



Power supply

Start/stop button



Switching on (start/stop button)



Power washer



Pre-entry climate control

activating/deactivating for departure time



At time of departure



For departure time



immediate



When vehicle is unlocked



Pre-heating



PRE-SAFE®, Anticipatory occupant protection

Function





PRE-SAFE® Sound	Previous destinations	Pulling away
Reverting measures	Selecting	Drive Away Assist
PRE-SAFE® Impulse Side	Program	Hill Start Assist
Function	Protection	
Inflating	Limited	
PRE-SAFE® PLUS	Protection against collision	
Backing up measures	Maneuvering brake function	
Function	Protection of the environment	
Preventative occupant protection system	Driving style	



 Q

QR code rescue card 

Qualified specialist workshop 



< R

RACE START

Activating	>
Activation conditions	>
Information	>
With boost function	>

Racetrack mode

AMG ceramic high-performance composite brake system	>
AMG steering-wheel buttons	>

Radar and ultrasonic sensors >

Radio

Activating	>
Activating/deactivating radio text	>
Calling up the station list	>
Deleting stations	>
Direct frequency entry	>
Displaying emergency messages	>

Displaying emergency warnings	>
Displaying radio text	>
Editing station presets	>
Managing favorites	>
MBUX voice commands	>
Menu	>
Moving stations	>
Overview	>



Setting a channel 	Radio regulations	Range maximization , ERM (Extended Range Mode)
Setting the frequency band 	Regulatory radio identification 	Activating/deactivating 
Showing/hiding lyrics 	Rain closing function	Function 
Station search 	Sliding sunroof 	Range monitor
Station suggestion 	Rain sensor	Activating/deactivating 
Storing radio stations 	Sliding sunroof 	Range on map
Radio (multimedia system)	Windshield wipers 	On map 
Switching the HD Radio function on/off 	Range	Reading lamp
	Notes 	Interior lighting 



Rear axle steering	>	Function	>	Recuperation	
Rear door (child safety lock)		Opening the camera cover	>	Function	>
Securing	>	Rear window defroster	>	Setting	>
Rear fog light	>	Rear window heating	>	Recuperative braking (driver display, Sport menu)	>
Rear passenger compartment climate control	>	Rearview mirror		Reflective safety vest	>
Rear passenger compartment seat belt		Automatic anti-glare mode	>	Refrigerant	>
Status display	>	Rearward-facing child seat		Registration	
Rear view camera		Information	>	Toll system	>
360° Camera	>				



Regulatory radio information

Specific absorption rate >

Remote Parking Assist

Authorizing a mobile phone >

Function >

Operating >

Replacement key >

Reporting safety defects >

Resetting

MBUX reset function >

Responsibility

Driving safety systems >

Restraint system

Basic information >

Basic instructions for children >

Deployment situations >

Functionality >

Information on function >

Information on the correct seat position >

Limited protection >

Malfunction >

Protection >

Self-test >

Warning lamp >

Reverse gear >



Reversing camera	Securing >	Displaying destination information >
Activating via GPS >	Route	Displaying the route list >
Managing activation points >	Accepting a detour recommendation >	Editing a stored route >
Roadside Assistance (breakdown) >	Adjusting on the map >	Electric Intelligence >
Roll away protection >	Alternative route >	Electric Intelligence (overview) >
Roller sunblind	Calculating alternative routes >	Navigation >
Sliding sunroof >	Calculating with Electric Intelligence >	Planning >
Roof luggage rack	Charging near destination >	Range on Map service >
Loading >	Commuter route >	Recording >



Saving a recorded route	>	Route guidance	Route guidance with augmented reality
Selecting a type	>	Canceling	Activating
Selecting notifications	>	Changing direction	Displaying road names/house numbers
Selecting options	>	Destination reached	Overview
Selecting settings for charging stations (navigation with Electric Intelligence)	>	Freeway information	Route-based speed adaptation
Starting a saved route	>	Lane recommendations	Function
Starting the automatic service station search	>	Notes	Setting
Switching the range monitor on/off	>	Off-road	Run-flat characteristics



< S

Safety system	>	Information about Smart Favorites and TuneStart	>	Setting music and sport alerts	>
Satellite map	>	Logging in	>	Setting the parental control	>
Satellite radio		Moving a channel	>	Storing a channel	>
Activating/deactivating TuneStart	>	Music and sport alerts function	>	Switching on	>
Adding a channel to Smart Favorites	>	Overview	>	Saving a destination suggestion as a favorite	>
Deleting a channel	>	Restrictions	>	Seat, Front seat, Through-loading feature	
Displaying service information	>	Selecting a category	>	Adjusting (Seat Comfort)	>
Information	>	Selecting a channel	>	Adjusting electrically	>



Automatic adjustment	>
Center air bag (driver's seat backrest)	>
Configuring settings	>
Correct driver's seat position	>
ENERGIZING seat kinetics	>
Folding back the backrest (rear passenger compartment)	>
Folding backrest forward (rear)	>
Locking the backrest (rear passenger compartment)	>
Lumbar support	>

Massage programs	>
Memory function	>
Resetting settings (massage programs)	>
Settings	>
Side impact air bag	>
Workout programs	>

Seat belt

Automatic tightening	>
Care	>

Rear passenger compartment seat belt status display	>
Warning lamp	>

Seat belt adjustment

Activating/deactivating	>
Function	>

Seat belt warning

Seat belts

Activating/deactivating seat belt adjustment	>
Fastening	>



Notes on wearing correctly	>	Second telephone		Sensors	
Releasing	>	Connecting	>	Cleaning	>
To adjust the height	>	Selecting the sound profile		Information	>
Seat heating		Burmester® 3D-surround sound system	>	Service	
Activating/deactivating	>	Selector lever	>	Menu (driver display)	>
Seat kinetics		Self-test		Service center	>
Setting	>	Automatic front passenger air bag shutoff	>	Service due date	>
Seat ventilation		Restraint system	>	Service interval display	>
Activating/deactivating	>				



Service station search

Starting automatic search >

Setting the date format >

Setting the distance unit >

Settings

Information >

Shortening the braking distance

Brake Assist System >

Side impact air bag >

Side window

Close with key >

Convenience closing >

Convenience opening >

Opening with the key >

Opening/closing >

Window films >

Side windows

Child safety lock (rear passenger compartment) >

Problem >

Size designation

Tires >

Skid chains >

Sliding sunroof, Panorama roof with power tilt/sliding panel

Automatic functions >

Close with key >

Opening with the key >

Opening/closing >



Problem	>
Rain closing function	>

SmartKey

Acoustic locking verification signal	>
Battery	>
Deactivating a function	>
Function	>
Key ring attachment	>
Mechanical key	>

Panic alarm	>
Power consumption	>
Unlocking setting	>

Smartphone integration

Apple CarPlay®/Android Auto	>
-----------------------------	---

Snow chain mode

Snow chains

Socket

12 V (front passenger footwell)	>
---------------------------------	---

Socket flap

SOS button

Sound

PRE-SAFE® Sound	>
Wheels/tires	>

Sound Experience

Calling up Sound Experience	>
Information	>

Sound generator



Sound settings

Adjusting treble, mid-range and bass settings 

Automatic loudness normalization 

Calling up the sound menu 

Information 

Setting the balance and fader 

Spare parts 

Spare wheel, Emergency spare wheel 

Special seat belt retractor 

Specialist workshop

Specific absorption rate (SAR) 

Speed

Save, cruise control 

Save, DISTRONIC 

Speed adaptation, Route-based 

Speed control

Active Distance Assist DISTRONIC 

Cruise control 

Speed rating

Tires 

Start-off assist

Drive Away Assist 

Hill Start Assist 

Start/stop button

Parking the vehicle 

Starting the vehicle 

Switching on the power supply / vehicle 



Starting

Start/stop button >

Starting assistance >

Starting the engine

Start/stop button >

Starting-off aid

Drive Away Assist >

Hill Start Assist >

Station

Deleting >

Direct frequency entry >

Managing favorites >

Moving >

Setting >

Storing >

Station list

Calling up >

Station presets

Editing >

Station search >

Station suggestion

Radio >

Status display

Front passenger air bag >

Rear passenger compartment seat belt >



Steer Assist

Active Steering Assist >

STEER CONTROL >

STEER CONTROL >

Steering

Rear axle steering >

Steering wheel

Adjusting electrically >

Driver's air bag >

Manually adjusting >

Memory function >

Steering wheel adjustments >

Steering wheel heating

Decoupling from the seat heating >

Stopping

Parking the vehicle >

Stowage areas >

Stowage space under the trunk floor >

Stowage spaces

Armrest (front) >

Center console (front) >

Door >

Glove box >

Streaming online music >

Substances hazardous to health >

Suggestions

Configuring >



Deleting 	Suspension level	System PIN protection
Supersport menu display content	Setting 	Activating/deactivating 
Selecting 	Switch-off delay time	System settings
Suspension	Exterior 	Activating/deactivating system PIN protection 
AIRMATIC 	Interior 	MBUX reset function 
AMG RIDE CONTROL + 	Switching air-recirculation mode on/off 	Setting the distance unit 
DYNAMIC BODY CONTROL 	Switching loudness normalization on/off	Setting the time zone 
Selecting the suspension setting 	Advanced sound system 	Setting the time/date format 
Setting the vehicle level 	Burmester® 3D-surround sound system 	Transmission of the vehicle position 



< T

Tabs	Vehicle dimensions >	Authorizing a mobile phone, Remote Parking Assist >
Managing >	Telediagnosis	Calls with several participants >
Technical data	Diagnostic data >	Changing a function >
High-voltage battery >	Telediagnosics	Connecting a mobile phone >
Information >	Transferred data >	Disconnecting a mobile phone >
Maximum speeds >	Telemetry display >	Importing contacts >
Radio regulations >	Telephone, Smartphone	Importing contacts (overview) >
Specific absorption rate (SAR) >	Activating functions during a call >	Incoming call during an existing call >



Information	>	Telephone menu overview	>	Television, Digital TV
Interchanging mobile phones	>	Telephone operation	>	MBUX voice commands
MBUX voice commands	>	Voice recognition	>	Temperature
Notes	>	Wirelessly charging a(mobile phone, front)	>	Adjusting
Operating modes	>	Telephone (audio system)		Setting
Reception and transmission volume	>	Replacing a mobile phone	>	Temperature grade
Secure Simple Pairing	>	Telephony operating modes		Text messages
Setting the ringtone	>	Bluetooth® telephony	>	THERMATIC
Smartphone integration	>			Air conditioning control panel



THERMOTRONIC	Tire information table	Tread wear grade
Air conditioning control panel	Tire labeling	Tire lettering
Tie-down eyes	Load index	Composition
Time	Load-bearing capacity	DOT, Tire Identification Number (TIN)
Manual time setting	Size designation	Maximum tire load
Setting the time zone	Speed rating	Maximum tire pressure
Setting the time/date format	Temperature grade	Tire pressure
TIN (Tire Identification Number)	Tire Quality Grading	Checking
Tire and Loading Information placard	Traction grade	Checking manually



maximum >	Tire Quality Grading >	Tires
Notes >	Tire sealant >	Breakdown >
Tire pressure table >	Tire tread >	Checking >
TIREFIT kit >	Tire type	Checking the temperature >
Tire pressure monitor	Selecting (MBUX) >	Checking the tire pressure manually >
Function >	Tire-change tool >	Composition >
Tire pressure monitoring system	Tire-change tool kit >	Definitions >
Restarting >	TIREFIT kit , Tire inflation compressor	DOT, Tire Identification Number (TIN) >
Tire pressure table >	Storage location >	Installing >



Labeling >	Removing >	Storing >
Load index >	Removing/installing hub cap >	Temperature grade >
Load-bearing capacity >	Removing/installing wheel trim >	Tire and Loading Information placard >
Maximum pressure >	Replacing >	Tire pressure table >
Maximum tire load >	Rotating >	Tire Quality Grading >
MOExtended >	Selecting >	TIREFIT kit >
Noise >	Size designation >	Traction grade >
Notes on installing >	Snow chains >	Tread wear grade >
Notes when using Navigation with Electric Intelligence >	Speed rating >	Unusual handling characteristics >



Toll system	Setting the sensitivity >	Towing
Debiting toll fees >	Touch-sensitive controls >	Towing methods >
Registering and activating >	Touchscreen	Towing eye
Windshield >	Entering characters >	Storage location >
Top Tether >	Switching haptic operation on and off >	Towing methods
Topographical compensation , Predictive headlamp range control >	Tow bar system	Both axles on the ground >
Touch Control	Towing away >	Overview >
Driver's display >	Tow-away protection >	Track Pace
MBUX >	Tow-starting >	Menu (driver display) >



Track Race		Traffic light warning/display		Transmission	
Traction grade		Traffic Sign Assist		DIRECT SELECT lever	
Traffic information		Function		Drive programs	
Car-to-X-Communication		Setting		DYNAMIC SELECT button	
Displaying the traffic map		Trailer drawbar , Pulling/towing		Engaging drive position	
Displaying traffic incidents		Transferred vehicle data		Engaging neutral	
Information on Live Traffic Information		Android Auto		Engaging reverse gear	
Overview		Apple CarPlay®		Selecting park position	
Traffic Jam Assistant				Transmission position display	



Transmission positions Transmission position display	Emergency release (from inside) HANDS-FREE ACCESS Limiter Opening Power closing function Switching the separate locking feature on/off	Overview Registering Saving stations Selecting and connecting a station Selecting stream Setting options
Transporting Vehicle Tread wear grade Trunk floor Opening Trunk lid Closing	TuneIn Deleting stations Logging out	Turn signal indicator Turn signals



Turning brake care mode

on or off [>](#)

TV

MBUX voice commands [>](#)

Two-way radios

Frequencies [>](#)

Installation [>](#)

Transmission output [>](#)



< U

Understated menu display content

Selecting

Unfastening

Units of measurement

Setting

Unlocking setting

Digital Vehicle Key

Updating software, System update, Update

Error message

Information

Performing

URL

Sharing

USB port

Rear passenger compartment

Storage compartments (front)

USB port (multimedia system)

Connecting devices

User profiles, Personalization

Adding a user

Notes

Overview

Requirements for use



Selecting a user	
Selecting options	
Synchronizing	
User-specific content	



< V

Valet Service Mode

Activating/deactivating >

Function >

Vehicle, Switching on the ignition

Collision detection (information) >

Correct use >

Data storage >

Diagnostics connection >

Emergency key >

Information >

KEYLESS-GO >

Limited Warranty >

lock automatically (MMS) >

Locking/unlocking (emergency key) >

Locking/unlocking (from inside) >

Lowering >

Maintenance >

Medical aids >

Parking >

Problem notification >

Pulling >

QR code rescue card >

Raising >

Set collision detection >



Starting (start/stop button) >	Vehicle cameras >	Vehicle height >
starting, emergency operation mode >	Vehicle data	Vehicle height (Mercedes-AMG vehicles) >
Stopping >	Display, MBUX >	Vehicle length >
Switching off (start/stop button) >	Displaying, DYNAMIC SELECT >	Vehicle length (Mercedes-AMG vehicles) >
Switching on (start/stop button) >	Maximum speeds >	Vehicle width >
Towing away >	Transferring to Android Auto >	Vehicle width (Mercedes-AMG vehicle) >
Transporting >	Transferring to Apple CarPlay® >	Weights >
Ventilation / convenience opening >	Turning circle >	Wheelbase >
Voice commands for MBUX voice assistant >	Turning radius (Mercedes-AMG vehicles) >	Wheelbase (Mercedes-AMG vehicles) >



Vehicle dimensions		Vehicle level		Vehicle socket	
Vehicle dimensions (Mercedes-AMG vehicles)		AIRMATIC		Care	
Vehicle identification number		Vehicle location		Indicator lamps	
Vehicle identification plate		Switching transmission on/off		Vehicle start	
Model type		Vehicle operation outside the USA or Canada		Emergency operation mode	
Paint code		Vehicle position		Start/stop button	
VIN		Sharing with a contact		Vehicle tool kit	
Vehicle key		Storing		TIREFIT kit	
		Vehicle sensors		Towing eye	



Ventilation



Vents

Air vents



Video recordings

Gallery app



VIN

Engine compartment



Identification plate



Seat



Vision

Defrosting windows



Windshield heater



Voice assistant

Voice prompting



Voice recognition





< W

Warning system	>	Brakes warning lamp (yellow) (Canada only)	>	ESP® warning lamp lights up	>
Warning triangle	>	Distance warning lamp	>	Mercedes-Benz emergency call system warning lamp	>
Warning/indicator lamp		Electric parking brake indicator lamp (red) (Canada only)	>	Occupant presence reminder warning lamp (white)	>
ABS warning lamp	>	Electric parking brake indicator lamp (red) (USA only)	>	Occupant presence reminder warning lamp (yellow)	>
Active Brake Assist warning lamp	>	Electric parking brake indicator lamp (yellow)	>	Power steering warning lamp (red)	>
ATTENTION ASSIST warning lamp	>	Electrical malfunction warning lamp	>	Power steering warning lamp (yellow)	>
Brakes warning lamp (Canada only)	>	ESP® OFF warning lamp	>	RBS warning lamp (USA only)	>
Brakes warning lamp (USA only)	>	ESP® warning lamp flashes	>	Rear axle steering warning lamp (red)	>



 Rear axle steering warning lamp (yellow) 	 Tire pressure monitoring system warning lamp lights up 	Water tank 
 Reduced warning lamp power 	 Traffic Sign Assist warning lamp 	Wear
 Restraint system warning lamp 	Warning/indicator lamps	Limited protection 
 Seat belt warning lamp flashes 	Overview 	Weather information 
 Seat belt warning lamp lights up 	PASSENGER AIR BAG 	Web browser
 Suspension warning lamp (red) 	Washer fluid	Calling up a web page 
 Suspension warning lamp (yellow) 	Topping up 	Calling up options 
 System malfunction warning lamp 	Windshield washer fluid 	Deleting a bookmark 
 Tire pressure monitoring system warning lamp flashes 	Washing by hand 	Deleting browser data 



Managing bookmarks	>	Wheel change		Care	>
Setting in the background	>	Installing a new wheel	>	Checking	>
Tabs	>	Lowering the vehicle	>	Checking the tire pressure manually	>
Web browsers		Removing a wheel	>	Checking the tire temperature	>
Calling up the settings	>	Removing/installing hub caps	>	Composition of the tire	>
Sharing URLs	>	Removing/installing wheel trim	>	Definitions	>
Website		Wheel rotation	>	DOT, Tire Identification Number (TIN)	>
Mercedes-Benz Connect	>	Wheels		Installing	>
Weight information	>	Breakdown	>	Load index	>



Load-bearing capacity >	Replacing >	Tire labeling >
Maximum tire load >	Rotating >	Tire pressure >
Maximum tire pressure >	Selecting >	Tire pressure monitor >
MOExtended >	Size designation >	Tire Quality Grading >
Noise >	Snow chains >	TIREFIT kit >
Notes on installing >	Speed rating >	Traction grade >
Removing >	Storing >	Tread wear grade >
Removing/installing hub cap >	Temperature grade >	Unusual handling characteristics >
Removing/installing wheel trim >	Tire and Loading Information placard >	



Wi-Fi

- Activating/deactivating 
- Information on connection 
- Setting up a hotspot 
- Setting up an Internet connection 

Window curtain air bag

Windows

- Care 
- Convenience opening 

- De-icing 
- Opening with the key 
- Opening/closing 
- Removing mist 
- Window films 

Windshield

- De-icing 
- Defrosting 
- Demisting 

- Infrared reflective 
- Radio waves 
- Toll system 

Windshield heater, Windshield heating

Windshield washer fluid

Windshield washer system

Windshield wipers

- Activating/deactivating 
- Replacing the wiper blades 



Replacing the wiper blades (windshield)



Winter operation

Activating/deactivating snow chain mode



Snow chains



Wiper blades

Care



Replacing (windshield)



Wipers



Wireless charging

Mobile phone (front)



Workout programs



Workshop





 Z

Zero layer

Function	
Overview	



Publication details

WEBSITE

Further information about Mercedes-Benz vehicles and about Mercedes-Benz AG can be found on the following websites:

<https://www.mbusa.com> (USA only)

<https://www.mercedes-benz.ca> (Canada only)

EDITORIAL TEAM

© Mercedes-Benz AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Mercedes-Benz AG.

VEHICLE MANUFACTURER

Mercedes-Benz AG

Mercedesstraße 120

70372 Stuttgart, Germany